

Miele



en Vacuum cleaner operating instructions
zh 吸塵機 操作說明

HS22

M.-Nr. 12 808 450

en - Contents

Warning and Safety instructions	4
Guide to the appliance.....	10
Sustainability and environmental protection	12
Familiarisation.....	14
Accessories included	14
3D4U	14
Network connection	14
Symbols in the display.....	15
How the vacuum cleaner bag change indicator works	15
Function of the exhaust filter change indicator.....	15
Motor protection filter	15
Commissioning.....	16
Attaching the suction hose	16
Removing the suction hose	16
Connecting the suction hose to the handle	16
Connecting the handle to the suction tube	16
Connecting the suction tube to the adjustable floorhead	17
Connecting the radio-controlled handle	17
Activating the network function	17
Operation	18
Adjusting the telescopic tube	18
Adjusting the floorhead	19
Vacuuming staircases	19
Unwinding the mains cable	19
Rewinding the mains cable	20
Switching on and off	20
Update (📶).....	20
Regulating the suction power.....	21
Foot switches.....	21
Comfort radio-controlled handle 2.0	21
Interim suction power levels.....	22
Interrupting operation.....	22
Removing accessories	22
Adjusting the 2-in-1 upholstery and crevice nozzle.....	23
Using the dusting brush on the Comfort radio-controlled handle 2.0	23
Setting down, transportation and storage.....	24
Park system for pauses during vacuuming	24
Park system for storage	25
Cleaning and care	25
Purchasing accessories	26

Vacuum cleaner bag change indicator	26
Removing the vacuum cleaner bag	26
Inserting the vacuum cleaner bag	27
When the exhaust filter change indicator lights up	27
Replacing the AirClean Plus 50, Silence AirClean 50, Active AirClean 50 and HEPA AirClean 50 exhaust filters	28
Replacing one type of exhaust filter with another	28
Cleaning the motor protection filter	29
When to replace the battery in the Comfort radio-controlled handle 2.0	30
Replacing the battery in the Comfort radio-controlled handle 2.0	30
Replacing the thread lifters	30
Cleaning the vacuum cleaner and accessories	31
Troubleshooting	32
Technical data	33
Copyright and licences	33
EU Conformity declaration	33
Service	34
Contact in case of malfunction	34
Guarantee	34
Optional accessories	34

en - Warning and Safety instructions

This vacuum cleaner conforms to current safety requirements. Inappropriate use can lead to personal injury and damage to property.

Please read the operating instructions before using the vacuum cleaner for the first time. They contain important information on the safety, use, cleaning and care of the vacuum cleaner. This will prevent both personal injury and damage to the appliance.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in the “Commissioning” section as well as the warning and safety notes.

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these operating instructions in a safe place and pass them on to any future owner.

Always disconnect the vacuum cleaner from the power supply when you have finished using it, before changing any accessories and before performing cleaning, care and troubleshooting. Remove the plug from the socket.

Correct application

- ▶ This vacuum cleaner is intended for cleaning flooring in domestic households and similar residential environments. This vacuum cleaner is not suitable for use on construction sites.
- ▶ This vacuum cleaner can be used for all normal cleaning of carpets, rugs and robust hard flooring.
- ▶ This vacuum cleaner is not intended for outdoor use.
- ▶ This vacuum cleaner is intended for use at altitudes of up to 4000 m above sea level.
- ▶ The vacuum cleaner must only be used to vacuum dry floor surfaces. Do not vacuum people or animals. Any other types of use, modifications or alterations are not permitted.
- ▶ The vacuum cleaner can only be used by people (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and understand and recognise the consequences of incorrect operation.

Safety with children

- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.
- ▶ Children under 8 years of age must be kept away from the vacuum cleaner unless they are constantly supervised.
- ▶ Children aged 8 and older may only use the vacuum cleaner without supervision if they have been shown how to use it in a safe manner. Children must be able to understand and recognise the possible dangers caused by incorrect operation.

en - Warning and Safety instructions

- ▶ Children must not be allowed to clean or maintain the vacuum cleaner unsupervised.
- ▶ Please supervise children in the vicinity of the vacuum cleaner and do not let them play with it.
- ▶ Models with LEDs or radio controls on the handle: Keep batteries out of the reach of children.

Technical safety

- ▶ Check both the vacuum cleaner and all accessories supplied with it for any visible signs of damage before use. Do not use a damaged vacuum cleaner or damaged accessory.
- ▶ Compare the connection data on the data plate of the vacuum cleaner (mains voltage and frequency) with that of the mains electricity supply. This data must match exactly. Without modifications, the vacuum cleaner is suitable for 50 Hz or 60 Hz.
- ▶ The mains electrical plug must be fitted with an appropriate fuse.
- ▶ Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronised with the mains power supply (e.g. island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard. The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronised with the mains power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of BS OHSAS 18001–2 ISO 45001.

- ▶ While the vacuum cleaner is under warranty, repairs should only be undertaken by a Miele authorised service technician. Otherwise the warranty will be invalidated.
- ▶ Do not use the vacuum cleaner if the cable is damaged. If the cable is damaged it must be replaced together with a complete cable rewind. For safety reasons this must only be done by Miele Service or a Miele authorised service technician.
- ▶ Do not pull or carry the vacuum cleaner by the cable, and be careful not to damage the cable when withdrawing the plug from the socket. Keep the cable away from sharp edges and do not let it get squashed, for example, under a door. Avoid running the vacuum cleaner over the cable. This could damage the cable, plug or socket. The appliance must not be used if any of these have suffered damage.
- ▶ Repairs should only be carried out by a Miele authorised service technician. Repairs and other work by unqualified persons can cause considerable danger to users.

Correct use

- ▶ Do not use the vacuum cleaner without the vacuum cleaner bag, motor protection filter and exhaust filter in place.
- ▶ It is not possible to close the dust compartment lid if the vacuum cleaner bag is not inserted. Do not force it.
- ▶ Before closing the dust compartment lid, always make sure that the vacuum cleaner bag has been inserted far enough and has clearly clicked into position.
- ▶ Do not vacuum up anything which has been burning or is still glowing e.g. cigarettes, ashes or coal, whether glowing or apparently extinguished.
- ▶ Do not use the vacuum cleaner to vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity.

en - Warning and Safety instructions

- ▶ Do not use the vacuum cleaner to vacuum up any water, liquid or damp dirt. Wait until any freshly cleaned or shampooed rugs or carpets are completely dry before attempting to vacuum.
- ▶ Do not vacuum up any inflammable or combustible liquids or gases and do not vacuum in areas where such substances are stored.
- ▶ Do not vacuum at head height and do not let the suction get anywhere near a person's head.
- ▶ Important information on the handling of batteries (for models with LEDs or radio controls on the handle):
 - Do not short-circuit or recharge batteries, or throw them into a fire.
 - Disposing of batteries: Remove the batteries from the handle and dispose of them in a municipal recycling facility. Do not dispose of batteries with normal household waste.

Cleaning



- ▶ Do not let the vacuum cleaner get wet. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply.

Accessories and spare parts

- ▶ It is not advisable to vacuum directly with the handle, i.e. without an accessory attached as the rim could get damaged and you could hurt yourself on sharp edges.
- ▶ Only use vacuum cleaner bags, filters and original accessories bearing the Miele logo on the packaging. The manufacturer cannot otherwise guarantee the safety of the product.
- ▶ Miele can only guarantee the safety of the appliance when genuine Miele replacement parts are used. Faulty components must only be replaced with genuine Miele replacement parts.
- ▶ Miele will guarantee to supply functional spare parts for a minimum of 10 years and up to 15 years following the discontinuation of your vacuum cleaner.

Transport

- ▶ The packaging material protects the vacuum cleaner from transport damage. We recommend you keep the packaging for transport purposes.

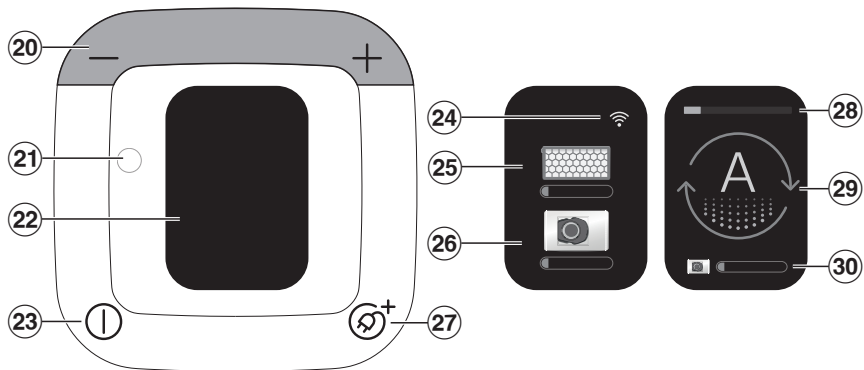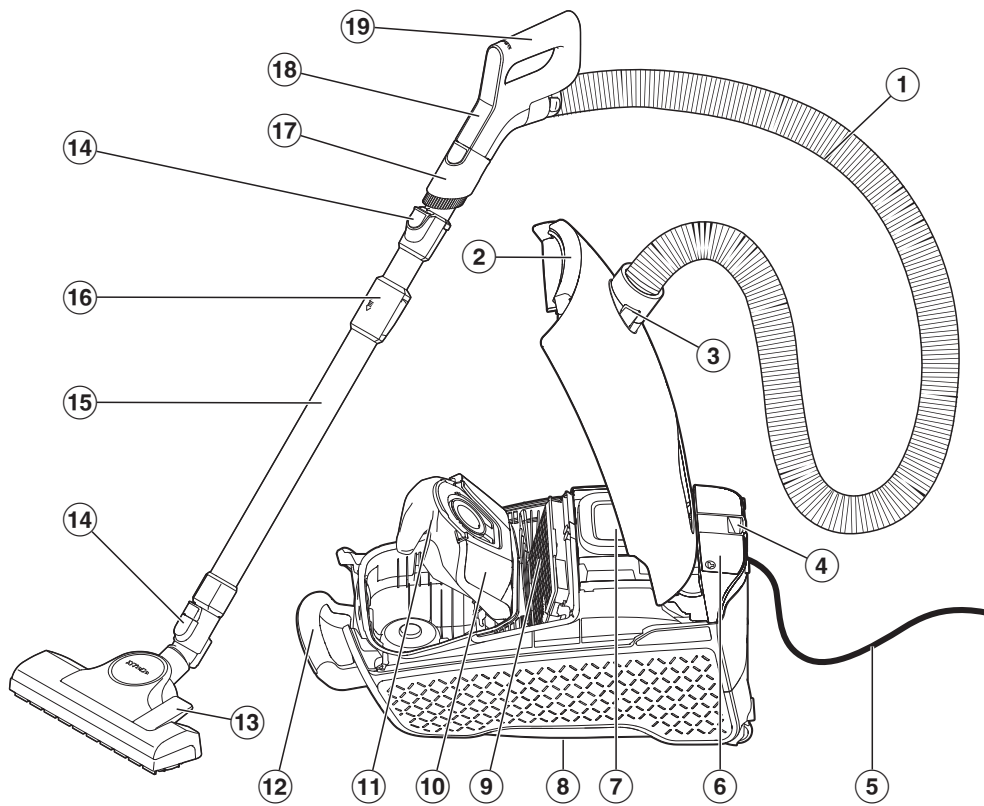

- ① Suction hose
- ② Dust compartment lid release button
- ③ Hose connector
- ④ Park system for pauses during vacuuming
- ⑤ Mains cable with plug
- ⑥ Accessories compartment for 2-in-1 upholstery and crevice nozzle
- ⑦ Control field
- ⑧ Park system for storage (underside of the vacuum cleaner)
- ⑨ Original Miele exhaust filter*
- ⑩ Vacuum cleaner bag holder
- ⑪ Original Miele vacuum cleaner bag
- ⑫ Carrying handle
- ⑬ Floorhead
- ⑭ Release buttons
- ⑮ Telescopic tube
- ⑯ Telescopic tube release mechanism
- ⑰ Removable dusting brush
- ⑱ Comfort radio-controlled handle 2.0 control field
- ⑲ Comfort radio-controlled handle 2.0
- ⑳ +/- foot switches for setting the suction power
- ㉑ Optical interface for the Customer Service Department
- ㉒ Display
- ㉓ On/Off foot switch ①
- ㉔ WiFi signal status
- ㉕ Exhaust filter change indicator
- ㉖ Vacuum cleaner bag change indicator
- ㉗ Foot switch for automatic cable rewind ㉗⁺
- ㉘ Selected power level
- ㉙ Symbol for selected power level
- ㉚ Vacuum cleaner bag change indicator

* These features depend on the model and may vary or may not be available on your vacuum cleaner.

Disposing of the packaging material

The packaging material is used for handling and protects the appliance from transport damage. The packaging material used is selected from materials which are environmentally friendly for disposal and can generally be recycled.

Recycling the packaging material reduces the use of raw materials. Use material-specific collection points for valuable materials and take advantage of return options.

We recommend you keep the packaging material for transport purposes.

Disposing of the vacuum cleaner bags and filters

Vacuum cleaner bags and filters are made from environmentally friendly materials. You can dispose of the filters with normal household waste. You can also dispose of the vacuum cleaner bag with normal household waste, providing it contains general household dust only.

Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on territory) for deleting any personal data that may be stored on the appliance being disposed of. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Disposing of old batteries

In many cases, electrical and electronic appliances contain batteries which must not be disposed of with household waste after use. You are obliged to remove any old batteries which are not securely enclosed by the appliance and take them to a suitable collection point (e.g. retailer) where they can be handed in free of charge. Insulate the metal contacts with adhesive tape to prevent short circuits. Batteries may contain substances which can be hazardous to human health and the environment.

The labelling on the battery will provide further information. For example, batteries containing lithium are marked "Li-ion". The bin symbol with a cross through it means that the batteries must not be disposed of in household waste. We are also required to inform you that a bin with a cross through it which also has one or more chemical symbols on it indicates that the battery contains lead (Pb), cadmium (Cd) and/or mercury (Hg).




Old batteries contain valuable raw materials which can be recycled. Disposing of batteries separately makes them easier to handle and recycle.

Familiarisation

This vacuum cleaner can be used for daily cleaning of carpets, rugs and robust hard floors.

Miele offers a range of suitable accessories for many special applications (see “Optional accessories”).

Accessories included

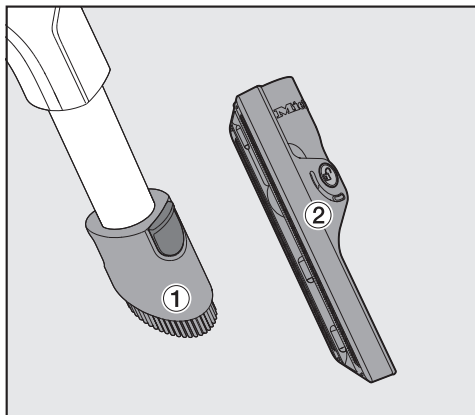

① Dusting brush

For vacuuming scratch-resistant surfaces, e.g. keyboards or vacuuming up crumbs.


The dusting brush is removable and can be placed on the suction tube to vacuum hard-to-reach areas.

② 2-in-1 upholstery and crevice nozzle

For cleaning in folds, crevices and corners as well as for vacuuming upholstered furniture, mattresses, cushions, curtains, etc.

3D4U

With 3D4U, Miele offers free accessories to download for your 3D printer (www.miele.com, Service, 3D4U).

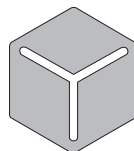

3 D 4 U

Network connection

The vacuum cleaner is equipped with an integrated WiFi module. The WiFi module makes it possible to connect to your home network and to use the Miele app on a mobile device.

Networking the vacuum cleaner allows you to do the following, among other things:

- Access status information
- Order more vacuum cleaner bags for your vacuum cleaner
- Access information about accessories based on your usage behaviour
- Keep the vacuum cleaner up to date with the latest Miele developments via software updates

Symbols in the display

Symbols are shown on the display to indicate the type of use the power levels are suitable for.



Curtains, fabric



Upholstery, cushions



Automatic adjustment of the suction power to the surface



Cut pile carpets, rugs and runners



Hard floors and heavily soiled carpets and rugs



Manual selection of interim suction power levels



Saved interim suction power level

Other symbols for operation and function:

-	Reduces the suction power
+	Increases the suction power
①	On/Off
⌚ ⁺	Automatic cable rewind

How the vacuum cleaner bag change indicator works

The vacuum cleaner bag change indicator is set for normal household dust. This generally contains a mixture of dust, hair, threads, carpet fluff, grit, etc.

However, if the vacuum cleaner has been used to vacuum up fine dust, such as drilling dust, sand, plaster dust or flour, the pores of the vacuum cleaner bag will become blocked very quickly. The indicator will indicate that the vacuum cleaner bag is “full” even when it is not. The vacuum cleaner bag must be replaced if this is the case.

If, on the other hand, you vacuum up a significant amount of hair, carpet lint, etc., the vacuum cleaner bag will be full to bursting before the indicator reacts.

Function of the exhaust filter change indicator

The exhaust filter change indicator lights up after approximately 50 hours of operation, which is equivalent to about a year of average use. Change the exhaust filter when the indicator on the vacuum cleaner lights up. The level of soiling of the motor protection filter should also be checked at this point.


Each time you replace the exhaust filter and – if necessary – clean the motor protection filter, you must reset the indicator. Please refer to the “When the exhaust filter change indicator lights up” section in “Cleaning and care”.

Motor protection filter

Your vacuum cleaner is equipped with a Lifetime motor protection filter as standard. It will last for the entire service life of the vacuum cleaner and does not need to be replaced.


Commissioning

Attaching the suction hose

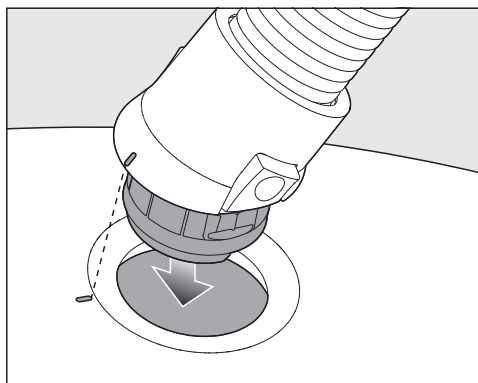


- Insert the hose connector into the suction opening on the vacuum cleaner until it clicks into position. To do this, line up the guides on the two pieces.

Removing the suction hose

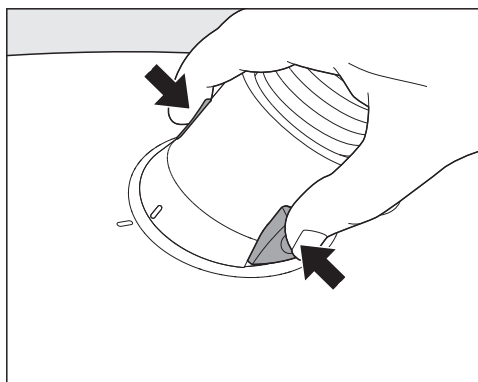


- Press the release buttons at the side of the hose connector, and lift the hose from the suction opening.

Connecting the suction hose to the handle

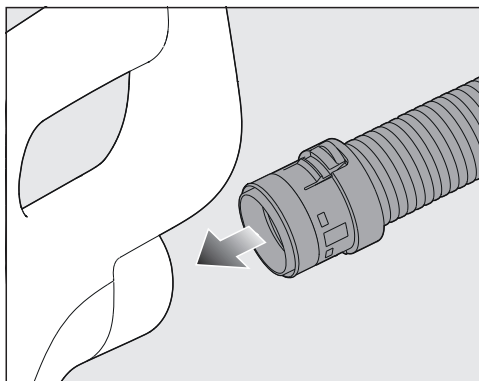


- Fit the suction hose connector into the handle until it clicks into position.

Connecting the handle to the suction tube

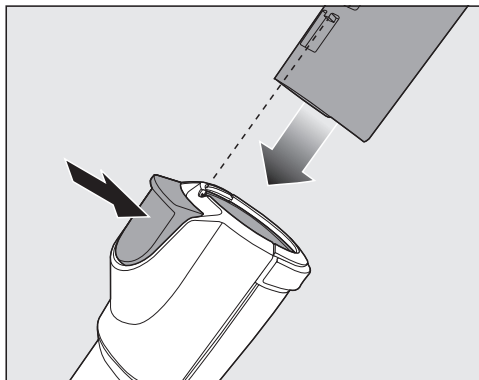

- Insert the handle into the suction tube until it clicks into position. To do this, line up the guides on the two pieces.
- To detach the handle from the suction tube, press the release button and pull the handle out of the suction tube, twisting it slightly as you do so.

Connecting the suction tube to the adjustable floorhead

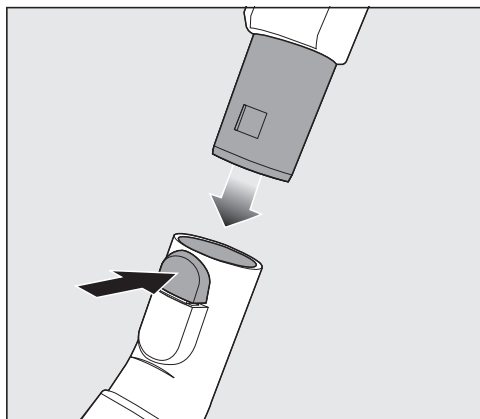

- Push the suction tube into the floorhead and turn it clockwise or anti-clockwise until it clicks into position.
- To separate the suction tube from the floorhead, press the release button and pull the suction tube away from the floorhead, twisting it slightly as you do so.

Connecting the radio-controlled handle

The first time the vacuum cleaner is switched on, the highest power level will be selected automatically. After that, the vacuum cleaner will switch on at the power level which was used previously.

- Press the + foot switch until the maximum power level has been reached.
- Press and hold the + foot switch.

A countdown is displayed and the vacuum cleaner fan is switched off for the duration of the connection attempt. After the countdown has elapsed, a radio-controlled handle is shown in the

display.

The vacuum cleaner is now in connection mode.

- Release the foot switch.
- Press any button on the radio-controlled handle to activate it.

The radio-controlled handle attempts to establish a connection to the vacuum cleaner for a maximum of 20 seconds. The vacuum cleaner display indicates that the connection has been established successfully, then the fan switches on again.

Activating the network function

Your vacuum cleaner is equipped with an integrated WiFi module.

Connecting your vacuum cleaner to your WiFi network will increase energy consumption.

Make sure that you have sufficient signal strength for your WiFi network where the vacuum cleaner will be used.

To set up this feature, you will need:

1. A WiFi network
2. Miele app
3. A Miele user account. You can create a user account via the Miele app.



- Scan the QR code to download the Miele app (if you do not have it yet).
- Open the Miele app and set up a user account.

- To start networking, scan the QR code again and follow the user navigation instructions in the Miele app.

The vacuum cleaner fan is switched off for the duration of the connection attempt. The vacuum cleaner display indicates that the connection has been established successfully.

You can also exit connection mode early without having established a connection. To do this, switch the vacuum cleaner off and on again using the On/Off Ⓢ foot switch.


Availability of the WiFi connection

The WiFi connection shares a frequency range with other appliances (including microwave ovens and remote control toys). This can give rise to sporadic or even complete connection failures. Therefore, the availability of featured functions cannot be guaranteed.

Operation

Adjusting the telescopic tube

One part of the telescopic tube is packed inside the other, and it can be adjusted to suit your height for comfortable vacuuming.


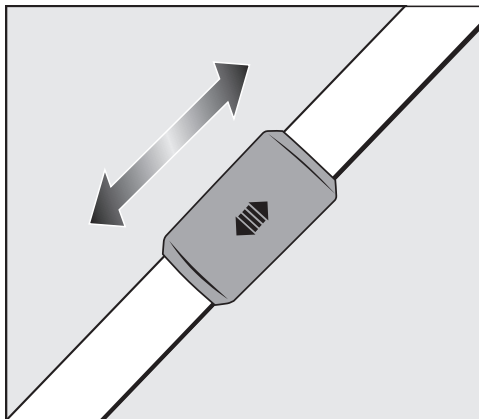


- Grasp the release mechanism and adjust the telescopic tube to the required length.

Adjusting the floorhead

Depending on the model, your vacuum cleaner will be fitted as standard with one of the floorheads illustrated.

Please observe the flooring manufacturer's cleaning and care instructions.

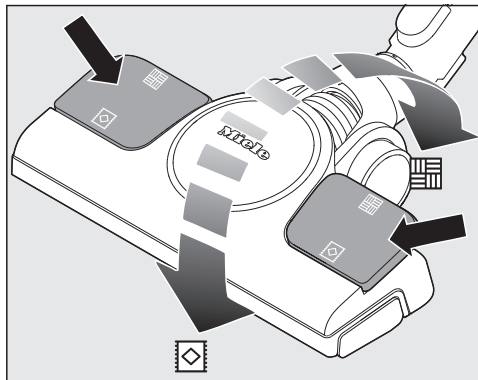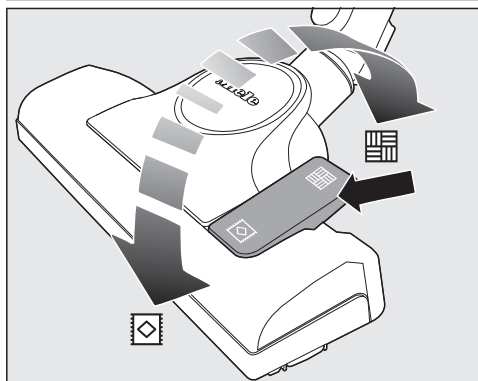


Clean hard flooring which is not susceptible to scratching, as well as flooring with gaps or deep crevices in it, with the brush protruding:

- Press the  foot switch.

Vacuum carpets and rugs with the brush retracted:


- Press the  foot switch.

Vacuuming staircases

 Risk of injury caused by falling vacuum cleaner.


You or others may be injured if the vacuum cleaner should fall from the stairs.

When vacuuming stairs, it is best to start at the bottom of the stairs and move upwards.

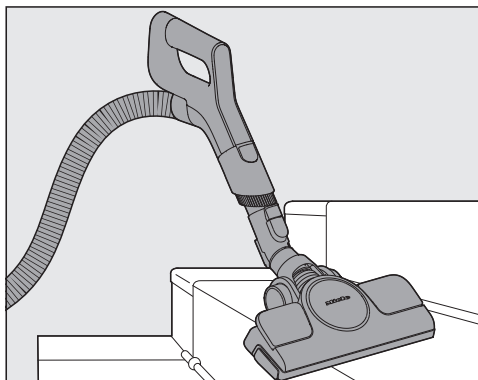

The adjustable floorhead can also be used for vacuuming the stairs.

Unwinding the mains cable

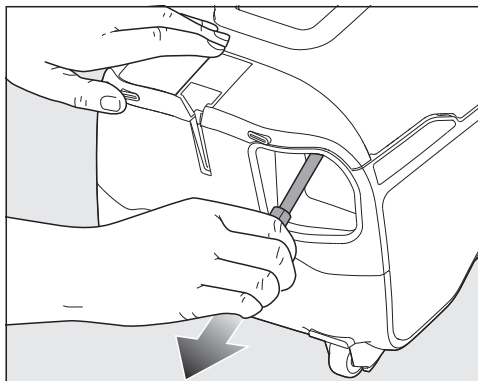

- Pull the mains cable out to the required length.
- Insert the power plug into the socket.




Risk of damage due to overheating.

The mains cable may overheat after a long period of use.

If vacuuming for longer than 30 minutes, the cable must be pulled out all the way.

Rewinding the mains cable

- Remove the plug from the socket.

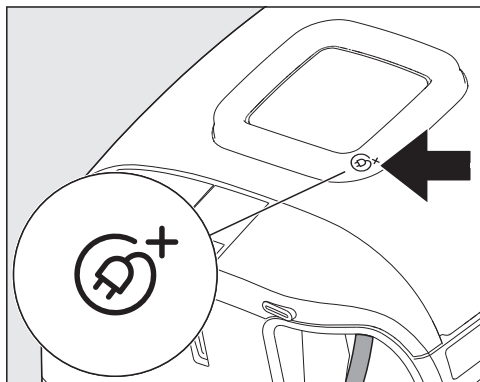


- Step briefly on the cable rewind foot switch.

The cable will then retract itself fully into the vacuum cleaner.

You can interrupt the cable rewind at any point.

- Give the cable a short pull while rewinding.

Switching on and off

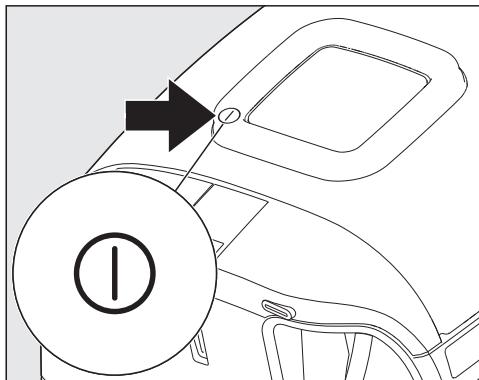

- Press the On/Off foot switch ①.

Update

Miele will provide you with updates at irregular intervals. This will update the software in your vacuum cleaner and ensure that it is in line with the latest Miele developments.

After switching on the vacuum cleaner, you will be informed if there is an update available.

- To start installing the update, press the + foot switch.

A progress bar will show you the status of the installation.

- To postpone the installation of the update, press the - foot switch.

The next time you switch on the vacuum cleaner, you will be prompted to install the update again.

Regulating the suction power


The suction power can be regulated to suit the type of flooring being cleaned. Reducing the suction power reduces the amount of effort required to manoeuvre the floorhead.

The selected power level is shown as a symbol and via an orange power indicator in the vacuum cleaner display, see the “Symbols in the display” section in “Familiarisation”.

Foot switches


The first time the vacuum cleaner is switched on, the highest power level will be selected automatically.

After that, the vacuum cleaner will switch on at the power level which was used previously.

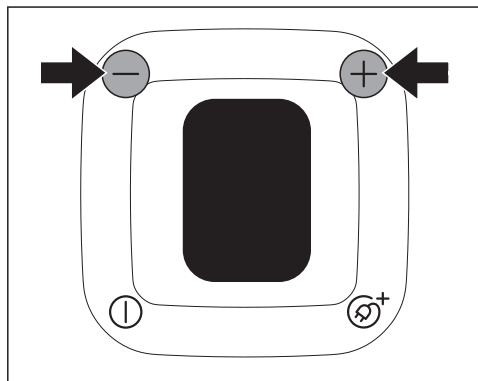

- Press the + foot switch to select a higher suction power level.
- Press the - foot switch to select a lower suction power level.

Comfort radio-controlled handle 2.0

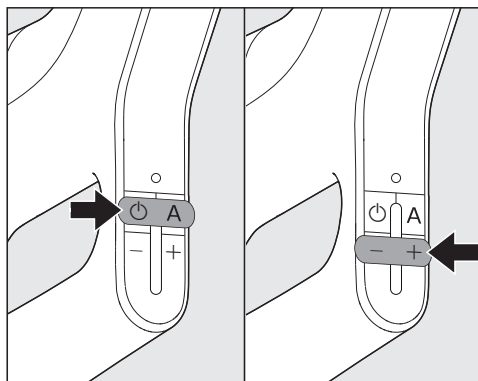

Once the vacuum cleaner has been switched on with the On/Off foot switch ①, it can also be fully operated using the buttons on the Comfort radio-controlled handle 2.0.

Your vacuum cleaner has a button **A** on the Comfort radio-controlled handle 2.0 for selecting the automatic power level. This means that the suction power of the vacuum cleaner will be adapted to the surface in question.

⚠ Do not use the **A** setting to vacuum lightweight materials or curtains. These could be sucked into the vacuum cleaner and may be damaged.

- Press the + button on the Comfort radio-controlled handle 2.0 to select a higher suction power level.
- Press the - button on the Comfort radio-controlled handle 2.0 to select a lower suction power level.

The first time the vacuum cleaner is switched on, the highest power level will be selected automatically.

After that, the vacuum cleaner will switch on at the power level which was used previously.

Interim suction power levels

You can deviate from the preset power levels and customise the suction power of your vacuum cleaner to meet your individual requirements.

To do this, proceed as follows:

- Press and hold the **+** or **-** button.

The display shows the symbol for manual selection of interim suction power levels.


- Press and hold the **+** or **-** button until the desired suction power is reached.
- Release the button.


Wait 5 seconds and do not touch the controls; the interim suction power setting will be saved to the next highest or lowest power level. A tick ✓ appears to confirm that the setting has been saved. The symbol for the saved interim suction power level is displayed.

The next time the vacuum cleaner is used it will switch on with the saved interim suction power level. This setting will be deleted if you then select one of the standard 4 power levels.

Interrupting operation

The vacuum cleaner can be paused for short breaks whilst vacuuming.

- Press the Standby button  on the handle.

 The Standby button is designed to pause the vacuum cleaner for short periods of time whilst vacuuming. There is a risk of overheating and damage.

An LED will indicate each time a button is pressed on the handle.

At the end of the pause you have 3 choices:

- Press the Standby button  again.

The vacuum cleaner will switch on using the previously selected power level.


- Press the **+** button.

The vacuum cleaner will switch on using the highest power level.

- Press the **-** button.

The vacuum cleaner will switch on using the lowest power level.

Removing accessories

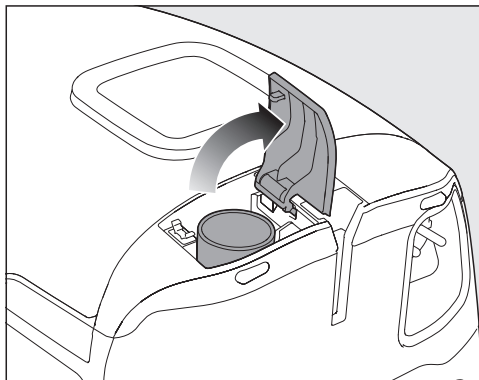

- Press the release button on the accessories compartment.

The accessories compartment will then open.


- Remove the combined upholstery and crevice nozzle.
- Press down firmly on the accessories compartment lid to close it.

Adjusting the 2-in-1 upholstery and crevice nozzle

Your vacuum cleaner is equipped with a combined upholstery and crevice nozzle as standard.

Crevice nozzle


Once removed from the accessories compartment, the 2-in-1 upholstery and crevice nozzle is suitable for cleaning in folds, crevices or corners.

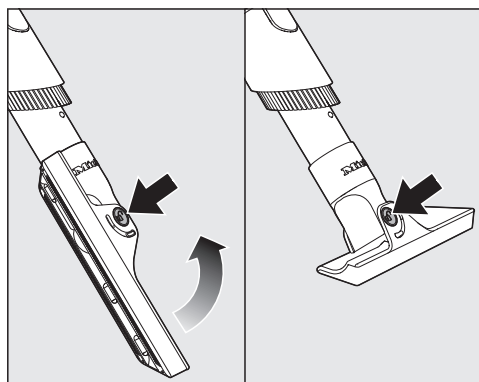


Upholstery nozzle

- Press the release button of the 2-in-1 upholstery and crevice nozzle and swivel the upholstery nozzle over the guide until it clearly engages in position.
- When you have finished cleaning, press the release button and swivel the upholstery nozzle back into its original position. Swivel the 2-in-1 upholstery and crevice nozzle until the release button clearly engages in position.


Using the dusting brush on the Comfort radio-controlled handle 2.0

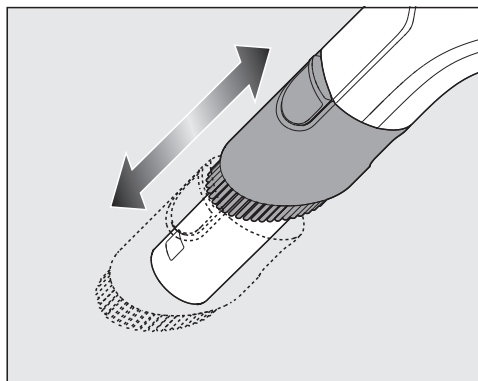

- Press the release button on the dusting brush and push the brush out until it clearly engages in position.

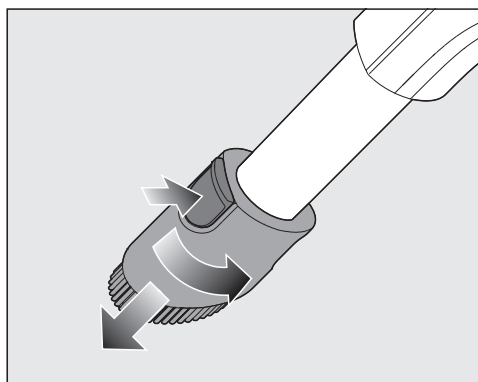

- Press the release button and turn the dusting brush to the side.
- Push the dusting brush down over the guide until it releases from the handle.

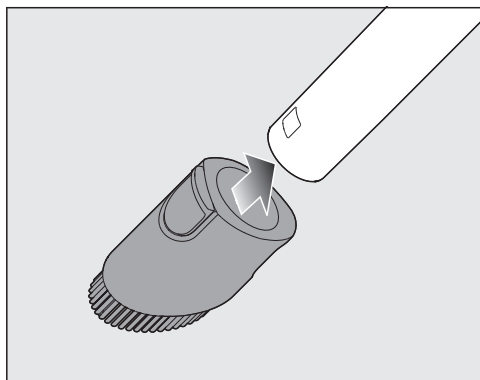

- Push the dusting brush onto the suction tube until it clicks into place.


When you have finished dusting

- Press the release button and pull the dusting brush off the suction tube.
- Push the dusting brush back onto the Comfort radio-controlled handle 2.0 until it clicks into place.
- Push the dusting brush to its original position so the handle can be pushed back into the suction tube.


Setting down, transportation and storage

Park system for pauses during vacuuming

The park system allows you to conveniently park the suction tube and floorhead during pauses.

 Risk of injury caused by vacuum cleaner falling over.

Do not use the park system if the vacuum cleaner is on a sloping surface, e.g. a ramp.

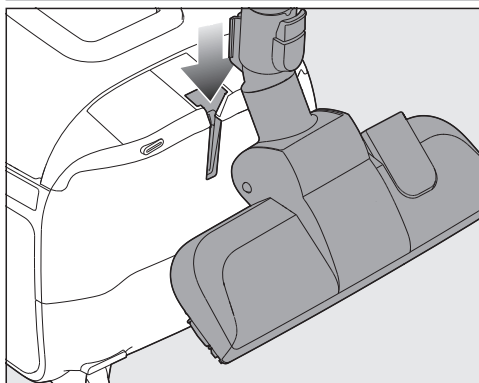

- Slot the floorhead into the park system on the vacuum cleaner.

Park system for storage


The park system allows you to park the suction tube and floorhead for transport or storage purposes.

⚠ Risk of electric shock from mains voltage.

The mains voltage is applied to the vacuum cleaner even if it is switched off.

Always disconnect the vacuum cleaner from the power supply when you have finished using it. Remove the plug from the socket.

- Stand the vacuum cleaner upright.
- Retract the telescopic tube fully.

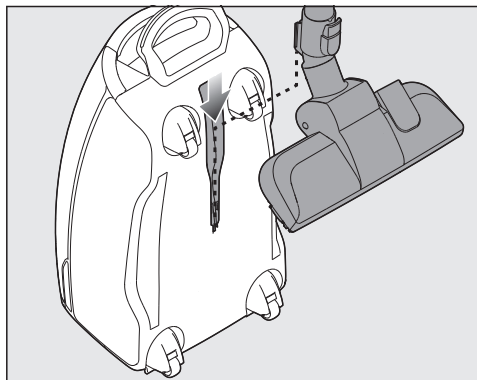

- Slot the floorhead downwards into the parking attachment on the underside of the vacuum cleaner.

This makes the vacuum cleaner easier to carry or store.

Cleaning and care

⚠ Risk of electric shock from mains voltage.

The mains voltage is applied to the appliance even if it is switched off.

Before cleaning and care, switch the appliance off at the wall socket and unplug it.

The Miele filter system consists of 3 accessories:

- Original Miele vacuum cleaner bag (model **TU**)
- Original Miele exhaust filter
- Motor protection filter

The vacuum cleaner bag and exhaust filter will need to be replaced from time to time to ensure that your vacuum cleaner performs efficiently.

We recommend using only genuine Miele accessories bearing the Miele logo on the packaging. Only these will guarantee the optimum suction power of your vacuum cleaner and the best possible cleaning results.

Vacuum cleaner bags with the Miele logo on the packaging are not made from paper or paper-based materials, nor do they have a cardboard collar. This is why Miele dustbags are particularly long-lasting and reliable.

Please note that faults and damage caused by use of accessories which do not bear the Miele logo on the packaging are not covered by the vacuum cleaner warranty.

Purchasing accessories

You can order genuine Miele accessories from the Miele online shop, Miele Customer Service or your Miele dealer.

You can identify genuine Miele accessories by the Miele logo on the packaging.

Every packet of original Miele vacuum cleaner bags contains 4 vacuum cleaner bags and one AirClean exhaust filter. Original Miele multipacks contain 16 vacuum cleaner bags and 4 AirClean exhaust filters.


For information on purchasing genuine Miele exhaust filters, see the sales designations in “Optional accessories” – “Filters”.

Vacuum cleaner bag change indicator


Replace the vacuum cleaner bag when indicated on the vacuum cleaner display.

Blocked pores reduce the suction power of the vacuum cleaner. Dispose of vacuum cleaner bags when they are full. Do not attempt to re-use vacuum cleaner bags.


Removing the vacuum cleaner bag

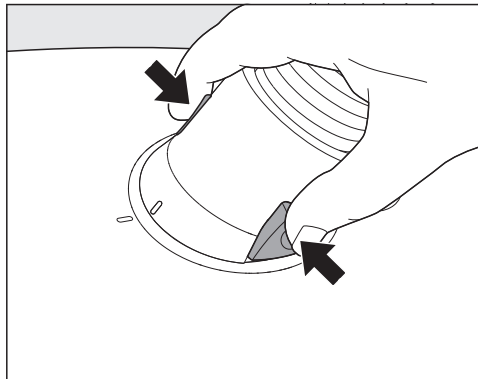

- Press the release buttons at the side of the hose connector and pull the hose out of the suction opening.

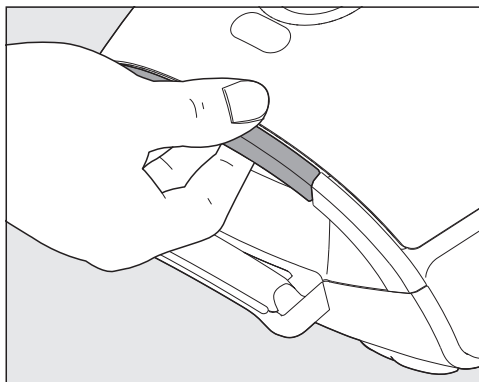

- Press the release button in the recessed grip for the dust compartment lid and raise the lid as far as it will go.

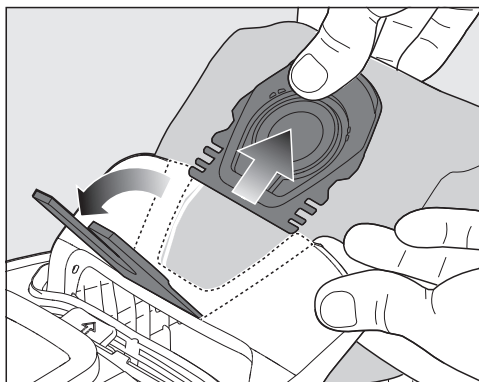


- Lift the vacuum cleaner bag holder with one hand.
- Pull out the vacuum cleaner bag with the other hand using the grip.

The turquoise catch element will lift up.

The turquoise catch element prevents the dust compartment lid from closing when there is no vacuum cleaner bag inserted. Do not force it.

Inserting the vacuum cleaner bag

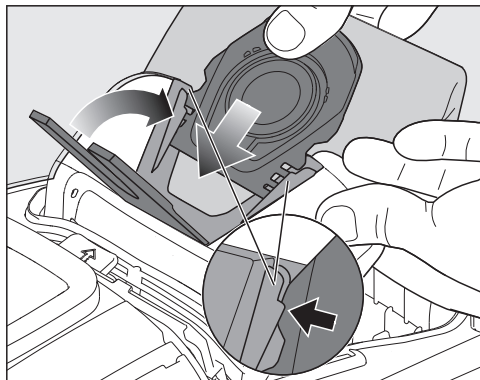


- Lift the vacuum cleaner bag holder with one hand.
- With the other hand, insert the new vacuum cleaner bag into the raised vacuum cleaner bag holder as far as it will go. Leave the vacuum cleaner bag folded up when you take it out of the packet.

Make sure that the collar of the vacuum cleaner bag is fully inserted into the guide on both sides (see magnified image).

The turquoise catch element closes and clicks into position.

- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the vacuum cleaner bag when doing so.

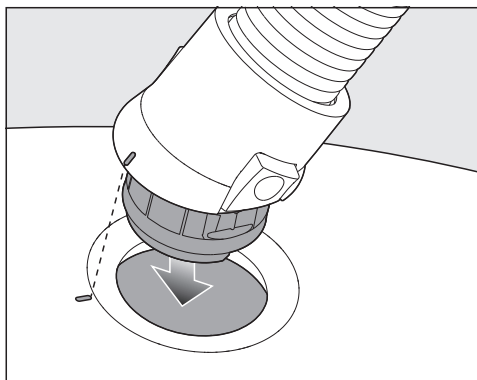

- Insert the hose connector into the suction opening on the vacuum cleaner until it clicks into position. To do this, line up the guides on the two pieces.

When the exhaust filter change indicator lights up

Replace the exhaust filter when indicated on the vacuum cleaner display. The level of soiling of the motor protection filter should also be checked at this point, see "Cleaning the motor protection filter".

You must reset the indicator each time you replace the exhaust filter. The vacuum cleaner must be switched on to do this.

- Press and hold the + button.


A countdown is displayed and the vacuum cleaner fan is switched off. The indicator will light up green to show it has been reset successfully. The indicator will then go out and reset to zero.

The indicator can only be reset when indicating that it is time to change the exhaust filter. It cannot be reset at other times.

Replacing the AirClean Plus 50, Silence AirClean 50, Active AirClean 50 and HEPA AirClean 50 exhaust filters


Do not use more than one exhaust filter at a time.

- Open the dust compartment lid.

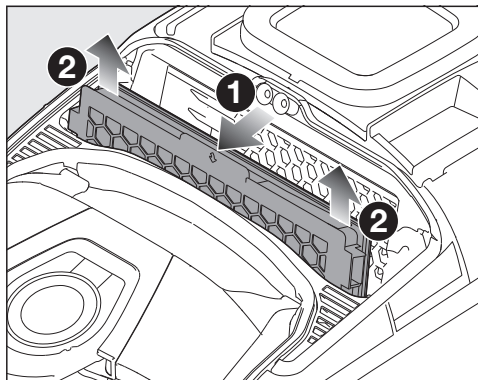


If you wish to fit an AirClean exhaust filter, see “Replacing one type of exhaust filter with another”.

- Pull the exhaust filter forwards and remove it upwards.

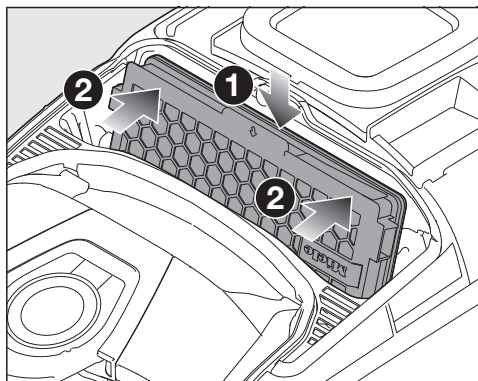

- Insert the new exhaust filter downwards, making sure it goes in properly, then press it backwards on both sides until it clicks into place.

 Damage due to contamination in the dust compartment.

Large quantities of dust may get into the dust compartment and damage components if the vacuum cleaner bag has not clicked into position.


Before closing the dust compartment lid, always make sure that the vacuum cleaner bag has been inserted and the catch element is closed.

- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the vacuum cleaner bag when doing so.

Replacing one type of exhaust filter with another

Do not use more than one exhaust filter at a time.

Depending on the model, your vacuum cleaner will be fitted as standard with one of the following exhaust filters:

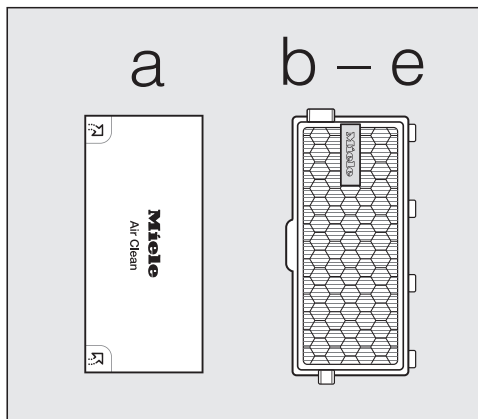


- a AirClean
- b AirClean Plus 50 (light blue)
- c Silence AirClean 50 (grey)

- d Active AirClean 50 (black)
- e HEPA AirClean 50 (white)


When changing the filter, please note

If you wish to replace exhaust filter **b**, **c**, **d** or **e** with filter **a**, it is essential that you also fit the filter grille, see the “Filter” section in “Optional accessories”.

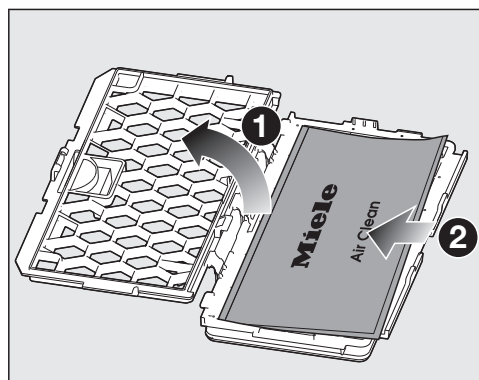

Cleaning the motor protection filter

- Open the dust compartment lid.
- Remove the vacuum cleaner bag.

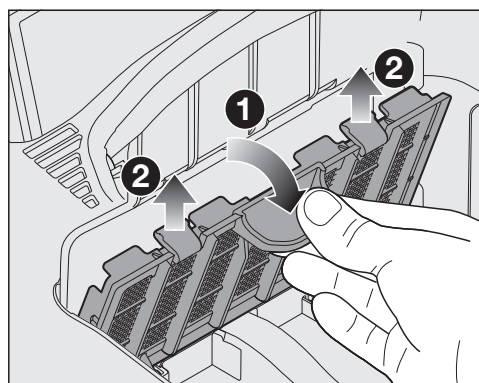


- Release the motor protection filter forwards and remove it upwards from the dust compartment.

⚠ Risk of damage caused by incorrect cleaning.

The motor protection filter can become damaged and be less effective as a result.

Do not clean the motor protection filter with water. Do not use pointed or sharp-edged objects to clean the filter.

- Clean the motor protection filter with a dry dust cloth or dust brush.

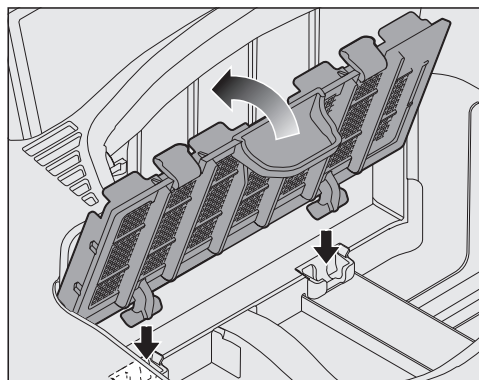


- Place the hinges of the motor protection filter carefully into the hinge recesses in the dust compartment and lock the motor protection filter so it clicks into place.
- Insert the vacuum cleaner bag into the holder until the catch element is firmly closed.
- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the vacuum cleaner bag when doing so.

When to replace the battery in the Comfort radio-controlled handle 2.0


The vacuum cleaner display will warn you in good time when the battery is running out. One 3 V battery (CR 2032) is required.

The vacuum cleaner can still be used when the battery has run out or if there is no battery fitted.

Replacing the battery in the Comfort radio-controlled handle 2.0

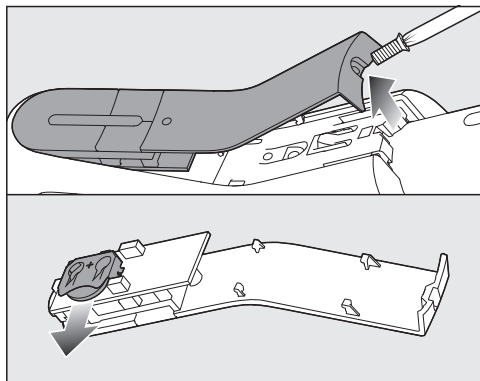

- Undo the fixing screw on the battery compartment cover using a Torx screwdriver and then remove the cover.
- Replace the battery with a new one. Make sure the polarity is correct.

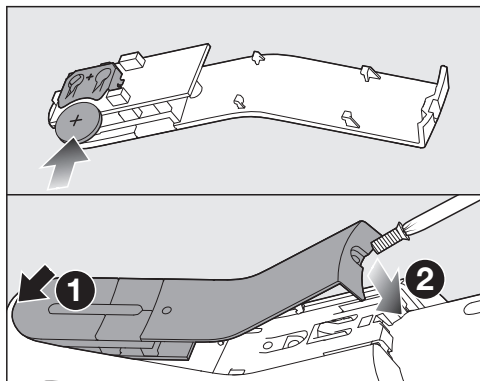


- Replace the cover, paying attention to the fastening sequence, and tighten the fixing screw.
- Dispose of the old battery in a municipal recycling facility.

Replacing the thread lifters

(not possible for models with FlexTeQ/ AllFloor floorheads)


The thread lifters on the suction inlet to the floorhead can be replaced. Replace the thread lifters if the pile has worn down.

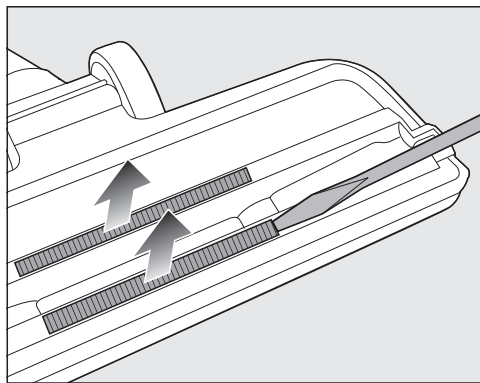

- Lever the thread lifters from the slots. To do so use a suitable tool, e.g. a flat-head screwdriver.
- Fit new thread lifters.


Replacement parts are available from your Miele dealer or from the Miele Spare Parts Dept.

Cleaning the vacuum cleaner and accessories

 Risk of electric shock from mains voltage.

The mains voltage is applied to the vacuum cleaner even if it is switched off.

Before cleaning, switch the appliance off at the wall socket and unplug it.


 Risk of electric shock from mains voltage.

If moisture gets into the vacuum cleaner, there is a risk of electric shock.

Do not let the vacuum cleaner get wet.

- Vacuum textile surfaces using a vacuum cleaner on the lowest power level with the dusting brush fitted.
- The vacuum cleaner and all plastic accessories should be cleaned with a commercially available cleaner suitable for plastic.

Static charge can cause a build-up of dust on the plastic parts of the vacuum cleaner. This should be removed using a soft, dry cloth.

 Damage due to unsuitable cleaning agents.

All surfaces are susceptible to scratching. Contact with unsuitable cleaning agents can alter or discolour the external surfaces.

Do not use abrasive cleaning agents, glass cleaning agents, all-purpose cleaners or oil-based care products.

Cleaning the dust compartment

The dust compartment can, if necessary, be cleaned using a dry duster, brush or, if available, a second vacuum cleaner to vacuum the dust out.


Also clean the underside of the dust compartment lid.

Troubleshooting

Many malfunctions and faults that can occur in daily operation can be easily remedied. You can save time and money in many cases, as you do not need to call the Miele Customer Service Department.

Information to help you remedy faults yourself can be found at www.miele.com/service.

The following tables are designed to help you to find the cause of a malfunction or a fault and to resolve it.

 Risk of electric shock from mains voltage.
The mains voltage is applied to the appliance even if it is switched off.
Before dealing with any problems, switch the appliance off at the wall socket and unplug it.

Problem	Cause and remedy
The vacuum cleaner switches off automatically.	<p>A temperature limiter switches the vacuum cleaner off automatically if it gets too hot.</p> <p>This can occur if, for instance, large objects block the suction tube or when the vacuum cleaner bag is full or contains particles of fine dust. A heavily soiled motor protection filter or exhaust filter can also be the cause of overheating.</p> <p>■ Switch the vacuum cleaner off immediately using the On/Off foot switch ①. Switch off at the wall socket and unplug it.</p> <p>After removing the cause, wait for approximately 20–30 minutes to allow the vacuum cleaner to cool down. It can then be switched on again.</p>

Technical data

Bluetooth

Frequency range	2.40–2.4835 GHz
Maximum transmission power	< 10 mW

WiFi

Frequency range	2.40–2.4835 GHz
Maximum transmission power	< 100 mW

Electricity consumption in standby mode

with WiFi activated	0,95 W
with WiFi deactivated	0,95 W

Copyright and licences

For the purpose of operating and controlling the vacuum cleaner, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

In addition, the vacuum cleaner contains software components which are distributed under open source licensing terms. The open source components contained in the appliance along with the corresponding copyright notices, copies of the licensing terms valid at the time, and any further information can be accessed locally by IP via a web browser (<http://<IP address>/Licenses>). The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.

EU Conformity declaration

Miele hereby declares that this vacuum cleaner complies with Directive 2014/53/EU.

Service

Information to help you rectify faults yourself and about Miele spare parts can be found at www.miele.com/service.

Contact in case of malfunction

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or Miele Service.

Contact information for Miele Service can be found at the end of this document.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.

Optional accessories

Please observe the flooring manufacturer's cleaning and care instructions.

Please note that faults and damage caused by use of accessories which do not bear the Miele logo on the packaging are not covered by the vacuum cleaner warranty.

These and many other products can be ordered from the Miele online shop, the Miele Customer Service Department or your Miele dealer.

Certain models are supplied with one or more of the following accessories as standard.

Floorheads / brushes

(only available in selected countries)

AllFloor (SBD AF) floorhead

Flat floorhead for cleaning underneath very low furniture. It is also quiet, light and stands out due to its very good pick-up of coarse dirt.

TurboTeQ Turbobrush (STB 305-3)

This brush is ideal for cleaning cut pile carpet.

Parquet Twister floorbrush with swivel action (SBB 300-3)

With natural bristles for vacuuming smooth hard floors and small gaps.

Parquet Twister XL floorbrush with swivel action (SBB 400-3)

With natural bristles for quickly vacuuming smooth hard floors and small gaps.

Other accessories

(only available in selected countries)

Turbo Mini hand turbobrush (STB 101)

For vacuuming upholstery, mattresses or car seats, etc.

Universal brush (SUB 20)

For dusting books, shelves, etc.

Radiator brush (SHB 30)

For dusting radiators, narrow shelves and crevices.

Mattress nozzle (SMD 10)

For vacuuming upholstery, mattresses, cushions, curtains, covers etc.

Crevice nozzle, 300 mm (SFD 10)

Extra long crevice nozzle for cleaning in folds, crevices and corners.

Crevice nozzle, 560 mm (SFD 20)

Flexible crevice nozzle for vacuuming hard to reach places.

XL upholstery nozzle (SPD 20)

Wide upholstery nozzle for cleaning upholstery, mattresses and cushions.

Filters

AirClean Plus 50 exhaust filter (SF-AP 50)

Effective filtration for particularly clean room air.

Exhaust filter Silence AirClean 50 (SF-SA 50)

For a significant reduction in noise whilst vacuuming.

Active AirClean 50 exhaust filter (SF-AA 50)


For a significant reduction of unpleasant odours. Ideal for households with pets or smokers.

HEPA AirClean 50 exhaust filter (SF-HA 50)

Effectively filters fine dust and allergens. Ideal for people allergic to house dust.

Filter grille

This is required if you wish to replace an AirClean Plus, Silence AirClean, Active AirClean or HEPA AirClean filter with an AirClean filter.

警告和安全說明.....	38
電器指南.....	42
可持續性和環保.....	44
熟悉產品.....	45
包含配件	45
3D4U	45
網路連接.....	45
屏幕上的標誌.....	46
塵袋更換指示器的運作方式.....	46
排氣濾網更換指示器的功能.....	46
摩打保護濾網.....	46
調試.....	47
連接吸喉	47
取出吸喉	47
連接吸喉到手柄	47
連接手柄到吸喉	47
連接吸管到可調節吸頭	48
連接無線遙控手柄.....	48
啟動網路功能.....	48
操作.....	49
調整可伸縮吸管	49
調整吸頭	49
為樓梯吸塵	49
解開電線	50
回捲電線	50
開啟和關閉	50
更新 	50
調整吸力.....	50
腳踏.....	51
Comfort 無線遙控手柄 2.0.....	51
臨時吸力級別.....	51
中斷運作.....	51
取出配件	52
調整二合一傢俱布料和罅隙吸咀.....	52
使用 Comfort 無線遙控手柄 2.0 上的除塵刷	52
安置、運送和存放.....	53
暫停吸塵用的停放系統.....	53
收納用鉤掛系統	53
清潔及護理.....	54
購買配件.....	54
塵袋更換指示器	54
取出塵袋	54

放入塵袋	55
當排氣濾網更換指示器亮起時	56
更換 AirClean Plus 50、Silence AirClean 50、Active AirClean 50 及 HEPA AirClean 50 排氣濾網	56
改用另一類型排氣濾網	57
清潔摩打保護濾網	57
何時應該更換 Comfort 無線遙控手柄 2.0 中的電池	58
更換 Comfort 無線遙控手柄 2.0 中的電池	58
更換撿線器	58
清潔吸塵機及配件	59
排除故障	60
技術資料	61
版權與授權	61
歐盟合規聲明	61
服務	62
故障時的聯絡方式	62
保養	62
可選配件	62

本吸塵機符合現有安全要求。使用不當可導致人身傷害和財產損失。

在首次使用本吸塵機之前，請仔細閱讀操作和安裝說明。其中包含關於本吸塵機的安全、使用、清潔和保養的重要資訊。它可以防止出現人身傷害和電器損壞。

根據 IEC 60335-1 的標準，Miele 明確及強烈建議您閱讀並遵循「調試」章節以及警告和安全說明。

因未遵守這些說明而導致的傷害或損壞，Miele 概不負責。

請妥善保存這些說明，並將它們交給日後的機主。

用完吸塵機後，在更換任何配件以及進行清潔、保養和排除故障之前，請務必將吸塵機切斷電源。從插座上取下插頭。

正確用法

- ▶ 本吸塵機適用於清潔家庭地板及類似的工作和居住環境。本吸塵機不適用於建築工地。
- ▶ 本吸塵機可用於為地毯、毛毯和堅固硬地板進行常規清潔。
- ▶ 本吸塵機不適合在戶外使用。
- ▶ 本吸塵機適合在海平面高度在 **4000** 米以上的地方使用。
- ▶ 本吸塵機只可用於為乾燥地板表面吸塵。不得對人或動物吸塵。不得用於任何其他用途、改造或改裝。
- ▶ 本吸塵機不適合身體、感官或心智不健全者，或缺乏經驗與知識的人（包括兒童）使用，除非他們在使用時有人監督，或已知曉如何以安全方式使用，且理解並認識到不正確操作所導致的後果。

兒童安全

- ▶ 有窒息危險。例如塑膠袋等包裝物料必須放在嬰兒和兒童無法觸及的地方。玩耍時，孩子們可能會意外被包裝纏住，或誤將其拉到頭上導致窒息。
- ▶ **8** 歲以下兒童必須遠離吸塵機，除非一直有人看管他們。
- ▶ **8** 歲和以上的兒童若在無人看管的情況下使用吸塵機，必須向他們演示如何安全使用吸塵機。兒童必須能夠理解並認識到不正確操作可能帶來的危險。
- ▶ 兒童不得在無人看管的情況下清潔或保養本吸塵機。
- ▶ 請看管好在吸塵機附近的兒童，不要讓他們玩弄吸塵機。
- ▶ 手柄上有 **LED** 或無線遙控的型號：請將電池放在兒童無法觸及的地方。

技術安全

- ▶ 使用前，請檢查吸塵機及其所有配件是否有明顯的損壞痕跡。切勿使用損壞的吸塵機或損壞的配件。
- ▶ 比較吸塵機資料牌上的連接資料（電壓與頻率）與電源的資料。確保兩者資料相吻合。本吸塵機適用於 **50** 赫茲或 **60** 赫茲，無需改動。

- ▶ 電源插頭必須裝有適當的保險絲。
- ▶ 可以在自主供電系統或與主電源不同步的供電系統（如島嶼網絡、後備系統）上臨時或永久運行。操作的先決條件是電源系統符合 **EN 50160** 或同等標準的規格。
在隔離運行或與主電源不同步的運行中，亦必須保持家用電氣裝置和該 **Miele** 產品中所提供的保護措施的功能和運行，或這些措施必須由裝置中的同等措施取代。例如，在當前版本的 **BS OHSAS 18001-2 ISO 45001** 中所述。
- ▶ 吸塵機保養期內，只能由 **Miele** 授權的維修技術人員進行維修。否則保養無效。
- ▶ 如果電線損壞，請勿使用本吸塵機。如果電線損壞，必須整條更換並進行完整回捲。為安全起見，只能由 **Miele** 維修服務部，或 **Miele** 授權的維修技術人員執行此項工作。
- ▶ 請勿用電線拉扯或攜帶吸塵機，從插座中拔出插頭時，亦請小心不要損壞電線。確保電線遠離尖銳的邊緣，並且不要使其受到擠壓，例如門底。避免讓吸塵機滾過電線。否則可能會損壞電線、插頭或插座。如果以上其中任何一部分損壞，請勿使用本電器。
- ▶ 維修只能由 **Miele** 授權的維修技術人員進行。由未經授權人士進行維修或其他工序可能會給使用者帶來相當大的危險。

正確使用

- ▶ 若未安裝塵袋、摩打保護濾網和排氣濾網，請勿使用吸塵機。
- ▶ 如果未放入塵袋，則無法關閉塵格蓋。不要強行關上。
- ▶ 在關閉塵格蓋之前，始終確保塵袋已放入且咔嗒一聲卡入就位。
- ▶ 不要用吸塵機向任何已經燃燒或仍在發光的東西吸塵，例如香煙、灰燼或煤炭，不論正在發光還是看來已熄滅。
- ▶ 請勿用吸塵機吸碳粉。碳粉（例如打印機和影印機中使用的碳粉）可以導電。

- ▶ 請勿用吸塵機吸水、液體或沾濕的泥土。剛清潔或洗過的地毯或毛毯應等待完全乾透後，再嘗試吸塵。
- ▶ 請勿對任何易燃或可燃的液體或氣體吸塵，也不要將此類物品儲存在此類物品的區域吸塵。
- ▶ 不要在齊頭高度吸塵，也不要任何人的頭部附近吸塵。
- ▶ 有關電池處理的重要資訊（適用於手柄上有 **LED** 或無線遙控的型號）：
 - 請勿使電池短路或充電，或將其投入火中。
 - 處置電池：從手柄上移除電池，然後將其丟入市政回收設施。請勿將電池與家居垃圾一起處理。

清潔



- ▶ 請勿讓吸塵機受潮。清潔時應先斷開連接主電源，然後用乾布或微濕布清潔。

配件和零件

- ▶ 不建議直接用手柄吸塵（不安裝配件），因為邊緣可能會因此損壞，鋒利的邊緣會令自己受傷。
- ▶ 只能使用包裝上有 **Miele** 標誌的塵袋、濾網和原裝配件。否則製造商不能保證產品的安全性。
- ▶ **Miele** 只能在使用 **Miele** 原裝零件時保證電器的安全性。只能使用 **Miele** 原裝零件更換其故障組件。
- ▶ **Miele** 保證在您的吸塵機停產後至少 10 年，直至 15 年內提供功能性備件。

運輸

- ▶ 包裝物料可保護吸塵機避免在運送途中損壞。我們建議您保留包裝以便運送。

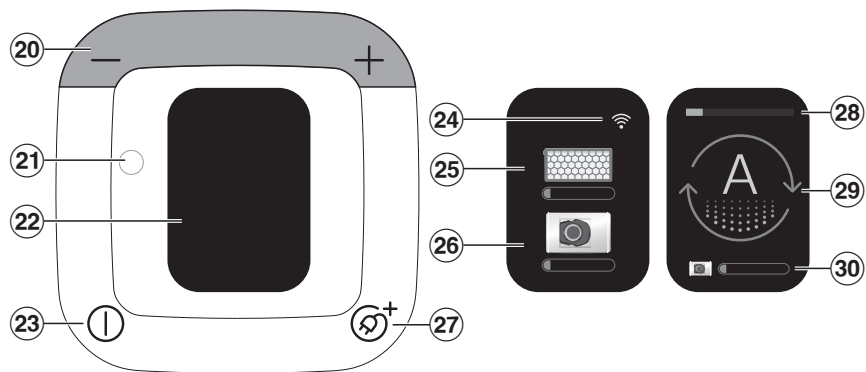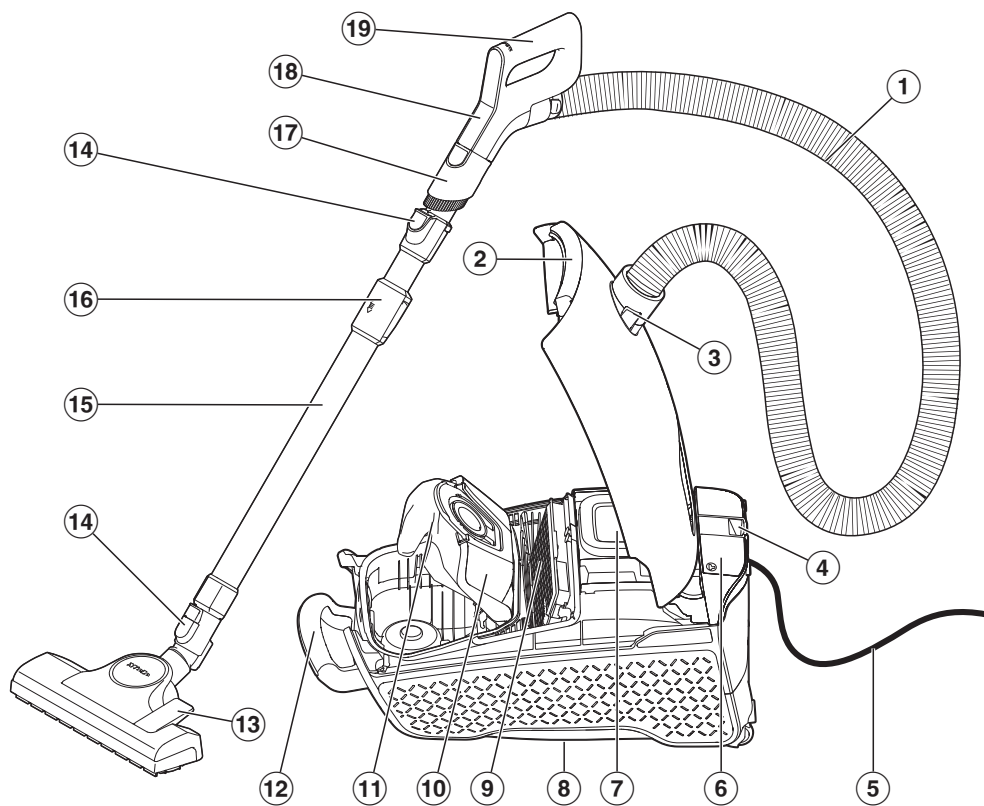

- ① 吸喉
- ② 塵格蓋鬆開按鈕
- ③ 喉管接頭
- ④ 暫停吸塵用的停放系統
- ⑤ 帶插頭的電線
- ⑥ 二合一傢俱布料和罅隙吸咀配件儲存格
- ⑦ 控制區域
- ⑧ 收納用鉤掛系統（設於吸塵機的下底面）
- ⑨ 原裝 Miele 排氣濾網*
- ⑩ 吸塵袋支架
- ⑪ 原裝 Miele 塵袋
- ⑫ 手提手柄
- ⑬ 吸頭
- ⑭ 鬆開按鈕
- ⑮ 伸縮管
- ⑯ 伸縮管鎖釦
- ⑰ 可拆卸除塵刷
- ⑱ Comfort 無線遙控手柄 2.0 控制區域
- ⑲ Comfort 無線遙控手柄 2.0
- ⑳ 用於設定吸力的 +/- 腳踏
- ㉑ 供客戶服務部使用的光學介面
- ㉒ 屏幕
- ㉓ 開/關腳踏 ①
- ㉔ WiFi 訊號狀態
- ㉕ 排氣濾網更換指示器
- ㉖ 塵袋更換指示器
- ㉗ 自動電線回捲腳踏 ②*
- ㉘ 選定吸力級別
- ㉙ 選定吸力級別標誌
- ㉚ 塵袋更換指示器

* 這些功能視型號而定，並且可能有相異之處，您的吸塵機亦可能未有提供。

處置包裝材料

包裝材料用於搬運，保護設備不受運輸損壞。所用的包裝材料選自對環境無害的處置材料，一般可回收利用。

回收包裝材料可以減少原材料的使用。對有價值的材料使用特定的材料收集點，並利用退回選項。

我們建議保留包裝材料以備運輸之用。

塵袋和濾網的處置

塵袋和濾網採用環保材料製作。可以將濾網與一般家居垃圾一起處置。塵袋也可以與一般家居垃圾一起處置，前提是其中僅含一般家居灰塵。

棄置您的舊電器

電器和電子裝置通常包含有價值的物料。它們還含有對其正常運作和安全性至關重要的特定材料、化合物和組件。如果與生活垃圾一起處理或處理不當，可能對人類健康和環境有害。因此，請勿將舊電器與生活垃圾一同棄置。



請在您當地的社區垃圾收集/回收中心處理電器和電子裝置，或聯絡您的經銷商或 Miele 尋求建議。您還需負責（依照法律，但取決於地區的規定）刪除可能儲存在被棄置電器上的任何個人資料。請確保您的舊電器在棄置前的存放期間不會對兒童造成危險。

棄置舊電池

在許多情況下，電氣和電子裝置內置的電池在使用後不得與生活垃圾一起處理。您有義務移除所有未用吸塵機牢固密封的舊電池，並將其帶到適當的收集點（例如零售商），以便免費獲得處理。用膠紙將金屬觸點絕緣，以防止短路。電池中可能含有對人體健康和環境有害的物質。

電池上的標籤將提供更多資訊。例如，含鋰的電池標有“Li-ion”字樣。帶叉號的垃圾桶符號表示不得將電池以生活垃圾形式棄置。我們也有義務向您告知，有叉號的垃圾桶上還帶有一個或多個化學符號，表示電池包含鉛（Pb）、鎘（Cd）和/或水銀（Hg）。




舊電池包含可回收的寶貴原材料。分開處理電池可以使它們更易於處理和回收。

熟悉產品

本吸塵機可用於為地毯、毛毯和堅固硬地板進行日常清潔。

Miele 為許多特殊應用提供一系列合適的配件（請參閱“可選配件”）。

包含配件

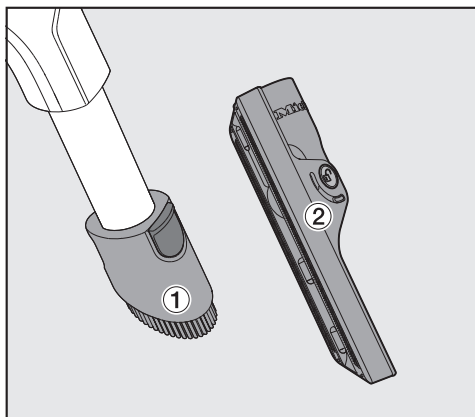

① 除塵刷

適用於為耐刮表面吸塵，例如鍵盤或清理碎屑。


除塵刷是可拆卸的，可以裝在吸管上用於為不易夠到的區域除塵。

② 二合一傢俱布料和罅隙吸咀

適用於清潔狹縫、罅隙和角落，以及為傢俱布料、床墊、咕臣、窗簾等除塵。

3D4U

憑藉 3D4U，Miele 提供免費的配件下載，供您的 3D 印表機使用（www.miele.com，服務，3D4U）。

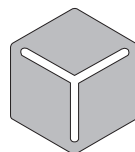

3 D 4 U

網路連接

吸塵機配有一個內置 WiFi 模組。可透過此 WiFi 模組連接您的家居網路並在行動裝置上使用 Miele 應用程式。

透過聯網吸塵機，可以進行以下操作：

- 存取狀態資訊
- 為吸塵機訂購更多塵袋
- 根據您的使用行為存取配件資訊

屏幕上的標誌

屏幕上顯示的標誌，用於指示吸力級別適合的應用類型。



窗簾、布料



傢俱布料、坐墊



根據表面自動調節吸力



切絨地毯、毛毯和滑槽



硬地板和非常骯髒的地毯和毛毯



人工選取臨時吸力級別



儲存的臨時吸力級別

其他操作和功能標誌：

-	減小吸力
+	增大吸力
①	開/關
⌚	自動電線回捲

塵袋更換指示器的運作方式

塵袋更換指示器是針對一般家居灰塵而設定。一般包含灰塵、頭髮、細線、地毯絨毛、粗砂等等。

但如果使用吸塵機吸起微細灰塵，例如鑽孔灰塵、沙子、石膏粉或麵粉，塵袋的孔會很快會被堵塞。
即使塵袋未滿，指示器也會顯示塵袋「已滿」。如果出現這情況，必須更換塵袋。

另一方面，如果吸塵器吸入了大量的頭髮、地毯絨毛等，在指示器反應之前，塵袋就會爆滿。

排氣濾網更換指示器的功能

在達到約 50 運作小時，相等於一年的平均使用時間後，排氣濾網更換指示器會亮起。當吸塵機上的指示器亮起時，更換排氣濾網。此時還應該檢查摩打保護濾網的髒污程度。


每次更換排氣濾網及清潔摩打保護濾網（如果需要）時，都必須重設指示器。請參閱「清潔和保養」中的「當排氣濾網更換指示器亮起時」章節。

摩打保護濾網

您的吸塵機標準配備終身使用的摩打保護濾網。它能在吸塵機的整個使用期內持續使用且無需更換。


調試

連接吸喉

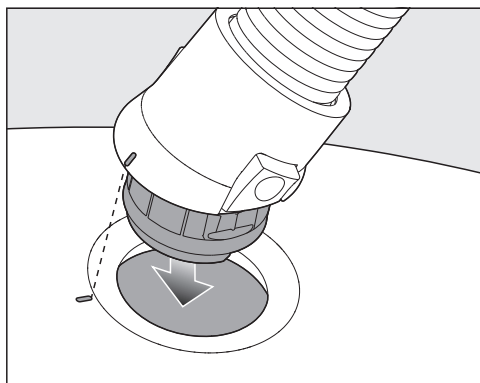


- 將吸喉接頭插入吸塵機的吸氣口，直至其卡入就位。首先將兩個部分的指示線對齊。

取出吸喉

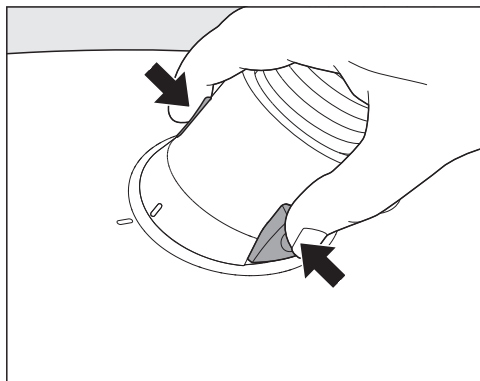


- 按下吸喉接頭側面的按鈕，然後將吸喉從吸氣口拉出。

連接吸喉到手柄

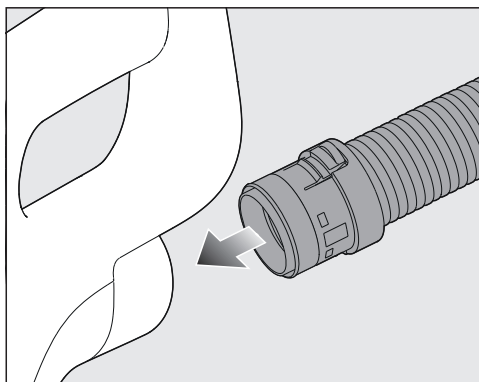


- 將吸喉接頭裝入手柄，直至其卡入就位。

連接手柄到吸喉

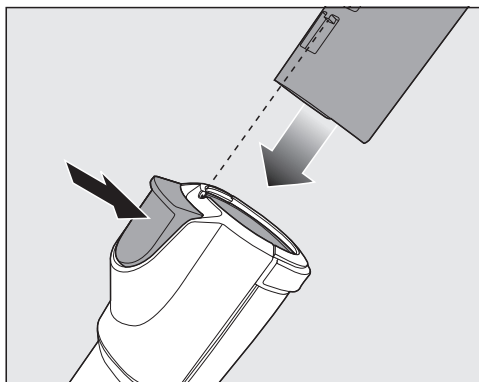

- 將手柄插入吸喉，直至其卡入就位。首先將兩個部分的指示線對齊。
- 要從手柄拆開吸管，請按下按鈕，然後將其從吸管拉出，同時將其稍微扭轉。

連接吸管到可調節吸頭

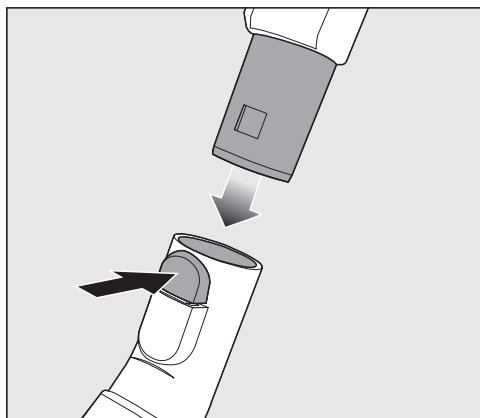

- 將吸管推入吸頭，然後順時針或逆時針旋轉，直到其卡入就位。
- 要從吸頭分離吸管，請按下按鈕，然後將吸管從吸頭拉出，同時將其稍微扭轉。

連接無線遙控手柄

第一次開啟吸塵機時，將自動選擇最高吸力級別。

之後，吸塵機開啟時將會套用上一次所使用的吸力級別。

- 踩下 + 腳踏，直至達到最大吸力級別。
- 踩下並踩住 + 腳踏保持不動。

將顯示倒時計，吸塵機風扇會在嘗試連接期間關閉。倒時計結束後，無線遙控手柄顯示在屏幕中。

吸塵機現在處於連接模式。

- 鬆開腳踏。
- 按下無線遙控手柄上的任何按鈕啟用手柄。

無線遙控手柄會在最長 20 秒內，嘗試與吸塵機建立連接。

吸塵機屏幕指示已成功建立連接，然後風扇重新開啟。

啟動網路功能

您的吸塵機配有一個內置 WiFi 模組。

將吸塵機連接到 WiFi 網路會增加耗電量。

確保將使用吸塵機的 WiFi 網路信號夠強。

要設定此功能，您需要：

1. WiFi 網絡
2. Miele 應用程式
3. Miele 使用者帳戶。您可以透過 Miele 應用程式建立使用者帳戶。



- 掃描二維碼下載 Miele 應用程式（如果您還沒有這樣做）。
- 開啟 Miele 應用程式並建立使用者帳戶。
- 如欲開始聯網，請再次掃描二維碼並按照 Miele 應用程式中的使用者導航說明進行操作。

吸塵機風扇會在嘗試連接期間關閉。吸塵機屏幕指示已成功建立連接。

也可以在未建立連接時提前退出連接模式。為此，請使用開/關 ① 腳踏關掉及重啟吸塵機。


WiFi 連接狀況

WiFi 連接與其他電器（包括微波爐和遙控玩具）共用頻率範圍。這可能造成偶發性連接失敗或甚至完全無法連接。因此無法保證特色功能的可用性。

操作

調整可伸縮吸管

可伸縮吸管層層相疊，可以進行調節以配合您的身高，方便舒適地進行吸塵。


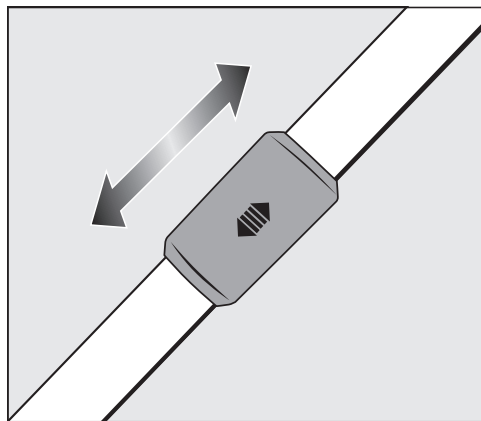


- 抓住鎖釦，將可伸縮吸管調整至所需的長度。

調整吸頭

視乎型號，您的吸塵機將配備圖例中的吸頭之一。

請遵從地板製造商的清潔和保養說明。

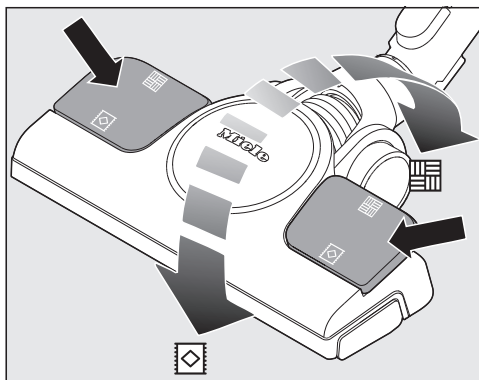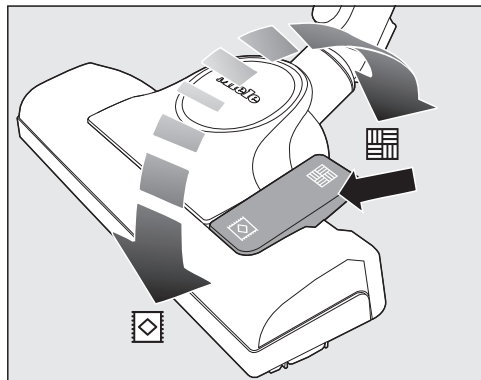


伸出除塵刷清潔平滑而不易刮花的堅硬地板，以及有罅隙或深縫的地板：

- 踩下  腳踏。

收回除塵刷為地毯和毛毯吸塵：


- 踩下  腳踏。

為樓梯吸塵

 吸塵機跌下可導致受傷。


如果吸塵機從樓梯跌下，可能會令您或他人受傷。

當為樓梯吸塵時，最好先從樓梯下方開始，然後往上移動。

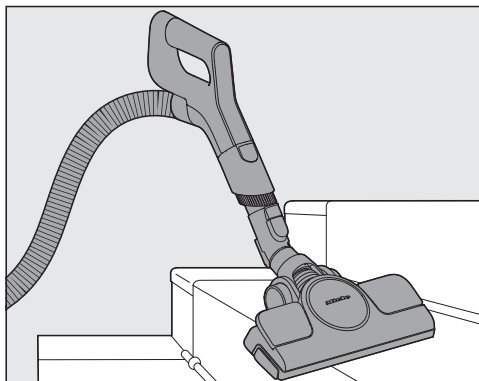

可調節吸頭亦可用於為樓梯吸塵。

解開電線

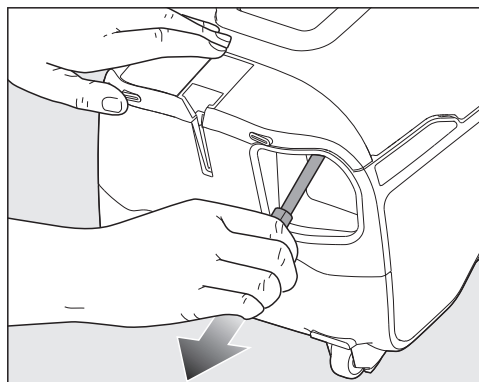


- 拉出電線至所需的長度。
- 將電源插頭插入電源插座。

⚠ 如過熱會有損壞電器的風險。
電線經過長時間使用可能會過熱。
吸塵時間如果超過 30 分鐘，則必須
將電線完全拉出。

回捲電線

- 從插座上取下插頭。

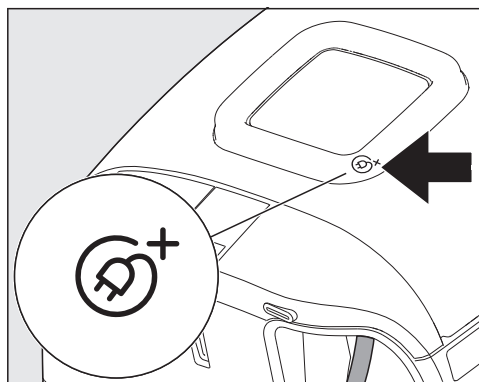


- 踏一下電線回捲腳踏。

然後電線將自動收回至吸塵機中。

您可以隨時中斷電線回捲。


- 回捲時輕拉一下電線。


開啟和關閉

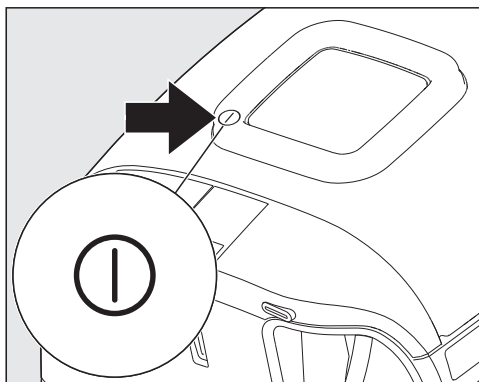

- 踩下開關踏板 ①。

更新

Miele 會定期提供更新 。您的吸塵機會進行軟件更新，以確保其配合 Miele 的最新發展。

當開啟吸塵機時，如有可用的更新 ，您會收到通知。

- 如欲開始安裝更新，請踩下 + 腳踏。

顯示進度條將指示安裝狀態。

- 如欲延後安裝更新，請踩下 - 腳踏。

您下次開啟吸塵機時，會再次提醒您安裝更新。

調整吸力


吸力可以調整以配合清潔不同類型的地板。降低吸力會減少操作吸頭所需的力度。

選定的吸力級別透過屏幕中的橙色吸力指示器顯示為一個標誌，請參閱「熟悉產品」中的「屏幕中的標誌」章節。

腳踏

第一次開啟吸塵機時，將自動選擇最高吸力級別。


之後，吸塵機開啟時將會套用上一次所使用的吸力級別。

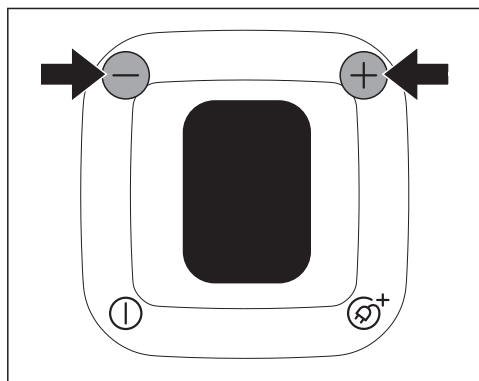

■ 踩下 + 腳踏選擇較高吸力級別。

■ 踩下 - 腳踏選擇較低吸力級別。

Comfort 無線遙控手柄 2.0

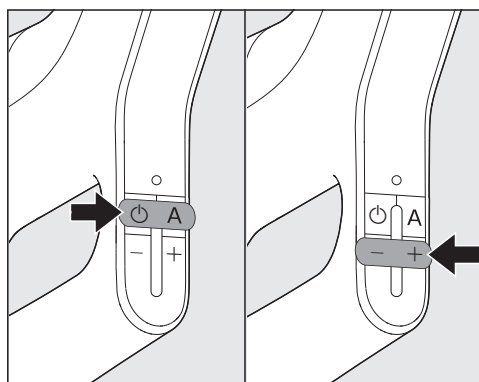

透過開/關腳踏 ① 開啟吸塵機後，也可以使用 Comfort 無線遙控手柄 2.0 全面操控吸塵機。

吸塵機的 Comfort 無線遙控手柄 2.0 上有一個按鈕 A，用於選擇自動吸力級別。這表示將根據相關表面調整吸塵機的吸力。

⚠ 不要使用自動設定來為薄身物料或窗簾吸塵。這些物料可能會被吸進吸塵機內並可能造成損壞。

■ 按下 Comfort 無線遙控手柄 2.0 上的 + 按鈕選擇較高吸力級別設定。

■ 按下 Comfort 無線遙控手柄 2.0 上的 - 按鈕選擇較低吸力級別設定。

第一次開啟吸塵機時，將自動選擇最高吸力級別。

之後，吸塵機開啟時將會套用上一次所使用的吸力級別。

臨時吸力級別

您可以忽略預設吸力級別並自訂吸塵機的吸力，以滿足您的個人要求。

為此，請執行以下操作：

■ 按住 + 或 - 按鈕。

屏幕顯示手動選擇臨時吸力級別的標誌。

■ 按住 + 或 - 按鈕，直至達到所需吸力。

■ 鬆開按鈕。

等待 5 秒鐘及不接觸任何控件；臨時吸力設定會儲存到下一個最高或最低吸力級別。會顯示一個勾號 ✓，確認設定已儲存。顯示所儲存的臨時吸力級別的標誌。

下次使用吸塵機的時候，開機時將會套用已儲存的臨時吸力級別設定。如果您之後選擇了 4 個標準吸力級別之一，這個設定將會被刪除。

中斷運作


本吸塵機可以在吸塵時暫停。

■ 按下手柄上的待機按鈕 ⏻。

⚠ 待機按鈕是為在吸塵途中暫停吸塵機而設。存在過熱和損害的風險。

每次按下手柄上的按鈕，都會有 LED 亮起作指示。

暫停結束時，您有 3 個選擇：

- 再次按下待機按鈕 。

吸塵機將使用先前選定的吸力級別開啟。


- 按下 + 按鈕。

吸塵機將使用最高吸力級別開啟。

- 按下 - 按鈕。

吸塵機將使用最低吸力級別開啟。

取出配件

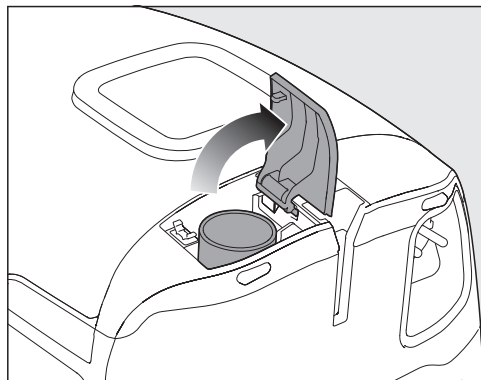

- 按下配件儲存格上的按鈕。

配件儲存格將會開啟。

- 取出傢俱布料和罅隙合併吸咀。


- 用力按下配件儲存格蓋將其關閉。

調整二合一傢俱布料和罅隙吸咀

您的吸塵機標準配備一個傢俱布料和罅隙合併吸咀。

罅隙吸咀


從配件儲存格取出的二合一傢俱布料和罅隙吸咀適合清潔狹縫、罅隙和角落。

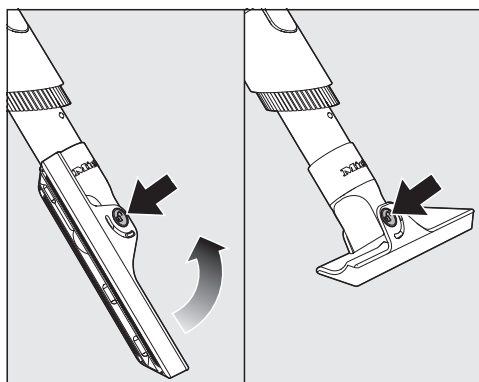


傢俱布料吸咀

- 按下二合一傢俱布料和罅隙吸咀上的釋放按鈕，然後將傢俱布料吸咀推到導軌上，直至其明顯卡入就位。
- 完成清潔工作後，按下釋放按鈕，然後將傢俱布料吸咀推回到其原始位置。旋轉二合一傢俱布料和罅隙吸咀，直至釋放按鈕明顯卡入就位。


使用 Comfort 無線遙控手柄 2.0 上的除塵刷

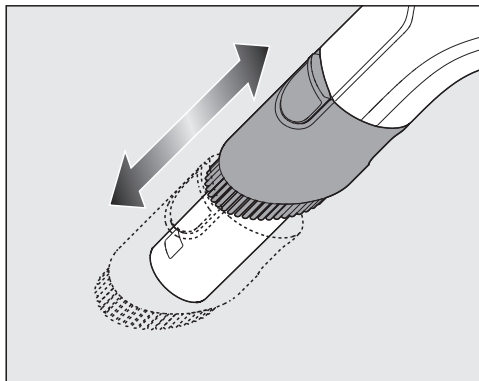

- 按下除塵刷上的按鈕，然後將刷推出，直至其明顯卡入就位。

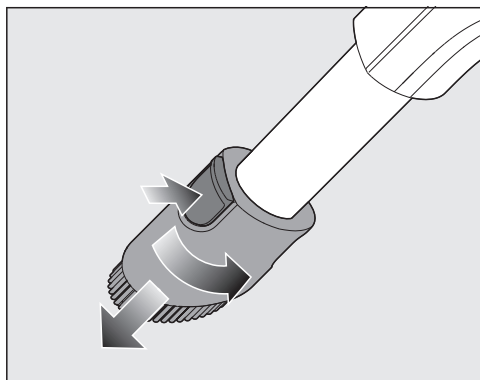

- 按下按鈕並將除塵刷轉至側邊。
- 將除塵刷向下推入導軌，直至從手柄上鬆開。

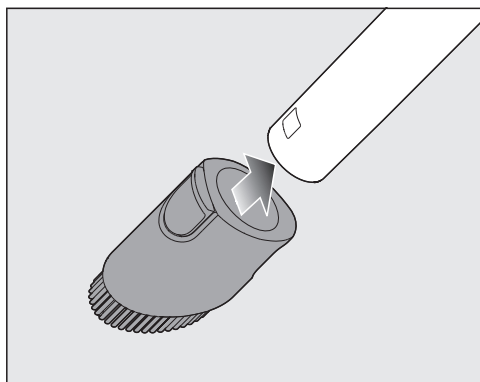

- 將除塵刷向上推入吸管，直至聽到咔嗒一聲卡入就位。

完成除塵工作時


- 按下按鈕並從吸管拔下除塵刷。
- 將除塵刷向上推回到 **Comfort** 無線遙控手柄 2.0 上，直至聽到咔嗒一聲卡入就位。
- 將除塵刷推回原位，以便手柄可以推回到吸管中。

安置、運送和存放

暫停吸塵用的停放系統

停放系統可讓您在暫停時方便地停放吸管和吸頭。

⚠ 吸塵機跌下可導致受傷。
如果吸塵機放在傾斜的表面上，例如斜坡，請不要使用停放系統。

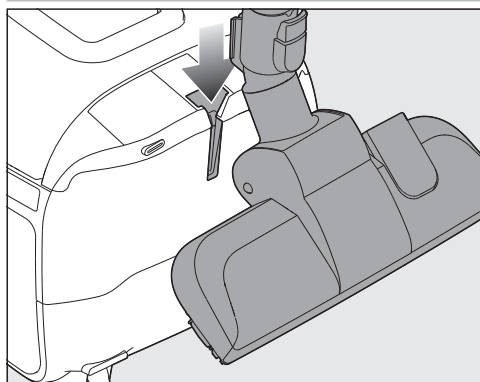


- 將吸頭插入吸塵機上的停放系統。

收納用鉤掛系統

該鉤掛系統可讓您鉤掛吸管和吸頭，以方便運輸或存放。

⚠ 謹防電源電壓導致觸電的風險。
即使吸塵機已關閉，電源電壓仍然保持連接。
使用完畢後，請始終斷開吸塵機的電源。從插座上取下插頭。

- 垂直擺放吸塵機。
- 完全收回可伸縮吸管。

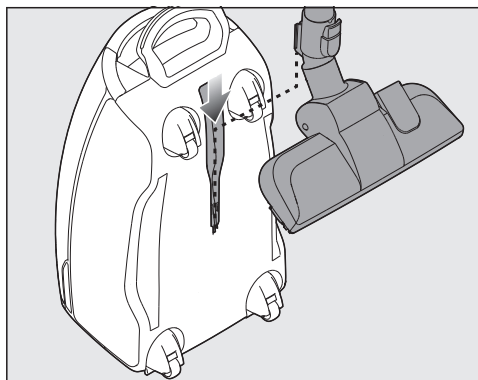

- 將吸頭向下插入吸塵機下底面的停放附件。

這讓吸塵機更容易攜帶或存放。

清潔及護理

⚠ 謹防電源電壓導致觸電的風險。
即使電器已關閉，電源電壓仍然保持連接。
進行清潔和保養前，必須切斷電器的牆壁電源插座並拔出插頭。

Miele 濾網系統包含 3 個配件：

- 原裝 Miele 塵袋（型號 TU）
- 原裝 Miele 排氣濾網
- 摩打保護濾網

塵袋和排氣濾網將需要不時更換，確保您的吸塵機有效運作。

我們建議只使用包裝上有 Miele 標誌的原裝 Miele 塵袋、濾網和配件。只有這樣才能保證您的吸塵機發揮最佳吸力並獲得最佳清潔效果。

包裝上有 Miele 標誌的塵袋不是由紙或紙質材料製成的，也沒有卡紙環。因此 Miele 塵袋特別耐用可靠。

請注意，因使用了在包裝上沒有 Miele 標誌的配件所造成的故障和損壞，不在吸塵機保養範圍之內。

購買配件

可從 Miele 網上商店、Miele 客戶服務部或您的 Miele 經銷商處訂購正品 Miele 配件。

您可以通過包裝上的 Miele 標誌識別正品 Miele 配件。

每包 Miele 原裝塵袋內含 4 個塵袋和一個 AirClean 排氣濾網。原裝 Miele 組合裝包含 16 個塵袋和 4 個 AirClean 排氣濾網。


如需購買正品 Miele 排氣濾網的資訊，請參閱「可選配件」-「濾網」中的銷售指定。

塵袋更換指示器


當吸塵機屏幕指示時，請更換塵袋。

阻塞的細孔會令吸塵機吸力降低。塵袋裝滿後應將其丟棄。不要試圖重複使用塵袋。


取出塵袋

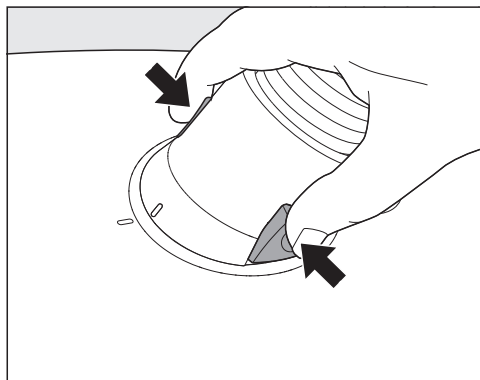

- 按下吸喉接頭側面的按鈕，然後將吸喉從吸氣口拉出。

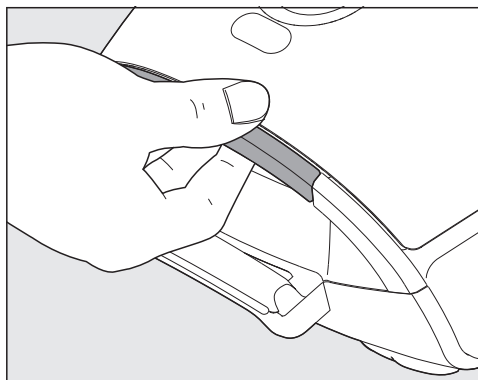

- 按下塵格蓋隱藏把手的按鈕，然後將蓋子開至最大。

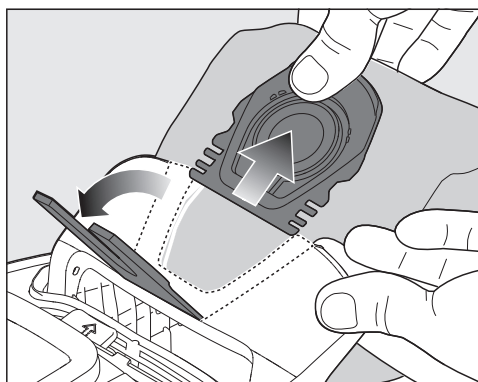


- 用一隻手抬起吸塵袋支架。
- 用另一隻手透過把手拉出塵袋。

藍綠色鉤件會抬高。

藍綠色鉤件可防止塵格蓋在未放入塵袋時合上。
不要強行關上。

放入塵袋

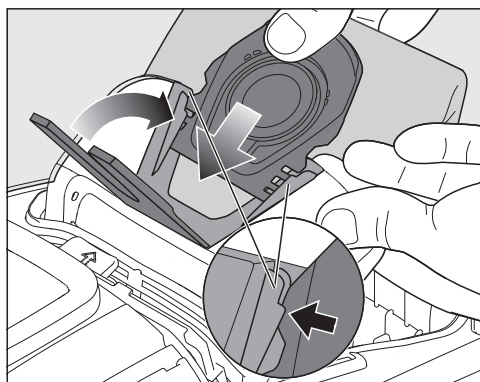


- 用一隻手抬起吸塵袋支架。
- 用另一隻手將新的塵袋盡可能深深放入抬高的吸塵袋支架中。當把塵袋從包裝裡拿出來時，請將其折疊起來。

確保塵袋的袋口完全放入到兩側的導軌中（參見放大圖像）。

藍綠色鉤件閉合並咔嗒一聲卡入就位。

- 緊緊關上塵格蓋，確保其卡入就位。在此過程中，小心不要夾到塵袋。

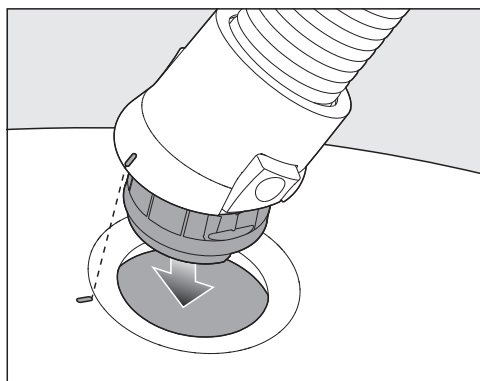

- 將吸喉接頭插入吸塵機的吸氣口，直至其卡入就位。首先將兩個部分的指示線對齊。

當排氣濾網更換指示器亮起時

當吸塵機屏幕上出現指示時，更換排氣濾網。此時還應該檢查摩打保護濾網的髒污程度，請參閱「清潔摩打保護濾網」。

每次更換排氣濾網時都必須重設指示器。吸塵機必須開啟以進行重設。

■ 按住 + 按鈕。


顯示倒計時，吸塵機風扇會關閉。指示器將亮起並呈綠色，顯示其已成功重設。指示器隨後熄滅，並重設至零。

指示器僅當指示需要更換排氣濾網時才能重設。其他時候不能重設指示器。

更換 AirClean Plus 50、Silence AirClean 50、Active AirClean 50 及 HEPA AirClean 50 排氣濾網


切勿同時使用超過一個排氣濾網。

■ 打開塵格蓋。

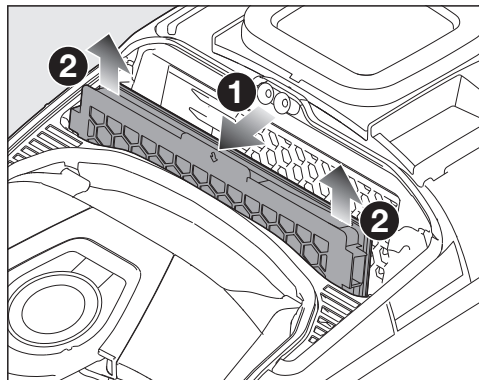

如果您希望使用 AirClean 排氣濾網，請參閱「改用另一類型排氣濾網」章節。

■ 向前拉排氣濾網並將其向上取出。

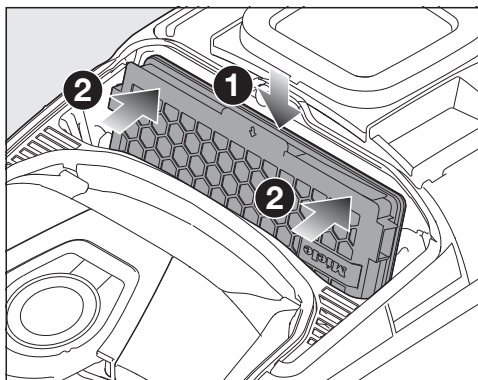

■ 向下放入新的排氣濾網，確保位置正確，然後卡入就位。

⚠ 塵格污染可導致損壞。

如果塵袋沒有卡入就位，大量灰塵可能會進入塵格並損壞部件。


在關閉塵格蓋之前，確保已放入塵袋且鉗件已合上。

■ 緊緊關上塵格蓋，確保其卡入就位。在此過程中，小心不要夾到塵袋。

改用另一類型排氣濾網

切勿同時使用超過一個排氣濾網。


視乎型號，您的吸塵機將配備以下排氣濾網其中之一：

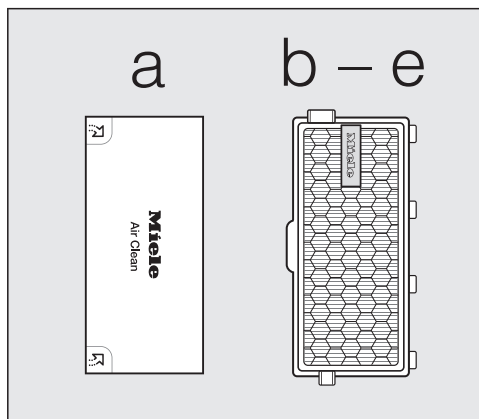

- a AirClean
- b AirClean Plus 50（淺藍色）
- c Silence AirClean 50（灰色）
- d Active AirClean 50（黑色）
- e HEPA AirClean 50（白色）


更換濾網時，請注意

如果您想將排氣濾網 b、c、d 或 e 更換為濾網 a，您還必須安裝濾網格柵，請參閱「可選配件」中的「濾網」章節。

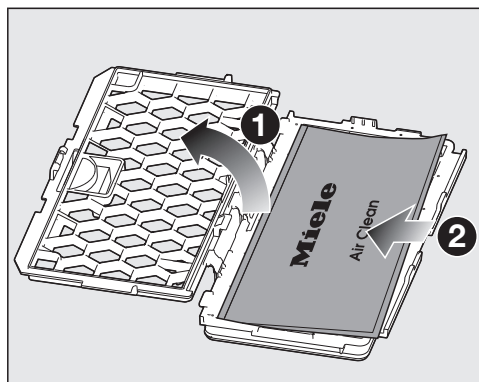

清潔摩打保護濾網


- 打開塵格蓋。
- 取出塵袋。

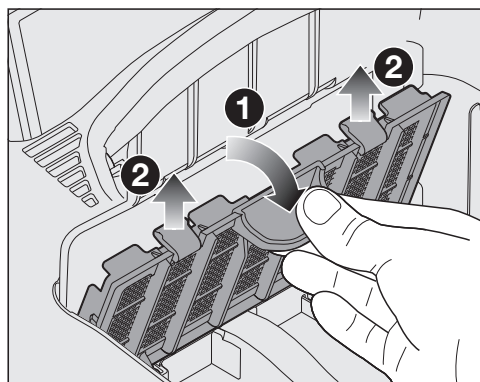

- 向前鬆開摩打保護濾網並從塵格中向上取出濾網。

⚠ 清潔不當可導致損壞風險。
摩打保護濾網可能會損壞，效能會因而降低。
請勿用水清潔摩打保護濾網。請勿使用尖銳或鋒利物體清潔濾網。

- 使用乾的除塵布或除塵刷清潔摩打保護濾網。

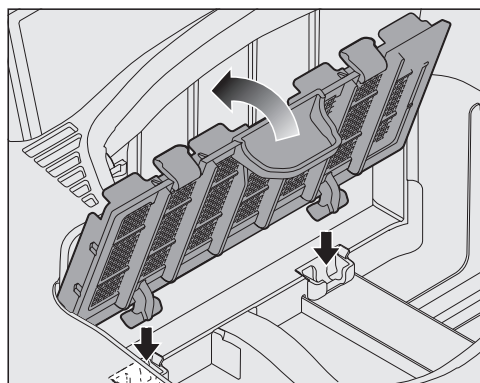

- 小心地將摩打保護濾網的鉸鏈放入塵格的鉸鏈凹槽中並鎖定摩打保護濾網，使其卡入就位。


- 將塵袋盡可能完全放入支架中，直至鉗件牢固閉合。
- 緊緊關上塵格蓋，確保其卡入就位。在此過程中，小心不要夾到塵袋。

何時應該更換 Comfort 無線遙控手柄 2.0 中的電池


吸塵機屏幕會適時提醒您電池電量何時耗盡。需要一枚 3 V 電池 (CR 2032)。

即使電池電量用完或未安裝電池，仍可以使用吸塵機。

更換 Comfort 無線遙控手柄 2.0 中的電池

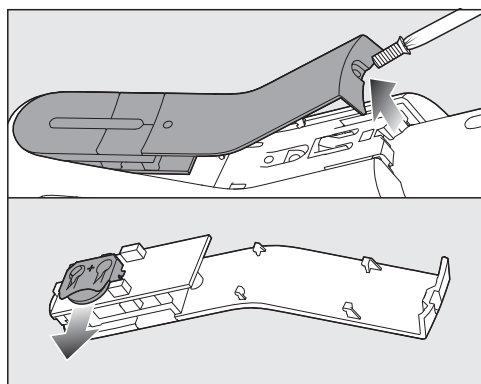

- 用 Torx 螺絲批扭開電池盒蓋上的固定螺絲，然後移除蓋子。
- 更換為新的電池。確保電極方向正確。

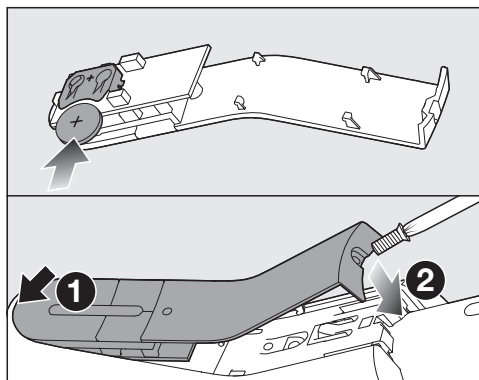


- 裝回蓋子，注意緊固順序，並扭緊固定螺絲。
- 將舊電池丟棄在市政回收設施中。

更換撿線器

(不適用帶 FlexTeQ/AllFloor 吸頭的型號)


吸頭吸氣口上的撿線器可以更換。如果絨面已耗損，應更換撿線器。

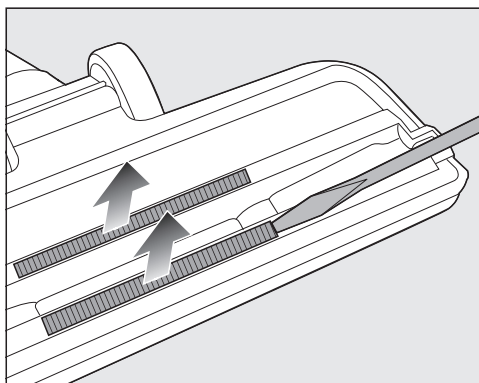


- 從插槽中拆出撿線器。可以使用合適的工具，例如平口螺絲批。
- 換上新的撿線器。

更換配件可從您的 Miele 經銷商或 Miele 零件部購買。


清潔吸塵機及配件

 謹防電源電壓導致觸電的風險。
即使吸塵機已關閉，電源電壓仍然保持連接。
進行清潔前，必須切斷吸塵機電源。
關掉牆壁插座，拔出插頭。

 謹防電源電壓導致觸電的風險。
如果吸塵機受潮，可能會導致觸電。
請勿讓吸塵機受潮。

- 當使用在織物表面時，套上除塵刷及以最低吸力級別使用。
- 應使用適用於塑膠的市售清潔劑，清潔吸塵機和所有塑膠配件。

靜電會導致吸塵機的塑膠部分堆積灰塵。應使用柔軟的乾布清除。

 不合適的清潔劑可導致損壞。
所有表面均易刮花。如與不合適的清潔劑接觸會令外表面改變或褪色。
請勿使用研磨劑、玻璃清潔劑、多用途清潔劑或油性護理產品。

清潔塵格

如有必要，可使用乾式除塵器、刷子或另一部吸塵機清潔塵格，吸走灰塵。


同時清潔塵格蓋的下底面。

排除故障

在日常操作過程中出現的機件失靈或故障問題，其實都可輕易解決。在許多情況下，您可以節省時間和金錢，因為您無需致電 Miele 客戶服務部。

您可在 www.miele.com/service 上找到可幫助您自行修復故障的資訊。

以下指南可幫您找到故障的原因並加以解決。

 電源電壓可導致觸電危險。

即使電器已關閉，電源電壓仍然保持連接。

處理任何問題前，必須切斷吸塵機電源。關掉牆壁插座，拔出插頭。

問題	原因和糾正
本吸塵機會自動關閉。	<p>溫度限制器會在溫度過高時自動關閉吸塵機。</p> <p>例如，如果大型物件堵塞吸管，或者塵袋已滿或被細塵微粒阻塞，則可能發生這種情況。摩打保護濾網或排氣濾網如果嚴重髒污也可能導致過熱。</p> <p>■ 使用開/關腳踏 ① 立即關閉吸塵機。關閉牆壁電源插座並拔下插頭。</p> <p>解決問題成因後，等待大約 20–30 分鐘，讓吸塵機冷卻。之後可以重新開啟吸塵機。</p>

技術資料

藍牙

頻率範圍 2.40–2.4835 GHz

最高傳輸功率 < 10 mW

WiFi

頻率範圍 2.40–2.4835 GHz

最高傳輸功率 < 100 mW

待機模式耗電量

WiFi 啟用 0,95 W

WiFi 停用 0,95 W

版權與授權

Miele 使用開放源碼許可條款未涵蓋的專有或第三方軟件，作操作和控制吸塵機用途。本軟件/這些軟件組件受版權所保護。必須尊重 Miele 和第三方擁有的版權。

此外，吸塵機包含的軟體組件是根據開放源碼許可條款分銷。電器中包含的開源組件以及相應的版權聲明、當時有效的許可條款副本，以及更多資訊，都可以使用 Web 瀏覽器透過 IP 在本地存取 (<http://<IP address>/Licenses>)。在此處顯示的開源許可證的責任和保證安排僅適用於相應的權利持有人。

歐盟合規聲明

Miele 特此聲明，本吸塵機符合指令 2014/53/EU 的規定。

服務

您可在 www.miele.com/service 上查找可幫助您自行糾正故障以及有關 Miele 備件的資訊。

故障時的聯絡方式

如果您無法自行解決故障，請聯絡 Miele 經銷商或 Miele 服務部。

Miele 服務的聯絡資訊載於本文件的最後部分。

請注意，出於培訓目的，電話可能被監控和記錄。而如果問題可以如本手冊所述解決，將為該上門服務收取費用。

保養

如欲瞭解您所在國家或地區的特定電器保養資訊，請聯絡 Miele。請參見本手冊結尾部分的聯絡詳情。

可選配件

請遵從地板製造商的清潔和保養說明。

請注意，因使用了在包裝上沒有 Miele 標誌的配件所造成的故障和損壞，不在吸塵機保養範圍之內。

以上及其他更多產品可以從 Miele 網上商店、Miele 客戶服務部或您的 Miele 經銷商訂購。

某些型號標準配備下列一個或多個附件。

吸頭/塵刷

（只在特定國家提供）

AllFloor (SBD AF) 吸頭

扁平吸頭適合清潔非常低的傢俱下方的平地板塵刷。它還具有噪音低、重量輕的特點，並能很好地吸附粗大污漬。

TurboTeQ 渦輪塵刷（STB 305-3）

此渦輪塵刷是清除短絨地氈上絨毛和毛髮的理想之選。

Parquet Twister 旋轉式吸頭（SBB 300-3）

設有天然鬃毛，方便清潔平滑硬地板和細小罅隙。

Parquet Twister XL 旋轉式吸頭（SBB 400-3）

設有天然鬃毛，方便快速清潔平滑硬地板和細小罅隙。

其他配件

(只在特定國家提供)

Turbo Mini 手動渦輪塵刷 (STB 101)

用來清潔傢俱布料、床褥或汽車座椅等。

萬用塵刷 (SUB 20)

用來刷除書本、架子等上的灰塵。

散熱器塵刷 (SHB 30)

用來刷除散熱器、窄長架子及罅隙上的灰塵。

床褥吸咀 (SMD 10)

用來清潔傢俱布料、床褥、墊子、窗簾、罩布等。

罅隙吸咀 300 毫米 (SFD 10)

加長罅隙吸咀，用來清潔狹縫、罅隙及角落。

罅隙吸咀 560 毫米 (SFD 20)

靈活的罅隙吸咀，用於清潔難以觸及部位。

特大傢俱布料吸咀 (SPD 20)

加寬傢俱布料吸咀，用於清潔傢俱布料、床褥及枕頭。

濾網

AirClean Plus 50 排氣濾網 (SF-AP 50)

有效過濾，帶來特別潔淨的室內空氣。

排氣濾網 Silence AirClean 50 (SF-SA 50)

可顯著減少吸塵時發出之噪音。

Active AirClean 50 活性碳排氣濾網 (SF-AA 50)

可顯著減少難聞的氣味。是養寵物或有吸煙者家庭的理想選擇。

HEPA AirClean 50 排氣濾網 (SF-HA 50)

有效隔除細微灰塵和致敏原。是對家居灰塵過敏人士的理想選擇。

濾網格柵

如果您希望更換 AirClean Plus、Silence AirClean、Active AirClean 或 HEPA AirClean 濾網為 AirClean 濾網，這是必須事項。

Hong Kong, China**Miele (Hong Kong) Ltd.**

41/F - 4101, Manhattan Place

23 Wang Tai Road

Kowloon Bay

Hong Kong

Tel: (852) 2610 1025

Fax: (852) 3579 1404

E-mail: customerservices@miele.com.hk

Website: www.miele.hk

Hong Kong, China**Miele (Hong Kong) Ltd.**

香港九龍灣宏泰道23號

Manhattan Place 41樓4101室

電話: (852) 2610 1025

傳真: (852) 3579 1404

電郵地址: customerservices@miele.com.hk

網址: www.miele.hk

Miele Experience Centre

UG/F & 1/F, Henry House

42 Yun Ping Road

Causeway Bay

Hong Kong

Tel: (852) 2890 1018

Fax: (852) 3579 1401

E-mail: ExperienceCentre@miele.com.hk

Miele陳列室

香港銅鑼灣恩平道42號亨利中心UG及一樓

電話: (852) 2890 1018

傳真: (852) 3579 1401

電郵地址: ExperienceCentre@miele.com.hk

International Head Office

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh

Germany