## Míele



## Operating and installation instructions Commercial washer-dryer stack PDW 909 SOM

**Always** read the operating instructions before setting up, installing and commissioning the machine. This prevents both personal injury and damage to the machine.

en-GB

M.-Nr. 12 427 160

	000
Caring for the environment	. 8
Disposing of your old machine	. 8
	0
Warnings and safety notes	
Explanation of the safety notes and warnings on the machine	
Appropriate use	
Foreseeable misuse	
Technical safety	
Correct use	
Chlorine and component damage	
Accessories	
Disposing of your old machine	20
Description of the machine	21
Description of the machine	
Operation	
Control panel	
Sensor controls and touch display	
Main menu	
Main menu	
" Programmes" menu	
"☆ Favourites" menu	
"钧a Supervisor" menu	
Examples of how to operate the machine	25
Washing	29
Preparing for use	
Emptying pockets	-
Sorting laundry	
Pre-treating stains	
General tips	
Loading and switching on the washing machine	
Loading the washing machine	
Washing with detergent drawer	
Adding detergent using the detergent drawer	
Adding fabric conditioner or liquid starch separately	
Adding starch separately	
Dyes, dye removers and descalers	
Detergent dispensing	
Selecting a programme	
Selecting programme settings	
Selecting Extras	
Pre-wash 닌	
Soak 🗟	
Rinse plus 🖼	
Rinse hold 🗁	
Filling stop	
Intensive 🗑	
Water plus 🖅	
Programme start – programme end	
Timer	

Special features in the programme sequence	41
Spinning	41
Anti-crease	41
Skip	42
Manual control	42
Durvin a	46
	40 46
· · · · · · · · · · · · · · · · · · ·	40 46
	-
	46
	46
	46
	47
- · · · · · · · · · · · · · · · · · · ·	47
	48
	48
	48
5 1 5	50
	50
	50
5 5	50
	51
End of programme	
	51
	51
	51
Prerequisite for setting the timer	
Setting the timer	51
Changing the programme sequence	52
Washing machine	
•	52
Cancelling a programme	52
	52
5 5 1 1 11 5	53
	54
5	54
	54
5 1 5	54
	55
Problem solving guide	56
0	56
	57
55	57
	57
Programme cancellation and fault message	59
	60
	61
Insufficient drying results	62
	64 65

Opening the door in the event of a blocked drain outlet and/or power cut	66
Cleaning and care	68
Build-up of rust	68
Cleaning the detergent drawer, detergent compartments and siphons	69
Cleaning the water inlet filters	
Cleaning the fluff filter	72
Removing the fluff filter	
Dismantling the fluff filter	
Cleaning the fluff filter parts (dry)	73
Cleaning the fluff filter parts (wet)	
Inserting the fluff filter	73
Cleaning the air supply area	75
Rapid cleaning	75
Additional cleaning	
Installation	78
General operating conditions	78
For ease of maintenance	79
PDW 909	79
Installing the washer-dryer stack	
Transit bars	82
Levelling	. 84
Securing the machine	
Installing the machine on ships	
Installing the tumble dryer at the top	
Water connection	
Cold water connection	
Using the machine in cold water mode	
Hot water connection	
Using the machine in hot water mode	
Electrical connection	
Supply air and exhaust air management	
Ventilation	
Exhaust air management	
Calculating the total ducting length	
Exhaust duct dimensions	
Exhaust air management with plug-in pipes	
Exhaust air management with flexible aluminium hose	
Shared exhaust air ducts	
Reference to external machines	
Optional accessories	
Washing machine accessories	
Tumble dryer accessories	103
Washing machine supervisor level	
Opening the supervisor level	
Code-based access	
Changing the code	
Closing the Settings menu	104

Operation/display	105
Language	105
Language access	105
Set languages	105
Display brightness	105
Time	106
Date	
Volume	106
Visibility parameters	106
Appliance off status	
Delay start	
Memory	
Manual control	
Change order	
Temperature unit	
Weight unit	
Supervisor code	
WiFi	
Programme selection	
Controls	
Programme packages	
Favourite programmes	
Sort programmes	
Prog. colour allocation	
Expert code	
Process technology	
Anti-crease	
Automatic drainage	
Service	
Service interval	
External applications	
Payment system lock	
Connector box	
Automatic dispensing	
Dosage	
Peak load prevention	
Appliance parameters	
Maximum spin speed	
Max. possible temperature	
Legal information	113
Tumble dryer supervisor level	114
Opening the Supervisor level	
Access via code	
Change code	
Closing the settings menu	

Controls / Display	114
Language	114
Language entry	114
Set languages	115
Display brightness	115
Clock display	115
Date	
Volume	
Res. moisture display	
Visibility parameters	
Display off status	
Machine off status	
Delay start	
Memory	
Temperature unit	
Weight unit	
Change code	
0	
Programme selection	
Programme packages	
Favourite programmes	
Special programmes	
Sort programmes	
Prog. colour allocation	
Process technology	
Anti-crease	
Drying levels	
Further cooling	121
Cooling down temperature	122
Fan pulsed operation	122
Service	122
Clean out the airways	122
Clean the filters	123
Service interval	123
External applications	
External exhaust flap	
Additional fan	
Pressure sensor	
Peak load signal	
Peak load prevention	
COM module selection	
Availability of Miele digital products	
WiFi / LAN	
Network time	
Remote	
Remote update	
SmartGrid.	
Machine parameters	
Legal information	
Payment system	
Setting for payment systems	128

Technical data
PDW 909 machine data 129
Electrical connection
Installation dimensions
Weight and floor load 129
Plumbing
Air intake
Vented system
Emission values
Product safety
WiFi
JK declaration of conformity
EU declaration of conformity
NiFi data protection
Data protection and data security 132
Factory default settings for network configuration
Copyright and licences 132

#### Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

#### Disposing of your old machine

Old electrical and electronic machines often contain valuable materials. However, they also contain harmful substances which were essential for their correct functioning and safety. These could be hazardous to human health and to the environment if disposed of with household waste or if handled incorrectly. Please do not, therefore, dispose of your old machine with household waste.



Please dispose of it at your local community waste collection/recycling centre. Consult your dealer if necessary. Please ensure that your old machine poses no risk to children while being stored for disposal.

### **Energy saving tips**

Energy and water consumption
 To get the most out of your machine, load the maximum dry load size for the wash programme you are using. Energy and water consumption is most efficient when a full load is washed.
 Detergent
 Do not exceed the amounts of detergent recommended by the

Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.

- Reduce the amount of detergent for smaller load sizes.

When drying with<br/>a tumble dryerSelect the highest possible spin speed for the wash programme to<br/>save energy in the subsequent tumble dryer cycle.

Original operating instructions

#### Explanation of the safety notes and warnings on the machine

<u>_</u> i	Read the operating instructions
	Read all the instructions, e.g. the installation instruc- tions
	Warning, hot surfaces
	Warning, voltage up to 1000 volts
Ē	Earthing
$\bigtriangledown$	Equipotential bonding

This washer-dryer stack complies with all relevant current safety requirements. Inappropriate use can, however, lead to personal injury and material damage.

Read the operating instructions carefully before using the washerdryer stack. They contain important information on safety, installation, use and maintenance. This prevents both personal injury and damage to the washer-dryer stack.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the washer-dryer stack as well as the warnings and safety notes.

Miele cannot be held liable for injury or damage caused by noncompliance with these instructions.

Keep these operating instructions in a safe place and pass them on to any future owner.

When instructing other people how to use the washer-dryer stack, they must be made aware of these warnings and safety notes.

#### Appropriate use

► The washing machine is only suitable for washing fabrics with a care label stating that they are suitable for machine washing. Any other applications may be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation of the machine.

► This tumble dryer is only intended for drying fabrics which have been washed in a water solution, and marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging. Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

The washer-dryer stack must be used as described in the operating instructions and must be checked on a regular basis to make sure it is functioning correctly.

The washer-dryer stack is not suitable for outdoor use.

▶ Do not install the washer-dryer stack in a room where there is a risk of frost. Frozen hoses are at risk of tearing or bursting. The reliability of the electronic module may be impaired at temperatures below freezing point.

This washer-dryer stack is intended only for use in a commercial environment.

The machine may only be operated when the following conditions are met:

- The ship's hull is longer than 24 metres.
- The list of the vessel is not more than 2°.
- Any external vibration is no more than 150 Hz at an amplitude of 0.35 mm.

The safe operation and correct functioning of the machine can only be guaranteed if the above conditions are met.

The machine must not be operated on an open deck.

Machines that do not carry the "CSA C/US" safety mark comply with European safety regulations.

These machines must not be operated in the USA.

This machine must only be installed by a qualified specialist who has made sure that the conditions for its safe use are met.

When installing this machine, it must be securely fixed to the floor. Failure to do this could result in personal injury, damage to the machine and damage to other objects and installations. ► The use of industrial laundry machines on vessels operating on inland waterways and within the 3-mile zone is only permitted if the machine is approved for the country or countries in question. This does not affect use on vessels in international waters, including seaports.

▶ If the machine is used in a commercial environment it may only be operated by instructed/trained personnel. If the machine is used in a publicly accessible area, the supervisor must ensure that it can be operated safely without risk of danger.

▶ This washer-dryer stack can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and understand and recognise the consequences of incorrect operation.

Children under the age of 8 must not be allowed near the washerdryer stack unless they are constantly supervised.

Children aged 8 and older may only use the washer-dryer stack without supervision if they have been shown how to use it and are able to do so in a safe manner. Children must be able to understand and recognise the possible dangers caused by incorrect operation.

Children may not carry out cleaning or maintenance on the washer-dryer stack unsupervised.

Always supervise any children in the vicinity of the washer-dryer stack. Never allow children to play with the washer-dryer stack.

▶ Disinfection programmes must not be interrupted, as this can have a limiting effect on the disinfection result. It is the operator's responsibility to ensure that the standard of disinfection in thermal as well as chemo-thermal procedures is maintained by carrying out suitable validation tests.

#### Foreseeable misuse

▶ Never use solvent-based cleaning agents, e.g. those containing benzine, in the washer-dryer stack. Doing so may result in damage to component parts and create toxic steam and fumes. **Risk of fire and explosion!** 

▶ When washing with high temperatures, remember that the porthole glass becomes hot. Do not let children touch it during the wash process.

#### Danger of burning!

Close the drum door after each wash or drying cycle. This is to avoid the risk of children trying to climb into the washer-dryer stack or hide things in it, and animals getting into it.

▶ Do not damage, remove or bypass the safety features or control elements of the washer-dryer stack.

Machines with a damaged control panel, wires or cables must not be used until they have been repaired.

▶ Water used for washing in this machine consists of suds and is not drinking water! Drain the suds into a proper drainage system.

Always make sure that the drum is stationary before reaching in to remove laundry. Reaching into a moving drum is extremely dangerous.

Be careful not to put your hands in the gap between door and frame when closing the drum door.

**Please note:** the drum door is locked automatically as soon as the washing machine starts.

▶ It is particularly important to follow the manufacturer's instructions when using a combination of cleaning agents and special application products. Products must only be used for applications approved by the manufacturer to avoid any material damage or the occurrence of strong chemical reactions.

#### **Technical safety**

Before setting up the washer-dryer stack, check it for any externally visible damage. Do not install or use a damaged washer-dryer stack.

► The electrical safety of this washer-dryer stack can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is observed and regularly tested. If in any doubt, please have the electrical installation inspected by a specialist. Miele cannot be held liable for the consequences of an inadequate earthing system.

Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Repairs should only be undertaken by a Miele authorised technician, otherwise any subsequent damage will not be covered by the warranty.

Do not make any alterations to the washer-dryer stack, unless authorised to do so by Miele.

Disconnect the washer-dryer stack from the power supply in the event of a fault and for cleaning and maintenance. The washer-dryer stack is only electrically disconnected from the power supply when:

- Both washer-dryer stack plugs have been disconnected from the socket or
- The mains fuses for both machine parts are disconnected or
- The mains fuses for both machine parts have been completely removed.

See "Installation and connection - Electrical connection".

► The washing machine may only be connected to the water supply using the set of hoses supplied with the machine. Old sets of hoses must not be re-used. Check the sets of hoses regularly for signs of wear. Change the sets of hoses in good time to avoid the risk of leaks and subsequent water damage.

► The cause of any leaks must be dealt with before the washer-dryer stack is restarted. Disconnect the washer-dryer stack immediately if any water leaks out.

► Faulty components must only be replaced by genuine Miele spare parts. Miele can only guarantee the safety standards of the machine when Miele spare parts are used.

▶ All relevant national provisions and regulations (DGUV in Germany) relating to accident insurance are applicable to this washer-dryer stack. It is recommended to carry out testing in accordance with the regulatory framework described in DGUV 100-500/Chapter 2.6/Section 4. The test book required for the documentation is available from the Miele Customer Service Department.

Please observe the instructions in "Installation and connection" and "Technical data".

► The plugs for the washer-dryer stack must always be kept accessible so that the washer-dryer stack can be easily disconnected from the power supply.

For hard-wired machines, an all-pole means of deactivation must be provided on site.

▶ If the washer-dryer stack is to be hard-wired, there must be a means of disconnecting all poles from the power supply. The mains isolators must be close to the washer-dryer stack and be clearly identifiable, unhindered and easily accessible at all times.

► The tumble dryer may only be operated when the ducting has been installed and the room is sufficiently ventilated.

The vent ducting must never be installed in any of the following flues or shafts:

- Chimneys or smokestacks that are in use.
- Shafts that are used to ventilate installation rooms with fireplaces.
- Flues that are used by third parties.

Smoke or exhaust gas that is fed back into the flue or shaft may be toxic.

Regularly check all components in the vent ducting (e.g. wall pipe, external grille, bends, elbows, etc.) to make sure air can move through them and to ensure that they are working properly. Clean components when necessary. Fluff deposits in the vent ducting system will prevent the air from being extracted properly and, as a result, will stop the tumble dryer from working properly.

If existing vent ducting is due to be used, it must be checked before being connected to the tumble dryer.

Low pressure must not occur in the vent ducting.

► There is a risk of suffocation and poisoning due to exhaust gases being sucked back if gas-powered flow heaters, gas-powered room heaters, coal-burning stoves with a flue connection, etc., are installed in the same room, in the same flat or in neighbouring rooms and the negative pressure is 4 Pa or more.

The following measures for suitable room ventilation (examples) can help to prevent negative pressure in the installation area:

- Install vents that cannot be closed in the exterior walls.
- Use window switches so that the tumble dryer can only be switched on when a window is open.

Please always seek approval from your building regulations inspector to confirm that the appliance can be operated without risk and that negative pressure of over 4 Pa can be prevented. If multiple tumble dryers are to be connected to one vent ducting, a non-return flap must be installed directly on the duct for each tumble dryer.

If this requirement is not observed, the tumble dryers may be damaged and their electrical safety could be affected.

Follow the instructions in "Installation of the ducting".

#### **Correct use**

► The maximum dry laundry load size is 10 kg. See the "Programme chart" for the maximum recommended load sizes for individual programmes.

▶ Before commissioning the washing machine, check that the transport safety devices have been removed (see "Installation – Removing the Transport safety devices"). During spinning, transport safety devices which are still in place may result in damage to both the washer-dryer stack and adjacent furniture or machines.

Never try to open the drum door of the washing machine using force. The door can only be opened when a corresponding message appears in the display.

Do not push the suspended drum unit while the machine is running.

Always close the drum door carefully. There is a risk of crushing and injury by shearing in the area around the hinges of the drum door.

Close the stopcock if the washing machine is to be left for any length of time (e.g. while on holiday), especially if there is no floor drain (gully) in the immediate vicinity.

► Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. Foreign objects may damage components of the machine (e.g. suds container, drum). Damaged components can damage the laundry.

▶ If the correct amount of detergent is dispensed, the washing machine should not need to be descaled. If, however, you do wish to descale your washing machine, only use proprietary non-corrosive descaling agents. Special descaling agent is available from your Miele dealer or from the Miele Customer Service Department. Strictly observe the instructions for the descaler.

Textiles which have been pre-treated in solvent-based cleaning agents must be rinsed in clean water before being washed in the machine. Note that solvent residues may only be discharged into waste water in compliance with local legislation.

Never use solvent-based cleaning agents, e.g. those containing benzine, in this machine. Doing so may result in damage to component parts and create toxic steam and fumes. Risk of fire and explosion!

▶ Do not store or use petrol, paraffin or any easily flammable substances near the washing machine. Do not use the machine lid as storage space.

Risk of fire and explosion!

▶ Do not store chemicals (liquid detergents, additives) on the machine lid. They may cause discolouration or lacquer damage. Accidently spilled chemicals should be removed from the surface immediately with a wet cloth.

Only use dyes, dye removers and descalers suitable for use in a washing machine. The manufacturer's instructions on the packaging must be observed.

Dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this washing machine.

Avoid contact of stainless steel surfaces with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel. Aggressive chlorine bleach vapours can also be corrosive. Do not store open containers of these agents near the machine.

Do not use a pressure washer or water jet to clean the washerdryer stack.

▶ Never operate the tumble dryer without the fluff filter or with a damaged fluff filter. This could lead to malfunctions. Fluff can clog the air channels, heating elements and vent ducting, which could result in a fire. In this case, stop the tumble dryer immediately and replace the damaged fluff filter.

- The fluff filter must be cleaned on a regular basis.
- To ensure problem-free operation of the tumble dryer:
- Clean the surface of the fluff filter after each drying cycle.
- In addition, the fluff filter and the air passages must be cleaned when prompted by the display.

To prevent the risk of fire, the following items must not be dried in this tumble dryer:

- Items which have not been washed.
- Items which have not been thoroughly cleaned and are still soiled with grease, oil or other deposits (such as kitchen linens or cosmetics cloths with cooking oils, grease, lotions, etc). If items have not been thoroughly cleaned, there is a danger that they might ignite when heated, even after they have been removed from the tumble dryer at the end of the programme.
- Items (e.g. mops and floor cloths) that have been treated with inflammable cleaning agents or which contain residues of acetone, alcohol, benzene, petrol, kerosene, stain remover, turpentine, wax and wax remover or other chemicals.
- Items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

Wash heavily soiled items thoroughly by increasing the amount of detergent and selecting a high washing temperature. If in doubt, wash the items several times.

Remove all items from the pockets of the laundry to be dried (e.g. lighters, matches, keys).

▶ In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-ig-niting). The programme is not finished until the cooling down phase is complete. Ensure that you always wait until the end of the programme before removing the laundry.

Fire hazard.

This tumble dryer must not be connected to a controllable socket (e.g. a timer or a peak-load switch-off device).

The tumble dryer may only be operated with a peak-load device if this is connected to the tumble dryer via the Miele XCI box and the relevant settings have been configured on the tumble dryer.

There is a risk of the laundry igniting itself if the drying programme is cancelled before the cooling phase has finished.

To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:

- items which have been cleaned using chemicals (e.g. professional dry-cleaning agents).
- fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.
- Fabrics which contain damaged padding or fillings (e.g. pillows, jackets). When damaged, the filling can get out with the risk of it igniting in the dryer.

▶ Do not expose the dryer to air which is contaminated with vapour of chlorine, fluorine or other solvents. Danger of fire.

► The programme ends when the cooling phase starts. Many programmes are followed by the cooling phase to ensure that the items of laundry are kept at a temperature that will not cause them damage (for instance to prevent the risk of the laundry self-igniting). Always remove all items of laundry from the tumble dryer immediately after the cooling phase.

#### Chlorine and component damage

Frequent use of chlorine products increases the risk of damage to components.

► The use of substances containing chlorine, such as sodium hypochlorite and chlorine bleach in powder form, can result in damage to the protective layer of stainless steel and corrosion on components. Therefore, refrain from using substances containing chlorine. Use oxygen-based bleaching agents instead.

If, however, chlorine bleaching agents are used, an anti-chlorine treatment must always be carried out. Otherwise, both the washing machine components and the laundry may suffer persistent and irreparable damage.

Anti-chlorine treatment must be carried out immediately after chlorine bleaching agents have been used. Hydrogen peroxide as well as oxygen-based detergents and bleaching agents are suitable for anti-chlorine treatment. The suds must not be drained in between.

Treatments with thiosulphates can result in gypsum-like deposits particularly when used in combination with hard water. This gypsum can build up in the washing machine or cause incrustations on the laundry. Treatment with hydrogen peroxide is recommended over treatment with thiosulphates because hydrogen peroxide neutralises chlorine.

The exact dispensing quantities and the treatment temperatures required must be set and tested on site in accordance with the dispensing recommendations of the detergent and cleaning agent manufacturers. The laundry must also be tested to check whether it contains any active chlorine residues.

#### Accessories

Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, warranty, performance and/or product liability claims will be invalidated.

Disposing of your old machine ► Ensure that the door locks are unusable when disposing of or scrapping old washer-dryer stacks. This will prevent the risk of children playing accidentally locking themselves in and endangering their lives.

Miele cannot be held liable for damage caused by non-compliance with these safety notes and warnings.



### Description of the machine

## **Description of the machine**

- <sup>①</sup> Access flap to drain filter and drain pump
- <sup>(2)</sup> Washing machine drum door
- <sup>3</sup> Door handle
- <sup>(4)</sup> Detergent drawer
- <sup>(5)</sup> Display (further information can be found in the "Operation" section)
- <sup>6</sup> Fluff filter flap
- ? Tumble dryer drum door
- <sup>®</sup> Tumble dryer electrical connection
- (9) Interface for communication box
- <sup>10</sup> Exhaust duct Ø 100 mm
- 11 Hot water connection
- <sup>12</sup> Cold water connection
- <sup>(3)</sup> Interface for external dispensing
- <sup>(1)</sup> Drain hose connection (for drain pump variant)
- <sup>(15)</sup> Transport safety devices
- <sup>(16)</sup> 4 height-adjustable screw feet
- $\ensuremath{\textcircled{}}$  Washing machine electrical connection
- <sup>(18)</sup> Interface for Connector Box
- <sup>19</sup> Interface for LAN
- <sup>20</sup> Intake vents for drying air
- <sup>(2)</sup> Communication module slot

### Operation



 Tumble dryer language sensor control BBDB

For selecting the current user language. The supervisor language is displayed again at the end of the programme.

- ② Tumble dryer back sensor control Takes you back one level in the menu.
- **3** Tumble dryer touch display
- <sup>(4)</sup> **Start/Stop tumble dryer sensor control** For starting the programme selected and cancelling a programme once it has started. The programme selected can be started as soon as the sensor control starts flashing.
- <sup>(5)</sup> **Tumble dryer optical interface** For the Customer Service Department.

#### <sup>6</sup> Tumble dryer button ()

For switching the tumble dryer on and off. The tumble dryer switches off automatically to save energy. It is switched off an adjustable time after the end of the programme/Anti-crease phase, or after being switched on if no further selection is made.

#### ⑦ Washing machine language sensor control ฿฿฿฿

For selecting the current user language. The supervisor language is displayed again at the end of the programme.

<sup>®</sup> Washing machine back sensor control ∽

Takes you back one level in the menu.

Washing machine touch display

## <sup>(10)</sup> Start/Stop washing machine sensor control

For starting the programme selected and cancelling a programme once it has started. The programme selected can be started as soon as the sensor control starts flashing.

#### <sup>(1)</sup> Washing machine optical interface For the Customer Service Department.

#### <sup>12</sup> Washing machine button () For switching the washing machine on and off.

#### Sensor controls and touch display

The sensor controls  $\mathbb{B}\mathbb{D}$ ,  $\bigcirc$  and *Start/Stop* and the elements in the display respond to finger tip contact. Every touch of a sensor control is confirmed with an audible keypad tone. You can adjust the volume of the keypad tone or switch it off (see "Supervisor level").

The control field with sensor controls and the touch display can be scratched by pointed or sharp objects, e.g. pens. Only touch the control field with your fingers.

#### Main menu

After switching on the washing machine, the main menu will appear in the display.

You can access all the important sub-menus from the main menu.

Touch the  $\triangle$  symbol at any time to return to the main menu. Values set previously are not saved.



" 🗁 Programmes" menu In this menu, you can select the wash programmes.

"☆ Favourites" In this menu, you can select 1 favourite programme from a total of 24 favourite programmes. The wash programmes can be set up and menu saved by the supervisor in the Favourites menu (see "Favourite programmes" under "Supervisor level").

"<ऄ₄ Supervisor" You can alter the washing machine's electronic module to suit changing requirements in the supervisor level (see "Supervisor level").

#### Main menu

After switching on the tumble dryer, the main menu will appear in the display. You can access all the important submenus from the main menu.

Touch the sensor control  $\triangle$  at any time to return to the main menu. Values set previously are not saved.



Main menu

" Programmes" In this menu, you can select the drying programmes. menu

"☆ Favourites" In this menu, you can select 1 favourite programme from a total of menu 12 favourite programmes. The drying programmes can be set up and saved by the supervisor in the Favourites menu (see "Favourite programmes" under "Supervisor level").

"(3) Supervisor"You can alter the tumble dryer's electronic module to suit changing<br/>requirements in the supervisor level (see "Supervisor level").

#### Examples of how to operate the machine

Selection lists "Progr

#### "Programmes" menu (single selection)



You can scroll right or left by swiping your finger across the screen. To do this, place your finger on the touch display and swipe it in the direction you want.

The orange scroll bar shows that there are further options to choose from.

Touch a programme name to select the wash programme.

The display will change to the standard menu for that programme.

#### "Extras" menu (multiple selection)

To access the level for selecting Extras, you first need to select a programme, e.g. Whites.

## Operation



Touch one or several Extras to select it/them.

Currently selected *Extras* are marked orange.

To deselect an *Extra*, simply touch the *Extra* again.

Use the OK sensor control to activate all selected Extras.

## Setting numerical values

You can set numerical values in some menus.

The following example shows how to set the time of day. The "Supervisor level" section describes how to get to this level.



Enter the numbers by swiping up or down.

Place your finger on the number that you want to change and move your finger in the direction you want. Use the *OK* symbol to accept the set numerical value.

**Tip:** A numerical keypad may also appear to adjust the value for some settings.



Briefly touching a number between the two lines will bring up the numerical keypad.

△   Time			
12:00			
	Ŷ	0	OK

Once a valid number has been entered, the *OK* symbol will be highlighted green.

## Operation

#### Pull-down menu

The following example describes the display for an ongoing wash programme. The "Programme start – programme end" section describes how to get to this level.



If an orange bar appears at the top of the screen in the middle of the display, you can open the pull-down menu. Touch the bar and drag it down with your finger on the display.

Exiting a menu
 ■ Touch the symbol to return to the previous screen.
 Entries you have made before this which have not yet been confirmed with *OK* will not be saved.
 Help display
 With some menus, Help appears along the bottom line of the display.

- Touch the Help selection area to display the text.
- Touch the Close selection area to return to the previous screen.

### Preparing for use

Emptying pockets	<ul> <li>Image due to foreign objects.</li> <li>Nails, coins, paper clips, etc. can cause damage to garments and components inside the machine.</li> <li>Check laundry before washing and remove any foreign objects.</li> </ul>
Sorting laundry	Sort the laundry according to colour and the garment care label.
Pre-treating stains	<ul> <li>Badly soiled areas and stains should be cleaned as soon as possible. Stains should be carefully dabbed off using a soft, colourfast cloth.</li> </ul>
	Damage due to solvent-based cleaning agents. Cleaning agents containing benzine, stain remover, etc. can damage plastic parts. When pre-treating items, make sure that plastic parts do not come into contact with the cleaning agent.
	A Risk of explosion due to solvent-based cleaning agents. If solvent-based cleaning agents are used, an explosive mixture can form. Never use solvent-based cleaning agents in the washing machine.
General tips	- Do not machine wash items which are specified by the manufac- turer as not washable on the care label (之).
	- Curtains: remove rollers and lead weights or place in a laundry bag.
	- Sew in or remove any loose underwiring in bras.
	- Turn garments inside out, if recommended by the manufacturer.
	- Close any zips and velcro fasteners before washing.
	<ul> <li>Fasten duvet covers and pillow cases to prevent small items from becoming rolled up inside them.</li> </ul>
	- Please refer to the Programme chart for more tips and tricks.
	Loading and switching on the washing machine

# Loading the washing machine

- Prepare the washing machine.
- $\blacksquare$  Switch on the washing machine with the  $\bigcirc$  button.

The welcome screen will light up.

• Open the drum door with the handle.



Unfold the laundry and load loosely into the drum.





 $\triangle$  Make sure that no items are caught between the drum door and the opening.



• Close the drum door by pressing it until the pre-latch engages.

The drum door engages, but is not locked yet. The drum door locks automatically as soon as the machine starts.

### Washing with detergent drawer

Adding detergent using the detergent drawer



- Adding fabric conditioner or liquid starch separately
- **Select the** Separate rinse **programme**.
  - Change the spin speed if necessary.



- Add fabric conditioner or liquid starch to the & compartment. Do not exceed the maximum level mark.
- Touch the *Start/Stop* sensor control.
- Prepare the starch solution in accordance with the manufacturer's instructions on the packaging.
- **Select the** Starch programme.
- Add the prepared starch to the UU compartment.
- Touch the *Start/Stop* sensor control.

**Tip:** If starching separately or automatically, thoroughly clean the detergent drawer regularly.

Dyes, dye re-<br/>movers and<br/>descalersProprietary dyes, dye removers and descalers may only be used in<br/>this washing machine if the manufacturer expressly states that they<br/>are suitable for use in a washing machine. The manufacturer's in-<br/>structions on the packaging must be observed.

Adding starch separately

## Detergent dis-

ing

**pensing** Detergent dispens-

ens- Avoid dispensing more than the required amount as this can cause excessive foaming.

- Only use low foaming detergents.
- Dispense according to the detergent manufacturer's recommendations.

The dispensing amount will depend on:

- The amount of laundry
- The water hardness
- How dirty the laundry is

Detergent dispensing quantity Please dispense according to water hardness levels and follow the detergent manufacturer's instructions.

## Water hardness levels

Water hardness level	Total hardness in mmol/l	German scale °dH	
I (soft)	0–1.5	0–8.4	
II (medium)	1.5–2.5	8.4–14	
III (hard)	above 2.5	above 14	

Check with your local water supplier if you do not know the water hardness level in your area.

#### Selecting a programme

Programmes

There are different ways to select a programme.



You can select a programme from the Programmes menu.

• Touch the Programmes selection area.



- Scroll to the right in the display until the programme you want appears.
- Touch the system-specific symbols on the touch display.

The display will change to the standard menu for that wash programme.

#### Favourites

Alternatively, you can select a programme from the Favourites menu.



**Touch the** Favourites selection area.



- Scroll to the right in the display until the programme you want appears.
- Touch the system-specific symbols on the touch display.

The display will change to the standard menu for that wash programme.

In the case of favourite programmes, the majority of the programme settings are already fixed and cannot be changed.

#### Selecting programme settings

**Selecting the load** size To enable load-specific external dispensing and an adapted programme sequence, you can specify the load size for some programmes.

**Touch the** Weight (kg) **selection area**.



• Enter a valid value for the load size.

🛆   Weight entry			11:00
<b>9,0 kg</b> (0,0-9,0 kg)			3
			6
			9
	⇔	0	ОК

■ Press the OK symbol.

The display will change to the Overview menu.

### Washing

 Selecting a temperature
 You can alter the pre-set temperature of a wash programme.

 Touch the Temperature (°C) selection area.

 Overview
 9,0/9,9 kg
 1300 rpm
 Whites
 0:56 h
 90 °C
 Extras

Finer adjustmentSelect the desired temperature from the presets.

The display will change back to the Overview menu.

If you select the Finer adjustment selection area, you can set additional temperatures within the available temperature range by entering them directly.

11:02

☐   Temperature	1		11:00
<b>80 °C</b> (14-90 °C )			3
			6
			9
	\$	0	OK

- Select the desired value using the keypad.
- Press the OK symbol.

Timer

☐ | Temperature in °C

The display will change back to the Overview menu.

The temperature can only be selected within the range specified below the current setting (e.g. 14-90 °C).
# Selecting a spin speed

You can alter the pre-set spin speed of a wash programme.

Touch the Spin speed (rpm) selection area.

☐ Overview		11:02
	9,0/9,9 kg	1300 rpm
Whites 0:56 h	90 °C	Extras
<ul> <li>Timer</li> </ul>	Ę,	Details
☐ Spin speed in	rpm	11:02
☐   Spin speed in 400	rpm 700	11:02 1000
400	700	1000
400 500	700 800	1000

Select the spin speed you want from the presets.

The display will change back to the Overview menu.

If you select the Finer adjustment selection area, you can set additional speeds within the available speed range.

🛆   Spin speed in rpm	1		11:00
			3
1200 rom			6
<b>1300 rpm</b> (0 / 400-1300 rpm )			9
	¢	0	ОК

- Select the desired value using the keypad.
- Press the OK symbol.

The display will change back to the Overview menu.

The speed can only be selected within the range specified below the current setting (e.g. 0 / 400-1300 rpm).

## Washing

	Selecting Extras		
Selecting Extras	You can select Extras for some wash programmes.		
	<ul> <li>Touch the Extras selection area.</li> </ul>		
	<u> </u>		
	9,0/9,9 kg 1300 rpm		
	Whites		
	0:56 h <b>90 °C Extras</b>		
	🕘 Timer 🗈 Details		
	<u>△   Extras</u> 11:02		
	Pre-wash Finse plus		
	Soak     Rinse hold		
	oκ ■ Select one or more Extras.		
	<ul> <li>Press the OK symbol.</li> </ul>		
	The display will change to the Overview menu.		
Pre-wash 🕛	A pre-wash can be added for heavily soiled laundry. Coarse soiling is loosened and removed before the main wash.		
Soak 🗟	For heavily soiled and stained items with protein stains. The soak dur- ation is 10 minutes.		
Rinse plus 🚟	An extra rinse can be activated to achieve a better wash result.		
Rinse hold ⊟	The laundry is not spun after the final rinse cycle and remains in the rinse water. This helps to prevent creasing if the laundry is not going to be removed from the washing machine immediately after the end of the programme.		
Filling stop	Water is drained out of the machine before the final rinse and the pro- gramme stops. The required starch, dye, proofing agent, etc. is ad- ded directly to the drum. The programme is continued with the <i>Start/</i> <i>Stop</i> sensor control.		
Intensive	For hard-wearing laundry that is very heavily soiled. Extending the main wash increases cleaning efficiency.		
Water plus 🖽	The water level in the wash cycle will be increased.		

#### Programme start – programme end

Starting a programme The programme can be started as soon as the *Start/Stop* sensor control is flashing on and off.

■ Touch the *Start/Stop* sensor control.

The door will lock ( symbol) and the wash programme will start.

	Ĥ 11:02 -œ
Time left	2:27
	Washing and heating
	Time left

**Tip:** You can use the pull-down menu to display the selected temperature, spin speed and any selected Extras.

If a delay start period (④ Timer) has been selected, this will appear in the display at the bottom left.

☐   Overview		10:00
	9,0/9,9 kg	1300 rpm
Whites 0:56 h	90 °C	Extras
01.01 11:00	Help	Details

If you select the **i** prog. info selection area, all programme-related information will be displayed.



Once the delay start period has elapsed (if applied), the programme running time will appear in the display; otherwise, the running time will appear straight away. The programme sequence is also shown in the display.

Depending on the setting selected in the supervisor level or in the programme, the machine will switch to the anti-crease action cycle at the end of the programme. The door remains locked. The door can be unlocked at any time by touching the *Start/Stop* sensor control.

Removing the laundry

- Pull open the door.
- Remove the laundry.

### Washing

Items left in the drum could discolour other items in the next wash or become discoloured themselves. Remove all items from the drum.

- Check the door sealing ring for any foreign objects.
- Switch the washing machine off with the <sup>()</sup> button.

Tip: Leave the detergent drawer slightly open to allow it to dry.

#### Timer

The timer can be used to select a programme start date, programme start time or programme end time. This mode is also referred to as delay start.

Setting the timer

**Touch the**  $\bigcirc$  Timer selection area.

		11:02
	9,0/9,9 kg	1300 rpm
	90 °C	Extras
🕘 Timer	li)	Details

**Select option** Finish at, Start date or Start at.

□   Timer			9:30
Start at	10:30	0	
Finish at		0	3 13
Start date	10:30	0 0	
	Delete		OK

Set the hours and the minutes or the date and confirm with the OK symbol.

#### **Deleting the timer** The selected delay start period can be cancelled before the programme starts.

Touch the selection area with the selected settings in the timer field, e.g. 01.01.11:00.

The selected delay start period will appear in the display.

- Touch the Delete selection area.
- Confirm with the OK symbol.

The selected delay start period is deleted.

#### **Starting the timer** • Touch the *Start/Stop* sensor control.

The door will lock and the time until the programme starts will appear in the display.

the programme has started, the selected delay start period can be changed or cancelled by interrupting the programme. rogramme can be started immediately at any time. In the Start immediately selection area.
ch the Start immediately selection area.
ial features in the programme sequence
a programme is selected, the maximum spin speed for this programme is shown in the display in the pre-start menu.
an reduce the final spin speed.
nding on the programme, it may also be possible to increase the I. The setting options are displayed when you tap the spin I.
is a spin cycle after the main wash and between the rinse a. A reduction in the final spin speed will also reduce the interim peed as appropriate.
end of the programme, the drum continues to turn at intervals to 30 minutes to help prevent creasing. achine cannot be opened until the programme has ended.
crease is programme-dependent and the option can be

### Washing

#### Skip

The Skip function enables users to skip forwards or backwards in the programme sequence. The programme sequence is continued from the selected step.

If a programme is interrupted using the *Start/Stop* sensor control, the Skip D function is available in the programme stop screen.



If the Skip D function is selected, the required programme step can be selected via the display.



The programme can then be continued with the *Start/Stop* sensor control.

**Manual control** Manual control can be used before a programme is started or when a programme has been stopped.

Switching to manual control

Manual control is possible before a programme is started or when a programme has been stopped.

Press the C "Manual control" button to access the password entry screen.



Enter the password.

• Confirm the password entry with the OK sensor control.

The Manual control menu is displayed:



The current level, spin speed and temperature statuses of the machine appear orange.



- Select the desired setting.
- Confirm the entry with the Execute sensor control.

The sub-menus appear in various operating modes. See "Examples of how to operate the machine" for an in-depth description.

The function buttons are assigned with specific manual control functions:

- Water inlet చ
- Dispensing 🗊
- Washing and heating 🖧 🕷
- Drain with drum rotation
- Spin 🕥
- Press the button again to end a selected function.

Water intake valves and the water level can be set.

- Press the → Water intake function button.
- Select the desired value.
- Confirm your selection with the Execute sensor control.

If a higher numerical value is set, the values below this will no longer be displayed.

Press the Start/Stop sensor control.

The wash programme will start or continue.

Dispensing I The dispensing quantity for the various dispensing pumps can be set.

## Washing

	This function is only possible if the Connector Box, the dispensing pumps and automatic dispensing have been selected in the supervisor level, see "Supervisor level" section.
	Press the Dispensing function button.
	<ul> <li>Select the desired dispensing pump and dispensing quantity, e.g.</li> <li>D1 50 ml.</li> </ul>
	<ul> <li>Confirm your selection with the Execute sensor control.</li> </ul>
	Press the Start/Stop sensor control.
	The wash programme will start or continue.
Washing and heat-	Spin speed, rhythm and temperature can be set.
ing 즉 <sup>\\\</sup>	∎ Press the ਨ੍ਰ <sup>™</sup> Washing and heating button.
	Select the desired settings.
	The selected setting will appear in orange in the multiple selection.
	Confirm your selection with the Execute sensor control.
	Press the Start/Stop sensor control.
	The wash programme will start or continue.
Drain with agitation	Drain path, spin speed and rhythm can be set.
	■ Press the CJ Drain with agitation function button.
	<ul> <li>Select the desired settings.</li> </ul>
	The selected setting will appear in orange in the multiple selection.
	Confirm your selection with the Execute sensor control.
Spin (	The spin speed can be set.
	■ Press the  Spin function button.
	Select the desired value.
	Confirm your selection with the Execute sensor control.
	Press the Start/Stop sensor control.
	The wash programme will start or continue.
Function combina-	Water inlet, dispensing, washing and heating can be selected simul-

Function combinations Water inlet, dispensing, washing and heating can be selected s taneously in any combination\*.

## Washing

축	<b>F</b>	<u>ح</u>	tŢJ	0
Water inlet	Dispensing	Washing and heat- ing	Drainage with agitation	Spinning
$\checkmark$	$\checkmark$			
	$\checkmark$			
$\checkmark$				

\* possible function combinations  ${\ensuremath{\overline{v}}}$ 

	1. No	tes on correct laundry care	
Washing before drying	sufficie	y soiled laundry must be washed particularly thoroughly. Use ent detergent and select a high wash temperature. If in doubt, the items several times.	
	The tumble dryer must not be used for drying items of laundry which have been cleaned using industrial chemicals.		
	Do not There or eve	nd coloured items must be washed thoroughly and separately. t dry new and coloured items with light coloured garments. is the risk of colours running and discolouring other garments n plastic components in the tumble dryer. Dark coloured fluff so settle on light coloured garments and vice versa.	
Removing foreign	Before	drying, ensure that there are no foreign objects in the laundry.	
objects	<ul> <li>Damage due to foreign objects which were not removed from the laundry.</li> <li>Foreign objects in the laundry can melt, burn or explode.</li> <li>Ensure that any foreign objects (e.g. detergent dispensing aids, lighters, etc.) have been removed from the laundry.</li> </ul>		
	tact. T	seams and stitching to ensure that the items of laundry are in- his way you will avoid the danger of fillings coming out and g a fire. Sew in or remove underwiring from bras.	
	The la	sk of fire due to incorrect use and operation. aundry can burn and destroy the tumble dryer and the sur- lings. he section on "Warnings and safety notes" for further informa-	
Care symbols	Drying		
<b>-</b>	⊡ ⊡	Normal/higher temperature	
	$\overline{\mathbb{O}}$	Low temperature*	
	* Select Low temperature.		
		Do not tumble dry	
	Ironing		
	Ā	Very hot	
	æ	Hot	
	Ā	Warm	
	$\nearrow$	Do not iron	

## 2. Loading the tumble dryer

## Drying

Loading laundry into the tumble	Textiles may be damaged. Before loading, read chapter "1. Notes on correct laundry care"
dryer	first.
	■ Open the door.
	Load laundry into the tumble dryer.
	Risk of damage with laundry getting trapped. Laundry can be damaged by getting trapped when closing the door.
	When closing the door, make sure that laundry does not get trapped in the door opening.
	Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry and cause a disappointing drying result. It can also cause more creasing.
Closing the door	A Damage caused by laundry getting trapped.
	Laundry can be damaged by getting trapped when closing the door.
	When closing the door, make sure that laundry does not get trapped in the door opening.
	Shut the door gently.
	3. Selecting a programme
Switching on the	$\blacksquare$ Press the ( <sup>1</sup> ) button

Switching on the tumble dryer ■ Press the () button.

The welcome screen will light up.

There are different ways to select a drying programme in the main menu.



**Touch the** Programmes sensor control.

☐   Programmes		11:02
Cottons 🦳	Cottons	Woollens
Cottons PRO	Minimum iron	Delicates

With your finger, swipe to the left until you reach the required programme. Touch the sensor control for that programme.

The display will change to the standard menu for that drying programme.

Alternatively, you can select a programme from the Favourites list. The preset programmes under  $rac{d}{c}$  Favourites cannot be changed via the Supervisor level.

$\bigtriangleup$		11:02
$\bigcirc$	$\sum$	දුරු
Programmes	Favourites	Supervisor
	Help	

**Touch the** rightarrow Favourites sensor control.

Cottons	1:02
Cottons	

- With your finger, swipe to the left until you reach the required programme.
- Touch the required programme.

The display will change to the standard menu for that drying programme.

#### 4. Selecting programme settings

Select the drying level			es, you can change the preset drying level. De amme, you can select different drying levels.	<b>}-</b>
Selecting extra options			es can be augmented with various Extras. be selected for certain drying programmes.	
		Weight 8,0 kg	11:02 Drying level Normal	
	Cottons 0:57	Drying temp. ያ⁼ 66 °C	Extras not selected	

Touch the Extras sensor control.

	☐   Extras 11:02
	Gentle tumble
	( Anti-crease
	■ Touch the sensor control for the extra you want.
	Only press OK when the extra appears on the display.
	The relevant symbol for the required extra ( S or ( $\!$
S Low temperat- ure	Delicate fabrics (with the 🖸 symbol on the care label, e.g. acrylic gar- ments) are dried at a lower temperature. The programme duration is also longer.
🕲 Gentle tumble	Sensitive items are dried with fewer drum rotations and a lower drying temperature.
(솏) Anti-crease	At the end of the programme, the drum will continue to rotate in a certain rhythm, depending on the selected programme. This helps to prevent creasing at the end of the programme.
	The Anti-crease function is switched off as the factory default set- ting. The Anti-crease function can be switched on in the supervisor level with a variable duration of up to 12 hours. You can find this set- ting in the supervisor level under the Process technology/Anti-crease menu.

#### 5. Starting a programme

Payment device (optional)	If your machine is connected to a payment device, the amount of payment required will appear in the display.
	Money may be lost if the drum door is opened or the programme is cancelled. Depending on the settings, money may be lost in the payment device if the drum door is opened or the programme is cancelled. Do not open the door once the programme has started. Do not cancel a drying programme while it is running.
Starting the pro- gramme	The programme can be started as soon as the <i>Start/Stop</i> sensor con- trol is flashing on and off.
	Touch the Start/Stop sensor control.
	If a delay start period has been selected, this will appear in the dis- play.
	The drying programme will start either straight away or once the delay start period has elapsed. The programme time left is shown in the display.
Calling up current programme para- meters	During the programme running time, you can use the pull-down menu to view the parameters of the current drying programme (e.g. drying level, load size, selected extras, drying temperature).
	☐   Status 11:02



To call up the pull-down menu, swipe your finger from top to bottom during the programme running time.

Parameter info	

The pull-down menu displays the parameters of the drying programme.

Programme run-<br/>ning time/TimeThe programme running time depends on the quantity of laundry, the<br/>type of fabric and the residual moisture in the laundry. The displayed<br/>programme running time for drying level programmes can therefore

	vary or "jump". The tumble dryer's electronic module adapts during the ongoing drying programme. The displayed programme running time becomes more and more accurate.
	When using the programmes for the first time, the displayed time sometimes deviates significantly from the real time left. The differ- ence between the estimated and achieved time becomes smaller if the corresponding programme is run more often. If different load sizes are dried in one programme, the time left display can only show an approximate time.
	End of the programme
End of pro- gramme	The laundry will be cooled down after the end of the programme. The message Finish/Cool down will appear on the display during the cool- ing phase. The laundry can now be removed.
	After the cooling phase and the drying programme are completed, the message Finish is displayed.
	The tumble dryer will switch off automatically after the set time after the end of a programme.
	If the Anti-crease ( $\ll$ )* extra has been selected, the drum continues to rotate in intervals after the end of the programme. This reduces creasing if the laundry cannot be removed straight away.
	* The Anti-crease function is switched off as the factory default set- ting and can be activated in the supervisor level.
Removing the	Open the door.
laundry	Remove everything from the drum.
	Items left in the tumble dryer could be damaged by overdrying when the tumble dryer is used the next time. Always remove all items from the drum.
	Switch the tumble dryer off by pressing the () button.
Care notes	This tumble dryer requires regular maintenance, particularly if it is used on a continuous basis. Please see "Cleaning and care" for de- tails.
	Timer
Prerequisite for setting the timer	The Delay start must be activated in the Supervisor level in the Con- trols / Display menu so that the Timer can be selected. Before the programme starts, the Timer can be used to select a programme start time or programme end time.
Setting the timer	Touch the Timer sensor control.
	Select the Finish at, Start in or Start at option.
	Set the hours and the minutes and confirm your entry with the OK sensor control.

<b>Changing a pro- gramme</b> Altering the wash programme	You will need to cancel the current programme before you can select a new one.
Cancelling a pro-	You can cancel a wash programme at any time after it has started.
gramme	The payment programmes or the disinfection programmes can only be cancelled by entering a code.
	Touch the Start/Stop sensor control.

#### Washing machine

The following appears in the display:

i Programme stopped. Continue with "Start/Stop"

The following appears in the display:

	i	Programme stopped. Continue with "Start/Stop"	
•	$\triangleright \!$		Finish
	prog. m		

Select Finish.

The suds are not drained so they can be used again in a subsequent programme. Once the programme has ended, the programme end screen is displayed. It is possible to switch to the main menu while the suds are in the drum or to drain the suds by pressing the Start draining control.

The drum door remains locked while there is water in the machine.

The door can be opened under the condition Programme end without water.

- Wait until the door unlocks.
- Pull open the door.
- Remove the laundry.

If the washing machine is switched off with the <sup>()</sup> button during a wash programme, the programme will be interrupted.

- Switch the washing machine back on with the 🖒 button.
- Note the message in the display.
- Touch the *Start/Stop* sensor control.

The programme continues.

Switching on the washing machine after an interruption to the power supply Adding or removing laundry You can add or remove laundry items during the first few minutes after the programme has started.



Touch the Add laundry selection area.

If the message Add laundry is not visible in the display then it is no longer possible to add items of laundry.

The wash programme will stop and the door will unlock.

A Risk of chemical burns from detergent.

When adding or removing laundry, your skin may come into contact with detergent, particularly if the detergent is dispensed externally.

Take care when placing your hands inside the drum.

If suds have come into contact with the skin, rinse off immediately with plenty of lukewarm water.

- Pull open the door.
- Add laundry or remove individual items.
- Close the door.
- Touch the *Start/Stop* sensor control.

The wash programme will continue.

The door lock will remain activated if the temperature in the drum is above 50  $^{\circ}$ C. The door lock will not deactivate until the temperature has dropped to below 50  $^{\circ}$ C.

## Changing the programme sequence

## Tumble dryer

Changing a pro- gramme once it has started	You cannot change to another programme once a programme has started (this prevents unintentional alterations). You will need to can- cel the current programme before you can select a new one.
	A Risk of fire due to incorrect use and operation. The laundry can burn and destroy the tumble dryer and the sur- roundings.
	See the section on "Warning and safety" for further information.
Cancelling the	Touch the Start/Stop sensor control.
current pro- gramme	The following message appears in the display: Cancel programme?
granne	Touch the Yes sensor control to cancel the current programme.
	A Risk of burns by touching hot laundry or the tumble dryer drum. Touching the hot laundry or the tumble dryer drum may cause burns.
	Let the laundry cool down and remove it carefully.
	Opening the door of the tumble dryer during the programme se- quence will cancel the current programme.
	If the Door opening status/Interrupt programme function is selected in the supervisor level, the current programme will be interrupted when the door is opened. In the case of an interruption, the tumble dryer will remain in the current programme. The interrupted programme will be continued when the door is closed and the Start/Stop sensor control is pressed.
Reselecting a can-	Open and close the door.
celled programme	Select and start a new programme.
Adding laundry	Open the door.
	<ul> <li>A Risk of burns by touching hot laundry in the tumble dryer drum.</li> <li>The laundry and the tumble dryer drum are still hot and can cause burns if they are touched.</li> <li>Let the laundry cool down and remove it carefully.</li> </ul>
	Add the laundry.
	■ Close the door.
	■ Start the programme.
Adding laundry	You can open the door to add or remove laundry.
during ongoing	- All programme settings will be saved.
Delay start period	- You can change the drying level, if required.
	Open the door.
	Add or remove laundry.

- Close the door.
- Touch the Start/Stop sensor control so that the Delay start period continues.
- Time leftAltering the programme sequence can cause the programme duration<br/>shown in the display to be adjusted.

#### Troubleshooting

#### Opening the door in an emergency in the event of a power failure

The drum door cannot be opened.

A Warning! Danger from rotating drum and danger of scalding. Before inserting the Torx wrench, make sure that the machine is disconnected from the electricity supply, the drum has stopped and there is no water in the machine.



■ Using a T 40 Torx wrench, turn the release element with the inner hexagon two whole revolutions **anti-clockwise (left)**.

**Tip:** Pushing on the door at the same time makes it easier to turn the emergency release element.

The release element is located opposite the door catch at the same height as the handle (see illustration).

The emergency release must not be turned to the right. Danger of damage to the door lock.

The turn resistance will noticeably reduce. When the emergency release element moves freely, the door is unlocked.

Tip: It is not necessary to screw the emergency release element back in.

The door can now be opened.

#### **Customer Service Department**

In the event of a malfunction, contact the Miele Customer Service Department.

When contacting the Customer Service Department, please quote the model, serial number (SN) and material number (mat. no.) of your machine. This information can be found on the data plate. The data plate is visible in the door ring when the drum door is open, or on the back of the machine at the top:

Model	
SN:	/ 0000000
ArtNr.	Mat-Nr.
IBN	

Symbol icon

Please also pass on the fault message appearing in the machine display to the Customer Service Department.

**Use only original Miele spare parts**. The Miele Customer Service Department will also require the model, serial number (SN) and material number (mat. no.) when ordering.

#### Problem solving guide

The majority of faults and problems that arise during day-to-day use can be remedied without external assistance. You can save time and money in many cases, as you do not need to call the Miele Customer Service Department.

The following tables are designed to help you to find the cause of a malfunction or a fault and to resolve it. You should, however, note the following:

A Repair work to electrical appliances should only be carried out by an authorised technician. Repairs by unqualified persons can cause considerable danger to users.

Problem	Cause and remedy
The display remains dark, and the <i>Start/Stop</i> sensor control does not light up or flash.	<ul> <li>No power is being supplied to the washer-dryer stack.</li> <li>Check whether the washer-dryer stack is switched on.</li> <li>Check whether the washer-dryer stack is connected to the power supply.</li> <li>Check whether the fuse has tripped.</li> </ul>
	<ul> <li>The washer-dryer stack has switched off automatically to save energy.</li> <li>■ Switch the washer-dryer stack back on with the <sup>()</sup> button.</li> </ul>
The following appears in the display: F - Door lock fault. You can continue by pressing the "Start/Stop" button	<ul> <li>The door is not locked properly. The door lock could not engage.</li> <li>Close the door again.</li> <li>Start the programme again. If the fault message appears again, contact the Customer Service Department.</li> </ul>

#### A programme cannot be started

## Problem solving guide

Problem	Cause and remedy
The display is dark and the <i>Start/Stop</i> sensor control is flashing slowly.	<ul><li>The display has switched off automatically to save energy.</li><li>Touch any of the controls. The display switches back on.</li></ul>
The programme is on the pre-start screen and the <i>Start/Stop</i> sensor control is not flashing.	The drum door has been pushed to but is not closed correctly. ■ Check whether the drum door is closed correctly.

#### Programme cancellation and fault message

Problem	Cause and remedy
ゲブF - Water drainage fault. If restart fails, call Service.	<ul> <li>The drain is blocked or restricted. The drain hose has been fixed too high.</li> <li>Clean the drain filter and the drain pump.</li> <li>The maximum delivery head is 1 m.</li> </ul>
죽F - Water intake fault. If re- start fails, call Service.	<ul><li>The water inlet is blocked or restricted.</li><li>Check whether the stopcock has been properly opened.</li><li>Check whether the water inlet hose is kinked.</li></ul>
	<ul> <li>The water pressure is too low.</li> <li>Switch on the Low water pressure setting (see "Low water pressure" under "Supervisor level").</li> </ul>
	<ul> <li>The water inlet filters are blocked.</li> <li>Clean the filters (see "Cleaning the water inlet filters" under "Cleaning and care").</li> </ul>
⚠Disinfection temperature not reached	<ul> <li>The required temperature was not reached during the disinfection programme.</li> <li>The washing machine has not carried out the disinfection cycle correctly.</li> <li>Start the programme again.</li> </ul>
⚠ Fault F. If restart fails, call Service	<ul> <li>There is a fault.</li> <li>Disconnect the washer-dryer stack from the electricity supply.</li> <li>Wait at least 2 minutes before reconnecting the washer-dryer stack to the electricity supply.</li> <li>Switch the washer-dryer stack on again.</li> <li>Start the programme again. If the fault message appears again, contact the Customer Service Department.</li> </ul>

## Problem solving guide

#### A fault message appears in the display

Problem	Cause and remedy
i Container empty	One of the external detergent containers is empty. <ul> <li>Refill the detergent container.</li> </ul>
<b>1</b> Hygiene info: run a pro- gramme of at least 60°C	During the last wash, a wash programme with a temperat- ure below 60 °C or the <i>Drain/Spin</i> programme was selec- ted.
	<ul> <li>Start a programme with a minimum temperature of 60 °C or the Clean machine programme.</li> </ul>
<b>1</b> F - Water intake fault. If re- start fails, call Service.	<ul> <li>The hot water supply is blocked or restricted.</li> <li>Check whether the hot water stopcock has been properly opened.</li> <li>Check whether the water inlet hose is kinked.</li> </ul>
i Laundry not properly spun	<ul><li>The selected spin speed was not reached during the final spin due to excessive imbalance.</li><li>Check that the washing machine is level.</li><li>Start the spin cycle again.</li></ul>
1 Machine is leaking	<ul><li>The washing machine or drain valve is leaking.</li><li>Close the stopcock.</li><li>Contact the Miele Customer Service Department.</li></ul>

#### Insufficient wash results

Problem	Cause and remedy
Liquid detergent does not give the required result.	<ul> <li>Liquid detergents usually contain no bleaching agents. They do not remove fruit, coffee or tea stains.</li> <li>Use a general purpose powder detergent containing a bleaching agent.</li> <li>Pour stain remover powder into drawer \ll in the dispenser compartment and liquid detergent into a dispenser ball.</li> <li>Never put stain remover powder and liquid detergent together in the detergent drawer.</li> </ul>
White residues which look like powder detergent are seen on dark textiles after washing.	<ul> <li>The detergent contained compounds (zeolites) to aid water softening which are not soluble in water. These have ended up on the laundry.</li> <li>Try to brush off the residues with a soft brush once the laundry is dry.</li> <li>In future, wash dark textiles using a detergent which contains no zeolites. Liquid detergents usually contain no zeolites.</li> </ul>
Textiles with particularly greasy soiling are not properly clean.	<ul> <li>Select a programme with pre-wash. Use liquid detergent for the pre-wash.</li> <li>Continue to use universal powder detergent for the main wash.</li> <li>The use of heavy-duty detergent is recommended in the main wash for very heavily soiled workwear. Please seek advise from the determent mean for the main.</li> </ul>
Grey, greasy particles cling to washed laundry.	<ul> <li>vice from the detergent manufacturer.</li> <li>Insufficient amounts of detergent were used. The laundry was heavily soiled with grease (oils, ointments).</li> <li>Use more detergent or use liquid detergent with this type of soiled laundry.</li> <li>Before washing the next load run a 60 °C programme with liquid detergent but without a load.</li> </ul>

### Insufficient drying results

Problem	Cause and remedy
Adjust the load The drum is empty or the laundry is too dry.	<ul> <li>This is not a fault. In some programmes, if the drum has been underloaded or is empty, the programme will be cancelled. This can also happen if the items are already dry.</li> <li>Use the hot air drying programme to dry individual items.</li> <li>Delete the message: <ul> <li>Open the door.</li> </ul> </li> </ul>
Power failure; programme stop. Please press OK but- ton	<ul> <li>The tumble dryer was switched off or the power failed during the drying process.</li> <li>Press the <i>OK</i> button after switching the tumble dryer back on/resuming the power and start the programme again.</li> </ul>
Clean air channels Clean the fluff filter. Check the air guide.	<ul> <li>Reminder to clean the fluff filter.</li> <li>Clean the fluff filter.</li> <li>Delete the problem message: <ul> <li>Press OK.</li> </ul> </li> </ul>
	<ul> <li>A defect in the air guide was identified.</li> <li>Clean the fluff filter.</li> <li>Check all possible causes described under "The drying process goes on too long or even switches off".</li> <li>Delete the problem message: <ul> <li>Open and close the door.</li> </ul> </li> </ul>
	<ul> <li>The vent ducting may be very long, but this is not a fault.</li> <li>If the vent ducting is very long, the programme times will be longer and energy consumption will be higher.</li> </ul>
	<ul> <li>A significant defect in the air guide was identified.</li> <li>See above.</li> <li>Delete fault message: <ul> <li>Press OK.</li> </ul> </li> </ul>
The laundry is not suffi- ciently dry.	<ul> <li>The load consisted of different types of fabric.</li> <li>Finish drying using the Warm air programme.</li> <li>Select a more suitable programme next time, see the "Programme overview" document.</li> </ul>
Feather-filled pillows smell after drying.	<ul> <li>Feathers tend to develop a build-up of their own smell or smells from other sources when they are heated.</li> <li>Smells can be reduced through natural ventilation after drying.</li> </ul>
Items made of synthetic fibres are charged with static electricity after dry- ing.	<ul> <li>Synthetic fibres tend to attract static charge.</li> <li>Static charge can be reduced by adding a fabric softener to the final rinse in the washing programme.</li> </ul>

## Problem solving guide

Problem	Cause and remedy
There is a build-up of fluff.	<ul> <li>Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. By contrast, the tumble dryer exerts barely any stress on the garments, which means it hardly affects their lifespan.</li> <li>Fluff is collected by the fluff filter and can be easily removed (see "Cleaning and care").</li> </ul>
Condensation is forming in the drum.	<ul> <li>The tumble dryer is installed on a shared exhaust air duct.</li> <li>The tumble dryer must always be installed with a non-return flap when using a combined line.</li> <li>Check the non-return flap for possible defects on a regular basis and replace the flap if necessary.</li> </ul>
The drying process goes on too long or even switches off.	<ul> <li>In some circumstances, you may be asked to clean the air channels/air guide.</li> <li>Please check all the possible causes described below.</li> <li>The fluff filter is clogged with fluff.</li> </ul>
	■ Remove the fluff.
	<ul> <li>The air guide area is clogged with hair and fluff, for example.</li> <li>Clean the air guide area.</li> <li>You can remove the cover in the loading area to clean the air guide area underneath.</li> </ul>
	<ul> <li>The vent ducting or its openings are clogged with hair and fluff, for example.</li> <li>Check and clean all components in the vent ducting (e.g. wall pipe, external grille, bends, elbows, etc.).</li> </ul>
	<ul> <li>The flow of air is insufficient (e.g. because it is installed in a small room).</li> <li>When drying, open a door or window to ensure sufficient ventilation.</li> </ul>
	<ul> <li>The laundry has not been spun sufficiently.</li> <li>Make sure that your laundry is thoroughly spun at the appropriate spin speed in the washing machine.</li> </ul>
	<ul><li>The dryer has been overloaded.</li><li>Do not exceed the maximum load size for the drying programme selected.</li></ul>
	<ul> <li>Metallic components, e.g. zips, have prevented the tumble dryer from registering the correct laundry moisture level.</li> <li>Open any zips next time.</li> <li>If the problem occurs again, dry garments with long zips using the hot air drying programme.</li> </ul>

#### General problems with the washer-dryer stack

Problem	Cause and remedy
The washer-dryer stack shakes during the spin cycle.	<ul><li>The machine feet are not level and not secured.</li><li>Level the washer-dryer stack and adjust the feet correctly.</li></ul>
Strange pump noises can be heard.	Not a fault. These slurping noises occur at the start and end of a pump sequence as a normal part of the opera- tion.
Large amounts of deter- gent residue remain in the detergent drawer.	The water flow pressure is too low. <ul> <li>Clean the water inlet filters.</li> </ul>
	<ul> <li>When powder detergent is used in conjunction with water softeners it tends to become sticky.</li> <li>Clean the detergent drawer and in future, add detergent first and then the water softener into the compartment.</li> </ul>
Fabric conditioner is not completely dispensed or too much water remains in the $\otimes$ compartment.	<ul> <li>The siphon is not correctly positioned or is clogged.</li> <li>Clean the siphon (see "Cleaning and care – Cleaning the detergent drawer").</li> </ul>
The display is in a different language.	A different language has been selected. ■ Switch the washer-dryer stack off and on again.
	The selected supervisor language appears in the display.
	<ul> <li>The supervisor language has been changed.</li> <li>Select the language you require (see "Language" under "Supervisor level").</li> </ul>
The laundry has not been spun properly. The laundry is still wet.	<ul> <li>The machine detected a high level of imbalance during the final spin and reduced the spin speed automatically.</li> <li>Include both large and small items in the load as this will achieve better distribution.</li> </ul>
The drum remains station- ary but the programme keeps running.	<ul> <li>Fault in the programme sequence</li> <li>Switch the washing machine off and then back on with the ① button.</li> <li>Note the message in the display.</li> <li>Touch the <i>Start/Stop</i> sensor control.</li> </ul>
	The drum continues to spin and the programme continues.

#### The door will not open

Problem	Cause and remedy
The door cannot be opened.	<ul> <li>The door is locked during the wash process.</li> <li>Touch the Start/Stop sensor control.</li> <li>Select Programme cancellation or Add laundry.</li> <li>The door will unlock and you will be able to pull it open.</li> </ul>
	<ul> <li>There is still water in the drum and the washing machine is unable to drain.</li> <li>Clean the drainage system as described under "Opening the door in the event of a blocked drain outlet and/or power cut".</li> </ul>
At the end of a programme or when a programme is cancelled, the following appears in the display: Cool down or Comfort cool- ing.	<ul> <li>To protect the user against scalding, the door cannot be opened if the suds temperature is higher than 55 °C.</li> <li>Wait until the temperature in the drum has decreased and the message has gone out in the display.</li> </ul>
The following appears in the display: F - Door lock fault. Call Service.	The door lock has jammed. ■ Contact the Miele Customer Service Department.

#### Opening the door in the event of a blocked drain outlet and/or power cut

 $\triangle$  Disconnect the machine from the mains electricity supply.



There is a lever behind the detergent drawer panel which opens the access panel to the drainage system.

The lever is provided in the companion pack/as an accessory for models with a locked detergent drawer.

Remove the lever.



• Open the access panel to the drainage system.

If the drain outlet is clogged, a large amount of water may be retained in the washing machine.

⚠ If laundry has been washed at a high temperature, water draining out of the machine will still be hot.

Place a suitable container under the access panel.

Do not unscrew the drain filter completely.



- Unscrew the drain filter to let the water out.
- Tighten the drain filter back up again if you need to interrupt the flow of water.



- If no water flows out, unscrew the drain filter completely.
- Clean the drain filter thoroughly.



- Remove any foreign objects (e.g. buttons, coins, etc.) and clean the interior. Turn the impellers by hand to check that they rotate freely.
- Put the drain filter back in place and screw it tight.

 $\triangle$  Make sure the drain filter is reinserted and securely tightened. Otherwise there is a risk of water leakage during use.

#### **Cleaning and care**

Disconnect the washer-dryer stack from the mains electricity supply.

 Carry out cleaning and maintenance of the washer-dryer stack after use if possible.

Do not use a pressure washer or water jet to clean the washerdryer stack.

Clean the casing, control panel and plastic parts with a mild, non-abrasive cleaning agent or with a soft, damp cloth only. Wipe dry with a soft cloth.

Scouring agents will scratch the surface.

- Clean stainless steel casing parts with a commercially available stainless steel cleaner.
- Remove any deposits from the door seal with a damp cloth.

Penetration of cleaning agents into electrical components.

When disinfecting the surfaces, use a moist cloth only to clean the front and around the door lock. Do not spray any liquids.

#### **Build-up of rust**

The drum is manufactured from rust-free stainless steel. Water or foreign objects containing ferrous substances (e.g. paper clips, metal buttons or metal swarf) which are placed in the machine with the laundry can cause a build-up of rust in the drum. Clean the drum regularly in this case and if rust occurs, remove it immediately with a proprietary stainless steel care product. Check the door seals for ferrous residues and clean thoroughly as described above. This must be carried out regularly.

#### Cleaning the detergent drawer, detergent compartments and siphons

- Clean the detergent drawer and the detergent compartments thoroughly with hot water as required to remove detergent residues and incrustations.
- If the machine is not going to be used for a long time, leave the flap of the detergent drawer open.



- There is a yellow lever behind the detergent drawer panel.
- Remove the lever.



- Pull out the detergent drawer until a resistance is felt.
- 1. Use the lever to push down and release the lock.
- 2. Remove the detergent drawer.



- Clean the siphon.
- 1. Remove the siphon from the 18 compartment and rinse under warm running water. Clean the siphon tube in the same way.

2. Refit the siphon.



• Clean the fabric conditioner channel using a brush and warm water.

Clean the siphon and fabric conditioner channel particularly thoroughly after using liquid starch a few times. Liquid starch results in clogging.



Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent drawer.

#### Cleaning the water inlet filters

The washing machine has filters to protect the water intake valves. You should inspect the filters approximately every 6 months. Perform this check more often if there are frequent interruptions to the external water supply.

Cleaning the filters in the inlet hoses

- First turn off the stopcock.
- Unscrew the water inlet hose from the stopcock.



- Remove the rubber seal (1) from the recess.
- Using pointed pliers, take hold of the plastic filter bar (2) and remove it.
- Clean the plastic filter.
- Reassemble in reverse order.

Turn on the stopcock and check the connection is watertight. If water drips out, tighten the connection.

#### Cleaning the filters in the water intake valves

 Using pliers, carefully loosen the ribbed plastic nut on the intake valve and unscrew.



Use pointed pliers to withdraw the filter by the bar and clean it. Reassemble in reverse order.

The filters must be reinserted after cleaning.

#### **Cleaning the fluff filter**

A two-part fluff filter in the air supply area collects fluff released by textiles. Remove and dismantle the fluff filter for cleaning.

Check and clean the fluff filter at the latest when the *Clean out airways* message appears.

**Tip:** You can also use a vacuum cleaner so that you can remove the fluff without touching it.

Removing the fluff filter



• To open, press against the right side of the fluff filter flap.

When pulling out the fluff filter, do not rotate the handle (see below) as this will dismantle the filter.



■ Use the handle to pull out the fluff filter.
#### Dismantling the fluff filter



Hold the fluff filter by the handles.

- 1. Rotate the inner part of the fluff filter (1).
- 2. Pull the two parts of the fluff filter apart (2).

# Cleaning the fluff filter parts (dry)



Shake out the fluff and/or pick it off with your fingers.

Cleaning the fluff filter parts (wet)

 Only clean the fluff filter parts under warm running water if there is a lot of compacted fluff on them.

Dry the fluff filter parts before reassembling them. A wet fluff filter could cause operational faults while drying.

## **Cleaning and care**

Inserting the fluff filter	If there is a lot of visible fluff, clean the air supply area before rein- serting the cleaned fluff filter. See next page.
	Insert the inner fluff filter part into the outer part.
	<ul> <li>Turn the inner part of the fluff filter clockwise slightly until you feel it engage.</li> </ul>
	<ul> <li>Hold the fluff filter by its handle and push it as far as it will go into the lower air supply area.</li> </ul>
	Do not rotate the handle as this will dismantle the filter.
	Close the fluff filter flap.

## Cleaning the air supply area

Check the air supply area from time to time and clean it if there is a lot of fluff present.



Additional clean- - Far

#### - Fan impeller

The fan impeller behind the fluff filter flap may be clogged with detergent residues and fluff.

Check the fan impeller from time to time and clean it if it is heavily soiled.



## **Cleaning and care**

- Using a damp cleaning cloth, carefully remove the coating on the fan impeller.
- Also clean the area in front of the fan impeller.
- Use a vacuum cleaner to remove fluff.
- Remove any fluff from the inside of the open fluff filter flap and the rubber seal. Make sure that you do not damage the rubber seal when doing this.
- Cover in door area

Only remove the cover in the door area in the event of a major blockage.

Removing the cover



Underneath the cover on the left and right, unscrew the Torx screws through the round holes.



- Reach under the edge of the cover (see arrows) and lift off the cover.
- Clean the air supply area underneath the cover with a vacuum cleaner.
- Clean the cover.
- Clean the air supply area in front of the fan impeller (open the fluff filter flap).
- Refitting Carefully position the cover on the left or right side of the opening.
  - Press down the cover until it engages on the opposite side.
- Securing the cover Look in the drum.
  - Underneath the cover on the left and right, screw in the Torx screws through the round holes.

To avoid the risk of frost damage, the washer-dryer stack must not be located in rooms which may be subject to very low temperatures.

## **General operating conditions**

This washer-dryer stack is intended only for use in a commercial environment and must only be operated indoors.

- Ambient temperature: 0-40 °C
- Relative humidity: non-condensing
- Maximum height above sea level of location site: 2000 m

Depending on the nature of the installation site, sound emissions and vibration may occur.

**Tip:** Have the installation site inspected and seek the advice of a specialist in instances where increased noise may cause a nuisance.

Transport the machine on a pallet truck inside the room.

Machines with feet must not be pushed to move them. This could damage them.

- Remove the packaging carefully with a suitable tool.
- Lift the individual machines in the washer-dryer stack off the pallet using a lifting device.

#### For ease of maintenance

For ease of future maintenance and servicing, the minimum dimensions and distance to the wall must be observed to enable access.

The minimum dimensions and distance to the wall must be observed.

Minimum safety distance to the wall approx. 400 mm to allow for maintenance.

Minimum safety distance to the side 300 mm (wall or other machines).

 Adjust the washing machine's adjustable feet until the machine is level.

The washing machine must be completely level to ensure smooth operation.

#### **PDW 909**



#### Installing the washer-dryer stack

The washer-dryer stack must be installed by the Miele Customer Service Department or by an authorised dealer. Please observe the information on the installation plan.

This washer-dryer stack is only intended for items of laundry that have not been proofed with dangerous or inflammable substances.

The washing machine or tumble dryer must not be operated as individual machines.



 Transport the washing machine and the dryer in the washer-dryer stack to the installation site one at a time.

⚠ During transportation of the machines, ensure their stability.

 $\triangle$  Do not pick them up by the drum door.

 You can also transport the washer-dryer stack to its installation site once it has been assembled. The assembled washer-dryer stack weighs 209 kg.

 $\triangle$  During transportation of the complete washer-dryer stack, ensure its stability. The height and centre of gravity present a risk of tipping over.

## Transit bars Removing the transit bars



Release the catch and turn the left-hand transit bar 90° clockwise.



Pull out the transit bar.



 Release the catch and turn the right-hand transit bar 90° anti-clockwise.



Pull out the transit bar.



• Fit the supplied stoppers onto the two holes.

Retain the transit bars. They need to be refitted should the machine ever need to be moved again.

#### Refitting the transit bars

Refitting is carried out by reversing the procedure.

## Levelling

Ensure that the machine feet and the installation surface are dry to prevent the machine from slipping during the spin cycle.

Incorrect installation may increase water and energy consumption and may cause the washing machine to move about.

The four adjustable feet are used to level the washing machine. The machine is supplied with all feet screwed in.



 Using the open spanner supplied, turn the counter nut (2) in a clockwise direction. Then turn the counter nut (2) together with the foot (1) to unscrew.



- Use a spirit level to check the washing machine is standing level.
- Hold the foot (1) securely with a pipe wrench. Turn the counter nut (2) again using the open spanner supplied until it sits firmly up against the casing.

All four counter nuts must sit firmly up against the housing. Please also check this for the feet which did not need adjustment. Otherwise there is the danger of the washer-dryer stack moving about.

## Securing the machine

The feet of the washing machine must be secured to the concrete plinth using the fixtures and fastenings supplied.

Fittings supplied are for installation on a concrete floor. For other types of flooring, please purchase suitable fastening materials separately.

## Installing the machine on ships

On other types of floor structures (in cases where the machine is being installed on sea-going vessels, for example), the fixing materials must be provided on site.

For installation on sea-going vessels, the machine must be secured to prevent slipping and tipping by fastening it to the floor of the vessel (e.g. using clamps that are welded to the floor of the vessel).



■ All 4 of the machine's feet must be secured.

#### Installing the tumble dryer at the top



Undo the 2 screws for the washing machine control panel.

- Remove the plugs for the electronic module and switch, and set the control panel down carefully to prevent damage. When removing the connectors, take care not to loosen or damage the plug trays on the switch.
- Undo the 4 screws for the connecting bracket on the rear of the washing machine and set the connecting bracket down.
- Position the top tumble dryer in front of the washing machine.
- Take the cables that protrude from under the tumble dryer out of the packaging.



 Lift the dryer onto the designated points. Pay attention to the distance from the rear wall.

⚠ During this work, make sure to wear personal protective equipment such as gloves.



 Enlist a suitable second person to help you lift the tumble dryer onto the washing machine.
 Using lifting equipment (such as a scissor lift) if it is available and it

Using lifting equipment (such as a scissor lift) if it is available and it is possible to use it.



 Place the rear guides for the tumble dryer base plate between the guide rails of the washing machine.



⚠ Risk of crushing and trapping Pay attention to your hands when installing the tumble dryer.

Push the tumble dryer as far back as it will go on the guide rails.



- Secure the tumble dryer on the guide rails of the washing machine using 4 screws and washers (provided in the companion pack).
- Connect the washing machine and tumble dryer plugs to the appropriate electronic module and the appropriate plug trays on the control panel switch. Connect the white cables to the top of the On/Off switch and the brown cables to the left of the On/Off switch.



- Screw the control panel onto the washing machine using the 2 screws.
- Screw the connecting bracket to the rear of the washing machine using the 4 screws.

#### Water connection

According to national regulations for drinking water quality, with effect from 21 March 2021, a non-return valve to prevent backsiphoning must be fitted between the stopcock and the water inlet hose during commissioning on all appliances in Germany. The nonreturn valve prevents water from the water inlet hose from flowing back into the on-site drinking water supply. The non-return valves are supplied as accessories.

The flow pressure must be a minimum of 100 kPa and must not exceed 1000 kPa. If the flow pressure is higher than 1000 kPa, a pressure reducing valve must be used.

The machine must be connected to the water supply using the inlet hoses included in the scope of supply.

⚠ The connection points are subject to water supply pressure. Turn on the stopcocks slowly and check for leaks. Correct the position of the seal and screw thread if appropriate.

Cold water con- nection	For the cold water connection one stopcock each with a $\frac{3}{4}$ " screw thread is required.
	If a water connection is not available, only a qualified installer may connect the washing machine to the mains water supply.
	The water inlet hose for cold water is not suitable for connection to a hot water supply.
	In the event that hot water is not available on site, a cold water supply must be used for the hot water connection.
	The required amount of hot water should be added to the cold water volume.
	Alternatively, the hot water connection should be blocked using the blind stopper supplied with the machine and the machine controls should be set to cold water intake by the service technician.
Using the ma- chine in cold wa-	For cold water mode, a cold water connection must be established at the cold and hot water valve.
ter mode	Alternatively, the hot water valve can be deactivated by the techni- cian. The following steps must be performed.
	The service technician must deactivate the hot water valve.
	Unscrew the hot water hose.
	■ Screw on a stopper.
Hot water con- nection	The same connection requirements as for cold water also apply to hot water up to 70 °C.
	A suitable connection hose with a threaded union is supplied with the machine.
	The machine with hot water connection also requires a cold water connection.
Using the ma- chine in hot water mode	For hot water mode, connect the hot water and cold water connec- tions to the relevant valves. Both connections are required.

Drain pump (de- pending on model)	In machines with drain pump, the suds are drained through a drain pump with a delivery head of max. 1 m.
	The drain hose must be installed free of kinks for the suds to drain freely.
	There are the following options for draining the machine:
	<ul> <li>Drain hose connected to a plastic drain pipe with a rubber sleeve (there is no need to use a siphon)</li> </ul>
	- Drain hose connected securely to a sink with a plastic nipple
	- Connected securely to a floor drain (gully)
	If required, the hose can be extended to a length of up to 5 m. The corresponding accessories are available from the Miele Customer Service Department or your Miele dealer.
	For a drain height of more than 1 m, a replacement drain pump for a delivery head of max. 1.8 m is available from the Miele Customer Service Department or from your Miele dealer.
Special regula- tions for Austria	The washing machine can be connected directly to the drain pipe if the sewer system meets the requirements of Austrian standard ÖNORM 2501.
	Electrical connection
	The electrical connection must only be carried out by a suitably quali- fied electrician in accordance with local and national regulations such as BS 7671 in the UK.

It is recommended to connect the electrical supply with suitably rated plugs and sockets so that both the washer and dryer are capable of full isolation.

A **residual current device (RCD) type B** (sensitive to universal current) must be used if one is being installed.

The electrical components of the machine comply with EN 60335-1, EN 50571.

The voltage is stated on the data plate.

For hard-wired machines, an all-pole means of deactivation must be provided on site. Switches with a minimum contact gap greater than 3 mm are suitable disconnectors. These include circuit breakers, fuses and contactors (VDE 0660).

The plug connections or disconnectors must be accessible at all times.

If the machine is disconnected from the power supply, the disconnectors must be lockable or the points of disconnection must be monitored at all times.

	Preventing hazards If one of the mains connection cables for this machine is damaged, it must be replaced by the manufacturer, its Customer Service Department or a similarly qualified person to avoid risks.
	Observe the enclosed wiring diagram.
	Supply air and exhaust air management
Ventilation	The air required for drying is taken from the room where the tumble dryer is installed. Ensure sufficient room ventilation, e.g. by means of ventilation openings that cannot be closed in the exterior wall.
	- It must not be possible to seal off ventilation openings.
	<ul> <li>The room ventilation is only working properly if no low pressure oc- curs. Avoid low pressure, e.g. by means of ventilation openings in the exterior wall.</li> </ul>
	- For each tumble dryer, there must be a cross section of 237 cm <sup>2</sup> per ventilation opening.
	The tumble dryer draws in air at the back. Therefore, there must be a sufficiently large gap between the back of the machine and the wall. This would otherwise hinder a sufficient flow of air as well as the operational performance of the tumble dryer. Observe the necessary spacing between the machine and the wall. Do not reduce the gap between the bottom of the tumble dryer and the floor (e.g. plinth facings, deep pile carpet).
Exhaust air man- agement	The tumble dryer must only be operated if the humid exhaust air generated during drying is led outside through an installed vent ducting.
	Exceptions regarding the design of the exhaust air management system must be designed in accordance with the applicable local building regulations. Seek approval from the relevant building in- spector.
	<ul> <li>While installing the ducting, keep the tumble dryer disconnected from the mains power supply.</li> </ul>
	- Make sure that the plug connections are fully sealed.
	<ul> <li>Only use heat-resistant materials with a temperature resistance of at least 80 °C.</li> </ul>
	<ul> <li>Condensation will form in the exhaust air management system. A condensate drain must therefore be placed at the lowest point in the system.</li> </ul>

	The opening of the vent ducting (e.g. a wall pipe) must be arranged in such a way that the humid exhaust air:
	<ul> <li>Does not flow back into the room where the tumble dryer is in- stalled.</li> </ul>
	- Does cause damage or unacceptable disturbance.
	The air required for drying is taken from the room where the dryer is installed. You must therefore ensure that the room is sufficiently vent- ilated. Otherwise, there is a risk of suffocation due to exhaust gases being sucked back from other technical systems or fuel-burning in- stallations, and the drying time will be much longer.
The following	- Long vent ducting
should be avoided:	- Too many tight bends or elbows
	This will help to stop a reduced dryer performance and excessive time and energy requirements.
Use:	<ul> <li>For the vent ducting: exhaust hose* or a plastic waste water pipe (e.g. HT piping systems) with a minimum diameter of 100 mm.</li> </ul>
	- *optional accessories
Calculating the total ducting length	The friction of the vent ducting with its bends and various compon- ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The <b>relative pipe length</b> indic- ates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table I).
total ducting	ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The <b>relative pipe length</b> indic- ates how much greater the resistance of a bend is, for example, when
total ducting	ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The <b>relative pipe length</b> indic- ates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table I). Adding together the relative pipe lengths for all of the components gives the <b>total ducting length</b> . The total ducting length expresses the
total ducting	<ul> <li>ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The relative pipe length indicates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table l).</li> <li>Adding together the relative pipe lengths for all of the components gives the total ducting length. The total ducting length expresses the resistance of the entire exhaust air system.</li> <li>As a larger duct diameter has a lower flow resistance, a longer duct</li> </ul>
total ducting length	<ul> <li>ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The relative pipe length indicates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table I).</li> <li>Adding together the relative pipe lengths for all of the components gives the total ducting length. The total ducting length expresses the resistance of the entire exhaust air system.</li> <li>As a larger duct diameter has a lower flow resistance, a longer duct requires a greater duct diameter (table II).</li> <li>1. Measure the length needed for the straight sections of ducting. Multiply this value by the corresponding relative pipe length</li> </ul>
total ducting length	<ul> <li>ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The relative pipe length indicates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table I).</li> <li>Adding together the relative pipe lengths for all of the components gives the total ducting length. The total ducting length expresses the resistance of the entire exhaust air system.</li> <li>As a larger duct diameter has a lower flow resistance, a longer duct requires a greater duct diameter (table II).</li> <li>Measure the length needed for the straight sections of ducting. Multiply this value by the corresponding relative pipe length from table I.</li> <li>Calculate the number of bends and components needed. Use</li> </ul>
total ducting length	<ul> <li>ents provides resistance to the flow of air. This friction resistance is expressed as a relative pipe length. The relative pipe length indicates how much greater the resistance of a bend is, for example, when compared to 1 metre of a straight plastic waste water pipe (table I).</li> <li>Adding together the relative pipe lengths for all of the components gives the total ducting length. The total ducting length expresses the resistance of the entire exhaust air system.</li> <li>As a larger duct diameter has a lower flow resistance, a longer duct requires a greater duct diameter (table II).</li> <li>Measure the length needed for the straight sections of ducting. Multiply this value by the corresponding relative pipe length from table I.</li> <li>Calculate the number of bends and components needed. Use Table I to help you add together their relative pipe lengths.</li> </ul>

Table I		
Components		Relative pipe length
Exhaust air hose (flexible aluminium)* / pipe (temperature resistance min. 80 °C)		
- 1 m laid straight or 1 m straight	pipe	1.0 m
$-45^{\circ}$ bend (radius of bend = 0.25 m)		0.6 m
$-90^{\circ}$ bend (radius of bend = 0.25 m)		0.8 m
Non-return flap*		14.3 m
* optional accessories		
Table II		
Maximum permissible total duct- ing length	Required dia	meter
20 m	100 mm	
40 m	125 mm	
80 m 150 mm		



Α	<b>1 bend, 90°</b> = 1 x 0.8 m relative pipe length	= 0.8 m
B/D	<b>2 bends, 90°</b> = 2 x 0.8 m relative pipe length	= 1.6 m
С	<b>0.5 m pipe</b> = 0.5 x 1 m relative pipe length	= 0.5 m
	Total ducting length	= 2.9 m

**Result:** the total ducting length is less than 20 m (as per Table II). A pipe diameter of 100 mm will therefore suffice.

Exhaust duct di- View from above mensions



**Rear view** 



Exhaust air management with plug-in pipes You will need

- the connector (supplied).

- pipes and connecting pieces from a suitable retailer.

Only use heat-resistant materials with a temperature resistance of at least 80  $^\circ\text{C}.$ 



■ Install the connector (1) and the pipe (2).

Mrap heat-resistant metallic tape around plug connections.

Exhaust air management with flexible aluminium hose You will need

 $\bigwedge$ 

- the adapter (supplied).
- Flexible aluminium exhaust air hose (optional accessory).



Install the adapter (1) and the flexible aluminium exhaust air hose (2).

Wrap heat-resistant metallic tape around plug connections.

# Shared exhaust air ducts

A shared exhaust air duct is only permitted in exceptional cases. The shared exhaust air duct must be approved by the relevant building inspector.

A non-return flap must be installed for each tumble dryer. Otherwise, the tumble dryers may be damaged by a backflow of condensation and their electrical safety could be affected.

If 3–5 tumble dryers are installed on one shared exhaust air duct, the pipe diameter <b>D</b> must be increased.	
Number of tumble dryers	Factor for increasing the pipe diameters from Table II
3 4–5	1.25 1.5



#### **Reference to external machines**

A reference to external hardware appears.

• Confirm with the *OK* symbol.

If using a Connector Box, connect it before initial commissioning. The washing machine must be disconnected from the mains to do this. Then start the commissioning process.

#### **Optional accessories**

Only use genuine Miele spare parts and accessories with this machine.

Using spare parts or accessories from other manufacturers will invalidate the warranty, and Miele cannot accept liability.

# Washing machine accessories

Connector Box

The Connector Box allows external hardware from Miele and other suppliers to be connected to the Miele Professional washing machine.

	The Connector Box is supplied with mains voltage by the Miele Pro- fessional washing machine.
	The separately available set consists of the Connector Box and fasteners for installation on the machine or on the wall.
Peak load / energy management	A peak-load or energy management system can be connected via the Connector Box.
	The energy management system monitors the energy consumption of a system and deactivates individual pieces of equipment tempor- arily by means of the peak-load negotiation in order to ensure that certain total load limits are not exceeded.
	When the peak-load function is activated, the heating is deactivated and the programme stopped. A message appears in the display to in- form you of this.
	The programme is resumed automatically when the peak-load func- tion finishes.
Liquid dispensing connection	External liquid dispensing pumps with a "container empty" indicator and/or flowmeter can be used via the Connector Box to dispense li- quid detergents.
	The dispensing pumps can only be programmed by the Miele Cus- tomer Service Department.
	It is particularly important to follow the manufacturer's instructions when using a combination of cleaning agents and special application products.
Payment device	The washing machine can be fitted with a single-machine payment system as an optional accessory via the Connector Box.
	The programming required for connecting a payment system can be carried out during the initial commissioning process. After initial com- missioning, changes may only be carried out by your Miele dealer or the Miele Customer Service Department.
	Please note that the status of the Connector Box must be set to "on" in the supervisor level as required.
WiFi/LAN interface	The washing machine is equipped with a WiFi/LAN interface for ex- changing data.
	The data interface provided on the LAN connection complies with SELV (Safety Extra Low Voltage) in accordance with EN 60950. The LAN connection uses a RJ45 connector in accordance with EIA/ TIA 568-B.
	Connected machines must also comply with SELV.

Tumble dryer ac-	
cessories Communication box	The optional communication box allows external hardware from Miele and other suppliers to be connected to the Miele Professional ma- chine. External hardware includes, e.g. payment system, peak-load system, pressure sensor or an external vent flap.
	The communication box is supplied with mains voltage by the Miele Professional machine.
	The separately available set consists of the communication box and fasteners for installation on the machine or on the wall.
Payment systems	This tumble dryer can be fitted with a payment system (optional Miele accessory). In this case, a Miele Customer Service technician must programme the relevant settings in the tumble dryer's electronics and connect the payment system.
XKM 3200 WL PLT	The optional Miele communication module can be used to establish a data connection between a Miele Professional machine and a data processor in accordance with the Ethernet or WiFi standard.
	This communication module fits into the communication slot which is a standard feature on all machines. The communication module of- fers the option of intelligent app-based communication with external systems (such as central smart payment terminals or payment sys- tems). In addition, it can display detailed machine and programme status information.
	This module forms the basis for wired communication with Miele MOVE.
	It is not possible to integrate the machine into the "Miele@home" app for domestic installations.
	The communication module is intended exclusively for commercial use and is supplied with mains voltage directly via the Miele Professional machine. No additional power connection is required. The Ethernet interface provided via the communication module complies with SELV (safety extra low voltage) requirements in accordance with EN 60950. Connected external machines must also comply with SELV.

## **Opening the supervisor level**

Switch on the washing machine.



■ Touch the Supervisor 🕄 sensor control.

The display will change to the Supervisor level menu.

## **Code-based access**

The supervisor level is accessed using a code.

The code is **000** (factory default).

After entering the code, you will be in the supervisor level. The individual setting options are described in the following sections.

## Changing the code

You can alter the supervisor level access code to protect the washing machine from unauthorised access.

Please inform the Miele Customer Service Department if you have forgotten your new code. The Customer Service Department will have to reset the code.

Make a note of your new code and store it in a safe place.

## **Closing the Settings menu**

• Touch the  $\bigcirc$  symbol.

The display will then go back to the previous menu level.

The display will change to the main menu.

	Operation/display
Language	The display can be set to appear in one of several different lan- guages. To select the permanent supervisor language you want, go to the Languages sub-menu.
	When a programme is running, you can change the user language us- ing the 昀叩晗 sensor control.
Language access	The display can be set to one of several different user languages. This setting allows you to determine how languages can be selec- ted.
	International
	6 languages are available. The ཐགྱགཐ sensor control is not active. Note the setting Set languages.
	Language selection
	The ����� sensor control can be used to select a language. All lan- guages are available (factory default).
	You can change the order of the first 4 languages. These slots are al- located to the most commonly used languages.
	Standard language
	The user language cannot be changed. The user language is the same as the supervisor language. The 昀印영 sensor control is not act- ive.
Set languages	The languages for the setting Language entry International can be changed.
	6 languages can be selected. All languages are available.
	6 languages can be selected. All languages are available. If you wish to add a new language to the language menu:
	If you wish to add a new language to the language menu:
	<ul><li>If you wish to add a new language to the language menu:</li><li>First select the language you want to replace.</li></ul>
	<ul> <li>If you wish to add a new language to the language menu:</li> <li>First select the language you want to replace.</li> <li>All available languages are displayed.</li> </ul>
Display bright- ness	<ul> <li>If you wish to add a new language to the language menu:</li> <li>First select the language you want to replace.</li> <li>All available languages are displayed.</li> <li>Select and confirm the language to replace the previous language.</li> </ul>

## Washing machine supervisor level

Time	After selecting the clock format, you can set the time of day.
	Time format
	- 24 h clock
	- 12 h clock
	- No clock
	Set
	- The time can be set.
Date	The date can be set after selecting the date format.
	Date format
	- DD.MM.YYYY
	- YYYY.MM.DD
	- MM.DD.YYYY
	Date
	- The date can be set.
Volume	The volume for various sounds can be changed.
	- Finish tone
	- Keypad tone
	- Welcome tone
	It can be set to one of 7 different levels or switched off altogether.
	- Fault tone
	The fault tone can be activated or deactivated.
Visibility paramet- ers	Various parameters, such as the temperature, spin speed, Extras, etc., are displayed when a programme is selected. You can decide which parameters should not be displayed. The parameters cannot be changed/are no longer displayed.
	Factory default: all parameters are visible (marked in orange)
Appliance off status	In order to save energy, the washing machine can be set to switch to standby mode automatically after the end of the programme or if no further selection is made. In the default setting, the machine will not switch to standby mode automatically.
	Changing this setting leads to increased energy consumption.
	- No switch-off (factory default)
	- Switch-off after 15 minutes
	- Switch-off after 20 minutes
	- Switch-off after 30 minutes

Delay start	The delay start (timer) display can be switched on or off.
	Factory default: on
Memory	The washing machine will save the settings (temperature, spin speed and some of the options) which have been selected for a wash pro- gramme after the programme has started.
	When the wash programme is chosen again, the saved settings will appear on the washing machine's display.
	Factory default: off
Manual control	The manual control function can be switched on or off. Switch-on can be carried out with or without identification.
Change order	The skip function can be switched on or off.
Temperature unit	You can select the unit for the temperature display (°C/°F).
Weight unit	You can decide whether load sizes are displayed in "kg" or "lbs". You can also switch this information off altogether.
Supervisor code	You can alter the access code to the supervisor level.
	■ Enter the current code.
	■ Enter a new code.
WiFi	Control the networking of your washing machine.
	- Setup
	<ul> <li>Setup</li> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> </ul>
	This message only appears if the washing machine has not yet
	This message only appears if the washing machine has not yet been connected to a WiFi network.
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> <li>The quality of WiFi reception</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> <li>The quality of WiFi reception</li> <li>The network name</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> <li>The quality of WiFi reception</li> <li>The network name</li> <li>The IP address</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> <li>The quality of WiFi reception</li> <li>The network name</li> <li>The IP address</li> <li>Set up again (visible if already set up)</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated)</li> <li>The network remains set up; the WiFi function is switched off.</li> <li>Activate (visible if the network is deactivated)</li> <li>The WiFi function is reactivated.</li> <li>Connection status (visible when the network is activated)</li> <li>The quality of WiFi reception</li> <li>The network name</li> <li>The IP address</li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated) <ul> <li>The network remains set up; the WiFi function is switched off.</li> </ul> </li> <li>Activate (visible if the network is deactivated) <ul> <li>The WiFi function is reactivated.</li> </ul> </li> <li>Connection status (visible when the network is activated) <ul> <li>The quality of WiFi reception</li> <li>The network name</li> <li>The IP address</li> </ul> </li> <li>Set up again (visible if already set up) <ul> <li>Resets the WiFi login (network) to immediately re-establish a new</li> </ul> </li> </ul>
	<ul> <li>This message only appears if the washing machine has not yet been connected to a WiFi network.</li> <li>Deactivate (visible when the network is activated) <ul> <li>The network remains set up; the WiFi function is switched off.</li> </ul> </li> <li>Activate (visible if the network is deactivated) <ul> <li>The WiFi function is reactivated.</li> </ul> </li> <li>Connection status (visible when the network is activated) <ul> <li>The quality of WiFi reception</li> <li>The network name</li> <li>The IP address</li> </ul> </li> <li>Set up again (visible if already set up) <ul> <li>Resets the WiFi login (network) to immediately re-establish a new connection.</li> </ul> </li> </ul>

- The WiFi connection will be reset to the factory default setting
#### **Programme selection**

**Controls Tip:** Start by configuring all necessary settings and changes to the washing machine before adjusting any of the options below.

If "Laundrette, basic" or "Laundrette Logo" is selected, the supervisor level can no longer be opened from the display after the *Supervisor level* menu is closed. Please follow the instructions below for special access to the supervisor level if you wish to change any other settings.

Standard (factory default).

All functions and programmes can be displayed.

Launderette, basic

Up to 12 programmes are available. Go to Favourite programmes to select which programmes are to be listed.

#### Launderette logo

Up to 12 programmes are available. Go to Favourite programmes to select which programmes are to be listed.

External programme selection

Programmes are selected using a communication module, e.g. an external terminal.

# Washing machine supervisor level

Programme pack- ages	The selection of programmes can be expanded by activating single programmes from the target group programme packages.
	The programmes selected from the programme packages (marked in orange) are displayed during programme selection.
Favourite pro- grammes	After switching on, you can also select a programme via: ☆ Favour- ites.
	24 programmes can be stored as favourites based on your own pri- orities and requirements.
	These favourites will also be made available in the control options
	- Launderette logo
	- Launderette, basic.
	You can specify the control option under Controls.
	<b>Tip:</b> You can assign a separate coloured frame to each programme. In this case, the Prog. colour allocation setting must be set to <i>On</i> .
	Changing favourite programmes
	Select the programme you wish to change or replace.
	Confirm the programme or the setting to be changed.
	Another menu opens, enabling you to select a new programme or change the parameters.
	Confirm by touching the Save selection area.
	Your selection is now active.
Sort programmes	Programmes can be moved within the programme list and in the fa- vourites list.
	Factory default: off
Moving pro-	Touch the selection area for the programme you want to move.
grammes	Press and hold the selection area until the frame changes.
	Drag the programme to the required place.
Prog. colour al- location	You can assign a frame to a favourite programme. In the list of fa- vourites, each favourite programme is given a coloured frame, which can be adjusted.
	Factory default: on
Expert code	A code has to be entered to cancel a disinfection programme. The code can be modified.
	The expert code is not the same as the supervisor level code.
	The code is: 0 0 0
	Make a note of your new code if you ever change it.

#### **Process technology**

Anti-crease

The Anti-crease function reduces creasing after the end of the programme. At the end of the programme, the drum continues to turn at intervals for up to 30 minutes.

The washing machine door can be opened at any time.

Factory default: on

# Washing machine supervisor level

Automatic drain- age	Automatic water drainage can be switched on or off. Automatic water drainage means that the suds are always drained away after the end of a programme. This is also the case for programmes that reach the programme end with water still in the drum.
	Service
Service interval	Service information can appear in the display. You can configure whether a date or the number of operating hours is displayed.
	You can select up to 3 messages with their own text.
	Your message is displayed at the end of the programme and can be acknowledged with <i>OK</i> . The same message appears at the end of the next programme.
	<u>Settings</u>
	This setting allows you to determine the interval (by hours or date) at which the message appears.
	- Factory default: off
	<ul> <li>By time</li> <li>You can then select a time interval from 1–9999 hours.</li> </ul>
	- By date You can then enter a date.
	Message text
	Enter your message for your planned maintenance work.
	Reset display
	The message appears until the display is permanently reset. The message then appears again once the next interval is reached.
	External applications
Payment system lock	The payment device lock can be switched on or off. When the lock is switched on, various time intervals can be selected.
Connector box	External hardware is connected via the Connector Box. This can be switched on or off.
	The Connector Box must be selected in order for settings to be made in the Dispensing menu.
Automatic dis-	Automatic dispensing can be switched on or off.
pensing	Automatic dispensing can be activated via the Connector Box or the COM module.
Dosage	The Connector Box must be switched on in order for settings to be adopted in the Dispensing menu.
	1–6 dispensing pumps can be switched on.
	Further settings can be made after activating the dispensing pump.

	- Deactivate disp. pump
	- Calibration
	- Flow rate (new): ml/min
	- Correction factor
	- Container size
	- Adv. warning level reminder
	- Reset adv. warning
	- Level reminder
	- Flow meter
Peak load preven- tion	The peak-load prevention function can be switched on or off. With this function, the execution of a wash programme is not affected when a peak-load signal is in place. The heater stays switched on.
	Appliance parameters
Maximum spin speed	The maximum spin speed can be set via a keypad.
Max. possible temperature	The maximum temperature can be set via a keypad.
Legal information	<u>Open source licences</u>
	You can view information here (see WiFi data protection).

#### **Opening the Supervisor level**



Touching the 🕸 sensor control takes you to the Supervisor level.

#### Access via code

Supervisor level is accessed using a code.

Factory default: The code is 000.

#### Change code

You can alter the Supervisor level access code to protect the dryer from unauthorised access.

Be careful when entering a new code.

You will need to inform Miele Service if you forget your new code. Miele Service will have to reset the code.

Make a note of your new code and store it in a safe place.

#### **Closing the settings menu**

■ Touch the <sup>C</sup> sensor.

The display will then go back to the previous menu level.

Touch the sensor.

The display will change to the main menu.

#### **Controls / Display**

Language

The display can be set to appear in one of several different languages. To select the language you want, go to the *Languages* submenu.

You can change the language as follows:

- Permanently using the supervisor level (= "Supervisor language").
- For the duration of the current programme only using the BDB sensor control. The supervisor language is displayed again at the end of the programme.

Language entry The display can be set to one of several different user languages. This setting allows you to determine how languages can be selected.

You can change the language as follows:

	International
	6 languages are available. The 昀昀匋 sensor control is not active. Note the setting Set languages.
	Language setting
	The 昀昀 sensor control can be used to select a language. All lan- guages are available (factory default).
	You can change the order of the first 4 languages. These slots are al- located to the most commonly used languages.
	Standard language
	The user language cannot be changed. The user language is the same as the supervisor language. The ����� sensor control is not act- ive.
Set languages	The languages for the International lang. entry setting can be changed.
	Six languages can be selected. All languages are available.
	If you wish to add a new language to the language menu:
	Six languages can be selected. All languages are available.
	If you wish to add a new language to the language menu:
	First select the language you want to replace.
	All available languages are displayed.
	Select and confirm the language to replace the previous language.
	The new language appears instead of the old one.
Display bright- ness	The brightness of the display can be altered. The setting depends on the various lighting conditions in the place of installation.
	- It can be set to one of 10 different levels.
Clock display	After selecting the clock format, you can set the time of day.
	Clock format
	- Factory default: 24-hour display
	- 12-hour display
	- No clock
	<u>Set</u>
	- The time can be set.
Date	
Dute	The date can be set after selecting the date format.
	- <u>Date format</u>
	The date can be shown starting with the day, month or year.
	- <u>Date</u>

	The date is set.
Volume	The volume for various sounds can be changed.
	The volume can be changed for the following tones:
	<ul> <li>Finish tone</li> <li>The finish tone signals the end of the drying programme.</li> </ul>
	- Keypad tone
	- Welcome tone
	<ul> <li>Fault alarm</li> <li>The fault tone signals a fault and can be switched off. The volume of the fault tone cannot be adjusted.</li> </ul>
Res. moisture dis- play	In addition to displaying the drying level, the residual moisture can also be indicated as a percentage.
	- Factory default: Without % value
	- With % value
Visibility paramet- ers	Various parameters are offered/displayed when a programme is se- lected. You can decide which parameters should not be displayed. These parameters can then not be edited during programme selec- tion.
	- Residual moisture
	- Duration
	- Low temperature
	- Anti-crease
	- Load size
	- Drying temperature
Display off status	The display switches off to save energy; only the <i>Start/Stop</i> sensor flashes slowly. You can change this setting.
	Changing this setting leads to increased energy consumption.
	- Off No switching off
	<ul> <li>On (10 min.) Not curr.prog.</li> <li>The display will remain on during the programme sequence but will go out 10 minutes after the end of the programme.</li> </ul>
	<ul> <li>Logo (10 min.) Not curr.prog.</li> <li>The display will remain on during the programme sequence but the logo will light up 10 minutes after the end of the programme.</li> </ul>
	<ul> <li>Factory default: On after 10 min.</li> <li>The display is switched off after 10 minutes.</li> </ul>

	<ul> <li>On (30 min.) Not curr.prog.</li> <li>The display will remain on during the programme sequence but will go out 30 minutes after the end of the programme.</li> </ul>
	<ul> <li>Logo (30 min.) Not curr.prog.</li> <li>The display will remain on during the programme sequence but the logo will light up 30 minutes after the end of the programme.</li> </ul>
	<ul> <li>On after 30 min.</li> <li>The display will go out after 30 minutes.</li> </ul>
Machine off status	In order to save energy, the tumble dryer will switch off automatically after the end of the programme or if no further selection is made. You can change this setting.
	Changing this setting leads to increased energy consumption.
	- No switch off
	- Factory default: Switch off after 15 minutes
	- Switch off after 20 minutes
	- Switch off after 30 minutes
Delay start	The delay start (timer) can be activated or deactivated.
	- Factory default: Off
	- On
Memory	The tumble dryer saves the settings that were last selected for a dry- ing programme (drying stage and/or extra option, or the duration for some programmes).
	- Factory default: Off
	- On
Temperature unit	You can select the unit for the temperature display.
	- Factory default: °C
	- °F
Weight unit	You can decide whether load quantities are displayed in "kg" or "lbs".
	- Factory default: kg
	- Ib
Change code	You can alter the access code to the Supervisor level.
	Enter the current code.
	■ Enter a new code.
	Programma salaction

## Programme selection

Controls	You can select whether the tumble dryer is operated as a "launder- ette" machine. Shortcuts are the easiest way to operate the ma- chine. Operating staff are unable to change pre-set programmes.
	<b>Tip:</b> Start by configuring all necessary settings and changes to the tumble dryer before adjusting any of the options below.
	Caution: When activating any of these options, the Supervisor level will no longer be available. You will no longer be able to access the Supervisor level via the display. Please follow the instructions below if you wish to change any other settings.
Opening the Su-	Switch the tumble dryer on and open the dryer door.
pervisor level (laun- derette version)	<ul> <li>Touch the <i>Start/Stop</i> sensor and hold it down whilst carrying out steps 2-3.</li> </ul>
	Olose the dryer door.
	Wait until the Start/Stop sensor, which will now be flashing quickled lights up constantly
	I and then release the Start/Stop sensor.
	- Standard
	Factory default: all (selected) programmes are available.
	- Launderette, basic
	12 programmes are available.
	Under Favourite programmes, you can set which of the 12 pro- grammes to select or modify.
	- Laundrette Logo
	12 programmes are available.
	Under Favourite programmes, you can set which 12 programmes to select/modify.
	- Laundrette Logo ext. time
	4 timed drying programmes* with different temperature levels are time-controlled via an external payment system.
	The set value indicates the programme running time and cannot b modified by the user.
	* The maximum programme running time is specified during initia commissioning.
	- Laundrette Logo int. time
	4 timed drying programmes* with different temperature levels are time-controlled via the tumble dryer electronic module.
	The set value indicates the maximum programme running time an can be modified by the user.
	can be modified by the user.

	- External prog. selection
	A communication module can be used to select the programme from an external terminal.
Programme pack- ages	This allows you to specify the scope of the tumble dryer programme. You can select all of the programmes or individual programmes from the relevant programme packages.
	The tumble dryer's additional scope of programmes can be con- figured. The programmes are listed under "Programme chart".
Favourite pro- grammes	<ul> <li>After switching on, you can also select a programme via: ☆ Favourites.</li> <li>12 programmes can be stored as favourites based on your own priorities and requirements.</li> </ul>
	These favourites will also be made available in the control options
	- Launderette ext. (12 prog)
	- Launderette, basic (4 prog) (the first 4 of the 12 favourites).
	You can specify the control option under Controls.
	<b>Tip:</b> You can assign a different colour to each programme. In this case, the Prog. colour allocation setting must be set to <i>On</i> .
	Changing Favourite programmes
	<ul> <li>Select the programme you wish to change or replace.</li> </ul>
	Confirm the programme or the setting to be changed.
	Another menu opens, enabling you to select a new programme or change the parameters.
	Confirm with the Save sensor control.
	Your selection is now active.
Special pro- grammes	You can put together 5 special residual moisture or time-controlled programmes and assign your own programme names.
	First, enter the programme name.
	Select the special programme you want to change.
	The Save as menu opens.
	Use the letters and symbols below the line to enter the name.
	Touch the Save sensor control.
	You can now enter the parameters for a Res. moisture programme or Timed drying.
	The 5 special programmes are pre-programmed at the factory. You can change these special programmes.

The special programmes are added to the programme packages. Enter the name and settings of your special programme into the "Special programmes" table in the "Programme overview" chapter.

Res. moisture programme:

- Final residual moisture:
  6 % (dry) 40 % (damp)
- Extra drying time: 0–60 minutes
- Temperature (Process air): cold – 75 °C
- Cooling down temperature (Process air): 40–55 °C
  - Drum rotation, main direction:
     20–600 seconds
  - Pause:
     2–15 seconds
  - Drum reversal:
    - 20-600 seconds
- Anti-crease
  - Drum rotation, main direction:
     0–500 seconds
  - Pause:
     100–3000 seconds
  - Drum reversal:
     0–500 seconds
- Timed drying:
- Running time: 5–180 minutes
- Temperature (Process air): cold – 75 °C
- Cooling down temperature (Process air): 40–55 °C
  - Drum rotation, main direction: 20–600 seconds
  - Pause:
     2–15 seconds
  - Drum reversal:
    - 20-600 seconds
- Anti-crease
  - Drum rotation, main direction:
    - 0-500 seconds

	<ul> <li>Drum reversal:</li> <li>0–500 seconds</li> </ul>
	<ul> <li>Pause:</li> <li>100–300 seconds</li> </ul>
Sort programmes	Programmes can be moved within the programme list and in the Fa- vourites list.
	- Factory default: Off
	- On
Moving pro- grammes/favour- ites	You can move/change the order of the programmes (programme menu – single option list). You can also move and change the order of the favourites that you edit in the <i>Supervisor level</i> under <i>Favourite programmes</i> .
	Touch the programme that you wish to move.
	Press and hold the sensor until the frame changes.
	Drag the programme to the required place.
Prog. colour al- location	You can assign a specific colour to a favourite programme. In the list of favourites, each favourite programme is given a coloured frame, which can be adjusted.
	- Factory default: Off
	- On
	- On Process technology
Anti-crease	
Anti-crease	Process technology At the end of the programme, the drum will continue to rotate at in-
Anti-crease	Process technology At the end of the programme, the drum will continue to rotate at in- tervals if the laundry is not removed immediately.
Anti-crease	Process technologyAt the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.Changing this setting leads to increased energy consumption.The setting for Anti-crease (<) can either be switched off or a time
Anti-crease Drying levels	Process technology         At the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.         Changing this setting leads to increased energy consumption.         The setting for Anti-crease (♣) can either be switched off or a time between 1 and 12 hours can be selected.
	Process technologyAt the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.Changing this setting leads to increased energy consumption.The setting for Anti-crease (<) can either be switched off or a time between 1 and 12 hours can be selected.Factory default: 2 hours
	Process technology         At the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.         Changing this setting leads to increased energy consumption.         The setting for Anti-crease (♂) can either be switched off or a time between 1 and 12 hours can be selected.         Factory default: 2 hours         Changing this setting leads to increased energy consumption.         You can alter the drying levels for the Cottons, Minimum iron and
	Process technologyAt the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.Changing this setting leads to increased energy consumption.The setting for Anti-crease (ﷺ) can either be switched off or a time between 1 and 12 hours can be selected.Factory default: 2 hoursChanging this setting leads to increased energy consumption.You can alter the drying levels for the Cottons, Minimum iron and Automatic plus programmes.Drying levels Cottons, Minimum iron and Automatic plus can be set to
	Process technologyAt the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.Changing this setting leads to increased energy consumption.The setting for Anti-crease (A) can either be switched off or a time between 1 and 12 hours can be selected.Factory default: 2 hoursChanging this setting leads to increased energy consumption.You can alter the drying levels for the Cottons, Minimum iron and Automatic plus programmes.Drying levels Cottons, Minimum iron and Automatic plus can be set to one of 7 different levels.

Further cooling	If extended cooling is activated, the drum temperature is checked approx. 1 minute before the machine goes into standby mode at the end of the programme. If the temperature is above 55 °C, the dryer will carry out cooling until it is below 55 °C.
	Changing this setting leads to increased energy consumption.
	- Factory default: off
	- On
Cooling down temperature	The laundry will be cooled down automatically after the end of the programme. The automatic cooling phase can be set at a cooler level for all programmes. This means that the cooling phase is extended.
	Changing this setting leads to increased energy consumption.
	The setting can be changed from 40 °C–55 °C.
	Factory default: 55 °C
Fan pulsed opera- tion	The fan operates intermittently to release laundry that is stuck in front of the inner drum door. With heat-pump dryers, the fan func- tion operates intermittently to dry duvets.
	The fan is switched on and off at certain intervals.
	Service
	Service
Clean out the air- ways	The tumble dryer's electronic module calculates the degree to which fluff or detergent residues in the fluff filters and vent ducting are im- pairing performance. A message to check the contamination ap- pears. You can decide at what level of fluff this reminder should be

If the message appears on the display even though the fluff filter is clean, the vent ducting is regarded as borderline. Miele recommends improving the vent ducting. Poor vent ducting will result in longer programme running times and greater energy consumption.

This reminder, which you can configure, is displayed: Clean out the airways

- Off

emitted.

The reminder does not appear. However, if there is a very severe blockage in the ducting, the programme will be cancelled regardless of this option.

- Heavy The reminder only appears when there is a heavy build-up of fluff.
- Factory default: normal
- Light

The reminder appears when there is only a small build-up of fluff.

Clean the filters	The fluff filter in the air duct area must be cleaned on a regular basis. You can set an hourly interval for the reminder.
	The selected hourly interval depends on how much fluff tends to build up and how often you wish to clean the filter, e.g. for hygiene pur- poses.
	You can adjust this reminder: Clean the filters
	- Time interval of 5–55 hours
	- Factory default: after 55 hours
	- Off
Service interval	The tumble dryer shows a custom message at a selected interval to prompt you to undertake specific maintenance tasks.
	Three different messages can be created: 1/2/3. Each message is created in the language and alphabet of the current supervisor language.
	Your message is displayed at the end of the programme and can be acknowledged with $\rm OK$ . The same message appears at the end of the next programme.
	Settings
	This setting allows you to determine the interval (by hours or date) at which the message appears.
	- Factory default: Off
	<ul> <li>By time</li> <li>You can then select a time interval from 1–9999 hours.</li> </ul>
	- By date You can enter a date.
	Message text
	Enter your message for your planned maintenance work. You can edit one, two or all three of the 1/2/3 messages.
	Reset display
	The message appears until the display is permanently reset. The message then appears again once the next interval is reached.

	External applications
External exhaust	External hardware is connected via the Miele Connector Box.
flap	The time delay between the external exhaust air flap's activation point and the switch-on time for the drum/fan motor is regulated.
	A message appears in the display while the exhaust air flap is open.
	- Factory default: off
	This option must always be selected if there is no exhaust air flap to activate. This prevents the programme from being cancelled.
	- On (1 second to 5 minutes)
Additional fan	External hardware is connected via the Miele Connector Box.
	The additional fan is switched on by the dryer (via Connector Box) in parallel with the internal fan.
	- Off
	- On
Pressure sensor	External hardware is connected via the Miele Connector Box.
	When using a shared exhaust air duct, one tumble dryer may have to be switched off or suppressed from the outset if certain pressure levels have built up in the ducting. The external pressure sensor is only checked if the external exhaust air flap and/or the external addi- tional fan is set to "on".
	A message appears in the display while the exhaust air flap is open.
	- Off = Not active
	<ul> <li>NO contact = Active Responds to high potential</li> </ul>
	<ul> <li>NC contact = Active Responds to low potential</li> </ul>
Peak load signal	External hardware is connected via the Miele Connector Box.
	The peak-load negotiation function enables the tumble dryer to be connected to an energy management system. When a signal is re- gistered, the tumble dryer's heater is switched off for a short period or the machine is prevented from being switched on. A peak-load signal can be issued via the Connector Box or via the COM module.
	- Factory default: No function
	- Peak load with 230 V
	- Peak load with 0 V
	- COM module

Peak load preven- tionWith this function, the application of a hygiene programme is not amended when a peak load signal is in place. The heater stays switched on.
- Factory default: Off
- On
<b>COM module se-</b> <b>lection</b> This tumble dryer is equipped with an integrated WiFi module. Ho ever, the dryer can also be equipped with an external module.
- Factory default:
Off
<ul> <li>Internal mod. Domestic</li> <li>The internal WiFi module is used.</li> </ul>
<ul> <li>External mod. Professional</li> <li>An XKM module is inserted into the module slot.</li> </ul>
Availability of Miele digitalThe ability of Miele digital products depends on the availability of the services in your country.
products The different services are not available in all countries.
For information about availability, please visit www.miele.com.
WiFi / LAN         Control the networking of your tumble dryer.
Networking of the tumble dryer for use with the digital Professionation tools is only possible with the external module. The internal moducan only be used by the Miele Customer Service Department.
- Deactivate (visible when the network is activated) The network remains set up; the WiFi function is switched off.
<ul> <li>Activate (visible when the network is deactivated)</li> <li>The WiFi function is reactivated.</li> </ul>
<ul> <li>Connection status (visible when the network is activated)</li> <li>The following values are displayed:</li> </ul>
<ul> <li>the quality of WiFi reception</li> </ul>
<ul> <li>the network name</li> </ul>
- the IP address
<ul> <li>Set up again (visible when set up)</li> <li>Resets the WiFi login (network) to immediately re-establish a new connection.</li> </ul>
- Reset (visible when set up)
The network is no longer set up. A new connection has to be es lished in order to use the network again.
<ul> <li>The WiFi is switched off.</li> </ul>
<ul> <li>The WiFi connection will be reset to the factory default set</li> </ul>
<b>Network time</b> The date and time can be synchronised over the network.

	- Off
	The date and time are not synchronised over the network.
	- As master
	The machines are in a network but are not connected to the Inter- net. A machine is declared as the master and sends data to the <i>slave</i> devices.
	- As slave
	The machines are in a network and are connected to the Internet. All machines are configured as <i>slaves</i> . Data is synchronised over the Internet.
Remote	External programme selection is possible via an external terminal (programme may only be started on the machine). However, pro- grammes may also be selected and started on the machine.
	Factory default: on
Remote update	The RemoteUpdate function is used for updating the software in your tumble dryer.
	RemoteUpdate is activated by default.
	If you do not install a RemoteUpdate, you can continue to use your tumble dryer in the usual way. However, Miele recommends installing RemoteUpdates.
	Miele's RemoteUpdate function can only be used if the tumble dryer is connected to a WiFi/LAN network and you have an account in the Miele Professional app. The tumble dryer must be registered in the app.
	See the Miele Professional app for terms of use.
	If a RemoteUpdate is available for your washing machine, it will be displayed automatically when the Operator level is open.
	You can choose to start the RemoteUpdate immediately or wait until later. If you select "Start later", the prompt to run the RemoteUpdate will be displayed again the next time you switch on your washing ma- chine.
	The RemoteUpdate can take a few minutes.
	Please note the following information about the RemoteUpdate func- tion:
	- You will only receive a message when a RemoteUpdate is available.
	- Once a RemoteUpdate has been installed, it cannot be undone.
	- Do not switch off the tumble dryer during a RemoteUpdate. Other- wise, the RemoteUpdate will be aborted and will not be installed.

# SmartGridThe SmartGrid setting is only visible if a WiFi network has been set<br/>up and activated. This function can be used for starting your<br/>Miele Professional machine automatically at a time when your en-<br/>ergy supplier's electricity tariffs are most economical.Activating SmartGrid gives the Timer sensor control a new function.

Activating SmartGrid gives the Timer sensor control a new function. Use the Timer sensor control to set SmartStart. The tumble dryer will then start within the timeframe specified when it receives a signal from the energy supplier. If it has not received a signal from the energy supplier by the latest start time set, the tumble dryer will start automatically.

Factory default: off

Legal information	
Open source li-	You can view information here.
cences Copyright and li- cences	For the purpose of operating and controlling the machine, Miele uses proprietary or third-party software that is not covered by open source licensing conditions. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.
	Furthermore, this machine contains software components which are distributed under open source licensing conditions. You can access these open source components along with the corresponding copy- right notices, copies of the licensing conditions valid at the time and any further information. This information can be found under the menu option Settings/ Machine parameters/Legal information/Open source licences. The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.
	Payment system
	The Miele Connector Box accessory unit or the COM module is re- quired to connect a payment device.
Setting for pay- ment systems	If you wish to change the settings after the commissioning process, please contact Miele Service.
	- No payment system
	The next settings are skipped.
	- Programme control
	The machine is operated using a coin box. The user purchases a programme.
	- Timed operation
	The tumble dryer is coin-operated using a time meter. The user pur- chases a time-controlled programme.
	- Timed op. + impul.counter
	For payment devices where the usage time is increased each time a coin is inserted.
	- COM module
	Operation is IP-based.

## Machine parameters

## PDW 909 machine data

#### **Electrical connection**

Supply voltage	See data plate
Frequency	See data plate
Power rating	See data plate
Current consumption	See data plate
Fuse rating	See data plate
Heater rating	See data plate

#### Installation dimensions

Casing width (without add-on components)	692 mm
Casing width (without add-on components)	092 11111
Casing height (without add-on components)	1940 mm
Casing depth (without add-on components)	761 mm
Overall machine width	692 mm
Overall machine height	1942 mm
Overall machine depth	851 mm
Minimum width of transport opening	800 mm
Minimum safety distance between wall and back of machine	400 mm
Diameter of door opening	370 mm
Door opening angle	180°

#### Weight and floor load

Net weight	see installation plan
Max. floor load in operation	see installation plan

#### Plumbing

#### Cold water connection

Required flow pressure	100 - 1000 kPa (1 - 10 bar)
Maximum flow rate	10 l/min
Threaded union required (male thread, to be provided by customer in accordance with DIN 44991, flat sealing)	3/4"
Length of water inlet hose included in scope of supply	1550 mm

#### Hot water connection

Maximum permissible hot water temperature	70 °C
Required flow pressure	100 - 1000 kPa (1 - 10 bar)
Maximum flow rate	10 l/min
Threaded union required (male thread, in accordance with DIN 44991, flat sealing)	3/4 "
Length of water inlet hose supplied	1550 mm

#### Drainage (DP)

Maximum waste water temperature	95 °C
Drain connection (on machine)	External diameter 22 (DN 22)
Maximum drainage rate	26 l/min

## **Technical data**

#### Air intake

Recommended free air intake cross-section into the room: (equivalent to 3 times the exhaust air cross-section of an appliance).	237 cm <sup>2</sup>

There must be sufficient air intake to the installation site to match the air outlet volume.

#### Vented system

Maximum nominal volume flow rate	320 m³/h
Maximum permitted pressure loss	220 Pa
Connector on machine side (external diameter)	100 mm
Connection pipe provided on site (internal diameter)	100 mm
Maximum exhaust air temperature	3° 08

As relative humidity inside the exhaust ducting can be as high as 100 %, suitable measures must be taken to prevent a backflow of condensate into the appliance.

#### **Emission values**

Emission sound pressure level in workplace in accordance with EN ISO	11204/11203 < 70 dB(A) re 20 μPa
Sound power level, EN ISO 9614-2	< 80 dB(A)
Product safety	
	EN 60335-1, EN 50571, IEC 60335-1, IEC 60335-2-7,

Product safety standard

EN 50570, IEC 60335-2-11

#### WiFi

Frequency range of the WiFi module

Maximum transmission power of the WiFi module

2.400–2.4835 GHz

< 100 mW

#### **UK declaration of conformity**

UKCA mark (UK only)

The Supply of Machinery (Safety) Regulations 2008

### EU declaration of conformity

Miele hereby declares that this washer-dryer stack complies with Directive 2014/53/EU. The complete text of the EU declaration of conformity is available from one of the following Internet addresses:

- Under "Products", "Download" at www.miele.de/professional/index.htm
- Or go to http://www.miele.de/professional/gebrauchsanweisungen-177.htm and enter the name of the product or the serial number

#### Data protection and data security

When you activate the networking function and connect your machine to the Internet, your machine sends the following data to the Miele Cloud:

- Machine serial number
- Machine model and technical features
- Machine status
- Information about the software status of your machine

Initially, this data cannot be assigned to a specific user and is not saved permanently. Data cannot be saved permanently or assigned to a specific user until after you have linked your machine to a user. Data transmission and processing are governed by Miele's strict security standards.

#### Factory default settings for network configuration

You can reset all of the settings on the communication module or your integrated WiFi module to the factory default settings. The network configuration should be reset whenever a machine is being disposed of or sold, or if a used machine is being put into operation. This is the only way to ensure that all personal data has been removed and the previous owner will no longer be able to access the machine.

#### **Copyright and licences**

For the purpose of operating and controlling the communication module, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

Furthermore, this communication module contains software components which are distributed under open source licensing terms. The open source components contained in the machine along with the corresponding copyright notices, copies of the licensing terms valid at the time and any further information can be accessed locally by IP using a web browser (*https://<IP address>/Licenses*). The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.



#### **International Service Contacts**

America: +1 866 694 5849 Australia, Asia, Oceania: +61 3 9764 7880 Europe, Africa, Middle East: +49 5241 89 66 877 **E-mail: service@miele-marine.com** 

## www.miele.com/marine-service

Manufacturer: Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Alteration rights reserved / Publication date: 2023-08-01