 





⚠ It is a mandatory requirement to read the operating instructions and pay particular attention to the warnings and safety instructions.

Touch display and sensor controls

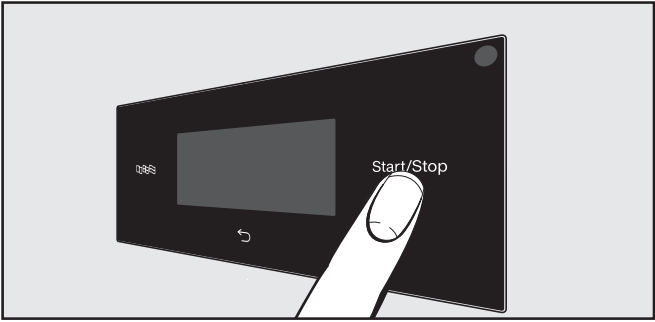


 - To switch on press the ⏻ button. The 🏠, ↶ and *Start/Stop* sensor controls and the sensor controls in the display react to finger tip contact.

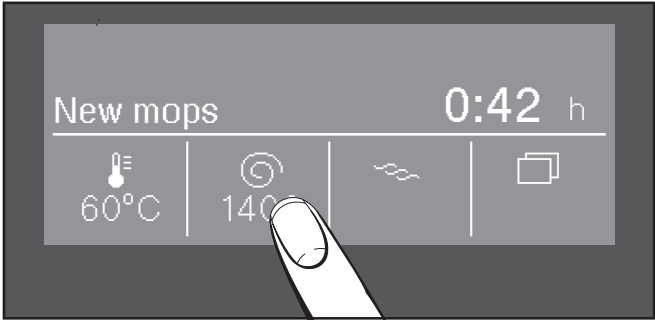

You can change or activate the temperature, spin speed or Extras by touching the 🌡, 🌀 and 🌊 sensor controls.

1 Selecting the language

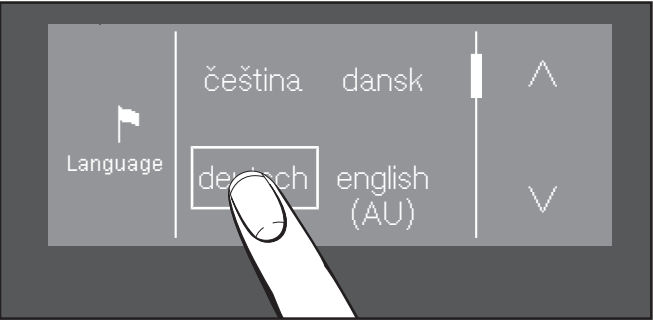

- Touch the 🏠 sensor control.
- Touch the ^ or v sensor control until the language you want appears in the display.
- Select the language.

 
Mops

2 Loading the washing machine




- Always shake mops out thoroughly before washing them.
- Open the door and load the mops.
- Shut the door with a gentle swing. Do not trap mops in the door.

3 Adding detergent

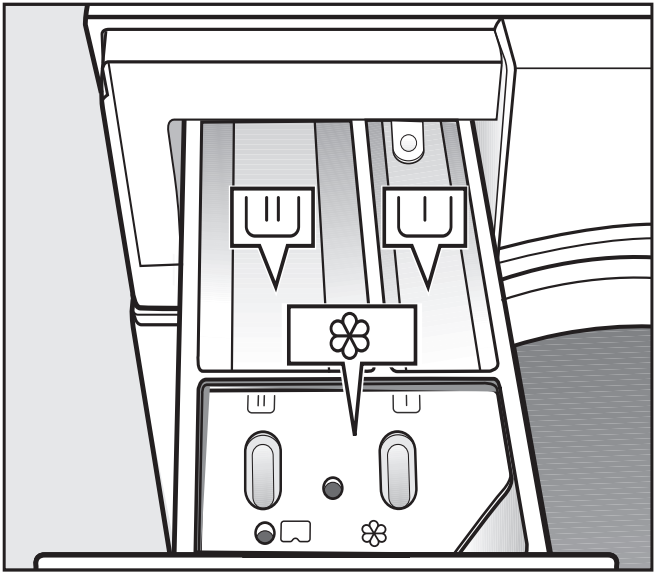

- 🧴 Detergent.
 - 🌸 Pre-treating agent.
- For disinfection programmes, the 🧴 and 🧴 compartments can be filled with detergent.

 
4 Selecting and starting the programme

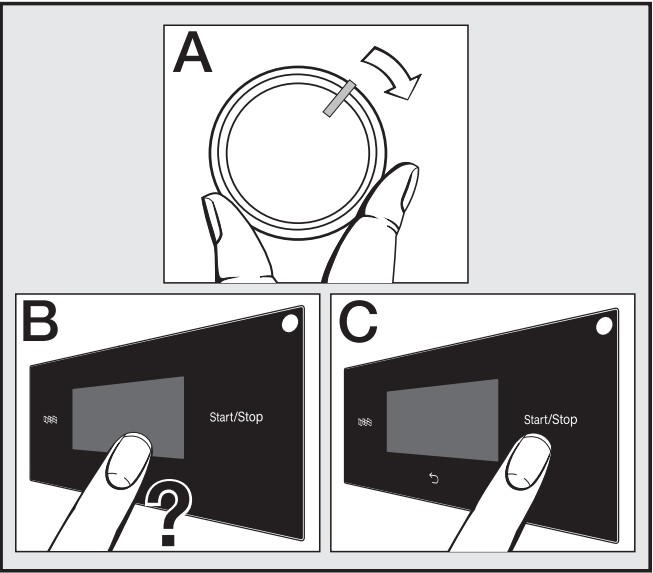

- Select a programme (A).
- Select the spin speed and Extras (B).
- Touch the *Start/Stop* sensor control (C).


Cleaning cloths

 2 Loading the washing machine

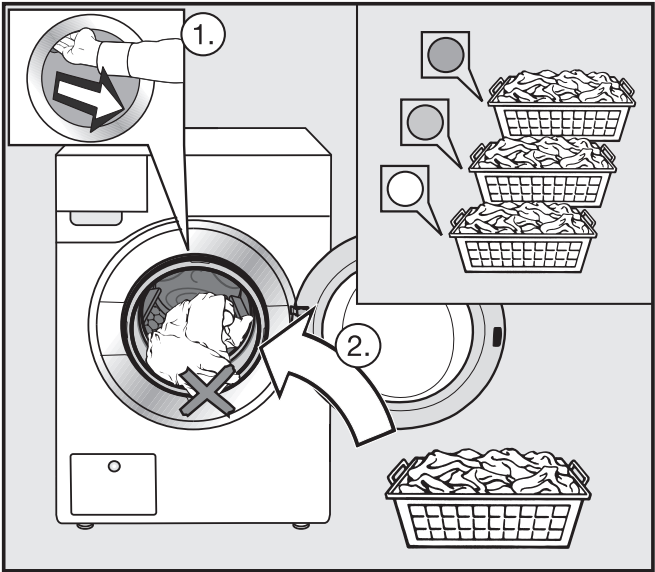


- Sort laundry by colour.
- Open the door and load the cloths.
- Shut the door with a gentle swing. Do not trap cloths in the door.

 3 Adding detergent

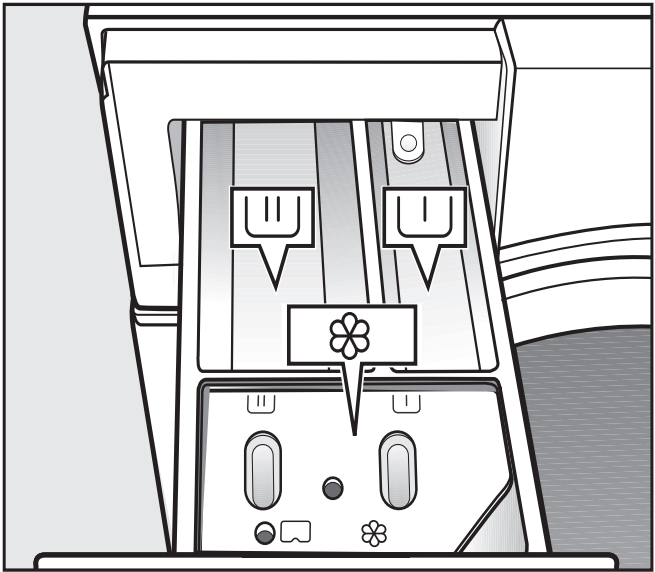

- 🧴 Detergent for the pre-wash, if selected.
- 🧴 Detergent for the main wash.
- 🌸 Pre-treating agent.

 4 Selecting and starting the programme

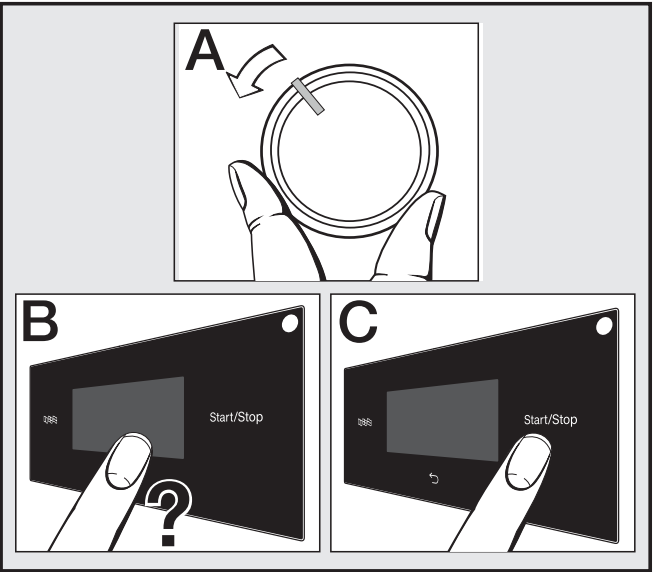

- Select a programme (A).
- Select the spin speed and Extras (B).
- Touch the *Start/Stop* sensor control (C).



Mop programmes		Load
 Mops 60 °C / ⁺ Mops plus 40 °C to 90 °C		max. 6.0 kg
Items	Cotton, mixed fibre or microfibre mops.	
Tip	– Use specialist detergents.	
 Mops – thermal disinfection		max. 6.0 kg
Items	Cotton, mixed fibre or microfibre mops.	
Tip	– Use powder detergent containing a bleaching agent.	
 Mops – chemo-thermal disinfection		max. 6.0 kg
Items	Cotton, mixed fibre or microfibre mops.	
Tip	– Use specialist detergents. Observe the country-specific guidelines for disinfection.	
Cleaning cloth programmes		
 Cleaning cloths 60 °C / ⁺ Cleaning cloths plus 40 °C to 90 °C		max. 3.0 kg
Items	Cotton, mixed fibre or microfibre cloths.	
Tip	– Use specialist detergents.	
 Thermal disinfection 85 °C/15 min		max. 3.0 kg
Items	Cotton, mixed fibre or microfibre cloths.	
Tip	– Use specialist detergents.	
 Chemo-thermal disinfection		max. 3.0 kg
Items	Cotton, mixed fibre or microfibre cloths.	
Tip	– Use specialist detergents.	
Further programmes		
 Pads 40 °C		max. 1.0 kg
Items	Microfibre polishing pads and buffers.	
Tip	– Use specialist detergents.	
Cottons PRO 60 °C		max. 6.0 kg
Items	Mixed fibre textiles (50 % cotton and 50 % polyester).	
Tip	– Extra energy-efficient wash programme for commercial cotton or cotton/synthetic blend textiles with normal levels of soiling, e.g. workwear.	
New mops 60 °C to 90 °C		max. 6.0 kg
Items	Cotton, mixed fibre or microfibre mops.	
Tip	– For washing new mops before first use. Do not use fabric conditioner.	
Curtains cold to 40 °C		max. 2.0 kg
Items	Curtains specified as machine-washable by the manufacturer.	
Tip	– For curtains which crease easily, deselect the spin.	
Clean machine 70 °C		No load
Items	For cleaning the suds container and the drainage system. Add universal detergent to the  compartment.	

The list represents only a selection of possible programmes. Further programmes are described in the operating instructions.

