

**Miele**



# Operating and installation instructions Commercial tumble dryers PDR 914/918/922/928/944

---

To avoid the risk of accidents or damage to the machine, it is **essential** to read these instructions before it is installed and used for the first time.

en-GB

M.-Nr. 11 840 480

## Caring for the environment

---


### Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

### Disposing of your old machine

Old electrical and electronic appliances often contain valuable materials. However, they also contain harmful substances which were essential for their correct functioning and safety. These could be hazardous to human health and to the environment if disposed of with household waste or if handled incorrectly. Please do not, therefore, dispose of your old machine with household waste.

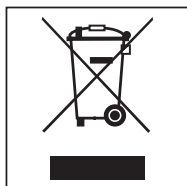

Please dispose of it at your local community waste collection/recycling centre for electrical and electronic appliances. Consult your dealer if necessary.

Please ensure that your old machine poses no risk to children while being stored for disposal.

|   |           |
|---|-----------|
| <b>Caring for the environment</b> .....                     | <b>2</b>  |
| <b>Warning and Safety instructions</b> .....                | <b>6</b>  |
| Appropriate use .....                                       | 6         |
| Foreseeable misuse .....                                    | 7         |
| Technical safety .....                                      | 7         |
| Gas-heated tumble dryers .....                              | 9         |
| Correct use .....   | 9         |
| Accessories .....   | 10        |
| <b>Description of the machine</b> .....                     | <b>11</b> |
| <b>Operating the tumble dryer</b> .....                     | <b>12</b> |
| Control panel.....  | 12        |
| Sensor controls and touch display with sensor controls..... | 13        |
| Main menu .....   | 13        |
| “☐ Programmes” menu.....                                    | 13        |
| “☆ Favourites” menu.....                                    | 13        |
| “⚙ Supervisor” menu .....                                   | 13        |
| Operating examples .....                                    | 13        |
| Selection lists.....  | 13        |
| Setting numerical values .....                              | 14        |
| Pull-down menu.....   | 15        |
| Exiting the menu .....                                      | 15        |
| Help display.....   | 15        |
| <b>Initial commissioning</b> .....                          | <b>16</b> |
| Switching on the tumble dryer .....                         | 16        |
| Reference to optional external devices .....                | 16        |
| Setting the display brightness.....                         | 17        |
| Setting the date .....                                      | 17        |
| Selecting programme packages .....                          | 17        |
| Completing the initial commissioning process .....          | 18        |
| <b>Drying</b> .....   | <b>20</b> |
| 1. Notes on correct laundry care .....                      | 20        |
| Washing before drying .....                                 | 20        |
| Removing foreign objects.....                               | 20        |
| Care symbols.....   | 20        |
| 2. Loading the tumble dryer.....                            | 21        |
| 3. Selecting a programme .....                              | 21        |
| Switching on the tumble dryer .....                         | 21        |
| 4. Selecting programme settings.....                        | 22        |
| Select the drying level.....                                | 22        |
| Selecting extra options .....                               | 22        |
| 5. Starting a programme .....                               | 24        |
| Payment device (optional).....                              | 24        |
| Calling up current programme parameters .....               | 24        |
| Programme running time/Time left estimation .....           | 24        |
| End of the programme .....                                  | 25        |
| End of programme .....                                      | 25        |
| Removing the laundry .....                                  | 25        |
| Care notes .....  | 25        |

# Contents


---

|  |           |
|--|-----------|
| Timer .....                                    | 25        |
| Prerequisite for setting the timer .....       | 25        |
| Setting the timer.....                         | 25        |
| <b>Changing the programme sequence.....</b>    | <b>26</b> |
| Changing a programme once it has started ..... | 26        |
| Cancelling the current programme .....         | 26        |
| Reselecting a cancelled programme.....         | 26        |
| Time left.....                                 | 26        |
| <b>Supervisor level.....</b>                   | <b>27</b> |
| Opening the Supervisor level.....              | 27        |
| Access via code .....                          | 27        |
| Change code .....                              | 27        |
| Closing the settings menu .....                | 27        |
| Controls / Display.....                        | 27        |
| Language.....                                  | 27        |
| Language entry.....                            | 27        |
| Set languages.....                             | 28        |
| Display brightness .....                       | 28        |
| Clock display .....                            | 28        |
| Date .....                                     | 28        |
| Volume .....                                   | 28        |
| Res. moisture display.....                     | 29        |
| Visibility parameters.....                     | 29        |
| Display off status.....                        | 29        |
| Machine off status.....                        | 30        |
| Delay start .....                              | 30        |
| Memory.....                                    | 30        |
| Temperature unit.....                          | 30        |
| Weight unit .....                              | 30        |
| Change code .....                              | 30        |
| Programme selection.....                       | 30        |
| Controls.....                                  | 30        |
| Programme packages.....                        | 31        |
| Favourite programmes .....                     | 32        |
| Special programmes .....                       | 32        |
| Sort programmes.....                           | 33        |
| Prog. colour allocation .....                  | 34        |
| Process technology.....                        | 34        |
| Anti-crease .....                              | 34        |
| Drying levels .....                            | 34        |
| Further cooling .....                          | 34        |
| Cooling down temperature.....                  | 34        |
| Service .....                                  | 35        |
| Clean out the airways .....                    | 35        |
| Clean the filters.....                         | 35        |
| Service interval.....                          | 35        |

|  |           |
|--|-----------|
| External applications.....                                     | 36        |
| External exhaust flap .....                                    | 36        |
| Additional fan .....   | 36        |
| Pressure sensor .....  | 36        |
| Peak load signal .....   | 36        |
| Peak load prevention.....                                      | 37        |
| COM module selection .....                                     | 37        |
| Availability of Miele digital products .....                   | 37        |
| WiFi / LAN .....   | 37        |
| Remote.....  | 38        |
| Remote update .....  | 38        |
| Machine parameters.....  | 38        |
| Legal information .....  | 38        |
| Payment system.....  | 39        |
| Setting for payment systems .....                              | 39        |
| <b>Connectivity .....</b>                                      | <b>40</b> |
| Pairing instructions .....                                     | 40        |
| Opening the supervisor level .....                             | 40        |
| Establishing the network connection via WPS .....              | 40        |
| Establishing the network connection via soft AP .....          | 40        |
| Establishing the network connection using a LAN cable.....     | 40        |
| Technical data .....   | 41        |
| <b>Problem solving guide.....</b>                              | <b>42</b> |
| Fault diagnosis .....  | 42        |
| <b>Cleaning and maintenance .....</b>                          | <b>44</b> |
| Cleaning the fluff filter .....                                | 44        |
| Additional annual cleaning .....                               | 45        |
| <b>Customer Service Department.....</b>                        | <b>46</b> |
| Contact in case of malfunction .....                           | 46        |
| Optional accessories .....                                     | 46        |
| <b>Installation.....</b>                                       | <b>47</b> |
| Installation requirements .....                                | 47        |
| General operating conditions .....                             | 47        |
| Transport.....   | 47        |
| Installing the tumble dryer .....                              | 48        |
| Securing the machine .....                                     | 49        |
| Electrical connection .....                                    | 49        |
| Air intake/exhaust air .....                                   | 51        |
| Steam connection (only for steam-heated variants).....         | 51        |
| Hot water connection (only for hot water-heated variants)..... | 51        |
| Gas connection (only for gas-heated variants) .....            | 51        |
| <b>Optional accessories.....</b>                               | <b>52</b> |
| Communication box.....   | 52        |
| XKM 3200 WL PLT.....   | 52        |
| Payment systems .....  | 53        |
| Original spare parts and accessories .....                     | 53        |
| <b>Technical data .....</b>                                    | <b>54</b> |
| EU declaration of conformity.....                              | 54        |
| UK declaration of conformity.....                              | 54        |

## Warning and Safety instructions

---

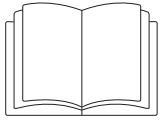

- ▶ It is essential to read these instructions.

This tumble dryer complies with all current local and national safety requirements. However, inappropriate use can lead to personal injury and damage to property.

Read the operating instructions carefully before using the tumble dryer. They contain important information on safety, installation, use and maintenance. This prevents both personal injury and damage to the tumble dryer.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the tumble dryer as well as the safety instructions and warnings.

Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these operating instructions in a safe place and pass them on to any future owner.

When instructing other people how to use the tumble dryer, they must be made aware of these safety and warning instructions.

### Appropriate use

- ▶ The tumble dryer is intended for installation in a commercial environment.
- ▶ This tumble dryer is only intended for drying fabrics which have been washed in a water solution, and marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging. Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.
- ▶ The tumble dryer is not intended for outdoor use.
- ▶ Do not install the tumble dryer in a room where there is a risk of frost. At temperatures around freezing point, the tumble dryer may not be able to operate properly. The permitted room temperature is between 2 °C and 40 °C.
- ▶ If the machine is used in a commercial environment it may only be operated by instructed/trained personnel. If the machine is used in a publicly accessible area, the supervisor must ensure that it can be operated safely without risk of danger.
- ▶ This appliance can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and understand and recognise the consequences of incorrect operation.
- ▶ Children under 8 years of age must be kept away from the tumble dryer unless they are constantly supervised.
- ▶ Children 8 years and older may only use the tumble dryer unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean or maintain the tumble dryer unsupervised.
- ▶ Please supervise children in the vicinity of the tumble dryer and do not let them play with it.
- ▶ This tumble dryer may also be operated in public areas.
- ▶ Any uses other than those listed above are prohibited. The manufacturer accepts no liability in such cases.

## Foreseeable misuse

- ▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.
- ▶ Do not lean on the tumble-dryer door. Otherwise, the tumble dryer may tip over, causing injury to yourself or others.
- ▶ Do not use a pressure washer or water jet to clean the tumble dryer.
- ▶ To ensure the correct performance of the tumble dryer and to prevent the risk of faults and fire, it is important to carry out maintenance on a regular basis.
- ▶ Benzine, petrol, paraffin, or any easily flammable liquid must not be stored or used near the machine. Danger of explosion.
- ▶ Do not expose the dryer to air which is contaminated with vapour of chlorine, fluorine or other solvents. Danger of fire.
- ▶ To prevent the risk of fire, the following items must not be dried in this tumble dryer:
  - Items which have not been washed.
  - Items which have not been thoroughly cleaned and are still soiled with grease, oil or other deposits (such as kitchen linens or cosmetics cloths with cooking oils, grease, lotions, etc). If items have not been thoroughly cleaned, there is a danger that they might ignite when heated, even after they have been removed from the tumble dryer at the end of the programme.
  - Items (e.g. mops and floor cloths) that have been treated with inflammable cleaning agents or which contain residues of acetone, alcohol, benzene, petrol, kerosene, stain remover, turpentine, wax and wax remover or other chemicals.
  - Items which have been splashed with hair lacquer, hair spray, nail varnish remover or similar substances.

Wash heavily soiled items thoroughly by increasing the amount of detergent and selecting a high washing temperature. If in doubt, wash the items several times.

- ▶ In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase is complete. Ensure that you always wait until the end of the programme before removing the laundry.
- ▶ Never operate the tumble dryer without the fluff filter or with a damaged fluff filter. This could lead to malfunctions. Fluff can clog the air channels, heating elements and vent ducting, which could result in a fire. In this case, stop the tumble dryer immediately and replace the damaged fluff filter.

## Technical safety

- ▶ Before setting up the tumble dryer, check it for any externally visible damage. Do not install or use a damaged tumble dryer.
- ▶ Do not connect the tumble dryer to the power supply by an extension lead (fire hazard due to overheating).
- ▶ Fire hazard due to controllable socket. This tumble dryer must not be connected to a controllable socket (e.g. a timer). There is a risk of the laundry self-igniting if the tumble dryer's cooling phase is interrupted.
- ▶ The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is observed and regularly tested. If in any doubt, please have the electrical installation inspected by a specialist. Miele cannot be held liable for the consequences of an inadequate earthing system.

## Warning and Safety instructions

---

- ▶ Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele authorised technician, otherwise any subsequent damage will not be covered by the warranty.
- ▶ Faulty components may only be replaced by genuine Miele spare parts. Miele can only guarantee the safety standards of the appliance when Miele replacement parts are used.
- ▶ In the event of a fault and for cleaning and maintenance purposes, the tumble dryer must be disconnected from the power supply. The tumble dryer is only disconnected from the power supply, if:
  - It is switched off at the wall socket or the plug is withdrawn.
  - The mains fuse is disconnected.
  - The mains fuses have been completely removed.
- ▶ The tumble dryer must not be used in non-stationary installation sites (e.g. on a ship).
- ▶ Follow the instructions in “Installation” and “Technical data”.
- ▶ The tumble dryer may only be operated when the ducting has been installed and the room is sufficiently ventilated.
- ▶ The vent ducting must never be installed in any of the following flues or shafts:
  - Chimneys or smokestacks that are in use.
  - Shafts that are used to ventilate installation rooms with fireplaces.
  - Flues that are used by third parties.

Smoke or exhaust gas that is fed back into the flue or shaft may be toxic.

▶ Regularly check all components in the vent ducting (e.g. wall pipe, external grille, bends, elbows, etc.) to make sure air can move through them and to ensure that they are working properly. Clean components when necessary. Fluff deposits in the vent ducting system will prevent the air from being extracted properly and, as a result, will stop the tumble dryer from working properly.

If existing vent ducting is due to be used, it must be checked before being connected to the tumble dryer.

Low pressure must not occur in the vent ducting.

▶ There is a risk of suffocation and poisoning due to exhaust gases being sucked back if gas-powered flow heaters, gas-powered room heaters, coal-burning stoves with a flue connection, etc., are installed in the same room, in the same flat or in neighbouring rooms and the negative pressure is 4 Pa or more.

The following measures for suitable room ventilation (examples) can help to prevent negative pressure in the installation area:

- Install suitably sized vents that cannot be closed in the exterior walls.

Please always seek approval from your building regulations inspector to confirm that the appliance can be operated without risk and that negative pressure of over 4 Pa can be prevented.

▶ If multiple tumble dryers are to be connected to one vent ducting, a non-return flap must be installed directly on the duct for each tumble dryer.

If this requirement is not observed, the tumble dryers may be damaged and their electrical safety could be affected.

▶ The plug must be easily accessible so that the tumble dryer can be disconnected from the power supply at any time. The operator must be able to check from any access point that the plug is still removed.

▶ If the appliance is hard wired, adequate provision must be made on site to switch off all poles to disconnect the tumble dryer from the power supply.

▶ Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet etc.



## Warning and Safety instructions

- ▶ Ensure that no closeable door, sliding door or an oppositely hinged door is installed that would hinder the drum door being opened in any way.
- ▶ If the mains connection cable is faulty it must always be replaced by a Miele authorised technician to protect the user from danger.

### Gas-heated tumble dryers

- ▶ In the event of a fault or when carrying out cleaning and maintenance, the on-site manual gas shut-off valve and the shut-off device on the gas meter must be closed.
- ▶ Before completing commissioning, maintenance, conversion and repair work, all gas-conducting components – from the manual shut-off valve to the burner jet – must be checked for leaks. Particular attention must be paid to the measurement connections on the gas valve and on the burner. Checks must be performed when the burner is both switched on and switched off.
- ▶ It is recommended that the product and its installation is annually inspected and tested by a suitably qualified technician in conjunction with local and national regulations.

Take these safety precautions if you smell gas

- Extinguish all flames immediately.
- Close the on-site gas shut-off device, the gas shut-off device on the gas meter or the main gas shut-off device immediately.
- Open all windows and doors immediately.
- Do not light any naked flames (e.g. matches or lighters).
- Do not smoke.
- If there is the smell of gas in a room, never enter the room with a naked flame.
- Do not carry out any actions that will create electrical sparks (such as pulling out electrical plugs or pressing electrical switches or bells).
- If you cannot find the cause of the gas smell and all gas valves have been shut off, please call the gas supply company immediately.

If other persons are being shown how to operate the appliance, they must be given and/or made aware of these important safety precautions.

### Correct use

- ▶ Always close the drum door after each drying cycle. This will prevent:
  - Children climbing into the tumble dryer or hiding things in it.
  - Pets or other small animals climbing into the tumble dryer.
- ▶ Keep the room where the tumble dryer is located free from dust and fluff. If the air that is taken into the machine contains dirt particles, this can cause blockages. A fault may then occur and there is a risk of fire.
- ▶ Never operate the tumble dryer without the fluff filter or with a damaged fluff filter. This could lead to malfunctions. Fluff can clog the air channels, heating elements and vent ducting, which could result in a fire. In this case, stop the tumble dryer immediately and replace the damaged fluff filter.
- ▶ The fluff filter must be cleaned on a regular basis.
- ▶ To ensure problem-free operation of the tumble dryer:
  - Clean the surface of the fluff filter after each drying cycle.
  - In addition, the fluff filter and the air passages must be cleaned when prompted by the display.
- ▶ Remove all items from the pockets of the laundry to be dried (e.g. lighters, matches, keys).

## Warning and Safety instructions

---

▶ The programme ends when the cooling phase starts. Many programmes are followed by the cooling phase to ensure that the items of laundry are kept at a temperature that will not cause them damage (for instance to prevent the risk of the laundry self-igniting). Always remove all items of laundry from the tumble dryer immediately after the cooling phase.

▶ Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

▶ For tumble dryers with stainless steel surfaces:


The stainless steel surfaces must not come into contact with liquid cleaning and disinfecting agents which contain chlorine or sodium hypochlorite. These agents can have a corrosive effect on stainless steel.

Aggressive vapours containing chlorine can also be corrosive.


Do not store containers of these agents near the tumble dryer.

### Accessories

▶ Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, warranty, performance and product liability claims will be invalidated.

 Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.


## Description of the machine

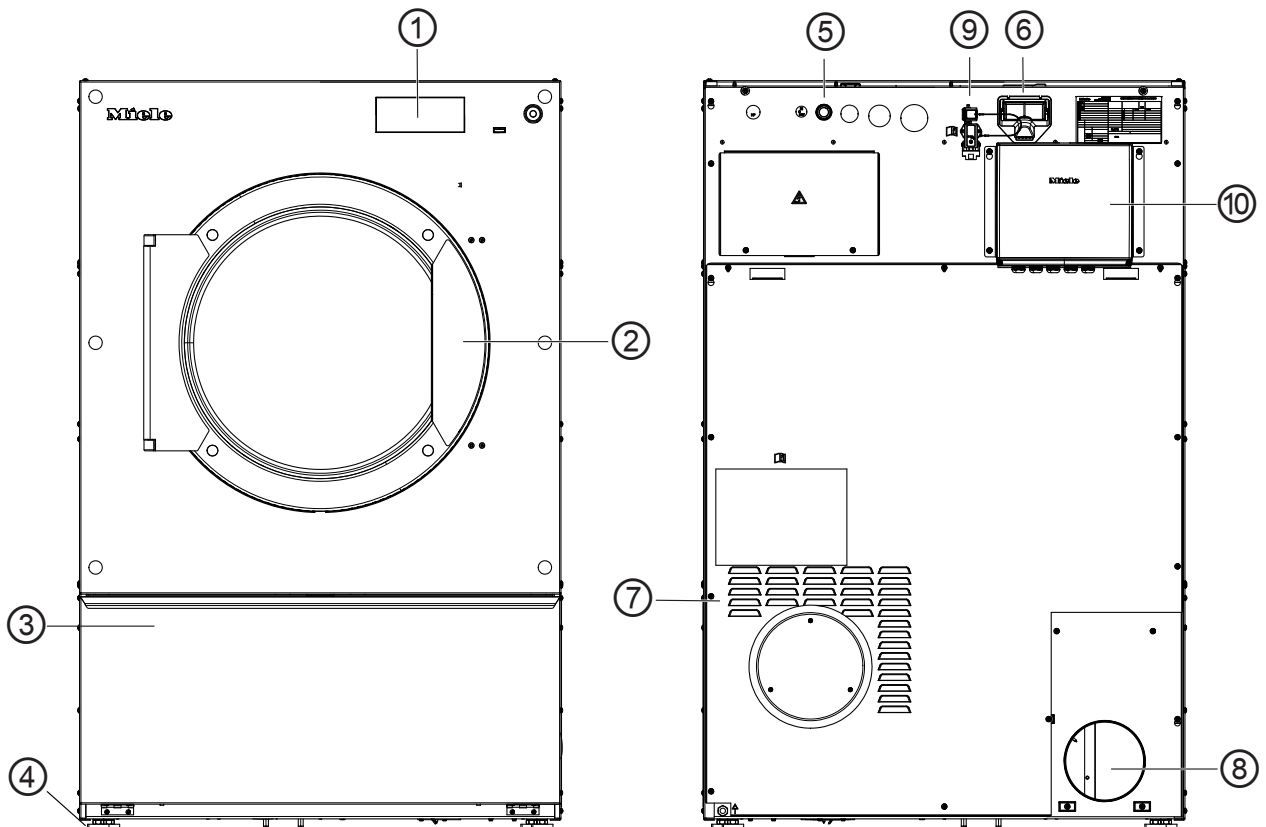

- ① Control panel with touch display
- ② Door
- ③ Fluff filter flap
- ④ 4 height-adjustable screw feet
- ⑤ Electrical connection
- ⑥ Communication module slot
- ⑦ Intake vents for drying air
- ⑧ Exhaust duct
- ⑨ Connection for communication box
- ⑩ Communication box (optional)  
For setting up a connection with external systems

# Operating the tumble dryer

## Control panel

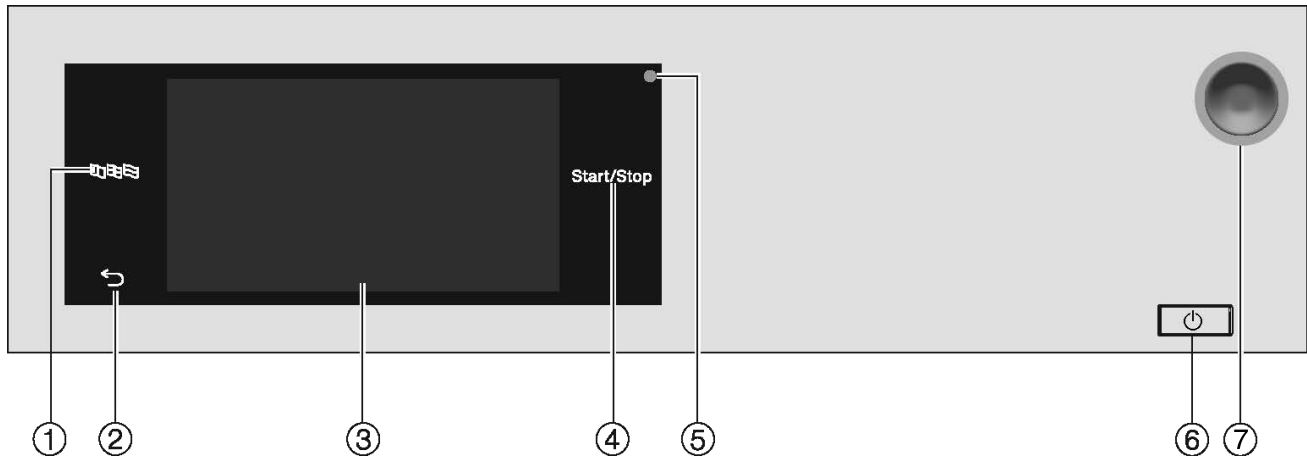

① **sensor control**

For selecting the current user language

At the end of the programme, the language is automatically reset to the language set at the supervisor level.

② **sensor control**

Takes you back one level in the menu.

③ **Touch display**

④ **Start/Stop sensor control**

For starting the selected drying programme and cancelling a programme once it has started. The programme selected can be started as soon as the sensor control starts flashing.

⑤ **Optical interface**

For the Customer Service Department



⑥ **button**

For switching the tumble dryer on and off. Depending on the programming at supervisor level, the tumble dryer switches off automatically to save energy. It is switched off an adjustable time after the end of the programme/Anti-crease phase, or after being switched on if no further selection is made.

⑦ **Emergency off switch**

It should only be activated in the event of danger or in order to prevent danger. When this switch is activated, the machine is immediately switched off and put in a safe condition. Once the danger has been averted, the switch can be unlocked again by turning the knurled dial to the right.


## Sensor controls and touch display with sensor controls


The sensor controls , , and *Start/Stop* and the sensor controls in the display respond to finger tip contact. Every touch of a sensor control is confirmed with an audible keypad tone. You can adjust the volume of the keypad tone or switch it off (see “Supervisor level”).

The control field with sensor controls and the touch display can be scratched by pointed or sharp objects, e.g. pens.  
Only touch the control field with your fingers.

## Main menu

After switching on the tumble dryer, the main menu will appear in the display. You can access all the important submenus from the main menu.

Touch the sensor control  at any time to return to the main menu. Values set previously are not saved.

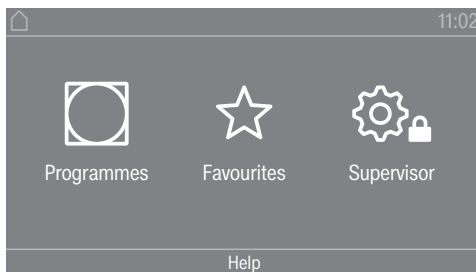

Main menu

### “ Programmes” menu

In this menu, you can select the drying programmes.

### “ Favourites” menu

In this menu, you can select 1 favourite programme from a total of 12 favourite programmes. The drying programmes can be set up and saved by the supervisor in the Favourites menu (see “Favourite programmes” under “Supervisor level”).


### “ Supervisor” menu

You can alter the tumble dryer’s electronic module to suit changing requirements in the supervisor level (see “Supervisor level”).

## Operating examples

### Selection lists

Scrolling through the “ Programmes” menu (single selection)

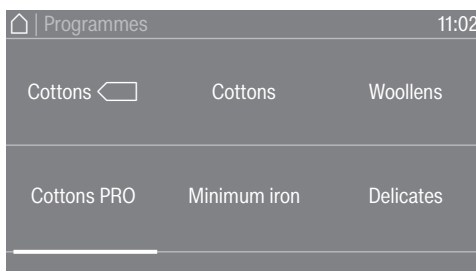


- To scroll through the menu, place your finger on the touch display and move it left or right.

# Operating the tumble dryer

The orange scroll bar in the bottom display area shows that there are further options to choose from.

- To select the required drying programme, touch the programme name with your finger. The display will now change to the standard menu for that programme.


“Extras” menu (multiple selection)

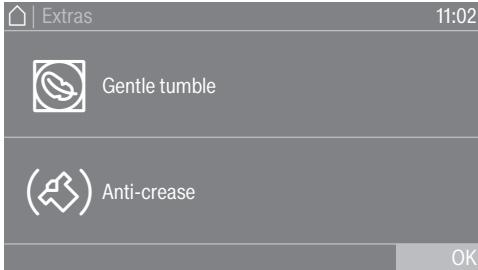

To select one or more *Extras*, touch the required *Extras* with your finger. Currently selected *Extras* are marked orange. To deselect an *Extra* simply touch the *Extra* again.


## Setting numerical values

You can set numerical values in some menus. You can set the numerical values by swiping your finger up and down on the display.

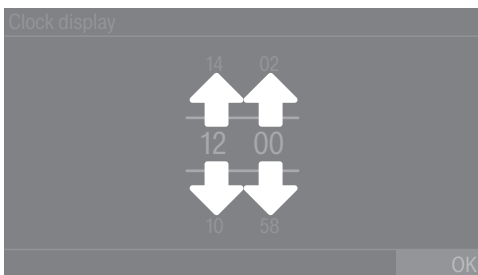


- Place your finger on the number that you want to change.
- To set the required number, swipe your finger up or down on the display.
- Confirm the set numerical value by touching the OK sensor control.

**Tip:** For some settings, depending on the value range and increments, the value can also be set using a numerical keypad. Briefly touching the numbers will bring up the numerical keypad. Once a valid number has been entered, the OK sensor control will be highlighted green.

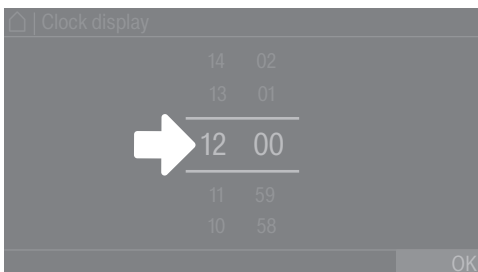


- Briefly touch a number between the two lines with your finger. The numeric block will appear.

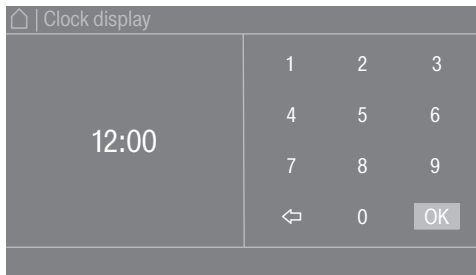

- To enter the numerical value, touch the numbers on the right-hand side and then confirm with OK.

## Pull-down menu

The pull-down menu can be used to display information (e.g. about a drying programme).

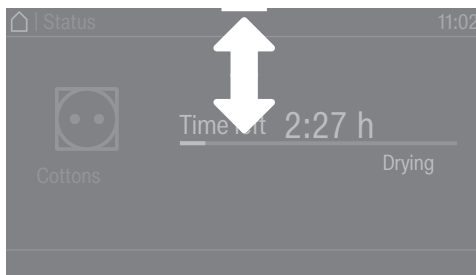

If an orange bar appears at the top of the screen in the middle of the display, you can open the pull-down menu. Touch the bar and drag it down with your finger on the display.

To close the pull-down menu again, touch the orange bar and drag it up with your finger on the display.


## Exiting the menu


- Touch the  sensor control to return to the previous screen.

Entries made before this which have not been confirmed with OK will not be saved.

## Help display

With some menus, Help appears along the bottom line of the display.

- If you need more information about the current menu, touch the Help sensor control. The additional information is shown in the display.
- Touch the  sensor control to return to the previous screen.

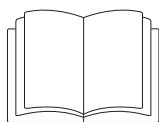

**⚠ Risk of injury or damage to property due to improper installation.** Incorrect installation of the tumble dryer can lead to personal injury or damage to property.  
Before commissioning the tumble dryer for the first time, make sure it has been installed.  
Connect the tumble dryer correctly.  
Please observe the instructions in “Installation”.

Complete the initial commissioning process. During the initial commissioning process, you will need to define the settings for daily use of the tumble dryer. Some settings can only be modified during the initial commissioning process. After that, they can only be changed by the Miele Customer Service Department.

These settings are also described under “Supervisor level”.


### Switching on the tumble dryer

- Press the  button.

The welcome screen will light up.

### Setting the display language

You will be asked to select the display language. You can change the language at any time (see “Language” under “Supervisor level”).

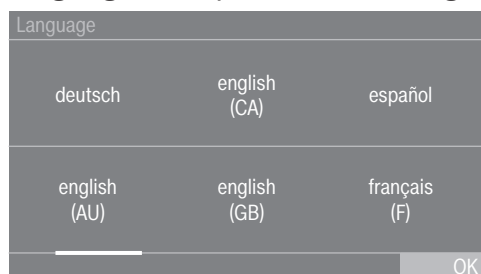


- Swipe left or right across the display with your finger until the language you want appears.
- Briefly touch the required language with your finger.

The selected language will be highlighted in orange and the display will change to the next setting.

### Reference to optional external devices


If there are external devices (e.g. peak-load systems or payment devices), connect the communication box and/or slide a communication module into the slot on the back of the tumble dryer before initial commissioning. For this purpose, the tumble dryer must be disconnected from the power supply. Then start the commissioning process.

A reference to optional external hardware appears. Confirm the information with the  sensor control.




## Setting the display brightness

You will be asked to select the brightness of the display.

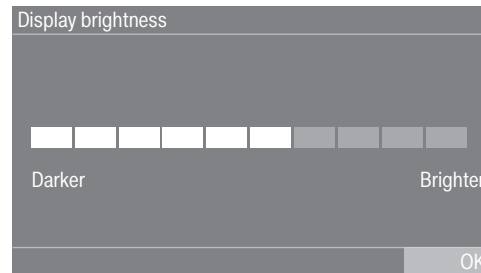

- Touch the segment bar for the required level of brightness. The selected level of brightness is represented by the length of the segment bar.
- Confirm with the OK sensor control. The display will change to the next setting.


## Setting the date

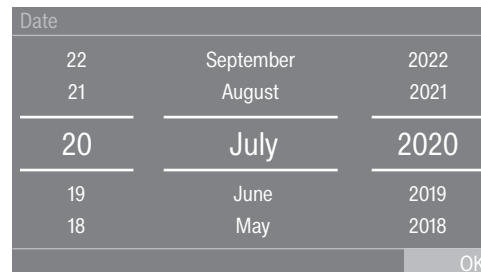

- Place your finger on the value that you want to change and move your finger upwards or downwards.
- Once all values have been selected, confirm your entry with the OK sensor control.

The display will now change to the next setting.

## Setting the time

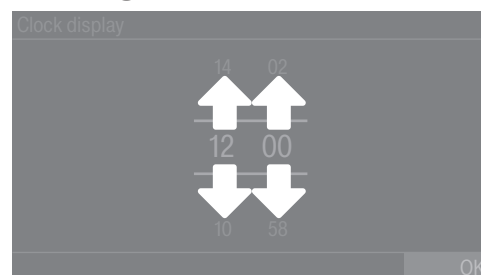


- Place your finger on the number that you want to change and move your finger upwards or downwards.
- Confirm with the OK sensor control.

The display will change to the next setting.

## Selecting programme packages

You can select various programmes from the programme packages. Any programmes already active are highlighted in orange.

## Initial commissioning

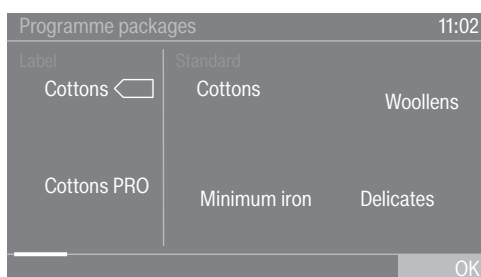


- Swipe to the left with your finger until you reach a programme that is not highlighted in orange.
- Touch the programme to be activated.

The selected programme is now active and highlighted in orange.

You can select further programmes if required.

- If you do not want to select any more programmes, confirm with OK.

 The display will change to the next setting.


**Tip:** You can disable a selected programme by touching the programme again. Exception: The Cottons  and Cottons PRO programmes cannot be disabled.

### Setting up a payment device

If you wish to set up a payment device, read the “Payment system” section of the “Supervisor level” chapter. You can only make these settings during initial commissioning. If you wish to change the settings after the commissioning process, please contact the Miele Customer Service Department.

If you do not wish to set up a payment device, you can skip this step.

### Skipping payment device set-up

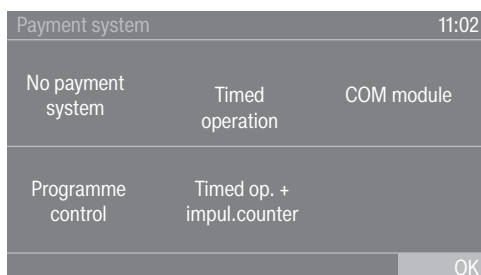


- Touch the No payment system sensor control.
- Touch OK to confirm.


The display will change to the next setting.

### Completing the initial commissioning process

 
The commissioning process is complete when a programme lasting longer than 10 minutes has been carried out in full.

If the power is interrupted prior to the start of the first drying programme (e.g. if the machine is switched off with the  button), the initial commissioning process can be completed again. Once a drying programme has been running for over 10 minutes, the initial commissioning process cannot be performed again.

- In the main menu, touch the  Programmes sensor control.

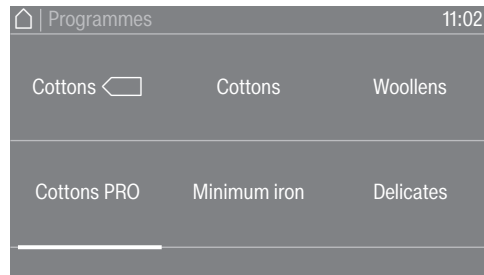

- Swipe to the left with your finger until the Timed drying cool air programme is displayed.

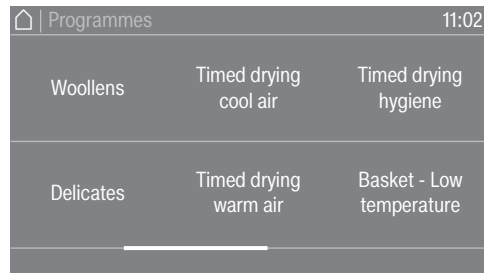

- Touch the Timed drying cool air programme.
- Touch the flashing *Start/Stop* sensor control.

After this programme has finished, the tumble dryer is ready for use.

# Drying

## 1. Notes on correct laundry care

### Washing before drying


Heavily soiled laundry must be washed particularly thoroughly. Use sufficient detergent and select a high wash temperature. If in doubt, wash the items several times.

The tumble dryer must not be used for drying items of laundry which have been cleaned using industrial chemicals.

New and coloured items must be washed thoroughly and separately. Do not dry new and coloured items with light coloured garments. There is the risk of colours running and discolouring other garments or even plastic components in the tumble dryer. Dark coloured fluff can also settle on light coloured garments and vice versa.

### Removing foreign objects

Before drying, ensure that there are no foreign objects in the laundry.

 Damage due to foreign objects which were not removed from the laundry.

Foreign objects in the laundry can melt, burn or explode.

Ensure that any foreign objects (e.g. detergent dispensing aids, lighters, etc.) have been removed from the laundry.








Check seams and stitching to ensure that the items of laundry are intact. This way you will avoid the danger of fillings coming out and causing a fire. Sew in or remove underwiring from bras.

 Risk of fire due to incorrect use and operation.

The laundry can burn and destroy the tumble dryer and the surroundings.

See the section on “Warnings and safety notes” for further information.


### Care symbols

| Drying  |                           |
|---|---------------------------|
|  | Normal/higher temperature |
|  | Low temperature*          |
| * Select Low temperature.   |                           |
|  | Do not tumble dry         |
| Ironing   |                           |
|  | Very hot                  |
|  | Hot                       |
|  | Warm                      |
|  | Do not iron               |

## 2. Loading the tumble dryer

### Loading laundry into the tumble dryer

Preventing damage to fabrics.  
Before loading, read chapter “1. Notes on correct laundry care” first.

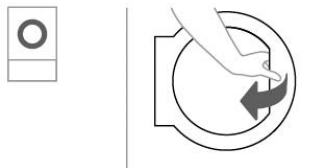


- Open the door.
- Load laundry into the tumble dryer.

Risk of damage with laundry getting trapped.  
Laundry can be damaged by getting trapped when closing the door. When closing the door, make sure that laundry does not get trapped in the door opening.

Do not overload the drum. Overloading can cause unnecessary wear and tear to the laundry and cause a disappointing drying result. It can also cause more creasing.

### Closing the door


⚠ Damage caused by laundry getting trapped.  
Laundry can be damaged by getting trapped when closing the door. When closing the door, make sure that laundry does not get trapped in the door opening.

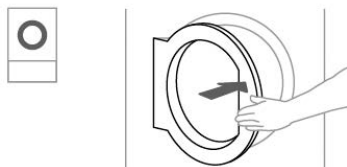


- Shut the door gently.

## 3. Selecting a programme

### Switching on the tumble dryer


- Press the  button.
- The welcome screen will light up.

There are different ways to select a drying programme in the main menu.

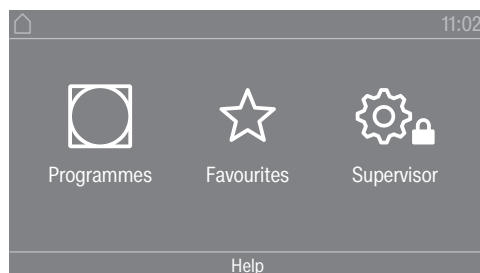

- Touch the  Programmes sensor control.


# Drying

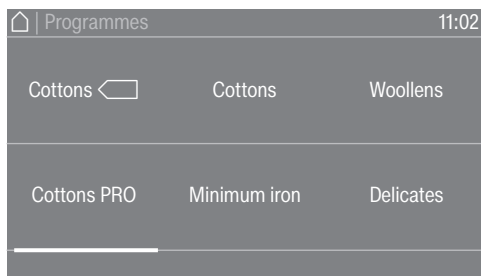


- With your finger, swipe to the left until you reach the required programme.
- Touch the sensor control for that programme.

The display will change to the standard menu for that drying programme.

Alternatively, you can select a programme from the Favourites list. The preset programmes under ☆ Favourites cannot be changed via the Supervisor level.

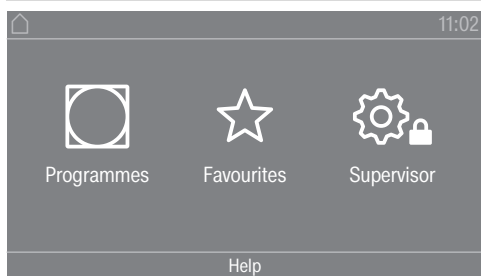

- Touch the ☆ Favourites sensor control.

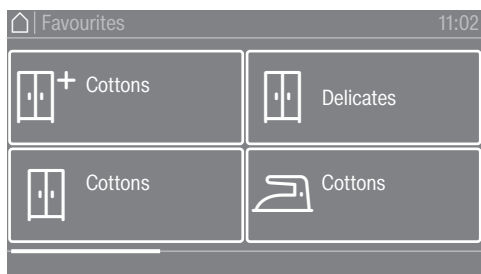

- With your finger, swipe to the left until you reach the required programme.
- Touch the required programme.

The display will change to the standard menu for that drying programme.


## 4. Selecting programme settings

### Select the drying level


With many programmes, you can change the preset drying level. Depending on the programme, you can select different drying levels.

### Selecting extra options

The drying programmes can be augmented with various Extras. Some Extras can only be selected for certain drying programmes.

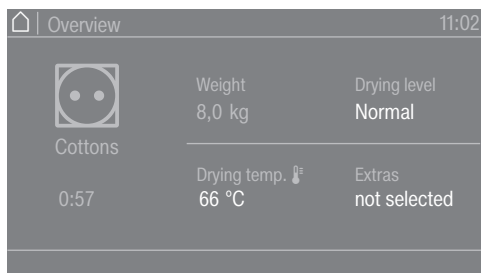

■ Touch the Extras sensor control.

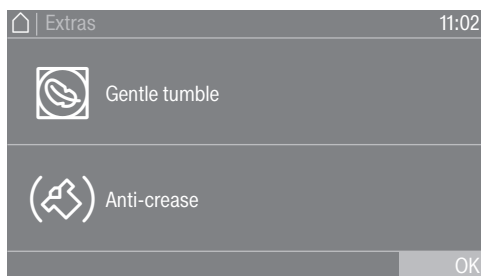

■ Touch the sensor control for the extra you want.

■ Only press **OK** when the extra appears on the display.

The relevant symbol for the required extra ( or ) lights up.

 Gentle tumble

Sensitive items are dried with fewer drum rotations and a lower drying temperature.

 Anti-crease

At the end of the programme, the drum will continue to rotate in a certain rhythm, depending on the selected programme. This helps to prevent creasing at the end of the programme.

The Anti-crease function is switched off as the factory default setting. The Anti-crease function can be switched on in the supervisor level with a variable duration of up to 12 hours. You can find this setting in the supervisor level under the *Process technology/Anti-crease* menu.

# Drying

## 5. Starting a programme

### Payment device (optional)

If your machine is connected to a payment device, the amount of payment required will appear in the display.

Money may be lost if the drum door is opened or the programme is cancelled.

Depending on the settings, money may be lost in the payment device if the drum door is opened or the programme is cancelled.

Do not open the door once the programme has started.

Do not cancel a drying programme while it is running.

### Starting the programme

The programme can be started as soon as the *Start/Stop* sensor control is flashing on and off.


- Touch the *Start/Stop* sensor control.

If a delay start period has been selected, this will appear in the display.


The drying programme will start either straight away or once the delay start period has elapsed. The programme time left is shown in the display.

### Calling up current programme parameters

During the programme running time, you can use the pull-down menu to view the parameters of the current drying programme (e.g. drying level, load size, selected extras, drying temperature).

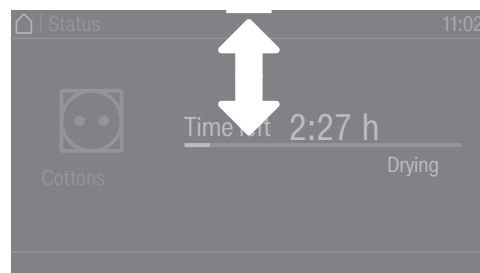

- To call up the pull-down menu, swipe your finger from top to bottom during the programme running time.

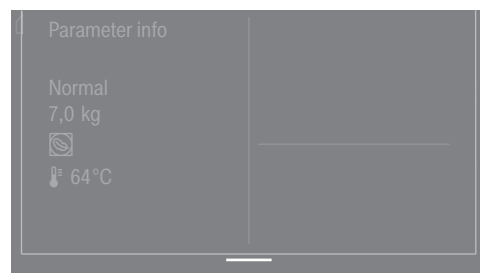

The pull-down menu displays the parameters of the drying programme.

- To close the pull-down menu again, swipe your finger from bottom to top or press the ↶ sensor control.

### Programme running time/Time left estimation

The programme running time depends on the quantity of laundry, the type of fabric and the residual moisture in the laundry. The displayed programme running time for drying level programmes can therefore vary or “jump”. The tumble dryer’s electronic module adapts during the ongoing drying programme. The displayed programme running time becomes more and more accurate.



When using the programmes for the first time, the displayed time sometimes deviates significantly from the real time left. The difference between the estimated and achieved time becomes smaller if the corresponding programme is run more often. If different load sizes are dried in one programme, the time left display can only show an approximate time.

## End of the programme

**End of programme** The laundry will be cooled down after the end of the programme. The message *Finish/Cool down* will appear on the display during the cooling phase. The laundry can now be removed.

After the cooling phase and the drying programme are completed, the message *Finish* is displayed.

The tumble dryer will switch off automatically after the set time after the end of a programme.

If the Anti-crease (🌀)\* extra has been selected, the drum continues to rotate in intervals after the end of the programme. This reduces creasing if the laundry cannot be removed straight away.

\* The Anti-crease function is switched off as the factory default setting and can be activated in the supervisor level.

## Removing the laundry

- Open the door.
- Remove everything from the drum.

Items left in the tumble dryer could be damaged by overdrying when the tumble dryer is used the next time.  
Always remove all items from the drum.

- Switch the tumble dryer off by pressing the ⏻ button.

## Care notes

This tumble dryer requires regular maintenance, particularly if it is used on a continuous basis. Please see “Cleaning and care” for details.

## Timer

### Prerequisite for setting the timer

The Delay start must be activated in the Supervisor level in the Controls / Display menu so that the Timer can be selected. Before the programme starts, the Timer can be used to select a programme start time or programme end time.

### Setting the timer


- Touch the Timer sensor control.
- Select the *Finish at*, *Start in* or *Start at* option.
- Set the hours and the minutes and confirm your entry with the OK sensor control.

## Changing the programme sequence

---

### Changing a programme once it has started

You cannot change to another programme once a programme has started (this prevents unintentional alterations). You will need to cancel the current programme before you can select a new one.


 Risk of fire due to incorrect use and operation.  
The laundry can burn and destroy the tumble dryer and the surroundings.  
See the section on “Warning and safety” for further information.

### Cancelling the current programme

- Touch the *Start/Stop* sensor control.

The following message appears in the display: Cancel programme?

- Touch the *Yes* sensor control to cancel the current programme.

 Risk of burns by touching hot laundry or the tumble dryer drum.  
Touching the hot laundry or the tumble dryer drum may cause burns.  
Let the laundry cool down and remove it carefully.

Opening the door of the tumble dryer during the programme sequence will cancel the current programme.

If the *Door opening status/Interrupt programme* function is selected in the supervisor level, the current programme will be interrupted when the door is opened. In the case of an interruption, the tumble dryer will remain in the current programme.

The interrupted programme will be continued when the door is closed and the *Start/Stop* sensor control is pressed.

### Reselecting a cancelled programme

- Open and close the door.
- Select and start a new programme.

### Adding laundry during ongoing Delay start period


You can open the door to add or remove laundry.


- All programme settings will be saved.
- You can change the drying level, if required.
- Open the door.
- Add or remove laundry.
- Close the door.
- Touch the *Start/Stop* sensor control so that the Delay start period continues.

### Time left

Altering the programme sequence can cause the programme duration shown in the display to be adjusted.

## Opening the Supervisor level

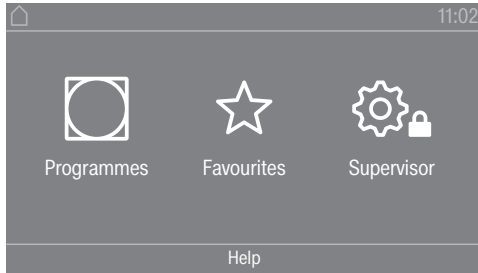

Touching the  sensor control takes you to the Supervisor level.

## Access via code

Supervisor level is accessed using a code.

Factory default: The code is **000**.

## Change code

You can alter the Supervisor level access code to protect the dryer from unauthorised access.

Be careful when entering a new code.

You will need to inform Miele Service if you forget your new code. Miele Service will have to reset the code.

Make a note of your new code and store it in a safe place.

## Closing the settings menu

- Touch the  sensor.

The display will then go back to the previous menu level.

- Touch the  sensor.


The display will change to the main menu.

## Controls / Display

### Language

The display can be set to appear in one of several different languages. To select the language you want, go to the *Languages* sub-menu.

You can change the language as follows:

- Permanently using the supervisor level (= “Supervisor language”).
- For the duration of the current programme only using the  sensor control. The supervisor language is displayed again at the end of the programme.

### Language entry

The display can be set to one of several different user languages. This setting allows you to determine how languages can be selected.

You can change the language as follows:


#### International

6 languages are available. The  sensor control is not active. Note the setting Set languages.

## Supervisor level


---

### Language setting

The  sensor control can be used to select a language. All languages are available (factory default).

You can change the order of the first 4 languages. These slots are allocated to the most commonly used languages.

### Standard language

The user language cannot be changed. The user language is the same as the supervisor language. The  sensor control is not active.

### **Set languages**

The languages for the International lang. entry setting can be changed.

Six languages can be selected. All languages are available.

If you wish to add a new language to the language menu:

Six languages can be selected. All languages are available.

If you wish to add a new language to the language menu:

- First select the language you want to replace.

All available languages are displayed.

- Select and confirm the language to replace the previous language.

The new language appears instead of the old one.

### **Display brightness**

The brightness of the display can be altered. The setting depends on the various lighting conditions in the place of installation.

- It can be set to one of 10 different levels.

### **Clock display**

After selecting the clock format, you can set the time of day.

#### Clock format

- Factory default: 24-hour display
- 12-hour display
- No clock

#### Set

- The time can be set.

### **Date**

The date can be set after selecting the date format.

- Date format

The date can be shown starting with the day, month or year.

- Date

The date is set.

### **Volume**

The volume for various sounds can be changed.

The volume can be changed for the following tones:

- Finish tone  
The finish tone signals the end of the drying programme.
- Keypad tone
- Welcome tone
- Fault alarm  
The fault tone signals a fault and can be switched off. The volume of the fault tone cannot be adjusted.

### Res. moisture display

In addition to displaying the drying level, the residual moisture can also be indicated as a percentage.

- Factory default: Without % value
- With % value

### Visibility parameters

Various parameters are offered/displayed when a programme is selected. You can decide which parameters should not be displayed. These parameters can then not be edited during programme selection.

- Residual moisture
- Duration
- Low temperature
- Anti-crease
- Load size
- Drying temperature

### Display off status

The display switches off to save energy; only the *Start/Stop* sensor flashes slowly. You can change this setting.

Changing this setting leads to increased energy consumption.

- Off  
No switching off
- On (10 min.) Not curr.prog.  
The display will remain on during the programme sequence but will go out 10 minutes after the end of the programme.
- Logo (10 min.) Not curr.prog.  
The display will remain on during the programme sequence but the logo will light up 10 minutes after the end of the programme.
- Factory default: On after 10 min.  
The display is switched off after 10 minutes.
- On (30 min.) Not curr.prog.  
The display will remain on during the programme sequence but will go out 30 minutes after the end of the programme.
- Logo (30 min.) Not curr.prog.  
The display will remain on during the programme sequence but the logo will light up 30 minutes after the end of the programme.
- On after 30 min.  
The display will go out after 30 minutes.

## Supervisor level

---

### Machine off status

In order to save energy, the tumble dryer will switch off automatically after the end of the programme or if no further selection is made. You can change this setting.

Changing this setting leads to increased energy consumption.

- No switch off
- Factory default: Switch off after 15 minutes
- Switch off after 20 minutes
- Switch off after 30 minutes

### Delay start

The delay start (timer) can be activated or deactivated.

- Factory default: Off
- On

### Memory

The tumble dryer saves the settings that were last selected for a drying programme (drying stage and/or extra option, or the duration for some programmes).

- Factory default: Off
- On

### Temperature unit

You can select the unit for the temperature display.

- Factory default: °C
- °F

### Weight unit

You can decide whether load quantities are displayed in “kg” or “lbs”.

- Factory default: kg
- lb

### Change code

You can alter the access code to the Supervisor level.

- Enter the current code.
- Enter a new code.

### Programme selection

#### Controls

You can select whether the tumble dryer is operated as a “laundrette” machine. Short-cuts are the easiest way to operate the machine. Operating staff are unable to change pre-set programmes.

**Tip:** Start by configuring all necessary settings and changes to the tumble dryer before adjusting any of the options below.

Caution: When activating any of these options, the Supervisor level will no longer be available.

You will no longer be able to access the Supervisor level via the display. Please follow the instructions below if you wish to change any other settings.

Opening the Supervisor level (laundrette version)

■ Switch the tumble dryer on and open the dryer door.

① Touch the *Start/Stop* sensor and hold it down whilst carrying out steps ②-③.

② Close the dryer door.

③ Wait until the *Start/Stop* sensor, which will now be flashing quickly, lights up constantly ...

④ ... and then release the *Start/Stop* sensor.

- Standard

Factory default: all (selected) programmes are available.

- Laundrette, basic

12 programmes are available.

Under Favourite programmes, you can set which of the 12 programmes to select or modify.

- Laundrette Logo

12 programmes are available.

Under Favourite programmes, you can set which 12 programmes to select/modify.

- Laundrette Logo ext. time

4 timed drying programmes\* with different temperature levels are time-controlled via an external payment system.

The set value indicates the programme running time and cannot be modified by the user.

\* The maximum programme running time is specified during initial commissioning.

- Laundrette Logo int. time

4 timed drying programmes\* with different temperature levels are time-controlled via the tumble dryer electronic module.

The set value indicates the maximum programme running time and can be modified by the user.

\* The maximum programme running time is specified during initial commissioning.

- External prog. selection

A communication module can be used to select the programme from an external terminal.

### Programme packages

This allows you to specify the scope of the tumble dryer programme. You can select all of the programmes or individual programmes from the relevant programme packages.

The tumble dryer's additional scope of programmes can be configured. The programmes are listed under "Programme chart".

## Supervisor level

---

### Favourite programmes

After switching on, you can also select a programme via: ☆ Favourites.  
12 programmes can be stored as favourites based on your own priorities and requirements.

These favourites will also be made available in the control options

- *Launderette ext. (12 prog)*
- *Launderette, basic (4 prog)* (the first 4 of the 12 favourites).

You can specify the control option under Controls.

**Tip:** You can assign a different colour to each programme. In this case, the Prog. colour allocation setting must be set to *On*.

### Changing Favourite programmes

- Select the programme you wish to change or replace.
- Confirm the programme or the setting to be changed.

Another menu opens, enabling you to select a new programme or change the parameters.

- Confirm with the *Save sensor control*.

Your selection is now active.

### Special programmes

You can put together 5 special residual moisture or time-controlled programmes and assign your own programme names.

First, enter the programme name.

- Select the special programme you want to change.

The *Save as* menu opens.

- Use the letters and symbols below the line to enter the name.
- Touch the *Save sensor control*.

You can now enter the parameters for a Res. moisture programme or Timed drying.

The 5 special programmes are pre-programmed at the factory. You can change these special programmes.

The special programmes are added to the programme packages. Enter the name and settings of your special programme into the “Special programmes” table in the “Programme overview” chapter.

Res. moisture programme:

- Final residual moisture:  
6 % (dry) – 40 % (damp)
- Extra drying time:  
0–60 minutes
- Temperature (Process air):  
cold – 75 °C
- Cooling down temperature (Process air):  
40–55 °C
  - Drum rotation, main direction:  
20–600 seconds



- Pause:  
2–15 seconds
- Drum reversal:  
20–600 seconds
- Anti-crease
  - Drum rotation, main direction:  
0–500 seconds
  - Pause:  
100–3000 seconds
  - Drum reversal:  
0–500 seconds

### Timed drying:

- Running time:  
5–180 minutes
- Temperature (Process air):  
cold – 75 °C
- Cooling down temperature (Process air):  
40–55 °C
  - Drum rotation, main direction:  
20–600 seconds
  - Pause:  
2–15 seconds
  - Drum reversal:  
20–600 seconds
- Anti-crease
  - Drum rotation, main direction:  
0–500 seconds
  - Drum reversal:  
0–500 seconds
  - Pause:  
100–300 seconds

### Sort programmes

Programmes can be moved within the programme list and in the Favourites list.

- Factory default: Off
- On

### Moving programmes/favourites

You can move/change the order of the programmes (programme menu – single option list). You can also move and change the order of the favourites that you edit in the *Supervisor level* under *Favourite programmes*.

- Touch the programme that you wish to move.
- Press and hold the sensor until the frame changes.
- Drag the programme to the required place.

## Supervisor level

---

### Prog. colour allocation

You can assign a specific colour to a favourite programme. In the list of favourites, each favourite programme is given a coloured frame, which can be adjusted.

- Factory default: Off
- On

### Process technology

#### Anti-crease

At the end of the programme, the drum will continue to rotate at intervals if the laundry is not removed immediately.

Changing this setting leads to increased energy consumption.

The setting for Anti-crease (🌀) can either be switched off or a time between 1 and 12 hours can be selected.

Factory default: 2 hours

#### Drying levels

Changing this setting leads to increased energy consumption.

You can alter the drying levels for the Cottons, Minimum iron and Automatic plus programmes.

Drying levels Cottons, Minimum iron and Automatic plus can be set to one of 7 different levels.

Factory default: normal

#### Further cooling

If extended cooling is activated, the drum temperature is checked approx. 1 minute before the machine goes into standby mode at the end of the programme. If the temperature is above 55 °C, the dryer will carry out cooling until it is below 55 °C.

Changing this setting leads to increased energy consumption.

- Factory default: off
- On

#### Cooling down temperature

The laundry will be cooled down automatically after the end of the programme. The automatic cooling phase can be set at a cooler level for all programmes. This means that the cooling phase is extended.

Changing this setting leads to increased energy consumption.

The setting can be changed from 40 °C–55 °C.

Factory default: 55 °C

## Service

### Clean out the airways

The tumble dryer's electronic module calculates the degree to which fluff or detergent residues in the fluff filters and vent ducting are impairing performance. A message to check the contamination appears. You can decide at what level of fluff this reminder should be emitted.

If the message appears on the display even though the fluff filter is clean, the vent ducting is regarded as borderline. Miele recommends improving the vent ducting. Poor vent ducting will result in longer programme running times and greater energy consumption.

This reminder, which you can configure, is displayed: Clean out the airways

- Off

The reminder does not appear. However, if there is a very severe blockage in the ducting, the programme will be cancelled regardless of this option.

- Heavy

The reminder only appears when there is a heavy build-up of fluff.

- Factory default: normal

- Light

The reminder appears when there is only a small build-up of fluff.

### Clean the filters

The fluff filter in the air duct area must be cleaned on a regular basis. You can set an hourly interval for the reminder.

The selected hourly interval depends on how much fluff tends to build up and how often you wish to clean the filter, e.g. for hygiene purposes.

You can adjust this reminder: Clean the filters

- Time interval of 5–55 hours

- Factory default: after 55 hours

- Off

### Service interval

The tumble dryer shows a custom message at a selected interval to prompt you to undertake specific maintenance tasks.

Three different messages can be created: 1/2/3. Each message is created in the language and alphabet of the current supervisor language.

Your message is displayed at the end of the programme and can be acknowledged with OK. The same message appears at the end of the next programme.

#### Settings

This setting allows you to determine the interval (by hours or date) at which the message appears.

- Factory default: Off

- By time

You can then select a time interval from 1–9999 hours.

- By date

You can enter a date.

#### Message text

## Supervisor level

---

Enter your message for your planned maintenance work. You can edit one, two or all three of the 1/2/3 messages.

### Reset display

The message appears until the display is permanently reset. The message then appears again once the next interval is reached.

## External applications

### External exhaust flap

External hardware is connected via the Miele Connector Box.

The time delay between the external exhaust air flap's activation point and the switch-on time for the drum/fan motor is regulated.

A message appears in the display while the exhaust air flap is open.

- Factory default: off

This option must always be selected if there is no exhaust air flap to activate. This prevents the programme from being cancelled.

- On (1 second to 5 minutes)

### Additional fan

External hardware is connected via the Miele Connector Box.

The additional fan is switched on by the dryer (via Connector Box) in parallel with the internal fan.

- Off

- On

### Pressure sensor

External hardware is connected via the Miele Connector Box.

When using a shared exhaust air duct, one tumble dryer may have to be switched off or suppressed from the outset if certain pressure levels have built up in the ducting. The external pressure sensor is only checked if the external exhaust air flap and/or the external additional fan is set to "on".

A message appears in the display while the exhaust air flap is open.

- Off = Not active

- NO contact = Active

Responds to **high potential**

- NC contact = Active

Responds to **low potential**

### Peak load signal

External hardware is connected via the Miele Connector Box.

The peak-load negotiation function enables the tumble dryer to be connected to an energy management system. When a signal is registered, the tumble dryer's heater is switched off for a short period or the machine is prevented from being switched on.

A peak-load signal can be issued via the Connector Box or via the COM module.

- Factory default: No function

- Peak load with 230 V
- Peak load with 0 V
- COM module

### Peak load prevention

- Factory default: Off
- On

### COM module selection

This tumble dryer is equipped with an integrated WiFi module. However, the dryer can also be equipped with an external module.

- Factory default:
  - Off
- Internal mod. Domestic  
The internal WiFi module is used.
- External mod. Professional  
An XKM module is inserted into the module slot.

### Availability of Miele digital products

The ability of Miele digital products depends on the availability of the services in your country.

The different services are not available in all countries.

For information about availability, please visit [www.miele.com](http://www.miele.com).

### WiFi / LAN

Control the networking of your tumble dryer.

Networking of the tumble dryer for use with the digital Professional tools is only possible with the external module. The internal module can only be used by the Miele Customer Service Department.

- Deactivate (visible when the network is activated)  
The network remains set up; the WiFi function is switched off.
- Activate (visible when the network is deactivated)  
The WiFi function is reactivated.
- Connection status (visible when the network is activated)  
The following values are displayed:
  - the quality of WiFi reception
  - the network name
  - the IP address
- Set up again (visible when set up)  
Resets the WiFi login (network) to immediately re-establish a new connection.
- Reset (visible when set up)  
The network is no longer set up. A new connection has to be established in order to use the network again.
  - The WiFi is switched off.
  - The WiFi connection will be reset to the factory default setting.

# Supervisor level

---

## Remote

External programme selection is possible via an external terminal (programme may only be started on the machine). However, programmes may also be selected and started on the machine.

Factory default: on

## Remote update

The RemoteUpdate function is used for updating the software in your tumble dryer.

RemoteUpdate is activated by default.

If you do not install a RemoteUpdate, you can continue to use your tumble dryer in the usual way. However, Miele recommends installing RemoteUpdates.

Miele's RemoteUpdate function can only be used if the tumble dryer is connected to a WiFi/LAN network and you have an account in the Miele Professional app. The tumble dryer must be registered in the app.

See the Miele Professional app for terms of use.

If a RemoteUpdate is available for your washing machine, it will be displayed automatically when the Operator level is open.

You can choose to start the RemoteUpdate immediately or wait until later. If you select "Start later", the prompt to run the RemoteUpdate will be displayed again the next time you switch on your washing machine.

The RemoteUpdate can take a few minutes.

Please note the following information about the RemoteUpdate function:

- You will only receive a message when a RemoteUpdate is available.
- Once a RemoteUpdate has been installed, it cannot be undone.
- Do not switch off the tumble dryer during a RemoteUpdate. Otherwise, the RemoteUpdate will be aborted and will not be installed.

## Machine parameters

### Legal information

#### Open source licences

You can view information here.

#### Copyright and licences

For the purpose of operating and controlling the machine, Miele uses proprietary or third-party software that is not covered by open source licensing conditions. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

Furthermore, this machine contains software components which are distributed under open source licensing conditions. You can access these open source components along with the corresponding copyright notices, copies of the licensing conditions valid at the time and any further information. This information can be found under the menu option Settings/ Machine parameters/Legal information/Open source licences. The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.

### Payment system

The Miele Connector Box accessory unit or the COM module is required to connect a payment device.

#### Setting for payment systems

If you wish to change the settings after the commissioning process, please contact Miele Service.

- No payment system

The next settings are skipped.

- Programme control

The machine is operated using a coin box. The user purchases a programme.

- Timed operation

The tumble dryer is coin-operated using a time meter. The user purchases a time-controlled programme.

- Timed op. + impul.counter

For payment devices where the usage time is increased each time a coin is inserted.

- COM module

Operation is IP-based.

# Connectivity

---

## Pairing instructions

Follow the steps below to connect the tumble dryer to your network.

### Opening the supervisor level

- Select the Supervisor menu option in the appliance display.
- Select the *Access via code* menu option.
- Enter the 3-digit supervisor code.

### Establishing the network connection via WPS

- Select the Supervisor level menu option from the External applications menu.
- Then select the COM module selection menu option.
- If you are using an external communication module, select the External mod. Professional menu option.  
Otherwise, select the Internal mod. Domestic menu option.
- Select WiFi.
- Select Set up.
- Select the connection method Via WPS.
- Now press the WPS button on your router and confirm with OK in the appliance display. A timer starts. The network connection via WPS is being established. The appliance is now successfully connected.
- Touch OK to confirm.

### Establishing the network connection via soft AP

- Select the External applications menu option from the Supervisor level menu.
- Then select the COM module selection menu option.
- If you are using an external communication module, select the External mod. Professional menu option.  
Otherwise, select the Internal mod. Domestic menu option.
- Select WiFi.
- Select Set up.
- Select the connection method Via Soft AP.
- Confirm pressing OK and follow the instructions in the external application.

### Establishing the network connection using a LAN cable

- Select the External applications menu option from the Supervisor level menu.
- Then select the COM module selection menu option.
- If you are using an external communication module, select the External mod. Professional menu option.  
Otherwise, select the Internal mod. Domestic menu option.
- Connect the appliance to your router/switch using the network cable. The router/switch must be connected to the Internet.

The appliance is now successfully connected.



## Technical data

### System requirements for WiFi

- WiFi 802.11b/g/n
- 2.4 GHz band
- WPA/WPA2 encryption
- DHCP activated
- Multicast DNS / Bonjour / IGMP snooping activated
- Ports 443, 80, 53 and 5353 open
- IP DNS server = IP standard gateway/router
- Mesh/repeater use: same SSID and password as standard gateway/router
- SSID must be permanently visible



### System requirements for LAN

- DHCP activated
- Multicast DNS / Bonjour / IGMP snooping activated
- Ports 443, 80, 53 and 5353 open
- IP DNS server = IP standard gateway/router


### WiFi signal strength – Guide values

The WiFi signal strength is only a rough guide. These details do not provide absolute certainty.

The WiFi signal strength can be read via the MDU or directly on the appliance.

| WiFi signal strength |   | Meaning                                    |
|----------------------|---|--|
| MDU                  |  * |  |
| 76–100 %             | 3/3**   | Generally, reliable operation possible     |
| 51–75 %              | 2/3   |  |
| 26–50 %              | 1/3   | Generally, operation possible              |
| 1–25 %               | 0/3   | Generally, reliable operation not possible |
| 0 %                  |    | Operation not possible                     |

\* Displayed on the appliance

\*\* Number of bars  3/3–0/3

The signal strength can be adversely affected by many factors:

- People in the room
- Open or closed doors
- Moved objects
- Varying radio signal sources or interference
- Other appliances with Bluetooth or WiFi wireless technology

# Problem solving guide

## Fault diagnosis

| Message   | Cause and remedy  |
|---|---|
| <b>The display remains dark.</b>  | There is no power to the tumble dryer.<br><ul style="list-style-type: none"> <li>■ Check the mains plug, main switch and fuses (on site).</li> </ul>  |
| Problem   | Cause and remedy  |
| <b>The efficiency of the tumble dryer decreases.</b>                                    | The fluff filter in the tumble dryer is dirty.<br><ul style="list-style-type: none"> <li>■ Check the fluff filter in the tumble dryer for contamination and clean it if necessary.</li> </ul>   |
|   | Insufficient ventilation<br><ul style="list-style-type: none"> <li>■ Make sure that the air intake vent and the tumble dryer ducting are not covered or blocked by objects.</li> </ul>  |
|   | Room temperature too high (>45 °C)<br><ul style="list-style-type: none"> <li>■ Ensure adequate ventilation of the installation site.</li> <li>■ If necessary, connect the tumble dryer to external fresh air and exhaust air ducting.</li> </ul>  |
| <b>Feather-filled pillows smell after drying.</b>                                       | Feathers tend to develop a build-up of their own smell or smells from other sources when they are heated.<br><ul style="list-style-type: none"> <li>■ Smells can be reduced through natural ventilation after drying.</li> </ul>  |
| <b>Items made of synthetic fibres are charged with static electricity after drying.</b> | Synthetic fibres tend to attract static charge.<br><ul style="list-style-type: none"> <li>■ Static charge can be reduced by adding a fabric softener to the final rinse in the washing programme.</li> </ul>  |
| <b>There is a build-up of fluff.</b>  | Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any fluff to form and has no appreciable effect on the lifetime of the fabric. Fluff is collected by the fluff filters and fine filter and can be easily removed<br><ul style="list-style-type: none"> <li>■ (see “Cleaning and care”).</li> </ul> |
| <b>The drying process goes on too long or even switches off.</b>                        | In some circumstances, you may be asked to clean the air channels/air guide.<br><ul style="list-style-type: none"> <li>■ Please check all the possible causes described below.</li> </ul>   |
|   | The fluff filter is clogged with fluff.<br><ul style="list-style-type: none"> <li>■ Remove the fluff.</li> </ul>  |
|   | The air guide area is clogged with hair and fluff, for example.<br><ul style="list-style-type: none"> <li>■ Clean the air guide area.</li> <li>■ You can remove the cover in the loading area to clean the air guide area underneath.</li> </ul>  |
|   | The vent ducting or its openings are clogged with hair and fluff, for example.<br><ul style="list-style-type: none"> <li>■ Check and clean all components in the vent ducting (e.g. wall pipe, external grille, bends, elbows, etc.).</li> </ul>  |
|   | The flow of air is insufficient (e.g. because it is installed in a small room).   |

| Problem  | Cause and remedy  |
|--|---|
|  | <ul style="list-style-type: none"> <li>■ When drying, open a door or window to ensure sufficient ventilation.</li> </ul> <p>The laundry has not been spun sufficiently.</p> <ul style="list-style-type: none"> <li>■ Make sure that your laundry is thoroughly spun at the appropriate spin speed in the washing machine.</li> </ul> <p>The tumble dryer has been overloaded.</p> <ul style="list-style-type: none"> <li>■ Do not exceed the maximum load size for the drying programme selected.</li> </ul> <p>Metallic components, e.g. zips, have prevented the tumble dryer from registering the correct laundry moisture level.</p> <ul style="list-style-type: none"> <li>■ Open any zips next time.</li> <li>■ If the problem occurs again, dry garments with long zips using the hot air drying programme.</li> </ul> |
| <p><b>Condensation is forming in the drum.</b></p> | <p>The tumble dryer is installed on a shared exhaust air duct.</p> <ul style="list-style-type: none"> <li>■ The tumble dryer must always be installed with a non-return flap when using a combined line.</li> <li>■ Check the non-return flap for possible defects on a regular basis and replace the flap if necessary.</li> </ul>   |

## Cleaning and maintenance

### Cleaning the fluff filter

⚠ Risk of fire if the tumble dryer is operated without a fluff filter.


If there is no fluff filter, the air channels, heating elements and vent ducting can become clogged during drying and may catch fire.

The fluff filter must not be removed for cleaning.


Never operate the tumble dryer without the fluff filter in place.

Replace a damaged fluff filter immediately.

A fluff filter collects fluff released by textiles. The fluff filter must be cleaned at least once per working day as well as in accordance with the corresponding message in the display. In the event of a heavy build-up of fluff, the fluff filter should be cleaned several times per day.

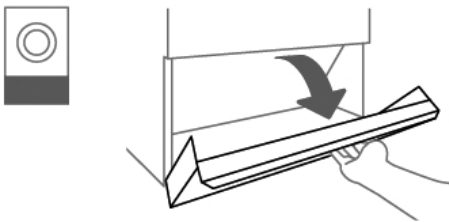


- Open the fluff filter compartment cover.

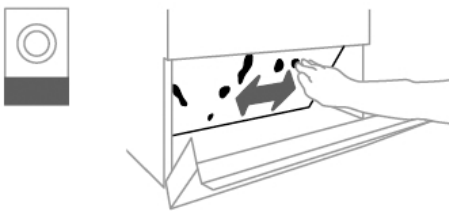

- Remove the fluff from the fluff filter using your hands.

Do not use pointed or sharp-edged objects to clean the fluff filter. Otherwise, the fluff filter may become damaged.

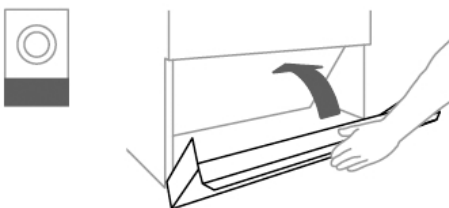

- Close the fluff filter compartment cover after cleaning the fluff filter.

### Cleaning the drum and the outside of the casing

⚠ Risk of death due to electric shock.

The tumble dryer must be completely disconnected from the power supply before performing cleaning or maintenance work.

Before starting cleaning or maintenance work, always switch off the tumble dryer at the main switch (on site).

Do not use a pressure washer or water jet to clean the tumble dryer.

⚠ Risk of damage due to solvent-based cleaning agents and abrasive cleaners.

Solvent based cleaning agents, abrasive cleaners, glass cleaners or all-purpose cleaners can cause damage to plastic surfaces and other parts.

Clean the tumble dryer with a slightly damp cloth and a mild non-abrasive cleaning agent or soapy water.

- Clean the seal around the inside of the door with a damp cloth.
- The tumble dryer drum must be wiped clean with a soft, damp cloth after drying items that have been starched.
- Dry all parts with a soft cloth.
- The drum and other stainless steel parts can be cleaned with a suitable stainless steel cleaner if you wish.

The air intake vent is located on the rear of the tumble dryer.

This vent must never be covered or blocked with objects.

Keep the area around the tumble dryer – in particular the air intake – clear of fluff.

### Additional annual cleaning

The Miele Customer Service Department or a trained specialist must check the interior of the tumble dryer and the ducting for lint deposits **once per year** and clean the machine if necessary. In the case of electrically heated tumble dryers, the heater bank and the heating shaft must also be checked by the Miele Customer Service Department. In the case of gas-heated dryers, the burner and the burner area must be checked.

## Customer Service Department

---

### Contact in case of malfunction

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or Miele Service.

Contact information for Miele Service can be found at the end of this document.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

### Optional accessories

Optional accessories for this tumble dryer are available from your Miele dealer or from the Miele Customer Service Department.


- ▶ If it is necessary to install a residual current device (RCD) in accordance with local regulations, a residual current device type B (sensitive to universal current) must be used.

Limitations to dryer operation due to reconnecting/removing jumpers.

Modifying/removing jumpers at the heater elements in order to set lower heater ratings may result in limitations to dryer operation. Depending on the type of laundry, length of vent ducting, and outside temperature, the desired drying results may no longer be achieved. In the event of a reduction, the specified consumption data will no longer be achieved.

- ▶ After installing the tumble dryer, equipotential bonding must be established. The equipotential bonding must comply with the local and national installation specifications.

### Installation requirements

 Risk of injury or damage to property due to improper installation.

Incorrect installation of the tumble dryer can lead to personal injury or damage to property.

The tumble dryer must only be installed and commissioned by Miele Customer Service Department or an authorised dealer.

- ▶ The tumble dryer must be installed in accordance with all relevant regulations and standards.
- ▶ The dryer must only be operated in a room that has sufficient ventilation and which is frost-free.
- ▶ The tumble dryer must not be installed behind a closeable door or a sliding door. The maximum opening angle of the tumble dryer door must not be limited by objects or doors. It must be possible to fully open the tumble dryer door at any time.

### General operating conditions

This dryer is intended only for use in a commercial environment and must only be operated indoors.

Do not install the tumble dryer in a room where there is a risk of frost. Depending on the nature of the installation site, sound emissions and vibrations may occur.


**Tip:** Have the installation site inspected and seek the advice of a professional in instances where increased noise may cause a nuisance.

### Transport

The tumble dryer must not be transported without a transport pallet.

Suitable transport aids must always be used during transportation.

# Installation


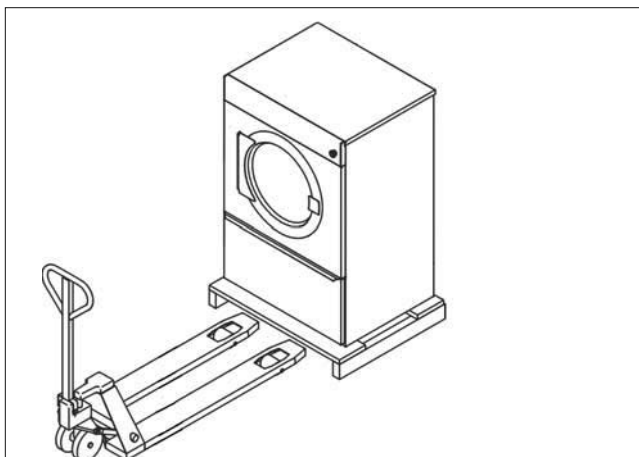


At the installation site, the tumble dryer must be lifted from the transport pallet using suitable lifting gear.

## Installing the tumble dryer

- Place the tumble dryer on a perfectly level, secure and horizontal surface that is able to withstand the specified floor load.


The floor load created by the tumble dryer is concentrated and transferred to the installation surface via the adjustable feet. A base is not required. However, an uneven floor surface must be compensated for.

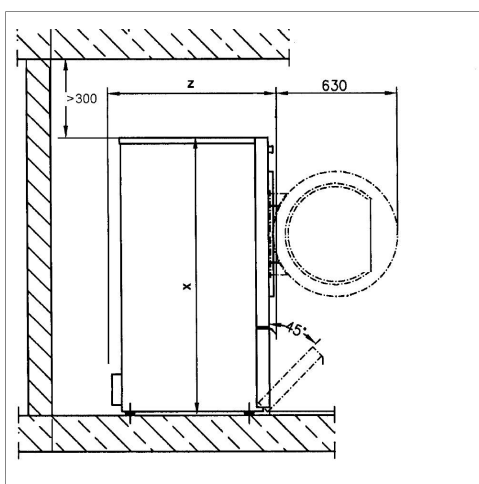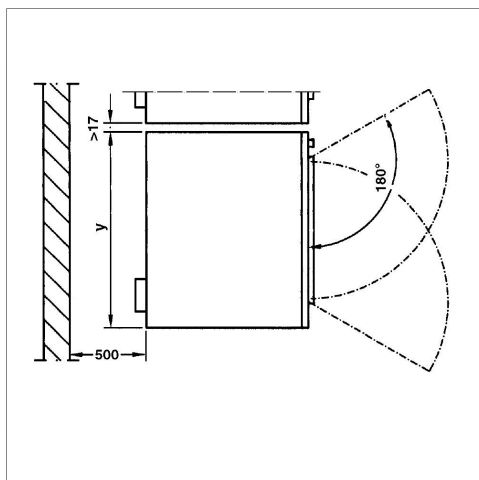



|   | PDR 514/518/522/914/918/922   | PDR 528/544/928/944                          |
|---|---|--|
| x | 1400 mm   | 1640 mm                                      |
| y | 906 mm  | 1206 mm                                      |
| z | PDR 514/914: 852 mm<br>PDR 518/918: 1035 mm<br>PDR 522/922: 1164 mm | PDR 528/928: 1018 mm<br>PDR 544/944: 1384 mm |


- To facilitate any future maintenance work, a maintenance corridor with a width of at least 500 mm must be set up behind the machine and must be accessible at all times. The distance between the machine and any walls must not fall below the specified minimum values.
- Adjust the tumble dryer adjustable feet until the machine is level. Use a spirit level to ensure correct alignment.

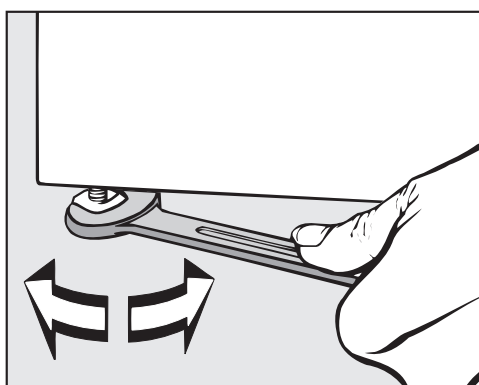

- After the machine has been aligned, screw the nuts on the adjustable feet tightly to the base plate using an open spanner.

## Securing the machine

- The tumble dryer must be secured to the floor by fitting the tensioning strips supplied over the machine feet.

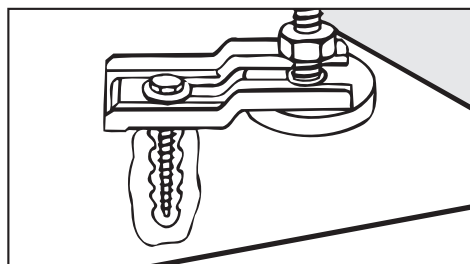

Fittings supplied are for bolting the machine to a concrete floor. For other types of flooring, please purchase suitable fastening materials separately.

## Electrical connection

The electrical connection must be established by a qualified electrician.

## Installation

---

► The electrical connection may only be made to an electrical system provided in accordance with all appropriate local and national legislation, regulations and guidelines. Please also observe the regulations set out by your insurance provider and energy supplier, accident prevention regulations, as well as recognised codes of practice.

► Reliable and safe operation of this tumble dryer is only ensured if it has been connected to the mains electricity supply.

The required supply voltage, power rating and fuse rating can be found on the data plate on the tumble dryer. Ensure that the supply voltage matches the voltage quoted on the data plate before establishing the electrical connection to the tumble dryer.

Connection to a supply voltage other than the one quoted on the data plate can damage the tumble dryer if the voltage is too high.

► If more than one voltage is specified on the data plate, the tumble dryer can be converted for connection to the relevant input voltage. This conversion must be performed by the Miele Customer Service Department or by an authorised dealer. During the conversion, the wiring instructions given on the wiring diagram must be followed.

**Tip:** We recommend connecting the tumble dryer to the power supply via a plug and socket so that it is easier to conduct electrical safety checks (e.g. during maintenance or repair work).

It is recommended the tumble dryer is connected with a suitable plug and socket in accordance with IEC 60309-1, however if the installation requires a hard-wired connection, an all-pole means of isolation must be provided on site. Switches with a minimum contact gap greater than 3 mm are suitable disconnectors. These include circuit breakers (MCB), fuses and contactors (VDE 0660) (IEC/EN 60947)

If the mains supply cannot be permanently disconnected, the isolation device (including plug and socket) must be safeguarded against being switched on either unintentionally or without authorisation.

► The tumble dryer must not be connected to devices such as timers which would switch it off automatically.

Limitations to dryer operation due to reconnecting/removing jumpers.

Modifying/removing jumpers at the heater elements in order to set lower heater ratings may result in limitations to dryer operation. Depending on the type of laundry, length of vent ducting, and outside temperature, the desired drying results may no longer be achieved. In the event of a reduction, the specified consumption data will no longer be achieved.

► If it is necessary to install a residual current device (RCD) in accordance with local regulations, a residual current device type B (sensitive to universal current) must be used.

► After installing the tumble dryer, equipotential bonding must be established. The equipotential bonding must comply with the local and national installation specifications.

## **Air intake/exhaust air**

The tumble dryer may only be operated when the ducting has been connected properly and the room is sufficiently ventilated.

## **Steam connection (only for steam-heated variants)**

The steam connection must only be carried out by a registered installation technician. The enclosed installation instructions must be observed as they are important for the steam connection.

## **Hot water connection (only for hot water-heated variants)**

The hot water connection may only be carried out by a registered installation technician.

The installation instructions must be observed as they are important for the hot water connection.

If a stopcock is desired, it must be fitted on site.

## **Gas connection (only for gas-heated variants)**

The gas connection may only be carried out by a registered installation technician in accordance with the applicable national regulations.

**The use of a gas socket for the supply hose is not permitted as the flow rate is too low for the specified heater rating.**

The gas heating is configured at the factory in line with the gas specifications on the sticker on the rear of the appliance.

If the gas type needs to be changed, please request the appropriate conversion kit from the Miele Customer Service Department. Information is required on the appliance type, serial number, gas family, gas group, gas connection pressure and country of installation. This gas conversion may only be carried out by a registered specialist.

 Risk of electric shock and injury due to using the tumble dryer without the complete casing.

If the casing is dismantled, it is possible to come into contact with live or rotating machine parts.

Once the tumble dryer has been installed, replace all the casing parts that were removed.

## Optional accessories

---

### Communication box

The optional communication box allows external hardware from Miele and other suppliers to be connected to the Miele Professional machine. External hardware includes, e.g. payment system, peak-load system, pressure sensor or an external vent flap.

The communication box is supplied with mains voltage by the Miele Professional machine.

The separately available set consists of the communication box and fasteners for installation on the machine or on the wall.

### XKM 3200 WL PLT

The optional Miele communication module can be used to establish a data connection between a Miele Professional machine and a data processor in accordance with the Ethernet or WiFi standard.

This communication module fits into the communication slot which is a standard feature on all machines. The communication module offers the option of intelligent app-based communication with external systems (such as central smart payment terminals or payment systems). In addition, it can display detailed machine and programme status information.

This module forms the basis for wired communication with Miele MOVE.

It is not possible to integrate the machine into the “Miele@home” app for domestic installations.

The communication module is intended exclusively for commercial use and is supplied with mains voltage directly via the Miele Professional machine. No additional power connection is required. The Ethernet interface provided via the communication module complies with SELV (safety extra low voltage) requirements in accordance with EN 60950. Connected external machines must also comply with SELV.

### Data protection and data security

When you activate the networking function and connect your machine to the Internet, your machine sends the following data to the Miele Cloud:

- Machine serial number
- Machine model and technical features
- Machine status
- Information about the software status of your machine

Initially, this data cannot be assigned to a specific user and is not saved permanently. Data cannot be saved permanently or assigned to a specific user until after you have linked your machine to a user. Data transmission and processing are governed by Miele's strict security standards.

### Factory default settings for network configuration

You can reset all of the settings on the communication module or your integrated WiFi module to the factory default settings. The network configuration should be reset whenever a machine is being disposed of or sold, or if a used machine is being put into operation. This is the only way to ensure that all personal data has been removed and the previous owner will no longer be able to access the machine.

### Copyright and licences

For the purpose of operating and controlling the communication module, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

Furthermore, this communication module contains software components which are distributed under open source licence conditions. The open source components contained in the machine along with the corresponding copyright notices, copies of the licensing terms valid at the time and any further information can be accessed locally by IP using a web browser (<https://<IP address>/Licenses>). The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.

### Payment systems

This tumble dryer can be fitted with a payment system (optional Miele accessory). In this case, a Miele Customer Service technician must programme the relevant settings in the tumble dryer's electronics and connect the payment system.

The Miele Connector Box accessory unit or the COM module is required to connect a payment device.

### Original spare parts and accessories

Miele will guarantee to supply functional spare parts for up to 15 years following the discontinuation of your appliance (this does not apply to digital products or products for process documentation). In many cases, genuine Miele spare parts are available for much longer. Miele appliances are highly durable due to their excellent quality. If, however, repair work does become necessary, key functional spare parts will remain available for up to 15 years following discontinuation (this does not apply to digital products or products for process documentation).

Contact the Miele Customer Service Department if you need spare parts and accessories or would like personalised advice.

 Danger due to improperly performed service and repair work.

Service and repair work should only be carried out by a suitably qualified electrician in accordance with all appropriate safety requirements.

Servicing, modification, testing and maintenance of electrical appliances must be carried out in accordance with all appropriate legal requirements, accident prevention regulations and valid standards.

All live wires must be safely disconnected before any maintenance or repair work is commenced on the appliance.

## Technical data

|                                    | PDR 914                                  | PDR 918 | PDR 922 | PDR 928 | PDR 944 |
|------------------------------------|--|---------|---------|---------|---------|
| Height                             | 1400 mm                                  | 1400 mm | 1400 mm | 1640 mm | 1640 mm |
| Width                              | 906 mm                                   | 906 mm  | 906 mm  | 1206 mm | 1206 mm |
| Depth                              | 852 mm                                   | 1035 mm | 1162 mm | 1018 mm | 1385 mm |
| Depth with door open               | 1456 mm                                  | 1639 mm | 1768 mm | 1622 mm | 1988 mm |
| Drum volume                        | 250 l                                    | 325 l   | 400 l   | 500 l   | 800 l   |
| Maximum load size (dry weight)     | 14 kg                                    | 18 kg   | 22 kg   | 28 kg   | 44 kg   |
| Supply voltage                     | See data plate                           |         |         |         |         |
| Fuse rating (on site)              | See data plate                           |         |         |         |         |
| Power rating                       | See data plate                           |         |         |         |         |
| Test certifications awarded        | See data plate                           |         |         |         |         |
| Product safety standard            | EN/IEC 60335-1; EN 50570; IEC 60335-2-11 |         |         |         |         |
| Sound pressure level, EN ISO 11204 | <70 dB(A)                                |         |         |         |         |
| Sound power level, EN ISO 9614-2   | <80 dB(A)                                |         |         |         |         |
| Frequency range                    | 2.4000–2.4835 GHz                        |         |         |         |         |
| Maximum transmission power         | < 100 mW                                 |         |         |         |         |

## EU declaration of conformity


Miele hereby declares that this PT 013 tumble dryer complies with Directive 2014/53/EU. The complete text of the EU declaration of conformity is available from one of the following Internet addresses:

- Under “Products”, “Download” at [www.miele.de/professional/index.htm](http://www.miele.de/professional/index.htm)
- Or go to <http://www.miele.de/professional/gebrauchsanweisungen-177.htm> and enter the name of the product or the serial number

## UK declaration of conformity

UKCA mark (UK only) The Supply of Machinery (Safety) Regulations 2008

This **Statement of Compliance** confirms this Miele product fully complies with the **Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023**.

- 1) Professional Appliance – *Tumble Dryer, commercial PT011, PT012, PT016, PT018*
- 2) Manufactured by: Miele & Cie KG, *PT013, PT014, PT015, PT017*  
Carl Miele Street 29, 33332 Gutersloh Germany  
Imported by and contact point: Miele Company Ltd, Fairacres, Marcham Road, Abingdon, Oxon, OX14 ITW Great Britain
- 3) The defined support period at the time of first supply is 10 years
- 4) To report vulnerabilities and cybersecurity issues please contact: [psirt@miele.com](mailto:psirt@miele.com)
- 5) Signature   
Name: **Paul Wright**  
Company Position: **Head of Technical Management**  
Date of signature: **19th March 2024**  
Place of signature: **Abingdon, Oxfordshire**



## United Kingdom

Miele Co. Ltd., Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Professional Sales, Tel: 0845 365 6608  
E-mail: professional@miele.co.uk  
Internet: www.miele.co.uk/professional

## Australia

Miele Australia Pty. Ltd.  
ACN 005 635 398, ABN 96 005 635 398  
Level 4, 141 Camberwell Road, Hawthorn East, VIC 3123  
Tel: 1300 731 411  
Internet: www.miele.com.au/professional  
E-mail: professional.sales@miele.com.au

## China Mainland

Miele Electrical Appliances Co., Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District, 200040 Shanghai, PRC  
Tel: +86 21 6157 3500, Fax: +86 21 6157 3511  
E-mail: info@miele.cn, Internet: www.miele.cn

## Hong Kong, China

Miele (Hong Kong) Ltd.  
41/F - 4101, Manhattan Place  
23 Wang Tai Road, Kowloon Bay, Hong Kong  
Tel: (852) 2610 1025, Fax: (852) 3579 1404  
Email: customerservices@miele.com.hk  
Website: www.miele.hk

## India

Miele India Pvt. Ltd.  
1st Floor, Copia Corporate Suites,  
Commercial Plot 9, Mathura Road, Jasola,  
New Delhi - 110025  
E-mail: customercare@miele.in, Website: www.miele.in

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Ave., Citywest Business Campus,  
Dublin 24  
Tel: (01) 461 07 10, Fax: (01) 461 07 97  
E-Mail: info@miele.ie, Internet: www.miele.ie

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana Petroleum  
Solaris Dutamas No. 1, Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
IRD 98 463 631  
8 College Hill  
Freemans Bay, Auckland 1011, NZ  
Tel: 0800 464 353  
Internet: www.miele.com.au/professional  
E-mail: professional.sales@miele.com.au

## Singapore

Miele Pte. Ltd.  
29 Media Circle, #11-04 ALICE@Mediapolis  
Singapore 138565  
Tel: +65 6735 1191, Fax: +65 6735 1161  
E-Mail: info@miele.com.sg  
Internet: www.miele.sg

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000, Fax: (011) 875 9035  
E-mail: info@miele.co.za  
Internet: www.miele.co.za

## United Arab Emirates

Miele Appliances Ltd.  
Showroom 1, Eiffel 1 Building  
Sheikh Zayed Road, Umm Al Sheif  
P.O. Box 114782 - Dubai  
Tel. +971 4 3044 999, Fax. +971 4 3418 852  
800-MIELE (64353)  
E-Mail: info@miele.ae  
Website: www.miele.ae



Manufacturer: Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany