

Operating and installation instructions Electric hobs



It is **essential** to read the operating and installation instructions before setup, installation, and commissioning. This prevents both personal injury and damage to the appliance.

Contents

Warnings and safety notes	4	Special functions.....	31
Sustainability and environmental protection	11	Con@ctivity 3.0	31
Installation	12	Extended cooking zone.....	31
Safety notes for installation	12	ExtraSpeed cooking zone	31
Additional safety notes for surface-mounted installation.....	12	Stop&Go.....	31
Additional safety notes for flush-fit installation.....	13	Auto heat-up	31
Safety distances	14	Timer	31
Installation dimensions for surface-mounted installation	18	System lock.....	31
KM 6564 FR.....	18	Safety lock	31
KM 6565 FR.....	19	Recall.....	32
Installation dimensions for flush-fit installation	20	Keeping warm	32
KM 6564 FL	20	Wipe protection.....	32
Installing a surface-mounted hob ...	21	Settings.....	32
Preparing the worktop for surface-mounted installation.....	21	Demo mode.....	32
Installing a surface-mounted hob	21	Residual heat indicator	32
Installing the hob flush with the worktop	22	Safety switch-off	32
Preparing the worktop for flush-fit installation.....	22	Overheating protection and pan protection	33
Installing a flush-fit hob	22	Hob data	33
Electrical connection	23	Optional accessories	33
Familiarisation.....	26	Commissioning	35
Your hob	26	Unpacking the hob	35
KM 6564 FR, KM 6564 FL.....	26	Cleaning the hob for the first time...	35
Controls and indicators	28	Switching on the hob for the first time	35
Cooking zone data.....	29	Networking.....	35
Accessories supplied	30	Connecting to a network via the app	35
Operation.....	30	Connecting to a network via WPS	36
Networking	30	Connecting only with a cooker hood.....	36
Connecting to a network	30	Operation.....	38
Connection only with the cooker hood	30	Safety notes for operation	38
		Switching the hob on.....	38
		Switching off a cooking zone/the hob	38
		Hob power levels	38
		Setting the power level.....	38
		Setting the power level – intermediate levels	39
		Changing the power level.....	39
		Extended cooking zone	39

Activating/deactivating Stop&Go ..	39	When to clean	51
Auto heat-up	39	Cleaning the ceramic glass	
Activating auto heat-up.....	40	surfaces	51
Deactivating auto heat-up	40	Unsuitable cleaning agents	52
Timer	40	Troubleshooting	53
Setting timer durations	40	Messages in the display.....	53
Setting the minute minder	40	Unexpected behaviour	53
Changing the minute minder		Unsatisfactory results	54
duration	40	General problems or technical	
Deleting the minute minder		faults	55
duration	40	Customer Service	56
Setting the switch-off time	40	Contact in the event of a fault.....	56
Changing the switch-off time	41	Data plate	56
Deleting the switch-off time	41	Warranty	56
Setting multiple switch-off		Technical data.....	57
times	41	Technical data	57
Displaying switch-off times.....	41		
Using both timer functions at			
the same time	41		
System lock	41		
Activating the system lock	41		
Deactivating the system lock.....	42		
Safety lock	42		
Activating the safety lock.....	42		
Deactivating the safety lock.....	42		
Activating the Recall function	42		
Wipe protection.....	42		
Activating wipe protection	42		
Deactivating wipe protection.....	42		
Hob data	43		
Displaying the model identifier/			
serial number.....	43		
Displaying the software version			
.....	43		
Activating/deactivating demo			
mode	43		
Setting range.....	44		
Good to know.....	46		
How electric hobs work.....	46		
Cookware.....	46		
Adjusting settings	48		
Cleaning and care	51		
Safety notes on cleaning and care ..	51		

Warnings and safety notes

This hob complies with all relevant local and national safety requirements. Inappropriate use can, however, lead to personal injury and material damage.

Read the operating and installation instructions carefully before using the hob. They contain important information on safety, installation, use and maintenance. This prevents both personal injury and damage to the hob.

Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the hob as well as the safety instructions and warnings.

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and pass them on to any future owner.

Correct application

- ▶ This hob is intended for domestic use and use in other similar environments.
- ▶ This hob is not intended for outdoor use.
- ▶ It is intended for domestic use only to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ This hob is not intended for use by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision and instruction concerning its use by a person responsible for their safety. They may only use the hob unsupervised if they have been shown how to use it in a safe way. They must be able to recognise and understand the dangers of misuse.

Safety with children

- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children over 8 years of age may use the hob without supervision if its operation has been clearly explained to them and they are able to use it safely. Children must be able to understand and recognise the possible dangers caused by incorrect operation.
- ▶ Children must not be allowed to clean the hob unsupervised.
- ▶ Children should be supervised in the vicinity of the hob. Never allow children to play with the hob.
- ▶ The hob gets hot when in use and remains hot for a while after being switched off. Keep children well away from the hob until it has cooled down and there is no danger of burning.
- ▶ Danger of burning. Do not store anything which might arouse a child's interest in storage areas above or behind the hob. Otherwise they could be tempted to climb onto the hob.
- ▶ Risk of burning and scalding. Place pots and pans on the cooking zone in such a way that children cannot pull them down and burn themselves.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.

Warnings and safety notes

► Activate the system lock to ensure that children cannot switch on the hob inadvertently. Use the safety lock when the hob is in use to prevent children from altering the settings selected.

Technical safety

► Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by your Miele dealer.

► Damage to the hob can compromise your safety. Check the hob for visible signs of damage. Do not use the hob if it is damaged.

► Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronised with the mains power supply (e.g. island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard.

The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronised with the mains power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of BS OHSAS 18001–2 ISO 45001.

► The electrical safety of this hob can only be guaranteed when correctly earthed. It is essential that this basic safety requirement is fulfilled. If in doubt, the electrical installation should be checked by a qualified electrician.

► The connection data (voltage and frequency) on the data plate of the hob must match the mains power supply in order to avoid the risk of damage to the hob.

Compare this data before connecting the appliance. If in any doubt, consult a qualified electrician.

► Do not connect the hob to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.

► For safety reasons, this hob may only be used after it has been built in.

► This hob must not be used in a non-stationary location (e.g. on a ship).

Warnings and safety notes

- ▶ Any contact with live connections or tampering with the electrical or mechanical components of the hob will endanger your safety and may lead to the hob malfunctioning.
Do not open the hob housing under any circumstances.
- ▶ While the hob is under warranty, repairs should only be undertaken by your Miele dealer. Otherwise the warranty is invalidated.
- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ The hob is not intended for use with an external timer switch or a remote control system.
- ▶ The hob must be connected to the electricity supply by a qualified electrician (see “Installation – Electrical connection”).
- ▶ If the mains connection cable is damaged, it must be replaced with a special mains connection cable by a qualified electrician (see “Electrical connection” in the “Installation” chapter).
- ▶ During installation, maintenance and repair work, the hob must be completely disconnected from the electricity supply. It is only completely isolated from the electricity supply when:
 - The mains fuse has been disconnected or
 - The screw-out fuses have been fully unscrewed or
 - The mains plug (if present) is removed from the socket. To do this, pull the mains plug and not the mains connection cable.
- ▶ Danger of electric shock. Do not use the hob if it is faulty, or if the ceramic surface is cracked, chipped or damaged in any way. Switch it off immediately, disconnect it from the mains electricity supply and contact your Miele dealer.
- ▶ If the hob is installed behind a furniture front, do not close the door while the hob is in use. Heat and moisture can build up behind the furniture front when closed. This can result in damage to the hob, the housing unit and the floor. Do not close the furniture front until the residual heat indicators go out.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.

Warnings and safety notes

Correct use

- ▶ The hob gets hot when in use and remains hot for quite a while after being switched off. There is a risk of burning until the residual heat indicators go out.
- ▶ Due to the high temperatures radiated, objects left near the hob when it is in use could catch fire.
Do not use the hob to heat up the room.
- ▶ Oil and fat can overheat and catch fire. Do not leave the hob unattended when cooking with oil and fat. If it does ignite do not attempt to put the flames out with water.
Disconnect the hob from the mains and use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.
- ▶ Do not leave the hob unattended whilst it is being used. It should be continually monitored whilst boiling and flash frying.
- ▶ Flames could set the grease filters of a cooker hood on fire. Do not flambé under a cooker hood.
- ▶ Spray canisters, aerosols and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the hob. Cutlery inserts must be heat-resistant.
- ▶ Do not heat an empty pan.
- ▶ Do not heat up food in closed containers e.g. tins or sealed jars on the hob, as pressure can build up in the container, causing it to explode.
- ▶ Do not cover the hob, e.g. with a hob cover, a cloth or protective foil. The material could catch fire, shatter or melt if the hob is switched on by mistake or if residual heat is still present.
- ▶ When the hob is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of metal items placed on the hob heating up. Other materials can melt or catch fire. Damp pan lids might adhere to the ceramic surface and be difficult to dislodge. Do not use the hob as a resting place for anything. Always switch the cooking zones off after use.
- ▶ You could burn yourself on the hot hob. Protect your hands with heat-resistant pot holders or gloves when working on the hot hob. Do not let them get wet or damp. Heat transfers through damp and wet material more quickly with the risk of scalding or burning yourself.

Warnings and safety notes

- ▶ When using an electrical appliance (e.g. a hand mixer) near the hob, ensure that the cable of the electrical appliance cannot come into contact with the hot hob. The cable's insulation could become damaged.
- ▶ Grains of salt, sugar, or sand (e.g. from cleaning vegetables) can cause scratches if they get under the cookware. Make sure the ceramic glass surface and the underside of the cookware are clean before placing down the cookware.
- ▶ Even a light object can cause damage in certain circumstances. Do not drop anything on the ceramic surface.
- ▶ Hot items placed down on the sensor controls and displays can damage the electronic modules underneath. Never place hot pots or pans on the sensor controls and displays.
- ▶ Do not allow solid or liquid sugar, or pieces of plastic or aluminium foil to get onto the hob when it is hot, as they can damage the ceramic surface when it cools down. If this should occur, turn off the hob immediately and scrape off all the sugar, plastic or aluminium residues while still hot, using a shielded scraper blade. Wear oven gloves when doing this. Allow the ceramic surface to cool down and then clean it with a suitable ceramic glass cleaner.
- ▶ Do not heat empty pans on the hob as this can damage the ceramic glass and/or the cookware. Never leave the hob unattended during use!
- ▶ Rough bases can scratch the ceramic glass. Use only pots and pans with smooth bases.
- ▶ Always lift cookware to move it. This will help prevent scratching.
- ▶ Plastic and aluminium foil containers melt at high temperatures. Do not use plastic or aluminium foil containers.
- ▶ The hob frame or hob edges (on hobs with bevelled edges) and the controls can become hot due to the influence of the following factors: operating duration, high power level(s), large pans and the number of cooking zones being used.
- ▶ Pots and pans made of aluminium or with an aluminium base can leave a metallic sheen on the hob. This can be removed with the ceramic and stainless steel hob cleaner (see "Cleaning and care").
- ▶ If spills remain on the hob for any length of time they can burn on and in certain circumstances become impossible to remove. Remove any soiling as quickly as possible and ensure that pan bases are clean, dry and free of grease.

Warnings and safety notes

► Do not use the ceramic surface for preparing food on. Always use suitable pots and pans.

Cleaning and care


► The steam from a steam cleaner could reach live electrical components and cause a short circuit.

Do not use a steam cleaner to clean the hob.

► Miele original spare parts are kept in stock for at least 10 years and up to 15 years after discontinuation of your hob.

Energy saving tips when cooking

- Check that the diameter of the pot or pan base is wide enough for the cooking zone. This prevents heat from being lost unnecessarily.

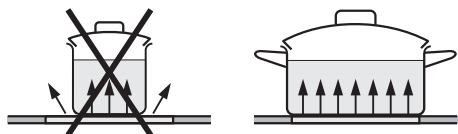

- Cook in covered pots and pans if possible. Doing so will prevent unnecessary heat loss.
- Use small pots for small quantities. A small pot or pan on a small cooking zone uses less energy than a large, partially filled pan on a large cooking zone.
- Cook with as little water as possible.
- Once food has come to the boil or the pan is hot for frying, reduce the heat to a lower power level.
- For longer cooking durations, switch the cooking zone off about 5 to 10 minutes before the end of the cooking duration. In this way, use is made of the residual heat.
- Use a pressure cooker to reduce cooking durations.


Disposing of the packaging material

The packaging material is used for handling and protects the appliance from transport damage.

Recycling the packaging material reduces the use of raw materials. Your Miele dealer will take the packaging material away.

Disposal of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

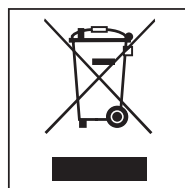

Please contact your Miele dealer. They will provide support for its disposal.

Ensure that it presents no danger to children while being stored for disposal.

Installation

Safety notes for installation

⚠ Risk of damage from incorrect installation.

Incorrect installation can cause damage to the hob.

The hob must only be installed by a qualified specialist.

⚠ Risk of electric shock from mains voltage.

Incorrect connection to the mains supply may result in an electric shock.

The hob must be connected to the electrical supply by a qualified electrician only.

⚠ Damage from falling objects.

Take care not to damage the hob when fitting wall units or a cooker hood above it.

Fit the wall units and the cooker hood before the hob.

► The hob must not be installed over refrigeration appliances, dishwashers, washing machines, washer-dryers or tumble dryers.


► Ensure that the mains connection cable cannot be touched after the hob has been installed.

► After installation, the mains connection cable of the hob must not come into contact with any moving kitchen components (such as a drawer) or be subject to mechanical loads.

► The veneers or laminate coatings of worktops must be treated with 100 °C heat-resistant adhesive so they do not come loose or warp. Any wall strips must be of heat-resistant material.

► Remember to maintain the minimum safety distances (see “Installation – Safety distances”).


Additional safety notes for surface-mounted installation

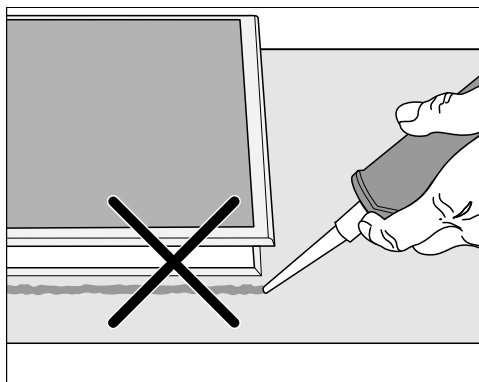

⚠ Damage caused by incorrect installation.

Using sealant under the hob could result in damage to the hob and the worktop if the hob ever needs to be removed.

Do not use sealant between the hob and the worktop. The sealing strip under the edge of the hob provides a sufficient seal for the worktop.

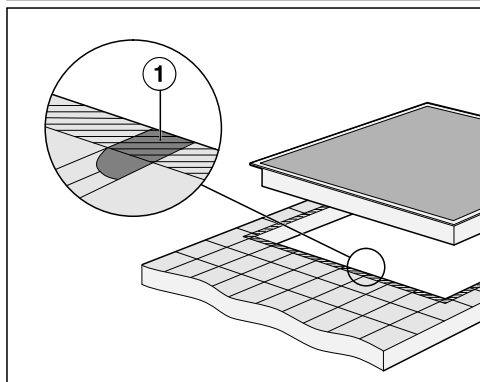

► Grout lines ① and the hatched area underneath the hob frame must be smooth and even. If they are not, the hob will not sit flush with the worktop and the sealing strip underneath the hob will not provide a good seal between the hob and the worktop.

Dismantling the hob for service purposes may damage the sealing strip underneath the edge of the hob.

Always replace the sealing strip before reinstalling.

Additional safety notes for flush-fit installation

⚠ Damage caused by using an unsuitable sealant.

Unsuitable sealant can damage natural stone.

For natural stone worktops and natural stone tiles, only use silicone sealant that is temperature-resistant (min. 160 °C) and specially formulated for natural stone. Follow the manufacturer's instructions.

► The internal width of the base unit underneath the appliance must be at least as wide as the inner worktop cut-out (see "Installation – Installation dimensions for flush-fit installation"), so that the hob is easily accessible from underneath after installation and the casing can be removed for maintenance. If the underside of the hob is not freely accessible after installation, any sealant used must be removed to enable the hob to be lifted out of the cut-out should this be necessary.


► A flush-fit hob is suitable only for installation in natural stone (granite, marble), solid wood and tiled worktops. When using a worktop made from any other material, please check first with the worktop manufacturer that the material is suitable for installing a flush-fit hob.

Installation

- Natural stone worktops: the hob is set directly in the cut-out.
- Solid wood worktops, tiled worktops: the hob is secured inside the cut-out with wooden battens. The battens must be provided on site and are not included in the scope of delivery.

Safety distances

Safety distance above the hob

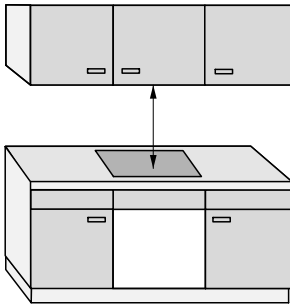

The following must be ensured between the hob and the cooker hood above it:

- The safety distance specified by the manufacturer of the cooker hood must be maintained.
- When two or more appliances which have different safety distances are installed together below a cooker hood, the greatest specified safety distance must be maintained.

If combustible objects are installed above the hob (e.g. cabinets, utensil rail, etc.), a minimum safety distance of 600 mm must be maintained.

Safety distance behind and to the side of the hob

The minimum safety distances shown below must be maintained between the appliance and a tall unit or wall:


- Between the **back** ① of the worktop cut-out and the rear edge of the worktop:
50 mm

and



- On the **right side** ② between the worktop cut-out and the closest adjacent piece of furniture (e.g. tall unit) or a room wall:
50 mm and on the opposite side a minimum safety distance of 300 mm

or


- On the **left side** ③ between the worktop cut-out and the closest adjacent piece of furniture (e.g. tall unit) or a room wall:
50 mm and on the opposite side a minimum safety distance of 300 mm

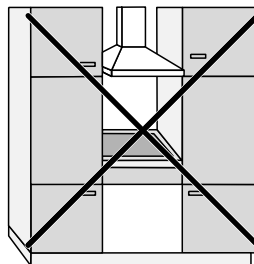


Not permitted

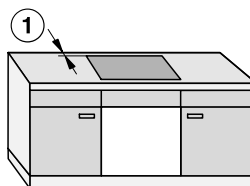 

Highly recommended

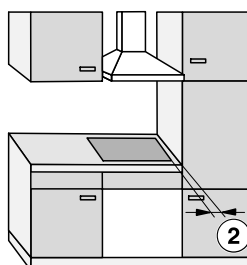

Not recommended

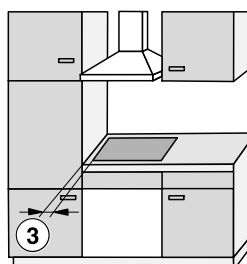

Not recommended

Installation

Interim shelf

It is not necessary to fit an interim shelf underneath the hob but one may be fitted if you wish.


If an interim shelf is fitted under the hob, there must be a minimum gap of 110 mm between the top of the worktop and the top of the shelf.

A gap of 10 mm should be left at the back of the shelf to accommodate the cable. For hobs with an external mains connection box, this gap must be at least 30 mm.


Minimum safety distance from the niche cladding

If niche cladding is installed, a minimum safety distance must be maintained between the worktop cut-out and the cladding. High temperatures can alter or damage these materials.

Flush-fit installation

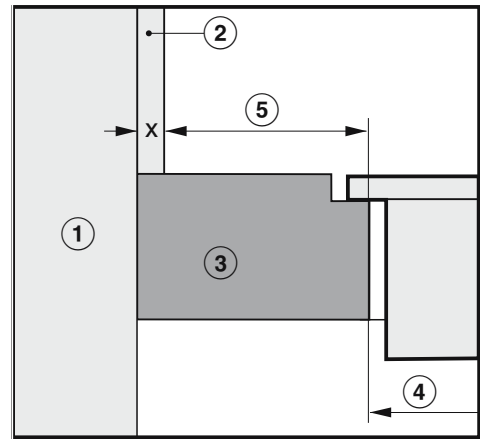

Surface-mounted installation

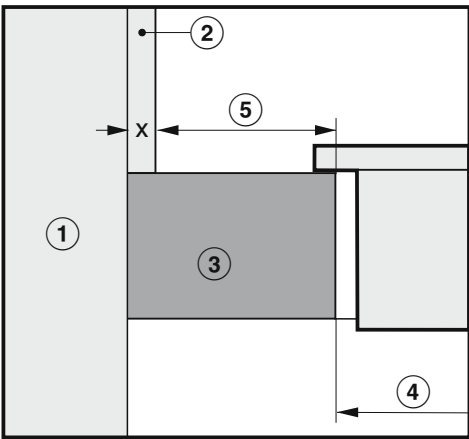

- ① Masonry
- ② Dimension x = thickness of the niche cladding material
- ③ Worktop
- ④ Worktop cut-out
- ⑤ Minimum safety distance to
combustible materials (e.g. wood)
non-combustible materials (e.g. metal, natural stone, ceramic tiles)

	Side		Opposite side	
Material	Combustible	Non-combustible	Combustible	Non-combustible
Back	50 mm	50 mm – dimension x	–	–
Right	50 mm	50 mm – dimension x	300 mm	300 mm – dimension x
Left	50 mm	50 mm – dimension x	300 mm	300 mm – dimension x


See “Installation – Safety distances”

Installation

Example: 15 mm thick non-combustible niche cladding
50 mm minus 15 mm = minimum safety distance of 35 mm

Installation dimensions for surface-mounted installation


KM 6564 FR

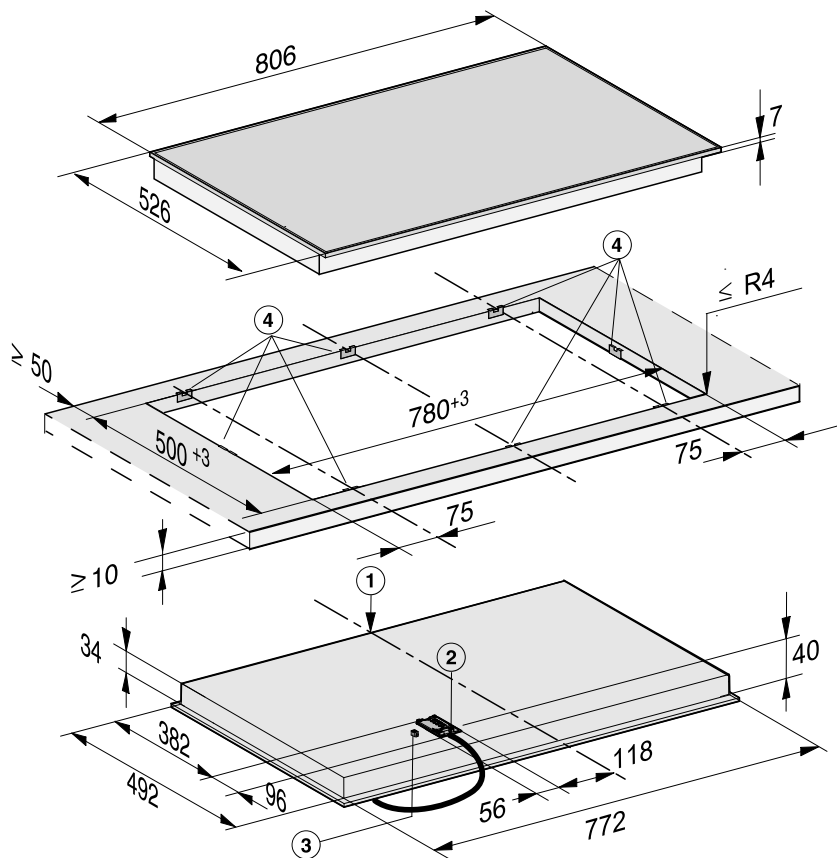

All dimensions are given in mm.


- ① Front
- ② Mains connection box with mains connection cable
Mains connection cable L = 1440 mm
- ③ WiFi stick connection
- ④ Spring clamps

KM 6565 FR

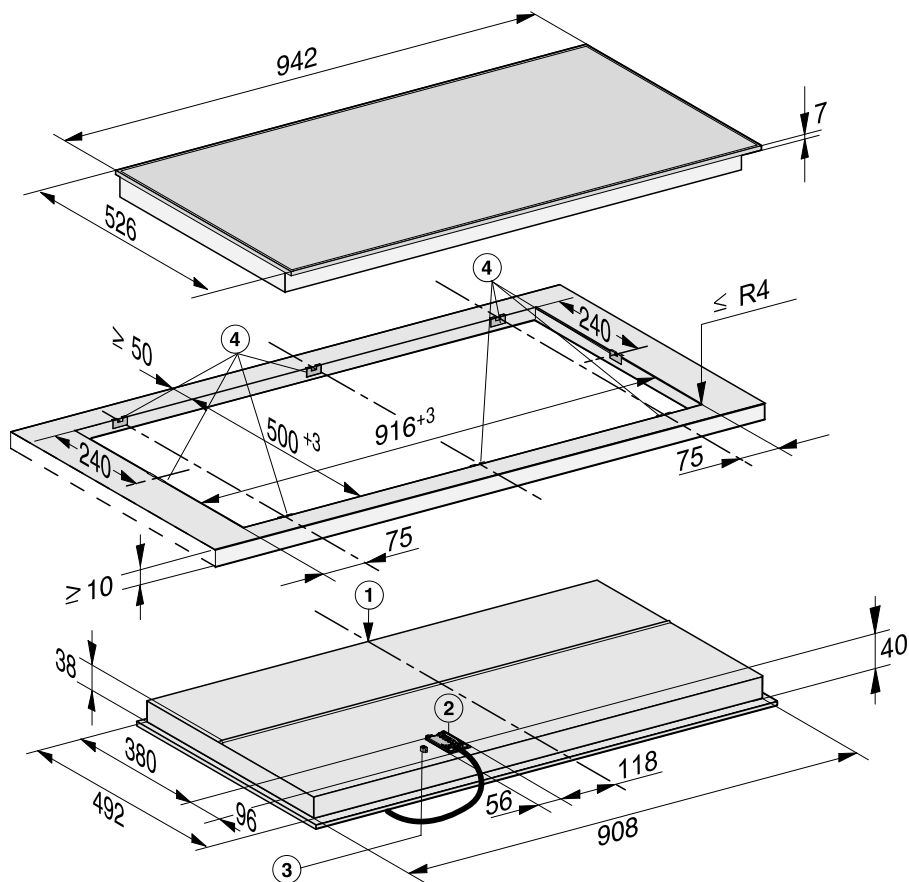

All dimensions are given in mm.

- ① Front
- ② Mains connection box with mains connection cable
Mains connection cable L = 1440 mm
- ③ WiFi stick connection
- ④ Spring clamps

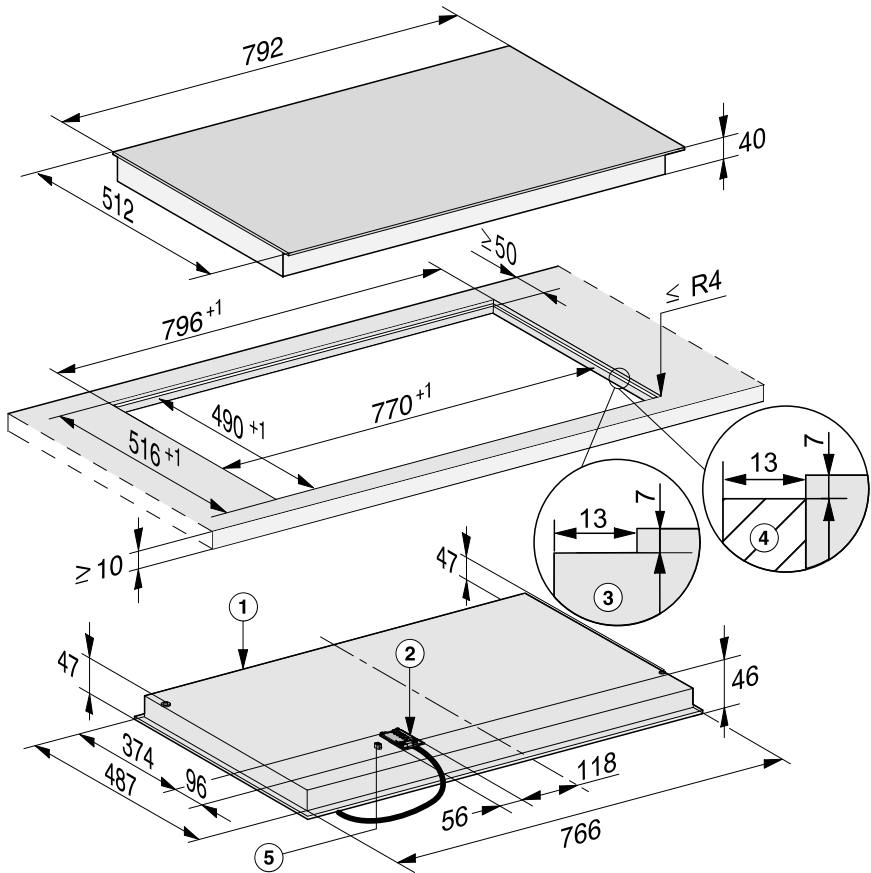KM 6564 FL

- ① Front
- ② Mains connection box with mains connection cable
Mains connection cable L = 1440 mm
- ③ Stepped cut-out, natural stone worktop
- ④ Wooden batten 13 mm (accessories not included)
- ⑤ WiFi stick connection

Installing a surface-mounted hob


Preparing the worktop for surface-mounted installation

- Remember to maintain the minimum safety distances (see “Installation – Safety distances”).
- Create the worktop cut-out.
- Wooden worktops:
Seal any cut surfaces with a special varnish, silicone sealant or resin to prevent the wood from swelling as a result of moisture ingress. The sealant must be heat-resistant.

Make sure that the sealant does not come into contact with the top of the worktop.

Securing the spring clips to wooden worktops

The exact positioning of the spring clips is shown in the individual hob diagrams.

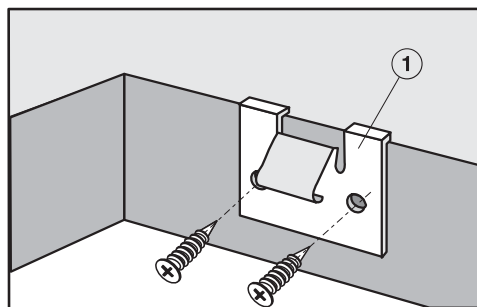


- Position the spring clips ① on the top edge of the cut-out in the positions shown in the hob illustration.
- Fasten the spring clips ① using the 3.5 x 25 mm wood screws supplied with the appliance.


Securing the spring clips to natural stone worktops

The exact positioning of the spring clips is shown in the individual hob diagrams.

You will need heavy-duty double-sided adhesive tape (not included with the appliance) to fasten the spring clips.

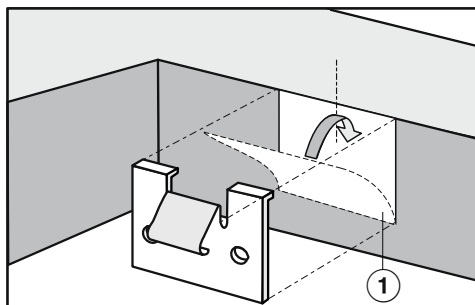

- Attach the double-sided adhesive tape ① along the top edge of the cut-out in the positions shown in the hob illustration.
- Position the spring clips on the top edge of the cut-out and press them firmly into place.

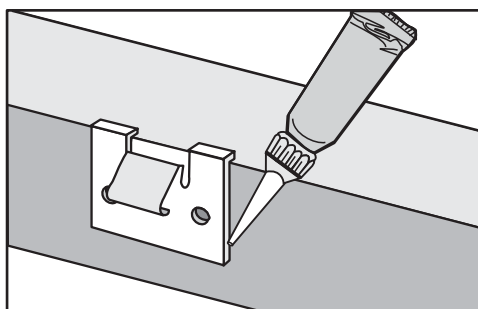

- Coat the side edges and the lower edge of the spring clips with silicone.

Installing a surface-mounted hob

After installation, the hob can only be removed using a special tool.

Installation

The seal under the appliance ensures that the hob will sit securely in the cut-out without slipping. Any gap between the appliance frame and worktop will become smaller over time.

- Feed the mains connection cable for the hob down through the worktop cut-out.
- Place the hob centrally in the cut-out. When doing this, make sure that the sealing strip of the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round.
- If the sealing strip does not sit flush with the worktop in the corners, the corner radius ($\leq R4$) can be carefully cut to fit using a jigsaw.
- Using both hands, press down evenly on the sides of the hob until it clicks into position. When doing this make sure that the sealing strip of the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round the worktop.
- Connect the hob to the electricity supply (see “Installation – Electrical connection”).
- Check that the hob is working.

Installing the hob flush with the worktop

Preparing the worktop for flush-fit installation

- Remember to maintain the minimum safety distances (see “Installation – Safety distances”).
- Create the worktop cut-out.
- Solid wood and tiled worktops: Fix the wooden battens 7 mm below the top edge of the worktop (see “Installation – Installation dimensions for flush-fit installation”).

Installing a flush-fit hob

- Feed the mains connection cable for the hob down through the worktop cut-out.

The gap between the ceramic surface and the worktop must be at least 2 mm wide.

This is required so that the hob can be sealed.

- Centre the hob in the cut-out.
- Connect the hob to the electricity supply (see “Installation – Electrical connection”).
- Check that the hob is working.
- Seal the gap between the hob and worktop with a silicone sealant that is heat-resistant to at least 160 °C.

Electrical connection



Risk of damage from incorrect connection.

Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Miele cannot be held liable for damage or injury caused by unauthorised installation, maintenance or repair work, or by an inadequate or faulty on-site earthing system (e.g. electric shock).

This hob must be connected to the electrical supply by a qualified electrician.

The electrician must be familiar with and comply with the national regulations and any additional regulations of the local electricity provider.

After installation, ensure that all electrical components are shielded and cannot be accessed by users.

Total power rating

See data plate

Connection data

The connection data is quoted on the data plate. Please ensure these match the household mains supply.

Please see wiring diagrams for connection.

Disconnecting devices

It must be possible to disconnect the hob from the mains at all poles using disconnecting devices. A contact distance of at least 3 mm must be observed in the switched-off state. The disconnecting devices are overcurrent protection devices and residual current protection devices.

Disconnecting from the mains



Risk of electric shock from mains voltage.

There is a risk of electric shock if the appliance is reconnected to the mains voltage supply during repair or service work.

After disconnection, ensure the appliance cannot be switched back on by mistake.

To disconnect the appliance from the mains power supply, do one of the following depending on installation:

Fine-wire fuses

- Completely remove the fuse links from the screw caps.

Automatic circuit breakers

- Press the test button (red) until the middle button (black) springs out.

Installation

Built-in circuit breakers

- For circuit breakers of at least type B or C, switch the lever from 1 (on) to 0 (off).

Residual current device

- Residual current device: switch the main switch from 1 (on) to 0 (off) or press the test button.

Mains connection cable

The hob must be connected to the electrical supply with a special connection cable, type H 05 VV-F (PVC insulated) with a suitable diameter.

Please see wiring diagrams for connection.

See the data plate on the hob for the correct voltage and rated load.

Replacing the mains connection cable



Risk of electric shock.

Incorrect connection to the power supply may result in an electric shock.

The mains cable must only be replaced by a qualified electrician.


When replacing the mains cable only use cable type H 05 VV-F (PVC insulated) with a suitable cross section. A suitable connection cable is available from your Miele dealer.

Wiring diagram

Some connection methods are not permitted in all installation locations. Ensure compliance with national regulations and any additional regulations issued by the local electricity provider.

The maximum load per connected live conductor is 3650 W.


All 3 live conductors are required for connecting the hob. No further appliances can be connected to the live conductors.

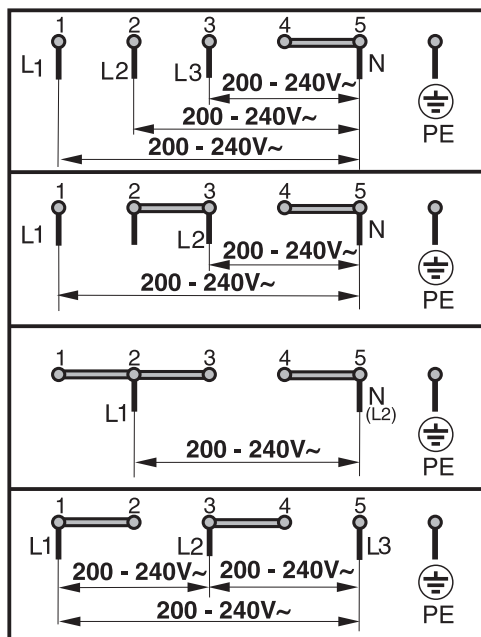


Familiarisation

Your hob

KM 6564 FR, KM 6564 FL

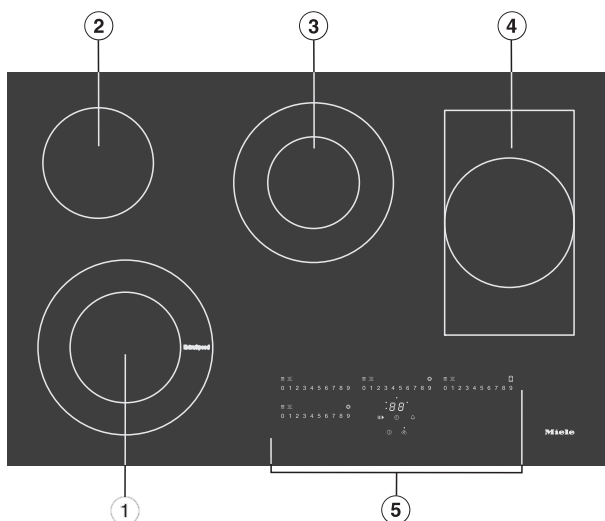


- ① Double circle zone with ExtraSpeed
- ② Single-circle cooking zone
- ③ Double-circle cooking zone
- ④ Single circle cooking zone/extended zone
- ⑤ Controls and indicators

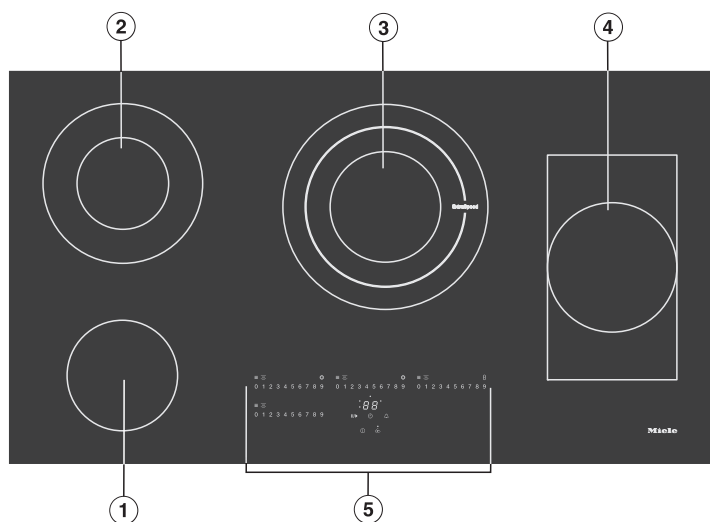

- ① Single-circle cooking zone
- ② Double-circle cooking zone
- ③ Triple circle cooking zone with ExtraSpeed
- ④ Single circle cooking zone/extended zone
- ⑤ Controls and indicators

Familiarisation

Controls and indicators

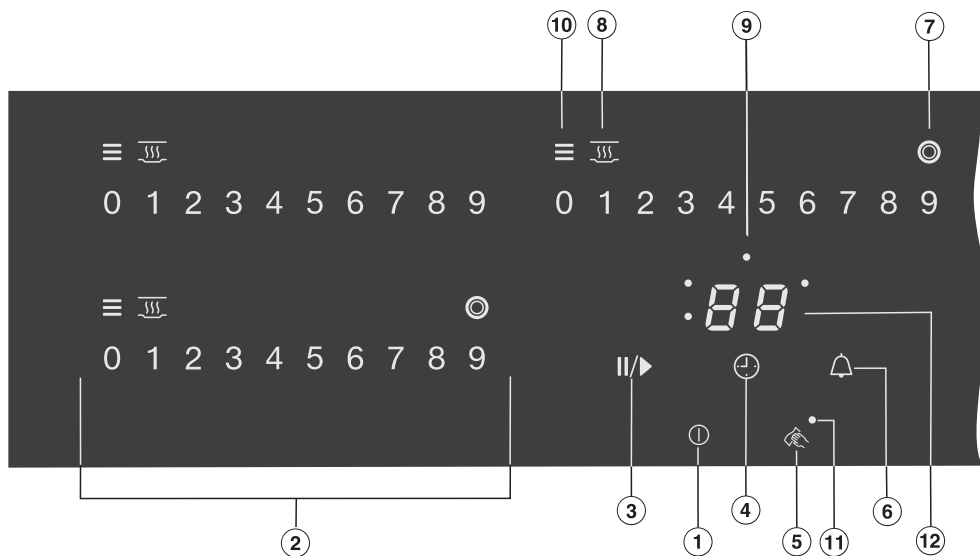

- ① Hob On/Off sensor control
- ② Numerical display
 - To set the power level
 - To set the times
- ③ Stop&Go sensor control
 - To stop/start a cooking process in progress
- ④ Auto switch off sensor control
 - Switches the cooking zones off automatically
- ⑤ Wipe protection sensor control
 - To lock the sensor controls
- ⑥ Minute minder sensor control
- ⑦ Extended cooking zone sensor control
- ⑧ Keeping warm sensor control
 - To activate/deactivate the Keeping warm function
- ⑨ Cooking zone allocation auto switch off
 - Auto switch off for the cooking zone is activated
- ⑩ Residual heat displays
- ⑪ Wipe protection indicator
 - Wipe protection has been activated

⑫ Timer display

- 00 to 99* Duration in minutes
- LL* System lock/safety lock is activated
- dE* Demo mode is activated

Cooking zone data

KM 6564 FR FR, KM 6564 FL		
Cooking zone	Ø in cm	Rating in watts for 230 V
①	14.5/23.0	1500/3200
②	14.5	1200
③	12.0 / 21.0	750 / 2200
④	17.0 / 17.0 x 29.0	1500/2600
		Total: 9200


KM 6565 FR		
Cooking zone	Ø in cm	Rating in watts for 230 V
①	14.5	1200
②	12.0 / 21.0	750 / 2200
③	14.5 / 21.0 / 27.0	1050/2050/3200
④	17.0 / 17.0 x 29.0	1500/2600
		Total: 9200

Familiarisation

Accessories supplied

The accessories supplied with your appliance as well as a range of optional ones are available to order from your Miele dealer (see „Optional accessories“).

WiFi stick XKS 3170 W

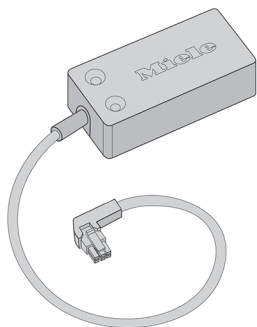


Operation

Hob when switched off

When the hob is switched off, you can only see the printed symbols for the On/Off ① and Wipe protection  sensor controls. More sensor controls light up when the hob is switched on.

Operation

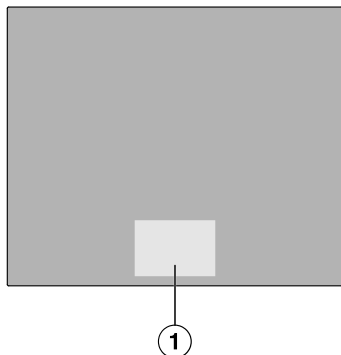

① Sensor controls and indicators

This ceramic glass hob is equipped with sensor controls which react to finger contact.

Each time a sensor control is activated, a buzzer sounds.

For safety reasons, in order to switch the appliance on, the On/Off ① sensor control needs to be touched for a little longer than the other sensors.

Networking

Your hob is supplied with a WiFi stick. The hob can be connected to your home WiFi network or simply to your Miele cooker hood.

Connecting to a network

After installing the Miele app on a mobile device, you can do the following:

- Call up information on the operating status of your hob
- Call up information on the programme sequence of your hob
- Set up a network with other WiFi-enabled Miele domestic appliances
- Call up recipes with the Miele app
- Control a connected Miele cooker hood automatically via the hob settings (Con@ctivity 3.0)

Connection only with the cooker hood

Once you have established a connection with a Miele cooker hood, you can do the following:

- Control a connected Miele cooker hood automatically via the hob settings (Con@ctivity 3.0)

Special functions

Con@ctivity 3.0

Con@ctivity 3.0 is the direct communication system between your hob and a Miele cooker hood. Communication is achieved by means of networking. Con@ctivity 3.0 enables the cooker hood to operate automatically depending on the operating status of your hob.

The Con@ctivity versions of the hob and cooker hood must match.

Further information can be found in the operating and installation instructions for your cooker hood.

Extended cooking zone

If you switch a double or triple cooking zone on, the second heating circuit is always switched on automatically. The second heating circuit of a single circle cooking zone/extended zone and the third heating circuit of a triple cooking zone must be switched on manually.

ExtraSpeed cooking zone

Depending on the model, your hob may not have an ExtraSpeed cooking zone.

Food can be heated more quickly with the ExtraSpeed cooking zone.

Stop&Go

When Stop&Go is activated, all power levels are reduced to 1.

When the function is deactivated, the appliance switches back to the power level that was set last.

Tip: Use this special function if there is a danger of food boiling over.

Auto heat-up

When auto heat-up has been activated, the cooking zone switches on automatically at the highest setting (heat-up boost) and then switches to the power level (continued cooking setting) which you have previously selected.

Timer

The timer can be used for the following two functions:

- For setting the minute minder
- For automatically switching a cooking zone off

You can use the functions simultaneously.

Minute minder

You can set an alarm for activities that are independent of the hob.

Auto switch off

You can set a time after which a cooking zone will switch off automatically. This function can be used for all cooking zones at the same time.

System lock

If the system lock is activated, then the hob cannot be switched on.

Safety lock

The safety lock is activated when the hob is switched on. When the lock is activated, the hob can be operated only under certain conditions.

Familiarisation

Recall

If the hob is switched off by mistake during use, this function can be used to restore all settings. The hob must be switched on again within 10 seconds of being switched off.

Keeping warm

This special function enables food to be kept warm after it has finished cooking. The maximum duration for keeping food warm is 2 hours.

Wipe protection

The hob sensor controls can be locked for 20 s to remove soiling, for example. The ① sensor control is not locked.

Settings

You can adapt the settings of the hob to your personal needs.

Demo mode

This function enables dealers to demonstrate the hob without it heating up.

Residual heat indicator

If a cooking zone is still hot, the residual heat indicator will light up after all cooking zones have been switched off.

The bars of the residual heat indicator go out one after the other as the cooking zone cools down. The last bar only goes out when the cooking zone is safe to touch.

Safety switch-off

Sensor controls are covered

Your hob will switch off automatically if one or several of the sensor controls remain covered for longer than 10 seconds, for example, by finger

contact, food boiling over or by an object. *F* will appear in the timer display for a few seconds. If the ① sensor control is affected, *F* will light up until the object or soiling has been removed. *F* will switch off once you have removed the object or cleaned the hob and the hob will be ready to use again.

Excessive operating time

The safety switch-off mechanism is triggered automatically if a cooking zone is heated for an unusually long period of time. This time depends on the power level selected. If it has been exceeded, the cooking zone switches off and the residual heat indicator appears. If you switch the cooking zone off and on again, it is ready for operation again.

You can adjust the safety switch-off by changing the safety setting (see “Adjusting settings”).

Power level ¹	Maximum operating time [h:min]		
	Safety setting		
	0 ²	1	2
1	10:00	8:00	5:00
1.	10:00	7:00	4:00
2/2.	5:00	4:00	3:00
3/3.	5:00	3:30	2:00
4/4.	4:00	2:00	1:30
5/5.	4:00	1:30	1:00
6/6.	4:00	1:00	00:30
7/7.	4:00	00:42	00:24
8	4:00	00:30	00:20
8.	4:00	00:30	00:18
9	1:00	00:24	00:10

¹ The power levels with a dot are intermediate levels (see “Setting ranges”).

² Factory default setting

Overheating protection and pan protection

Overheating protection

Every cooking zone is equipped with overheating protection. This switches off the cooking zone heating element automatically before it overheats. As soon as the cooking zone temperature has cooled sufficiently, heating is switched on again automatically. The heating also switches off and on when the highest power level is selected.

Pan protection

The ExtraSpeed cooking zone is also equipped with a pan protection mechanism. If you wish to use this function, you will need to alter the

factory setting (see “Adjusting settings”).

The cooking zone heating switches off.  will flash alternately with  on the ExtraSpeed cooking zone's numerical display.

Triggering the overheating protection and pan protection mechanism

The overheating protection and pan protection mechanism may be activated under the following circumstances:

- No cookware is present on the activated cooking zone.
- The cookware being heated is empty.
- The base of the cookware is not sitting evenly on the cooking zone.
- The cookware is not conducting heat properly.

Hob data

The model identifier, serial number and software version of the hob can be displayed.

Optional accessories

Pans

Miele offer a wide range of cookware. These have all been optimised for Miele appliances in terms of functionality and dimensions. Please contact your Miele dealer for more details on individual products.

Cleaning and care products

Ceramic and stainless steel cleaner 250 ml

Removes heavy soiling, limescale deposits and aluminium residues.

Familiarisation

Microfibre cloth

For removing finger marks and light soiling.

Unpacking the hob

- Please stick the data plate for the appliance, supplied with this documentation, in the space provided in the “After sales service” section of this booklet.
- Remove any protective foil and stickers.

Cleaning the hob for the first time

- Before using for the first time, clean the hob with a damp cloth.
- Wipe the hob dry.

Switching on the hob for the first time

The metal components have a protective coating. When the hob is used for the first time, this causes a smell and possibly also vapour. The heating of the induction coils also causes odours in the first few hours of operation. With each subsequent use, the odour is reduced until it disappears completely.

The odour and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Networking

The WiFi connection shares a frequency range with other appliances (including microwave ovens and remote control toys). This can give rise to sporadic or even complete connection failures. Therefore, the availability of featured functions cannot be guaranteed.

Connecting to a network via the app

- The WiFi stick supplied with your appliance must be fitted.
- A home WiFi network is available.
- The signal of your WiFi network is sufficiently strong in the place where your hob is installed.
- There is no direct WiFi connection between the hob and a Miele cooker hood.



- Scan the QR code.

If you have installed the Miele app and have a user account, you will be taken directly to the networking steps.

If you have not yet installed the Miele app, you will be taken to the Apple App Store® or the Google Play Store™.

- Install the Miele app and set up a user account.
- Scan the QR code again.

The Miele app will guide you through the setup process.

Commissioning

Connecting to a network via WPS

- The WiFi stick supplied with your appliance must be fitted.
- A home WiFi network is available.
- The signal of your WiFi network is sufficiently strong in the place where your hob is installed.
- There is no direct WiFi connection between the hob and a Miele cooker hood (Con@ctivity 3.0).
- You must have a WPS (WiFi protected setup) compatible router.

- Switch the hob on.
- Touch the 0 sensor control on any of the numerical displays.
- Touch the 0 and 6 sensor controls at the same time for 6 seconds.

The seconds can be seen counting down in the timer display. After the time has elapsed, a progress light appears in the timer display during the connection attempt (for max. 120 seconds).

The WPS login is active during these 120 seconds.

- Activate the WPS function on your WiFi router.

If the connection was successful, the code **C:02** appears in the timer display. If the connection could not be established, the timer display will show the code **C:01**. You have probably not activated WPS on your router quickly enough. Repeat the steps above.

- Install the Miele app.
- Follow the user navigation in the app.

You can use all Miele@home functions.

Tip: If your WiFi router does not support WPS, please connect via the Miele app.

Connecting only with a cooker hood

You can find the necessary information on connecting the cooker hood in the associated operating and installation instructions.

- The WiFi stick supplied with your appliance must be fitted.
- Miele cooker hood with Con@ctivity 3.0
- The hob is not connected to your home network (Miele@home)

- Switch the hob on.
- Touch the 0 sensor control on any numerical display.
- Touch the 0 and 7 sensor controls at the same time for 6 seconds.

The seconds can be seen counting down in the timer display. After the time has elapsed, a progress light appears in the timer display during the connection attempt. If the connection was successful, the code **C:02** appears in the timer display. If the connection could not be established, the timer display will show the code **C:01**. Repeat the steps above.

When successfully connected, displays 2 and 3 will light up constantly on the cooker hood.

- To quit connection mode on the cooker hood, press the run-on button ⁵ .

Con@ctivity 3.0 is now activated.

Cancelling the process

- Touch any sensor control.

Resetting settings

Reset the settings if you are disposing of your hob, selling it or putting a used hob into operation. This is the only way to ensure that all personal data has been removed and the previous owner will no longer be able to access the hob. Resetting is not required when replacing the router or the WiFi stick.

- Switch the hob on.
- Touch the 0 sensor control on any numerical display.
- Touch the 0 and 9 sensor controls at the same time for 6 seconds.

The seconds can be seen counting down in the timer display.

After this time has elapsed, the code `C:00` is displayed in the timer display for 10 seconds.

Operation

Safety notes for operation

 Risk of fire due to overheated food.

Unattended food can overheat and catch alight.

Do not leave the hob unattended whilst it is being used.

 Risk of burning due to hot cooking zones.

The cooking zones will be hot after use.

Do not touch the cooking zones while the residual heat indicators are on.

 Placing hot cookware on the sensor controls and displays can damage the electronic module underneath.

The sensor controls do not respond.

They may be switched on or off unintentionally.

The hob will switch itself off (see “Familiarisation – Safety switch-off”).

Do not place hot cookware over the sensor controls or displays.

If extremely hot cookware remains on the cooking zone for a longer amount of time after it is switched off, the cooking zone may still be hot even though the residual heat indicator is no longer on.

Proceed with caution when touching the cooking zone even after the residual heat indicator has gone out.

Switching the hob on

- Touch the ① sensor control.

Further sensor controls will light up.

If no further entry is made, the hob will switch itself off after a few seconds for safety reasons.

Switching off a cooking zone/ the hob

Switching the hob off

- To switch off the hob and all the cooking zones, touch the ① sensor control.

Switching off a cooking zone

- To switch off a cooking zone, touch the 0 sensor control on the numerical display for that cooking zone.

Hob power levels

Setting the power level

- Place the cookware on the cooking zone you want to use.
- Touch the appropriate sensor control for the power level you want on the relevant numerical display.

Setting the power level – intermediate levels

The intermediate levels are activated (see “Adjusting settings”).

- Press the numerical display between the sensor controls.

The numbers to the left and right of the interim level light up brighter than the other sensor controls.

Example:

if you have set power level 7., the numbers 7 and 8 will be brighter than the other sensor controls.

Changing the power level

- Touch the appropriate sensor control for the power level you want on the numerical display.

Extended cooking zone

Activating the extended cooking zone

- Touch the  or  sensor control.
- Set the power level you want.

Deactivating the extended cooking zone

- Touch the  or  sensor control.

Activating/deactivating Stop&Go

The power levels and the timer settings cannot be altered; the hob can only be switched off. The minute minder, switch-off, Booster and heat-up boost times continue to run.

If the function is not deactivated within 1 hour, the hob will switch off.

- Touch the  sensor control.

Auto heat-up

The heat-up time depends on which continued cooking setting has been chosen:

Continued cooking level ¹	Heat-up time [min:sec]
1	1:20
1.	2:00
2	2:45
2.	3:25
3	4:05
3.	4:45
4	5:30
4.	6:10
5	6:50
5.	7:10
6	1:20
6.	2:00
7	2:45
7.	2:45
8	2:45
8.	2:45
9	—

¹ The power levels with a dot are intermediate levels (see “Setting ranges”).

Operation

Activating auto heat-up

- Touch the sensor control for the continued cooking level you want until a tone sounds and the sensor control starts to pulsate.

During the heat-up time (see table) for a selected:

- Continued cooking level, the set continued cooking level will flash
- Interim power level, the sensor controls in front of and after the interim power level will pulsate

Deactivating auto heat-up

- Touch the sensor for the continued cooking setting.

or

- Set another power level.

Timer

Setting timer durations

A duration of between 1 min (01) and 99 min (99) can be set.

Durations are entered using the numerical display.

- Enter durations in the order of minutes in tens and then units.

Example:

59 minutes = entry: 5-9

80 minutes = entry: 8-0

After the first number has been entered, the timer display will light up constantly. After the second number has been entered, the first number will move to the left.

Setting the minute minder

- Touch the  sensor control.

The timer display flashes.

- Set the required duration (see “Timer – Setting timer durations”).

Touch the  sensor control or wait 10 seconds to start the minute minder.

Changing the minute minder duration

- Touch the  sensor control.

The timer display flashes.

- Set the required duration (see “Timer – Setting timer durations”).

Touch the  sensor control or wait 10 seconds to start the minute minder.

Deleting the minute minder duration

- Touch the  sensor control.

- Touch  on the numerical display.

Setting the switch-off time

A cooking zone will switch off when the maximum operating time has elapsed, independently of a set switch-off time (see “Familiarisation – Safety switch-off”).

A power level is set for the desired cooking zone.

- Touch the  sensor control repeatedly until the allocation indicator light for this cooking zone starts to flash.

The timer display flashes.

- Set the required duration (see “Timer – Setting timer durations”).

Touch the  sensor control or wait 10 seconds to start the switch-off time.

The switch-off time for the cooking zone elapses and the cooking zone allocation auto switch off indicator light lights up constantly.

Changing the switch-off time

- Touch the  sensor control repeatedly until the indicator light for the cooking zone you require flashes.

The timer display flashes.

- Set the required duration (see “Timer – Setting timer durations”).

Touch the  sensor control or wait 10 seconds to start the switch-off time.

The switch-off time for the cooking zone elapses and the cooking zone allocation auto switch off indicator light lights up constantly.

Deleting the switch-off time

- Touch the  sensor control repeatedly until the auto switch off indicator light for the cooking zone you require flashes.

The timer display flashes.

- Touch the  sensor control on the numerical display.

Setting multiple switch-off times

- To set a switch-off time for another cooking zone, follow the steps described in “Operation – Setting the switch-off time”.

If more than one switch-off time is programmed, the shortest time left will be displayed and the corresponding indicator light will flash. The other indicator lights will light up constantly.

Displaying switch-off times

- If you want to show the time left for another cooking zone which is counting down in the background, touch the  sensor control repeatedly until the indicator light for the zone you require flashes.

The **rounded up** time left is displayed for the required cooking zone.

Using both timer functions at the same time

If you use both functions simultaneously, the shortest time is always displayed. The  sensor control (minute minder) or the indicator light of the cooking zone with the shortest switch-off time flashes.

- If you want to show the times left counting down in the background, touch the  or  sensor control.
- If a switch-off time has been programmed for several cooking zones, touch the  sensor control repeatedly until the indicator light for the required cooking zone flashes.

System lock

Activating the system lock

All sensor controls are locked. A set minute minder time will continue to count down.

- Touch the  sensor control for 6 seconds.

The seconds can be seen counting down in the timer display. When this time has elapsed, **LL** will appear in the timer display. The system lock is activated.

Operation

If a disallowed sensor control is touched while the system lock is activated, *LC* will appear in the timer display for a few seconds and a buzzer will sound.

The settings can be adjusted so that the system lock is activated automatically 5 minutes after the hob has been switched off (see “Adjusting settings”).

Deactivating the system lock

- Touch the ① sensor control for 6 seconds.

LC will appear briefly in the timer display and then the seconds will count down. The system lock is deactivated once the time has elapsed.

Safety lock

Activating the safety lock

When the safety lock is activated:

- The cooking zones and the hob can only be switched off.
- A set minute minder time can be modified.

- Touch and hold the  and  sensor controls at the same time for 6 seconds.

The seconds can be seen counting down in the timer display. When this time has elapsed, *LC* will appear in the timer display. The safety lock is activated.

If a disallowed sensor control is touched while the safety lock is activated, *LC* will appear in the timer display for a few seconds and a buzzer will sound.

Deactivating the safety lock

- Touch and hold the  and  sensor controls at the same time for 6 seconds.

LC will appear briefly in the timer display and then the seconds will count down. Once the time has elapsed, the safety lock function is deactivated.

Activating the Recall function

- Switch the hob on again.
- The previously set power levels flash.
- Touch one of the flashing power level indicators immediately.
- All settings are restored.

Wipe protection

Activating wipe protection

- Touch the  sensor control.

The time counts down in the timer display.

Deactivating wipe protection

- Touch and hold the  sensor control until the timer display goes out.

Hob data

Displaying the model identifier/serial number

There must not be any cookware on the hob.

- Switch the hob on.
- Touch the 0 sensor control on any numerical display.
- Touch the 0 and 4 sensor controls on the numerical display at the same time for 6 seconds.

Numbers will appear in the timer display one after another, separated by a dash.

Example: *12 34* (model identifier KM 1234) – *1 23 45 67 89* (serial number)

Displaying the software version

There must not be any cookware on the hob.

- Switch the hob on.
- Press the 0 sensor control on any numerical display.
- Press the 0 and 3 sensor controls on the numerical display at the same time for 6 seconds.

3 numbers appear in the timer display:

Example: *123* = Software version 1.23.

Activating/deactivating demo mode

- Switch the hob on.
- Touch the 0 sensor control on any numerical display.
- Touch the 0 and 2 sensor controls on the numerical display at the same time for 6 seconds.

The following will flash in the timer display for a few seconds:

- *dE* alternating with *On* (demo mode activated)
or
- *dE* alternating with *OFF* (demo mode deactivated)

Setting range

The hob is programmed with 9 power levels at the factory. If you wish to fine-tune a setting, you can extend the power level range to 17 power levels (see “Adjusting settings”).

	Setting ranges	
	Factory setting 9 levels without intermediate levels	fine 9 levels with intermediate levels
Melting butter, chocolate etc. Dissolving gelatine	1–2	1–2.
Warming small quantities of food/liquids Keeping warm food which sticks easily Cooking rice	1–3	1–3.
Warming liquid and semi-solid foods Thickening sauces, e.g. Hollandaise Making porridge Making omelettes, lightly fried eggs Steaming fruit	2–4	2–4.
Defrosting deep frozen food Steaming vegetables, fish Cooking pasta, pulses Cooking broths, pulse soups	3–6	3–5.
Bringing to the boil and continued cooking of large quantities of food	4–6	4.–5.
Gently frying meat, fish, escalopes, sausages, fried eggs, pancakes, etc. (without overheating the fat).	6–7	6–7.
Cooking hash browns, pancakes, etc.	7–8	7–8.
Boiling large quantities of water Flash frying large amounts of meat Bringing to the boil	8–9 ¹	8.–9 ¹

These settings should only be taken as a guide. They apply to 4 normal servings. With deep pans, large quantities or when cooking without the lid, a higher setting is required. For smaller quantities, select a lower setting.

¹ The ExtraSpeed cooking zone works on power level 9 with an extra-high output.

Test food acc. to EN 60350-2

9 power levels without intermediate levels are programmed at the factory.

For testing in accordance with the above standard, programme the hob to 9 power levels with intermediate levels (see “Adjusting settings”).

Setting range

Test food	Ø Pan base (mm)	Lid	Setting range	
			Pre-heat	Cook
Heating oil up	150	No	—	1–2
Pancakes	180 (Sandwich base)	No	9	5.–7.
Frying deep frozen chips	According to the standard	No	9	9

Good to know


How electric hobs work

Single-circle cooking zones have one heating element, whilst double-circle cooking zones and extended zones have two. Depending on the model, the heating elements may be separated by an insulating ring.

When a power level is selected, heating is activated. The glowing heating element can be seen through the ceramic surface. The heater rating of the cooking zones depends on the power level selected, and is electronically regulated. Electronic regulation of the heater rating switches the heating on and off to maintain a constant heater rating. This is known as “timing”.


Each cooking zone has overheating protection, which stops the ceramic surface from becoming too hot, see “Familiarisation – Overheating protection”.

Single-circle cooking zone

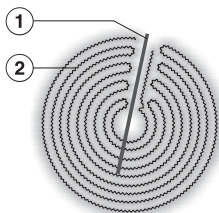

- ① Overheating protection
- ② Heating element

Double-circle cooking zone

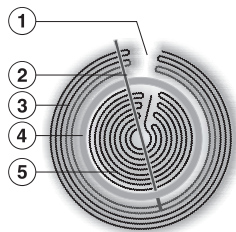

- ① Intentional gap (technical requirement)
- ② Overheating protection
- ③ Outer heating element
- ④ Isolating ring
- ⑤ Inner heating element

Cookware

Most suitable cookware

The most suitable cookware is metal pots and pans with thick bases. The base is slightly concave when cold.

When the cookware is heated, the base expands, causing the cookware to rest flat on the cooking zone. This conducts the heat optimally.



Cold

Hot

Less suitable cookware

Glass, ceramic or stoneware cookware is less suitable. These materials do not conduct the heat well.

Unsuitable cookware

Unsuitable cookware includes pans made of plastic or aluminium foil. These materials melt at high temperatures.

Cookware tips

- To make optimum use of the cooking zones, choose cookware with a suitable base diameter, see “Familiarisation – Cooking zone data”.
- Use only pots and pans with smooth bases. Rough bases can scratch the ceramic glass.
- Always lift cookware to move it. This will help prevent scratching. If any scratches do appear as a result of cookware being pushed around, this will not affect the function of the hob. These scratches are normal signs of use and are not grounds for making a complaint.
- Please note that the cookware diameter quoted by manufacturers often refers to the maximum diameter or diameter of the top rim. The diameter of the base (generally smaller) is more important.

- Please be aware that the properties of the cookware base can affect the evenness with which the food heats up (e.g. when making pancakes).
- Cookware made of aluminium or with an aluminium base can leave a metallic sheen on the hob. This can be removed with the ceramic and stainless steel cleaner, see “Cleaning and care”.

Adjusting settings

Accessing the Settings menu

The hob is switched off.

- Press the ① and II/► sensor controls until *PC* appears in the timer display.

After a few seconds, *P:01* (programme 01) and *C:01* (code) will flash alternately in the timer display. On hobs that have 3 cooking zones, an additional display appears at the back left.

The programme is displayed in the front left and rear left numerical displays.

The code is displayed on the front right numerical display.

Example:

Programme 3 =

front left 3, rear left 0

Programme 14 =

front left 4, rear left 1

Setting parameters

For a two-digit parameter number you need to first set the tens position.

- To set the **unit digits**, touch the required number on the **front left** numerical display.
- To set the **tens digits**, touch the required number on the **rear left** numerical display.

Setting the code

- Touch the relevant number on the **front right** numerical display.

Saving the settings

- Touch the ① sensor control until the displays go out.

To avoid saving the settings

- Touch the II/► sensor control until the displays go out.

Adjusting settings

Parameter ¹		Code	Settings ²
1	Demo mode	0	Demo mode off
		1	Demo mode on ³
3	Factory default	0	Do not restore factory default settings
		1	Restore factory default settings
4	Hob power level setting range	0	9 power levels without intermediate levels + Booster
		1	9 power levels with intermediate levels + Booster ⁴
5	Pan protection with ExtraSpeed cooking zone	0	Off
		1	Not sensitive
		2	Normal
		3	Highly sensitive
6	Audible tone when a sensor control is touched	0	Off ⁵
		1	Quiet
		2	Medium
		3	Loud
7	Timer buzzer	0	Off
		1	Quiet
		2	Medium
		3	Loud
8	System lock	0	System lock can only be activated manually
		1	System lock activated automatically
9	Maximum operating time	0	Safety setting 0
		1	Safety setting 1
		2	Safety setting 2

Adjusting settings

Parameter ¹		Code	Settings ²
10	WiFi registration	0	Not active/deactivated
		1	Active but not configured
		2	Active and configured (cannot be selected; displays whether connection was successful)
		3	Connection possible via WPS push button
		4	WiFi reset to default (0)
		5	Direct WiFi connection of hob and cooker hood without Miele app (Con@ctivity 3.0)
12	Sensor control reaction speed	0	Slow
		1	Normal
		2	Fast

¹ Programmes not shown here have no allocation.

² The factory default setting is shown in bold.

³ After the hob has been switched on, *dE* appears in the timer display for several seconds.

⁴ In the text and charts, the intermediate levels are shown with a dot after the number for better understanding.

⁵ The keypad tone of the On/Off sensor control cannot be switched off.

Safety notes on cleaning and care

 Risk of burning due to hot surfaces.

All parts of the hob may be hot after use.

Switch the hob off.

Allow the hob to cool down before cleaning it.

All surfaces could be discoloured or damaged if unsuitable cleaning agents are used or if residues from suitable cleaning agents are heated on the hob. All surfaces are susceptible to scratching.

Allow the surfaces to cool down before cleaning the hob.

Remove all cleaning agent residues immediately.

Never use abrasive sponges or cleaning agents.

► Do not use a steam cleaner to clean the hob.

► Do not use pointed objects for cleaning.

When to clean

- Before each use:
Clean the entire hob and the base of the cookware.
- After every use:
Clean the entire hob.
- Once a week:
To prevent cleaner residue being burned on, clean the ceramic glass

surface with the Miele ceramic and stainless steel cleaner (see “Optional accessories – Cleaning and care products”) or with a ceramic glass cleaner. Please follow the cleaning agent manufacturer’s instructions.

Cleaning the ceramic glass surfaces

Removing soiling caused by sugar, plastic or aluminium foil

- Should any sugar, plastic or aluminium foil spill or fall onto the hot ceramic surface while it is in use, switch off the hob.
- Then carefully scrape off these residues **immediately** whilst they are still hot, using a scraper suitable for use on glass.
- Afterwards, clean the ceramic surface in its cooled state, as described below.

Removing light soiling

- Clean the entire ceramic surface of the hob with a damp, soft cloth and a solution of water and a little washing-up liquid. Please follow the cleaning agent manufacturer’s instructions.

Removing stubborn soiling

- Remove any coarse soiling with a damp cloth and more stubborn soiling with a scraper suitable for use on glass.
- Clean the glass ceramic surface with the Miele ceramic and stainless steel cleaner (see “Optional accessories – Cleaning and care products”) or with a proprietary ceramic glass cleaner. Please follow the cleaning agent manufacturer’s instructions.

Cleaning and care

Finishing the cleaning process

- Remove all cleaning agent residues with a damp cleaning cloth.
- Dry the ceramic surface of the hob after cleaning.

Unsuitable cleaning agents

To avoid damaging the surfaces of the appliance, do not use:

- Cleaning agents containing soda, alkalines, ammonia, acids or chlorides
- Stain and rust removers
- Abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- Cleaning agents containing solvents
- Dishwasher cleaning agents
- Grill and oven sprays
- Hard, abrasive brushes
- Eraser stain remover blocks
- Sponges

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact your Miele dealer.

More information to help you remedy faults yourself can be found at www.miele.de/support/customer-assistance.



Messages in the display

Issue	Cause and remedy
After the hob has been switched on, LL appears in the timer display for a few seconds.	The system lock is activated. ■ Deactivate the system lock (see “Operation – Deactivating the system lock”).
	The safety lock is activated. ■ Deactivate the safety lock (see “Operation – Deactivating the safety lock”).
After the hob has been switched on, dE appears briefly in the timer display. The cooking zones do not heat up.	The hob is in demo mode. ■ Press the 0 sensor control on any numerical display. ■ Touch the 0 and 2 sensor controls at the same time until dE flashes alternately with GF in the timer display.
F flashes in the timer display and the hob switches off automatically.	One or more of the sensor controls are covered, e.g. by finger contact, food boiling over or an object. ■ Clean off any soiling and/or remove the object (see “Familiarisation – Safety switch-off”).

Unexpected behaviour

Issue	Cause and remedy
The sensors show increased sensitivity or fail to react.	The sensitivity level of the sensors has changed. ■ Make sure that there is no direct light (from the sun or from an artificial source) falling onto the hob. The area surrounding the hob must not be too dark. ■ Make sure that there is nothing covering the sensors or the hob. Take any pans off the hob and wipe away any food deposits. ■ Interrupt the power supply to the hob for approx. 1 minute. ■ If the problem persists after power has been restored, please contact your Miele dealer.

Troubleshooting

Issue	Cause and remedy
The heating element for one of the cooking zones switches on and off.	This “timing” of the heating element is normal. It is caused by the electronic control for the heater rating, see “Good to know – How electric hobs work”. If the heating switches on and off at the highest power level, the overheating protection has been triggered, see “Familiarisation – Overheating protection”.
A cooking zone or the whole hob switches off automatically.	It has been operated for too long. ■ Switch the hob or the cooking zone back on (see “Familiarisation – Safety switch-off”).
	The overheating protection mechanism has been activated. ■ Allow the hob to cool down. ■ Rectify the causes of the overheating (see “Familiarisation – Overheating protection”). ■ Check that the hob is working. ■ If the problem occurs again, contact your Miele dealer.
A  flashes alternating with  in the ExtraSpeed cooking zone display.	The pan protection mechanism has triggered. ■ Touch the sensor for selecting the cooking zone you want briefly. The display changes and only  flashes. You can now use the hob again.
One or more residual heat indicators are flashing.	There was an interruption to the power supply during operation or when residual heat was present.

Unsatisfactory results

Issue	Cause and remedy
The food in the cookware does not heat up when the auto heat-up is switched on.	Large quantities of food are being cooked. ■ Start cooking at the highest power level and then switch back manually.
	The cookware is not conducting heat properly. ■ Use different cookware that is able to better conduct heat.

Issue	Cause and remedy
The food in the cookware is barely heating up or is not heating up at all.	The cookware is not conducting heat properly. ■ Use different cookware that is able to better conduct heat.
	The pan is too large for the cooking zone. ■ Use a smaller pan.
	The extended cooking zone is not activated. ■ Activate the extended cooking zone.

General problems or technical faults

Issue	Cause and remedy
The hob or cooking zones will not switch on.	There is no power to the hob. ■ Check if the mains fuse has tripped. Contact a qualified electrician or your Miele dealer (for the minimum fuse rating, see data plate).
	There may be a technical fault. ■ Disconnect the appliance from the electricity supply for approx. 1 minute by – tripping the relevant mains fuse or screwing the fuse out completely, or – switching off at the residual current device. ■ If, after resetting the trip switch in the mains fuse box or the residual current device, the appliance will still not turn on, contact your Miele dealer.
A smell and vapours are given off when the new hob is being used.	The metal components have a protective coating. When the hob is used for the first time, this causes a smell and possibly also vapour. The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Customer Service

Information to help you rectify faults yourself and about Miele spare parts can be found at www.miele.com/service.

Contact in the event of a fault

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or Miele Customer Service.

You can book a Miele Customer Service call-out online at service.support@miele.ae.

Contact information for your Miele dealer can be found at the end of this document.

Please quote the model identifier and serial number of your appliance (SN) when contacting your Miele dealer. These can be found on the data plate or see “Operation – Hob data”.

Data plate

Stick the extra data plate supplied with the appliance here. Make sure that the model identifier matches the one specified on the back cover of this document.

Warranty

For information on the appliance guarantee specific to your country please contact your Miele dealer. See end of this booklet for contact details.

Technical data

Power rating in off mode	$\leq 0,5\text{ W}$
Time until automatic switch to off mode	10 Min.

Miele in Saudi Arabia:**Awad Badi Nahas Trading Co. Ltd.**

Medina Road, P.O. Box 11529

Jeddah 21463

Kingdom of Saudi Arabia

Tel. +966 12 2560888

Hotline for customer care 920003240

(Sat – Thu; 8 am – 5 pm)

Fax +966 12 2560555

E-mail: info@awadnahas.com

Website: www.awadnahas.com

Miele in United Arab Emirates:**Miele Appliances Ltd.**

Showroom 1 Eiffel 1 Building

Sheikh Zayed Road, Umm Al Sheif

P.O. Box 114782 - Dubai

United Arab Emirates

Tel. +971 4 3044 999

Fax +971 4 3418 852

800-MIELE (64353)

E-mail: info@miele.ae

Website: www.miele.ae

Webshop: shop.miele.ae

Manufacturer: Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany

KM 6565 FR

en-AE, SA

M.-Nr. 11 004 250 / 05 / 002