

Program overview

Program	Temperature	Speed	Load
Normal Cotton, linen, and mixed-fiber fabrics made of both cotton and linen.	Hot +, Hot, Warm + , Warm, Cold	Max. ☹	Full load (17.6 lb/8 kg) Small load (5.5 lb/2.5 kg)
Proofing Treating microfibre fabric, ski wear, or table linens/drapes made from mainly synthetic fibers to provide a finish which is resistant to water and dirt.	Warm +	High, Med. , Slow, ☹	Small load (5.5 lb/2.5 kg) Small load (6.6 lb/3 kg)
Delicates For delicate fabrics made from synthetic fibers.	Hot +, Hot, Warm + , Warm, Cold	Med. , Slow, ☹	Full load (17.6 lb/8 kg)
Sanitize Cotton or linen fabrics with direct skin contact or for which special hygiene requirements apply.	Sanitize	Max. , High, ☹	Small load (4.4 lb/2 kg) Small load (4.4 lb/2 kg)
Handwash For delicate fabrics which are only suitable for hand washing.	Hot, Warm + , Cold	High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Dress Shirts Pre-treat collars and cuffs depending on the level of soiling.	Hot +, Hot, Warm + , Warm, Cold	Med. , Slow, ☹	Small load (4.4 lb/2 kg)
MobileStart The Miele app is used to select programs and operate the appliance.			
QuickIntenseWash For lightly or moderately soiled fabrics which are also suitable for washing in the Normal program.	Hot +, Warm +	Max. , High, Med. , Slow, ☹	Full load (11 lb/5 kg)
Express Cotton fabrics that have hardly been worn or are only very lightly soiled.	Warm +, Warm , Cold	High, Med. , Slow, ☹	Half load (7.7 lb/3.5 kg) Small load (4.4 lb/2 kg)
Darks/Denims Black and dark garments made from cotton, mixed fibers, and denim.	Warm + , Warm, Cold	High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Extra White For white fabrics made of cotton or linen without special hygiene requirements.	Hot +	Max. , High, ☹	Full load (17.6 lb/8 kg) Small load (5.5 lb/2.5 kg)
Outdoor Performance outerwear (e.g., jackets and pants) made from membrane fabric such as Gore-Tex®, SYMPATEX®, WINDSTOPPER®, etc.	Warm +, Warm, Cold	Med, Slow, ☹	Small load (5.5 lb/2.5 kg)
Table Linens/Drapes Table linen and drapes made of cotton and linen.	Hot +, Hot, Warm + , Warm, Cold	High, Med. , Slow, ☹	Full load (13.2 lb/6 kg) Half load (6.6 lb/3 kg)
Sportswear Sportswear such as jerseys and leggings, as well as microfibre and fleece garments.	Hot +, Hot, Warm + , Warm, Cold	High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Woolens 🐑 Wool or wool-blend fabrics.	Warm, Cold	High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Silks 🐛 Silks and other hand-washable fabrics with no wool content. Place tights, bras, etc., in a laundry bag.	Warm, Cold	Slow, ☹	Very small load (2.2 lb/1 kg)
Wrinkle-free Synthetic or mixed-fiber fabrics, or wrinkle-free cotton.	Hot +, Hot, Warm + , Warm, Cold	High, Med. , Slow, ☹	Half load (6.8 lb/3 kg) Full load (13.2 lb/6 kg)
Baby Clothes Baby clothes, baby towels, bath towels, toweling items, bibs made from cotton.	Hot +, Hot, Warm + , Warm, Cold	Max. , High, Med. , Slow, ☹	Full load (11 lb/5 kg)
Towels For linen or cotton towels used for personal hygiene.	Hot +, Hot, Warm + , Warm, Cold	Max. , High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Downs Jackets, sleeping bags, pillows, and other down-filled items.	Hot +, Hot, Warm + , Warm, Cold	High, Med. , Slow, ☹	Small load (4.4 lb/2 kg)
Pillows Washable pillows with synthetic filling.	Hot +, Hot, Warm + , Warm, Cold	High, Med. , Slow, ☹	2 pillows (40 x 80 cm) or 1 pillow (60 x 80 cm)
Clean Machine Sanitize	Sanitize	Slow	Without load

With frequent washing at low temperatures there is a danger of a build-up of bacteria in the washing machine. Cleaning the washing machine will significantly reduce bacteria and prevent the build-up of unpleasant odors.

PROGRAM OVERVIEW

Detergent

	Detergents recommended by Miele		Miele Capsules		
	Miele UltraPhase 1 and 2		☹	☹	☹
Normal	✓	-	-	✓	✓
Proofing	-	-	-	✓	-
Delicates	✓	✓	✓	✓	-
Sanitize	✓	-	-	✓	✓
Handwash	-	✓	✓	✓	-
Dress Shirts	✓	-	-	✓	✓
QuickIntenseWash	✓	-	-	-	-
Express	✓	-	✓	✓	-
Darks/Denims	✓	-	✓	✓	-
Extra White	✓	-	✓	✓	✓
Outdoor	-	✓	-	-	-
Table Linens/Drapes	✓	-	✓	✓	✓
Sportswear	-	✓	-	-	-
Woolens 🐑	-	✓	✓	-	-
Silks 🐛	-	✓	-	-	-
Wrinkle-free	✓	-	✓	✓	✓
Baby Clothes	✓	-	-	✓	✓
Towels	✓	-	✓	✓	✓
Downs	-	✓	-	-	-
Pillows	✓	-	-	-	-

- ✓ Recommendation
- No recommendation

- ☹ Special-purpose detergents (e.g., WoolCare)
- ☹ Fabric care (e.g., fabric softener)
- ☹ Additives (e.g., booster)

Cleaning and care

Cleaning the detergent drawer

Washing at low temperatures and the use of liquid detergent can lead to a build-up of bacteria in the detergent drawer.

- Remove the siphon and clean under warm running water.

Cleaning the siphon inside the compartment

Remove the siphon from the compartment and clean under warm running water.

- Clean all compartments with warm water.

Press down the release button and, at the same time, pull the drawer completely out of the machine.

Remove the insert for liquid detergents is located in the compartment of the detergent drawer.

Remove the insert. Clean the insert thoroughly with warm water.

Replace the detergent drawer.

Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent-drawer housing.

Remove the detergent drawer slightly open to allow it to dry.

Sanitize info (cleaning the drum)

Washing at low temperatures and/or using liquid detergents can cause bacteria and odors to build up in the washing machine. Use the *Clean Machine* program to clean the washing machine. Note the message in the display: Sanitize info: Run a high temp. program or the "Clean Machine" program

Remove the release catch.

Frequently asked questions ...

Problem	Possible cause and solution
The control field remains dark.	There is no power to the machine. <ul style="list-style-type: none"> Check whether the plug is plugged in. Check whether the fuse has tripped. The washing machine has switched off automatically to save energy. <ul style="list-style-type: none"> Switch the washing machine on again by turning the program selector.
The following appears in the display: ⚠ Service Door release fault F35	The door is not closed properly. The door lock could not engage. <ul style="list-style-type: none"> Close the door again. Start the program again. If the fault message appears again, contact Miele Customer Service.
⚠ Drainage See 📖	The drain is blocked or restricted. The drain hose has been fixed too high. <ul style="list-style-type: none"> Clean the drain filter and the drain pump. The maximum drain height is 39 3/8" (1 m).
⚠ Water intake See 📖	The water intake is blocked or restricted. <ul style="list-style-type: none"> Check whether the faucet is turned on properly. Check whether the intake hose is kinked. Check whether there is sufficient water pressure. The filter in the water intake is blocked. <ul style="list-style-type: none"> Clean the filter.
⚠ Waterproof system Turn off 📖 Service	The water protection system has reacted. <ul style="list-style-type: none"> Close the faucet. Contact Customer Service.
⚠ Service Fault F	There is a fault. <ul style="list-style-type: none"> Disconnect the washing machine from the power supply. Unplug the appliance or switch off the breaker. Wait at least 2 minutes before reconnecting the washing machine to the power supply. Switch the washing machine on again. Restart the program. If the fault message appears again, contact Miele Customer Service.

CLEANING AND CARE

Quick Start Guide

Washing machine



FREQUENTLY ASKED QUESTIONS ...

This Quick Start Guide is not a substitute for the operating instructions supplied with the appliance! It is essential to familiarize yourself with the washing machine before using it for the first time. Please read the operating instructions carefully and pay particular attention to the IMPORTANT SAFETY INSTRUCTIONS.