

Programme chart

Programme	Load (in kg)	Temperature	Items	Extra
ECO 40-60 ¹	8.0		For normally soiled cotton garments. A laundry load consisting of mixed cottons that are intended for washing at 40°C or 60°C can be washed in the same wash cycle. This programme is the most efficient in terms of energy and water consumption for washing cottons.	
Cottons	8.0	Cold to 90°C	Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc.	(A), (B), (C), (D)
Minimum iron	4.0	Cold to 60°C	Synthetic and mixed fibre textiles and easy care cotton.	(A), (B), (C), (D)
Delicates	3.0	Cold to 40°C	Delicate garments made from synthetic fibre, mixed fibre, rayon and viscose.	(A), (B), (C), (D)
Woollens	2.0	Cold to 40°C	Curtains specified as machine-washable by the manufacturer.	
Dark garments/Denim	3.0	Cold to 60°C	Machine-washable or hand-washable wool or wool blend fabric. If the care label does not specify a temperature, wash using the cold setting.	(A), (B), (C), (D)
MobileStart			Black and dark garments made from cotton, mixed fibres and denim.	
QuickPowerWash	4.0		The Miele App is used for selecting programmes and operating the machine.	(A), (D)
Express 20	3.5	40°C – 60°C	Moderately soiled garments which are also suitable for washing in the Cottons programme.	(A)
Shirts	1.0/2.0	Cold to 40°C Cold to 60°C	Cotton garments that have hardly been worn or are only very lightly soiled. Shirts and blouses made of cotton and mixed fibre. Wash silk shirts and blouses in the Delicates programme.	(A), (B), (C), (D)
Proofing	2.5	40°C	If the preset Pre-ironing option is switched off, the maximum load capacity is increased to 2.0 kg.	
Drain/Spin	–	–	For treating microfibre fabric, skiwear and table linen made from mainly synthetic fibres to provide a water and dirt resistant finish. Drain only: Select for the spin speed.	

¹Energy labelling programme according to AS/NZS 2040.1 and AS/NZS 2040.2.


(A) = Short; (B) = Water +; (C) = Pre-wash; (D) = Pre-ironing

Detergent

Miele recommended detergents		Miele detergents			Miele capsules		
		UltraWhite	UltraColor				
ECO 40-60		✓	✓	–	✓	✓	
Cottons		✓	✓	–	✓	✓	
Minimum iron		–	✓	–	✓	✓	
Delicates		–	✓	✓	✓	–	
Woollens		–	–	✓	–	–	
Dark garments/Denim		–	✓	✓	✓	–	
QuickPowerWash		✓	✓	–	–	–	
Express 20		–	✓	–	✓	–	
Shirts		✓	✓	–	✓	✓	
Proofing		–	–	–	✓	–	
Drain/Spin		–	–	–	–	–	
✓	Recommended		Specialist detergents (e.g. WoolCare)				
–	Not recommended		Fabric care (e.g. fabric softener)				
			Additive (e.g. booster)				

Cleaning the detergent dispenser drawer
Washing at low temperatures and the use of liquid detergent can lead to a build-up of mould and bacteria in the detergent dispenser drawer.


- For hygiene reasons, clean the entire drawer at regular intervals.

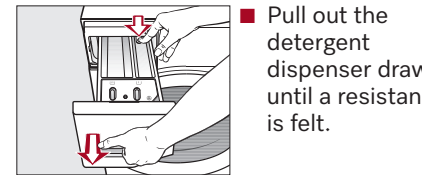

- Press down the release button and, at the same time, pull the drawer right out of the machine.

- Clean the detergent drawer with warm water.

Cleaning the siphon tube and the fabric softener channel

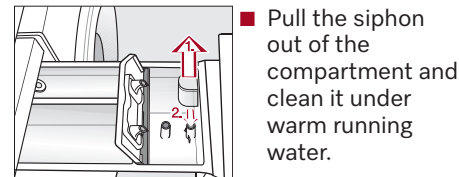


- Clean the siphon tube in the same way.
- Refit the siphon.



Liquid starch results in clogging. If clogged, the siphon in the compartment will not work and the compartment can overflow.
Clean the siphon particularly thoroughly after using liquid starch a few times.

Cleaning and care

Cleaning the detergent dispenser drawer housing

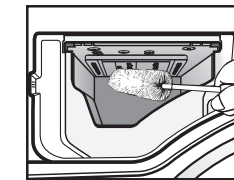

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer housing.

- Replace the detergent dispenser drawer.

Useful tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

Cleaning the drum (Hygiene info)
Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odours to build up in the washing machine. Use the *Cottons* 90°C programme to clean the washing machine. Clean the drum no later than the point at which the indicator light and light up in the time display.

Problem solving guide

With the help of the following guide, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be remedied without contacting Miele. This will save you time and money because you won't need a service call.

Problem	Possible cause and remedy
The control field remains dark.	The washing machine has an automatic safety lock. The washing machine can only be started within 60 seconds of the last operational step on the control panel. ■ Touch the sensor control. You then have another 60 seconds in which to start the wash programme. There is no power to the washing machine. ■ Check whether the mains plug is plugged in and switched on. ■ Check whether the circuit breaker has tripped. The washing machine has switched off automatically to save energy. ■ Switch the washing machine back on by turning the programme selector.
F and 34 alternate in the time display.	The door is not closed properly. The door lock could not engage. ■ Close the door again. ■ Start the programme again. If the fault message appears again, contact Miele.
The fault indicator light lights up. F and l alternate in the time display and the buzzer sounds.	The water outlet is blocked or restricted. The drain hose has been fixed too high. ■ Clean the filter and the drain pump (see the operating instructions). ■ The maximum drain height is 1 m.
The fault indicator light lights up. F and D alternate in the time display and the buzzer sounds.	The water inlet is blocked or restricted. ■ Check whether the tap is turned on properly. ■ Check whether the inlet hose is kinked. ■ Check whether there is sufficient water pressure. The filter in the water inlet is blocked. ■ Clean the filter (see the operating instructions).
The fault indicator light lights up. F and B alternate in the time display and the buzzer sounds.	The water protection system has reacted. ■ Turn off the tap. ■ Call Miele.

Problem	Possible cause and remedy
F and XXX alternate in the time display and the buzzer sounds.	There is a fault. ■ Disconnect the washing machine from the electricity supply, either by switching it off at the wall socket and withdrawing the plug, or by disconnecting it at the circuit breaker. ■ Wait at least 2 minutes before reconnecting the washing machine to the electricity supply. ■ Then switch the washing machine back on. ■ Restart the programme. If the fault message appears again, contact Miele.
-D- lights up in the time display.	The programme selector was moved to a different position after the programme had started. ■ Turn the programme selector back to the original position.
The indicator light lights up.	Excessive foam has built up during washing. ■ Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.
The i indicator light lights up and l appears in the time display.	A programme using a temperature above 60°C has not been run for a long period of time. ■ Run the <i>Cottons</i> 90°C programme using the Miele IntenseClean machine cleaner or a universal powder detergent. This will clean the washing machine and prevent a build-up of bacteria and odours.
F and 37 appear alternately in the time display.	The <i>Pre-ironing</i> Extra which runs at the end of the programme could not be carried out properly. ■ Check that the washing machine is standing level. ■ Check whether the maximum delivery head of 1 m has been exceeded. If the fault message appears again, contact Miele. The washing machine can still be used, however without the <i>Pre-ironing</i> Extra.
F and 35 alternate in the time display.	The door lock has jammed. ■ Call Miele.
The door cannot be pulled open during a programme.	The drum is locked during a programme. ■ Follow the instructions in "6. Starting the programme – Adding or removing laundry during a programme sequence".



Quick Start Guide

Washing machine



These short instructions are not a substitute for the operating instructions supplied with the appliance. It is essential to familiarise yourself with the washing machine before using it for the first time. Take note of the Warning and Safety Instructions, as well as the full descriptions on how to use your appliance.

