 


Applications

⚠ Before using the washer-dryer for the first time, ensure that it is correctly installed and connected. Install and connect the appliance as described in the operating instructions.

 
It is **essential** to read the separate operating instructions.

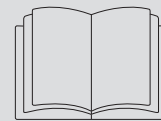

You can use this washer-dryer to:

- **wash separately**
with a maximum load of 8.0 kg,
- **dry separately**
with a maximum load of 4.0 kg,
- or
- **wash and dry in a continuous sequence**
with a maximum load of 4.0 kg.

Operation

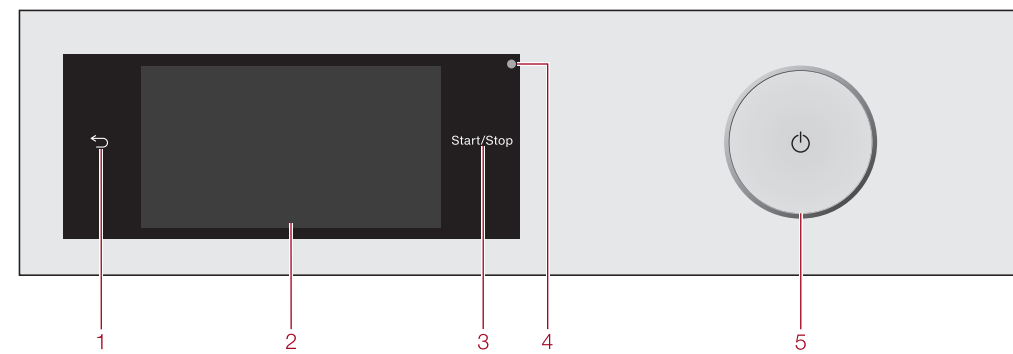

Touch display and sensors

The ↵ and Start/Stop sensors and the sensors in the display react to fingertip contact.

The touch display can be scratched by pointed or sharp objects, e.g. pens. Only touch the display with your fingers.

- 1 **↵ sensor**
Takes you back a level in a menu.
- 2 **Touch display**
- 3 **Start/Stop sensor**
Touching the Start/Stop sensor starts the selected programme or cancels a programme that has already started. The sensor flashes slowly as soon as it is possible for a programme to be started and then lights up constantly after the programme has started.
- 4 **Optical interface**
For service technicians.
- 5 **⏻ sensor**
For switching the washer-dryer on and off. The washer-dryer switches off automatically to save energy. It is switched off 15 minutes after the end of the programme/Anti-crease phase, or after being switched on if no further selection is made.

Main menu

After switching on the washer-dryer, the main menu will appear in the display. You can access all important sub-menus from the main menu.

Touch the ⏻ sensor at any time to return to the main menu. Values that have not yet been confirmed with the OK sensor are not saved when you return to the main menu.

Washing

For selecting the wash programme.

Drying

For selecting the drying programme.

Washing + Drying

For selecting programmes which include a continuous washing and drying sequence.

- ☆ **Favourite programmes**
12 of your saved programmes.

MobileStart

The washer-dryer can be operated remotely via the Miele@mobile App.

Assistant

Guides you step by step so that you can select the optimum washing and drying programme.

Maintenance

Maintenance options for the TwinDos system and the *Clean machine* and *Rinse out fluff* programmes.

Settings

For altering the washer-dryer's electronics to suit changing requirements.

Operating the touch display

Scrolling through menus

You can scroll to the right or the left by swiping your finger across the screen. The orange bar under the pictures shows that there are further options to choose from.

Options

 
Touch an option in the menu to select it. If there are multiple options, the selected option will be highlighted in orange.

Pull-down menu

Touch the top edge of the screen in the middle and drag down with your finger.

Separate washing

1. Preparing the laundry

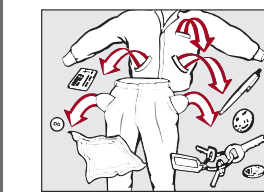

- Empty all pockets.

⚠ Foreign objects (e.g. nails, coins, paper clips etc.) can cause damage to fabrics and to components in the machine.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (see "ABC of Stains" on the Miele website.).

 
2. Selecting a programme

Switching the washer-dryer on

- Press the ⏻ sensor.

Programme selection

- Touch the Washing sensor.
- Scroll to the right of the display until the programme you want appears.
- Touch the sensor for that programme. The display will then change to the standard menu for the programme. There are 3 other ways to select a programme:

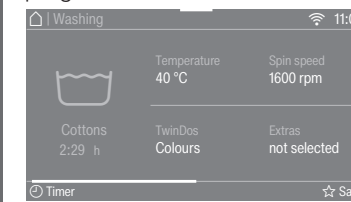

1. Favourite programmes
2. The Washing/Drying assistant
3. Miele MobileStart

3. Selecting programme settings

Selecting the temperature

- Touch the *Temperature* sensor and select the temperature you want.

Selecting the spin speed

- Touch the *Spin speed* sensor and select the spin speed you want.

Activating TwinDos

TwinDos dispensing is automatically activated for all programmes in which dispensing is possible.

- Switching TwinDos on or off
- Touch the *TwinDos* sensor, select *Off* or *On* and confirm with OK.

Selecting Extras

- Touch the *Extras* sensor and select one or more Extras.

Activating CapDosing

- Touch the *CapDosing* sensor and select the Cap you want to use.

 
Selecting stains

- Touch the *Stains* sensor and select the type of stains in your load from the list.

⌚ Timer

You can use the Timer to set the finish time or the start time for a programme.

- 1 **Detergent dispenser drawer**
- 2 **Control panel**
- 3 **Access to filters, pumps and emergency release**
- 4 **Door**
- 5 **Access panel for TwinDos containers**

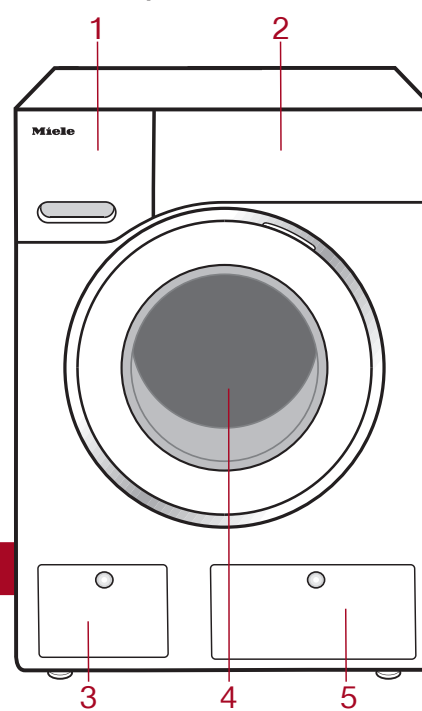

4. Loading the drum

Opening the door

- Reach under the door grip and pull the door open.
- Unfold the laundry and load loosely in the drum.
- Always observe the maximum recommended load for each programme.

Tip: The maximum load size for the programme selected will appear in the pull-down menu.

Closing the door

- Make sure that no items are caught between the door and the seal.
- Shut the door with a gentle swing.

5. Adding detergent

Detergent can be dispensed via TwinDos, the detergent dispenser drawer or CapDosing.

TwinDos

- The optimum amount of UltraPhase 1 and UltraPhase 2 will be dispensed automatically according to the colour mix of the load.
- Touch the *TwinDos* sensor in the standard menu of the programme.

Detergent dispenser drawer

- Pull out the detergent drawer and add detergent to the compartments or .

CapDosing

There are different types of capsules available. Each capsule contains the correct amount of detergent for one wash cycle.

- Touch the Cap sensor in the standard menu of the programme, select the type of capsule and place a capsule in the compartment.

Separate drying

6. Starting the programme

- Touch the slowly flashing *Start/Stop* sensor.

The door will lock and the programme will start. The programme status will appear in the display.

7. At the end of the programme

The door remains locked during the Anti-crease phase.

- Touch the *Start/Stop* sensor.
- Pull open the door.
- Remove the laundry.

⚠ Check that all items have been removed from the drum.

2. Selecting a programme

 
Switching the washer-dryer on

- Press the ⏻ sensor.

Selecting a programme

- Touch the *Drying* sensor.
- Scroll to the right of the display until the programme you want appears.
- Touch the sensor for that programme. The display will then change to the standard menu for the programme.

See the section "After each washing or drying programme" under "Washing and drying in one continuous sequence".



There are 3 other ways to select a programme:

1. Favourite programmes
2. The Washing/Drying assistant
3. Miele MobileStart

3. Selecting programme settings

- Selecting a thermospin spin speed**
- Touch the *Spin speed* sensor.
- Select the desired spin speed.

Selecting the drying level

- Touch the *Drying level* sensor.
- Select the desired drying level.

Selecting Extras

- Touch the *Extras* sensor.
- Select one or more Extras.
- Confirm with the OK sensor.

Timer

You can use the Timer to set the finish time or the start time for a programme.

4. Loading the drum

Opening the door

- Reach under the door grip and pull the door open.
- Load the laundry loosely in the drum.

Do not overload the drum. Overloading can cause unnecessary wear and tear of the laundry, give a disappointing drying result and cause more creasing.

- Remove foreign objects like detergent dispensing devices from the laundry.

⚠ They can melt and damage the dryer and the laundry.

Closing the door

- Shut the door with a gentle swing.

- Make sure that no items are caught between the door and the seal.
Tip: The maximum load size for the programme selected will appear in the pull-down menu.

5. Starting the programme

- Touch the slowly flashing *Start/Stop* sensor.
- The door will lock and the drying programme will start. The programme status will appear in the display.

The mains water tap must be kept open for drying.

6. At the end of the programme

The door remains locked during the Anti-crease phase.

- Touch the *Start/Stop* sensor.

The door will unlock.

If you have unloaded the drum during the Anti-crease phase, make sure you spread out the laundry to cool it down.

- Pull open the door.
- Remove the laundry.

See the section "After each washing or drying programme" under "Washing and drying in one continuous sequence".

- Switch the washer-dryer off.

Changing the programme sequence

Cancelling a programme

You can cancel a programme at any time after it has started.

- Touch the *Start/Stop* sensor. The following will appear in the display: Cancel the programme?
- Select Yes.

Removing the laundry

- Wait until the symbol in the display goes out and the door is unlocked.
- Pull the door open and unload the drum.

Selecting another programme

- Close the door.
- Select the required programme.
- Press the *Start/Stop* sensor.

Interrupting a programme

- Switch the washer-dryer off with the ⏻ sensor.
- To continue the programme, switch the washer-dryer back on with the ⏻ sensor.

⚠ Do not switch the washer-dryer off before the end of a drying programme unless all items are removed immediately and spread out to cool down.

Making changes

It is not possible to change the programme, the temperature, the spin speed or the selected Extras after the programme has started. This prevents the appliance being operated unintentionally, e.g. by children.

Adding laundry

- Laundry can be added or removed if Add laundry is illuminated in the display.
- Touch the Add laundry sensor. The following will appear in the display: Please wait
- The programme will stop and the door will unlock.
- Pull open the door and add or remove items.
- Close the door.
- Touch the *Start/Stop* sensor. The programme will continue.

