








 










## Operating instructions Wine unit




















To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

# Contents

---

|  |           |
|--|-----------|
| <b>Warnings and safety notes .....</b>   | <b>5</b>  |
| <b>Sustainability and environmental protection .....</b>   | <b>14</b> |
| Caring for the environment .....   | 14        |
| How to save energy .....   | 15        |
| <b>Familiarisation.....</b>  | <b>16</b> |
| Appliance description .....  | 16        |
| Appliance overview .....   | 16        |
| Display.....   | 18        |
| Settings mode  .....  | 19        |
| Feature lighting  .....   | 19        |
| Lock function  /  .....      | 19        |
| Switching off the wine unit (all wine conditioning zones together)  .....                                     | 19        |
| Sabbath mode  .....   | 19        |
| Information on Sabbath mode  .....  | 19        |
| Time before door alarm  is triggered.....   | 19        |
| Miele@home  .....   | 20        |
| Keypad tone  /  .....        | 20        |
| Alarms and buzzers  /  ..... | 20        |
| Display brightness  .....   | 21        |
| Temperature unit °C/°F .....   | 21        |
| Demo mode  .....  | 21        |
| Factory defaults  .....   | 21        |
| Information on the wine unit  .....   | 21        |
| Active AirClean filter display  .....   | 22        |
| Accessories supplied .....   | 22        |
| Safety .....   | 23        |
| Temperature alarm.....   | 23        |
| Door alarm .....   | 24        |
| Using the door lock.....   | 24        |
| Adjusting the interior fittings .....  | 25        |
| Removing and reinserting the wooden shelves .....  | 25        |
| Adjusting the wooden shelf (FlexiFrame) to the bottle size .....   | 25        |
| Maximum capacity .....   | 26        |
| Maximum load for the wooden shelves .....  | 26        |
| Maximum load with the stacking aid .....   | 27        |
| Labelling the labelling strip (NoteBoard).....   | 27        |

|   |           |
|---|-----------|
| <b>Commissioning</b> .....  | <b>29</b> |
| Before using for the first time .....   | 29        |
| Connecting the wine unit .....  | 29        |
| Activating the charcoal filter (Active AirClean filter)  .....   | 29        |
| Setting up the SommelierSet .....   | 29        |
| Positioning the wooden slats on the wooden shelves .....  | 30        |
| Setting up the stacking aid .....   | 30        |
| Switching the wine unit on.....   | 30        |
| Switching the wine unit off .....   | 30        |
| Switching off for longer periods of time .....  | 31        |
| <b>Operation</b> .....  | <b>32</b> |
| Setting the temperatures in the wine conditioning zones .....   | 32        |
| Temperature range.....  | 32        |
| Temperature display for the wine conditioning zones .....   | 32        |
| Setting the humidity (ActiveHumidity) in the lower wine conditioning zone  ..  | 33        |
| Humidity range .....  | 33        |
| Querying the current humidity level  .....   | 33        |
| SommelierSet .....  | 34        |
| Removable tray with silicone mat .....  | 34        |
| Glasses holder .....  | 35        |
| Bottle presenter .....  | 35        |
| Bottle box.....   | 35        |
| Accessories box .....   | 35        |
| <b>Adjusting settings</b> .....   | <b>36</b> |
| Explanation of the different settings.....  | 36        |
| Setting the brightness of the feature lighting  .....  | 36        |
| Switching the lock function  /  on .....                  | 36        |
| Switching Sabbath mode  on .....   | 37        |
| Switching Sabbath mode  off.....   | 37        |
| Changing the time before the door alarm  is triggered .....  | 37        |
| Setting up Miele@home for the first time .....  | 37        |
| Deactivating the WiFi connection .....  | 37        |
| Activating the WiFi connection.....   | 38        |
| Switching off the keypad tone  .....   | 38        |
| Switching on the keypad tone  .....  | 38        |
| Changing the volume of the alarms and buzzers  /  ..... | 38        |
| Changing the display brightness  .....   | 39        |
| Changing the temperature unit °C/°F .....   | 39        |
| Switching off demo mode  .....   | 39        |
| Resetting the settings to their factory defaults  .....  | 39        |
| Activating the Active AirClean filter display  .....   | 39        |

# Contents

---

|   |           |
|---|-----------|
| <b>Cleaning and care .....</b>                                    | <b>40</b> |
| Cleaning agents .....   | 40        |
| Preparing the wine unit for cleaning .....                        | 40        |
| Cleaning the inside of the appliance .....                        | 41        |
| Replacing the Active AirClean filter (charcoal filter).....       | 42        |
| Confirming that the Active AirClean filter has been changed ..... | 43        |
| Cleaning the front of the appliance and the side panels .....     | 43        |
| Cleaning the door seal .....                                      | 43        |
| Cleaning the ventilation gaps .....                               | 43        |
| After cleaning .....  | 43        |
| Automatic defrosting .....  | 43        |
| <b>Troubleshooting.....</b>                                       | <b>44</b> |
| <b>Customer Service Department .....</b>                          | <b>50</b> |
| Contact in the event of a fault .....                             | 50        |
| Guarantee .....   | 50        |
| <b>Optional accessories.....</b>                                  | <b>51</b> |
| <b>Installation .....</b>   | <b>52</b> |
| Installation site .....   | 52        |
| Climate range .....   | 53        |
| Ventilation requirements .....                                    | 53        |
| Installing several wine units/refrigeration appliances.....       | 54        |
| Changing the door hinging .....                                   | 54        |
| Fitting supplied wall spacers .....                               | 54        |
| Installing the wine unit .....                                    | 55        |
| Aligning the wine unit.....                                       | 55        |
| Integrating the wine unit in a run of kitchen units .....         | 56        |
| Appliance dimensions.....   | 58        |
| Electrical connection .....                                       | 60        |
| <b>Copyrights and licences .....</b>                              | <b>62</b> |

This wine conditioning unit complies with all current local and national safety requirements. Inappropriate use can, however, lead to personal injury and material damage.

Read the operating and installation instructions carefully before using the wine conditioning unit. They contain important information on safety, installation, use and maintenance. This is to protect yourself from injury, and from damaging your wine conditioning unit.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the wine conditioning unit as well as the safety instructions and warnings.

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and pass them on to any future owner.

 Risk of injury from broken glass.

If installed at altitudes above 1500 m there is a risk of the glass in the appliance door breaking because of changes in air pressure. Shards of glass can cause severe injury.

### Correct application

- This wine conditioning unit is intended for use in the home and in similar environments, for example
  - in shops, offices and similar work settings
  - on agricultural estates
  - by the guests in hotels, motels, bed & breakfasts and other typical home settings.

This wine conditioning unit is not intended for outdoor use.

- The wine unit is intended for domestic use only for storing wine. The wine unit is not suitable for freezing food. Any other usage is not permitted.

## Warnings and safety notes

---

► The wine conditioning unit is not suitable for storing and keeping cool medicines, blood plasma, laboratory preparations or other such materials or products. Incorrect use of the wine conditioning unit for such purposes can cause deterioration of the items stored. The wine conditioning unit is not suitable for use in areas where there is a risk of explosion.

Miele cannot be held liable for damage resulting from improper or incorrect use of the appliance.

► This wine conditioning unit may only be used by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised whilst using it. The wine conditioning unit may only be used by these people without supervision if they have been shown how to use it in a safe way and recognise and understand the consequences of incorrect operation.

### Safety with children

► Children under 8 years of age must be kept away from the wine conditioning unit unless they are constantly supervised.

► Children aged 8 and older may only use the wine conditioning unit without supervision if they have been shown how to use it in a safe manner. Children must be able to understand and recognise the possible dangers caused by incorrect operation.

► Children must not be allowed to clean or maintain the wine conditioning unit unsupervised.

► Please supervise children in the vicinity of the wine conditioning unit and do not let them play with it.

► Danger of suffocation! Whilst playing, children could become entangled in packaging (such as plastic wrapping) or pull it over their head and suffocate. Keep packaging material away from children.

### Technical safety

► The coolant circuit has been checked for leaks. The refrigeration appliance complies with statutory safety requirements and the appropriate EU directives.



► Warning: fire hazard/flammable materials. This symbol is on the compressor and indicates flammable materials. Do not remove this sticker.

The refrigerant inside the appliance (details on the data plate) is environmentally friendly but flammable.

The use of this refrigerant does, however, sometimes lead to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the refrigerant flowing around the cooling circuit. Unfortunately, this cannot be avoided, but it does not affect the performance of the wine unit.

When transporting and installing the wine unit, ensure that no parts of the cooling circuit are damaged. Splashes of refrigerant can damage the eyes and leaking refrigerant can ignite.

In the event of damage:

- Avoid naked flames or anything which creates a spark.
- Disconnect the wine unit from the mains electricity supply.
- Ventilate the room where the wine unit is located for several minutes.
- Contact the Miele Customer Service Department.

► The more refrigerant there is in a wine unit, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of a combustible gas/air mixture building up. For every 8 g of refrigerant at least 1 m<sup>3</sup> of room space is required. The amount of refrigerant in the wine unit is stated on the data plate inside the appliance.

► To avoid the risk of damage to the wine conditioning unit, make sure that the connection data (fuse rating, frequency and voltage) on the data plate corresponds to the household supply.

Check that this is the case before connecting the wine conditioning unit. Consult a qualified electrician if in any doubt.

## Warnings and safety notes

---

► The electrical safety of this wine unit can only be guaranteed when continuity is complete between it and an effective earthing system. It is essential that this basic safety feature is present.

If in doubt, the electrical installation should be checked by a qualified electrician.

► Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronised with the mains power supply (e.g. island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard.

The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronised with the mains power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of BS OHSAS 18001–2 ISO 45001.

► If the electrical connection cable supplied is damaged, it must only be replaced by an original spare part to prevent a hazard for the user. Miele can only guarantee the safety of the appliance when original Miele spare parts are used. For safety reasons, such replacement may only be carried out by a qualified specialist or the Miele Customer Service Department.

► Do not connect the wine conditioning unit to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.

► If moisture gets into electrical components, it could cause a short circuit. Therefore, do not operate this wine conditioning unit in areas which are exposed to moisture (e.g. in a garage or utility room).

► This wine conditioning unit must not be used in a non-stationary location (e.g. on a ship).

► Do not use a damaged wine conditioning unit. It could be dangerous. Check the wine conditioning unit for visible signs of damage.

► This wine unit is not intended for use as a built-in appliance.

► The wine conditioning unit must be isolated from the electricity supply during installation, maintenance and repair work.



- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ While the wine conditioning unit is under warranty, repairs should only be undertaken by a Miele authorised service technician. Otherwise the warranty is invalidated.
- ▶ Faulty components must only be replaced with genuine Miele original spare parts. Miele can only guarantee the safety standards of the appliance when Miele replacement parts are used.
- ▶ This wine unit is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This lamp must only be used for the purpose for which it is intended. The lamp is not suitable for room lighting. Replacement lamps may only be fitted by a Miele authorised technician or by the Miele Customer Service Department. This wine unit contains several light sources with at least energy efficiency class G.

### Proper installation

- ▶ Change the door hinging (if necessary) as described in the installation instructions supplied with the appliance.
- ▶ Always wear protective gloves when transporting and installing the wine unit.
- ▶ Two people are required to install the wine unit.

## Warnings and safety notes

---

### Correct use

- ▶ This wine unit is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed. The climate range is stated on the data plate inside the wine unit. A lower ambient temperature will cause the compressor to switch off for longer periods, meaning that the wine unit is unable to maintain the required temperature in some circumstances.
- ▶ Do not cover or block the air vents as this could impair the efficiency of the appliance, increase the electricity consumption and could cause damage to the components.
- ▶ If the wine unit is used for storing food which contains fat or oil, make sure that it does not come into contact with plastic components. Any spillages of oil or fat could cause stress cracks to the plastic and cause it to break or split.
- ▶ Risk of fire and explosion. Do not store explosive materials in the wine conditioning unit or any products containing propellants (e.g. spray cans). Electrical components can cause flammable mixes of gases to ignite.
- ▶ Danger of explosion. Do not operate any electrical appliances inside the wine conditioning unit. Danger of sparking and explosion.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.

### Accessories and spare parts

- ▶ Only use original Miele accessories. If other parts are used, warranty, performance and product liability claims will be invalidated.
- ▶ Miele will guarantee to supply functional spare parts for a minimum of 10 years and up to 15 years following the discontinuation of your wine unit.

### Cleaning and care

► Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.

► Do not use a steam cleaning appliance to clean this wine conditioning unit.

The steam could reach electrical components and cause a short circuit.

► **WARNING! DANGER of injury and damage!** Do not use any mechanical or other types of aids which are not recommended by the manufacturer to accelerate the defrosting process.

► Sharp edged or pointed objects will damage the evaporator, causing irreversible damage to the wine conditioning unit. Do not use sharp edged or pointed objects to

- remove frost and ice,
- remove labels, stickers etc.

### Transport

► Always transport the wine conditioning unit in an upright position and in its original transport packaging to avoid damage in transit.

► Risk of injury and damage. The wine unit is very heavy and must be transported by two people.

## Warnings and safety notes

---

### Disposal of your old appliance

► Children playing could become trapped in the wine unit and could suffocate.

- Remove the appliance door.
- Leave the wooden/metal shelves in the wine unit so children cannot climb inside.
- If the wine unit has a door lock, make sure that children cannot lock themselves inside while playing as this could endanger their lives.

► Risk of electric shock!

- Cut the plug off the mains connection cable.
- Cut the mains connection cable off the old appliance.

Dispose of the plug and mains connection cable separately from the old appliance.

► During and after disposal, make sure that the wine unit is not placed near petrol or other flammable gases and liquids.

► Risk of fire due to escaping oil or refrigerant!

The refrigerant and oil inside the appliance are flammable. In high enough concentrations, escaping refrigerant or oil may ignite if they come into contact with an external heat source.

During disposal, make sure that the cooling circuit is not damaged in order to prevent refrigerant and oil escaping in an uncontrolled manner (see the data plate for details of the refrigerant).

► Splashes of coolant can damage the eyes. Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the coolant channels in the condenser,
- bending any pipework, or
- scratching the surface coating.

## Warnings and safety notes

---

### Symbol on the compressor (depending on model)

This information is only relevant for recycling. There is no risk during normal operation.



- The oil in the compressor can be fatal if swallowed or if it penetrates the airways.

# Sustainability and environmental protection

---

## Caring for the environment

### Disposing of the packaging material

The packaging material is used for handling and protects the appliance from transport damage. The packaging material used is selected from materials which are environmentally friendly for disposal and can generally be recycled.

Recycling the packaging material reduces the use of raw materials. Use material-specific collection points for valuable materials and take advantage of return options. Your Miele dealer will take the packaging material away.

### Disposing of your old appliance

Electrical and electronic appliances contain many valuable materials. They also contain certain materials, compounds and components which were essential for their correct functioning and safety. These could be hazardous to human health and to the environment if disposed of with household waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with household waste.



Take care not to damage your refrigeration appliance before or during disposal in an authorised, environmentally friendly manner.

This is to ensure that refrigerant in the cooling circuit and oil in the compressor is contained, and will not leak into the environment.

Instead, please make use of officially designated collection and disposal points to dispose of and recycle electrical and electronic appliances in your local community, with your dealer or with Miele, free of charge. By law, you are solely responsible for deleting any personal data from the old appliance prior to disposal. You are legally obliged to remove any old batteries which are not securely enclosed by the appliance and to remove any lamps without destroying them, where this is possible. These must be taken to a suitable collection point where they can be handed in free of charge. Please ensure that your old appliance poses no risk to children while being stored for disposal.


## How to save energy ...

- |                            |   |
|----------------------------|---|
| <b>Installation site</b>   | <p>The wine unit has to cool more often at higher ambient temperatures and consumes more energy in the process. Therefore:</p> <ul style="list-style-type: none"><li>- Install the wine unit in a well-ventilated room.</li><li>- Do not install the wine unit near to a heat source (heater element, cooker).</li><li>- Protect the wine unit from direct sunlight.</li><li>- Ensure an ideal ambient temperature of 20 °C.</li><li>- Clean the ventilation gaps on a regular basis to remove any dust.</li></ul>  |
| <b>Temperature setting</b> | <p>The colder the temperature, the higher the energy consumption. The following settings are recommended:</p> <ul style="list-style-type: none"><li>- +12 to +14 °C</li></ul>   |
| <b>Use</b>                 | <p>Energy consumption is increased by heat input and impeded air circulation. Therefore:</p> <ul style="list-style-type: none"><li>- Only open the appliance door when necessary and for as short a time as possible. Arrange the wine bottles in such a way that makes them easy to find in the appliance.</li><li>- Always close the appliance door properly after opening it.</li><li>- Keep wooden shelves arranged as they were when the appliance was delivered.</li><li>- Do not overfill the wooden shelves to allow air to circulate.</li><li>- Keep the fan air ducts in the wine unit clear.</li><li>- Use the wall spacers. The wall spacers on the back of your wine unit are designed to ensure that the declared energy consumption is achieved.</li></ul> |


# Familiarisation

## Appliance description

### Appliance overview

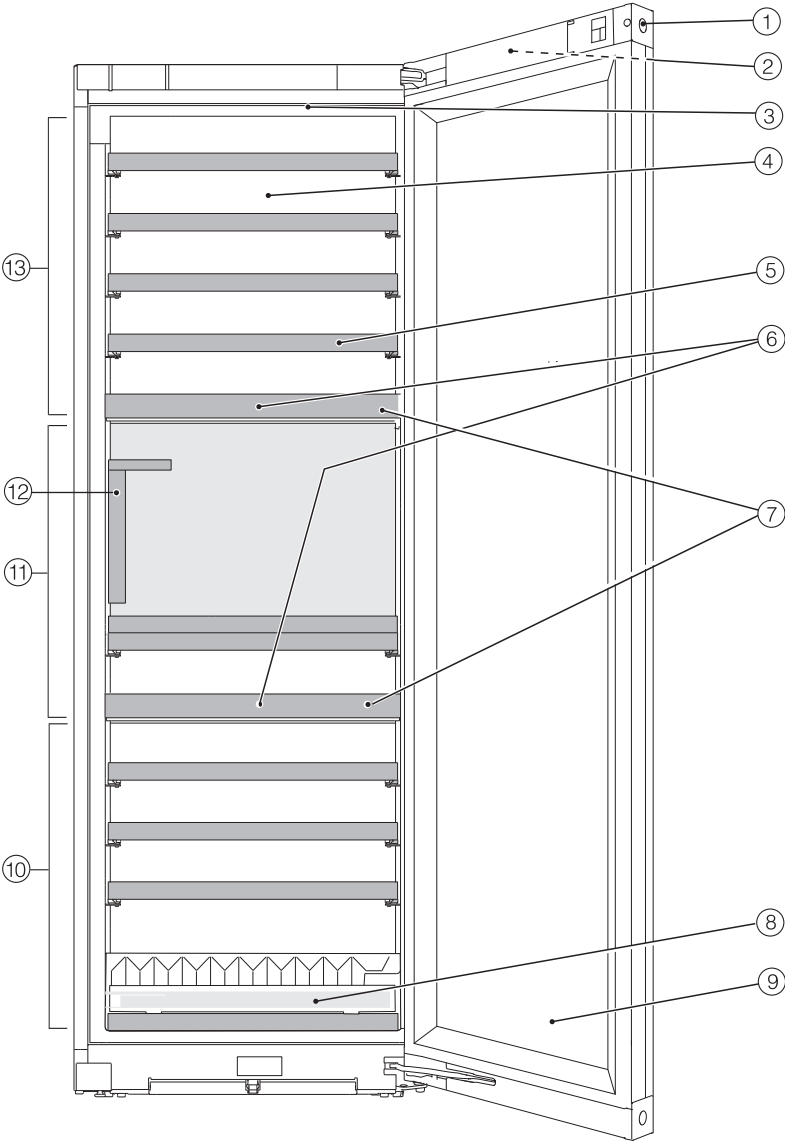



- ① Door lock
- ② Outer display on appliance door
- ③ Interior lighting and feature lighting   
(in all wine conditioning zones)
- ④ Dry rear panel to prevent condensate
- ⑤ Wooden shelves with labels (FlexiFrames with Noteboard)
- ⑥ Charcoal filters: the Active AirClean filters are located behind the NoteBoards.
- ⑦ Insulating plate between the wine conditioning zones: different types of wine can be stored at different temperatures at the same time.
- ⑧ Stacking aid for optimised bottle storage
- ⑨ Glass door: the safety glass door with UV filter and protects your wine from harmful UV rays.
- ⑩ Lower wine conditioning zone with humidity setting (ActiveHumidity) for long-term storage
- ⑪ Middle wine conditioning zone
- ⑫ SommelierSet with:  
Glasses holder,  
Removable tray,  
Bottle presenter,  
Bottle and accessories box (with lid and pen tray)
- ⑬ Upper wine conditioning zone

# Familiarisation

## Display

The display can be scratched by pointed or sharp objects, e.g. pens.

Only touch the display with your fingertips.

It is possible that the display will not react to finger contact if your fingers are cold.

 



- ① Demo mode display  
(only visible when the Demo mode function has been switched on)
- ② Temperature display for upper wine conditioning zone and sensor control for setting the temperature
- ③ Feature lighting sensor control ☂  
For switching the interior lighting on and off when the appliance door is closed
- ④ Temperature display for middle wine conditioning zone and sensor control for setting the temperature
- ⑤ Temperature display for lower wine conditioning zone and sensor control for setting the temperature and humidity (ActiveHumidity)
- ⑥ Settings mode ⚙  
sensor control for adjusting various settings in Settings mode
- ⑦ Display for Miele@home connection status  
(only visible when the Miele@home function has been set up)

## Settings mode

### Feature lighting

The interior lighting can be set to remain on when the appliance door is closed so your wines can be on display at all times.

The feature lighting is switched on and off using the  sensor control in the display. When the feature lighting is switched on, the  sensor control lights up orange.

The feature lighting can be switched on or off separately for each individual wine conditioning zone (see “Adjusting settings”).

### Lock function /

When the lock function is switched on, it protects the wine unit from being switched off unintentionally and being adjusted unintentionally by unauthorised persons, e.g. children.

If you just want to quickly adjust the temperature, for example, you can deactivate the lock function temporarily (see “Adjusting settings”).

## Switching off the wine unit (all wine conditioning zones together)

See “Commissioning – Switching the wine unit off”.

## Sabbath mode

The wine unit offers a Sabbath mode for the purposes of religious observance (see “Adjusting settings”).

When Sabbath mode is switched on, the following are deactivated temporarily:

- Interior lighting when the appliance door is opened
- Feature lighting when the appliance door is closed
- The display
- All visual and audible signals
- An active WiFi connection
- Reminders (e.g. Active AirClean filter display): the set time interval is paused

All other functions switched on previously remain activated.

When Sabbath mode is switched on, you cannot make any settings on your wine unit.

## Information on Sabbath mode

You can call up the Sabbath mode version here.

## Time before door alarm is triggered

You can set the time before the appliance door alarm is triggered here (see “Adjusting settings”).

# Familiarisation

## Miele@home @

Your wine unit is equipped with an integrated WiFi module.

Networking is deactivated at the factory.

Here you can set up the Miele@home function for the first time, deactivate and activate the WiFi or reset the network configuration (see “Adjusting settings”).

To use this feature, you will need:

- A WiFi network
- The Miele app
- A Miele user account. You can create a user account via the Miele app.

The Miele app will guide you as you connect your wine unit to your home WiFi network.

Once your wine unit is connected to your WiFi network, you can use the app to carry out the following activities, for example:

- Call up information on the operating status of your wine unit
- Change the settings on your wine unit

Connecting your wine unit to your WiFi network will increase energy consumption, even when the wine unit is switched off.

Make sure that the signal of your WiFi network is sufficiently strong in the place where you want to set up your wine unit.

## Availability of the WiFi connection

The WiFi connection shares a frequency range with other appliances (including microwave ovens and remote control toys). This can give rise to sporadic or even complete connection failures. Therefore, the availability of featured functions cannot be guaranteed.

## Miele@home availability

The ability to use the Miele app depends on the availability of the Miele@home service in your country.

The Miele@home service is not available in every country.

For information about availability, please visit [www.miele.com](http://www.miele.com).

## Miele App

The Miele App is available to download free of charge from the Apple App Store® or from the Google Play Store™.



## Keypad tone 🔔/🔊

You can switch the keypad tone on or off here (see “Adjusting settings”).

## Alarms and buzzers 🔔/🔊

You can change the volume of the alarms and buzzers (e.g. in the event of a door alarm or a fault message) here. Alternatively, you can switch the alarms and buzzers off completely if you find them annoying (see “Adjusting settings”).


### Display brightness

You can adjust the display brightness to the lighting conditions in the room here (see “Adjusting settings”).

### Temperature unit °C/°F

You can set the required temperature unit (°Celsius or °Fahrenheit) here (see “Adjusting settings”).

### Demo mode

You can switch off demo mode here if it has been switched on as a default setting ( will show in the display) (see “Adjusting settings”).

Demo mode allows the wine unit to be presented in the showroom without the cooling system being switched on. This setting is not needed for domestic use.

### Factory defaults

You can reset the wine unit's settings to their factory defaults here (see “Adjusting settings”).

**Tip:** Reset the settings to the factory defaults when disposing of your wine unit, selling it or putting a used wine unit into operation. This will reset the network configuration so that your personal data is deleted from the wine unit. This will also ensure that a previous owner is no longer able to access the wine unit.

### Information on the wine unit

You can call up the model identifier and serial number of your wine unit here.

Keep this appliance data to hand:


- For integrating the wine unit into your WiFi network (see “Adjusting settings – Setting up Miele@home for the first time”)
- When reporting an appliance fault to the Miele Customer Service Department (see “Customer Service Department”)

# Familiarisation

---

## Active AirClean filter display

Filtering the air through the Active AirClean filters ensures that the air remains free from dust and odours.

The Active AirClean filter display  will remind you approx. every 12 months that the Active AirClean filters have to be replaced (see “Cleaning and care – Replacing the Active AirClean filter”).

You can activate the Active AirClean filter display here (see “Adjusting settings”).

## Accessories supplied

### Key for locking the appliance door

### Active AirClean filter

The Active AirClean filters between the wine conditioning zones ensure optimum air quality by filtering the incoming air.



### Chalk pen

Use the chalk pen supplied to label the NoteBoards on the wooden shelves. By labelling the NoteBoards you will have a good overview of the types of wine being stored.

## Safety

### Temperature alarm

The wine unit is equipped with a temperature alarm so that the temperature cannot rise or fall unnoticed and therefore damage the wine.

If the temperature becomes too warm or too cold,   will light up red in the corresponding temperature display. An alarm will also sound until the cause of the alarm is rectified or the alarm is switched off.

The set temperature determines when the appliance recognises a temperature as being too warm or too cold.

The audible and visual signals may be activated in the following situations:



- Too much warm ambient air enters the wine unit when you are rearranging or taking out wine bottles.
- You are storing a large number of wine bottles.
- There was a power failure.
- There is a fault with the wine unit.

### Switching the temperature alarm off early

Before you switch the temperature alarm off, you must determine the cause and rectify it.

If you are bothered by the sound of the alarm, you can switch the alarm off early.

■ Tap  .


  goes out and the alarm will stop.


 
The warmest temperature recorded in the wine conditioning zone concerned will flash for about 1 minute in the temperature display for the wine conditioning zone. Then the temperature display will change to the current temperature in the wine conditioning zone.


# Familiarisation

## Door alarm

The wine unit is fitted with a door alarm to avoid increased energy consumption if the door is left open and prevent the stored wine bottles being affected by temperature fluctuations.


If the appliance door is left open for a longer period of time,  will light up yellow in the display. An alarm will also sound and the interior lighting will flash.

The amount of time until the door alarm is triggered can be changed (see “Adjusting settings – Changing the time until the door alarm  is triggered”). The door alarm’s audible signal can also be switched off (see “Adjusting settings – Changing the volume of the alarms and buzzers ”).

The alarm will stop and  will go out on the display as soon as the appliance door is closed.

## Switching the door alarm off early

- Tap .


The alarm will stop,  will go out and the interior lighting will light up again constantly.

If the appliance door is not closed, the door alarm will sound again after around 1 minute.

## Using the door lock

You can use the mechanical door lock to protect your wine collection against unauthorised access.

## Locking and unlocking the wine unit

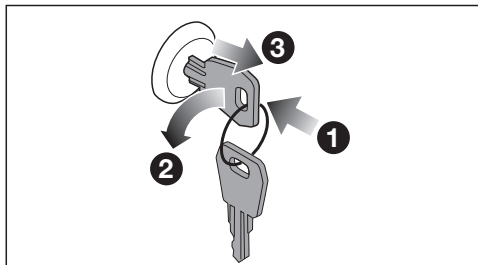


- Insert the key in the door lock **1** in the appliance door.
- To lock the door: press the door lock in and turn the key 90° anticlockwise **2**.
- Pull the key out **3** and keep it in a safe place.
- To unlock the door: insert the key into the door lock, press the door lock in and turn the key 90° clockwise.



## Adjusting the interior fittings

### Removing and reinserting the wooden shelves

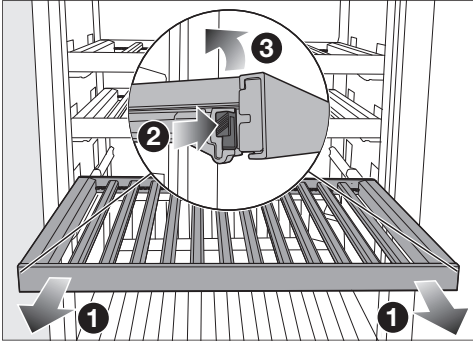

- Pull the wooden shelf out until it stops ①.
- Press in the latches ② on both sides of the wooden shelf and lift the wooden shelf upwards ③.
- To reinsert the wooden shelf, first place it on the rear of the extended rails so that it clicks into place.
- Press the front section of the wooden shelf down onto the extended rails so that the latches click into place.

**⚠ Risk of injury from falling wine bottles.**

Wine bottles may become wedged in the wooden shelves above and fall out of the wine unit/refrigeration appliance when the shelves are pulled out.

Always pull out the wooden shelves slowly and carefully.

**⚠ Risk of damage and injury from broken glass.**

If wooden shelves and bottles protrude too far forwards, they may damage the glass door when it is closed.

Please ensure that the wooden shelves and wine bottles do not protrude.

### Adjusting the wooden shelf (FlexiFrame) to the bottle size




- You can remove or move individual wooden slats on the wooden shelf as required.

This allows you to flexibly adapt the wooden shelf to the size of your wine bottles.

# Familiarisation

## Maximum capacity

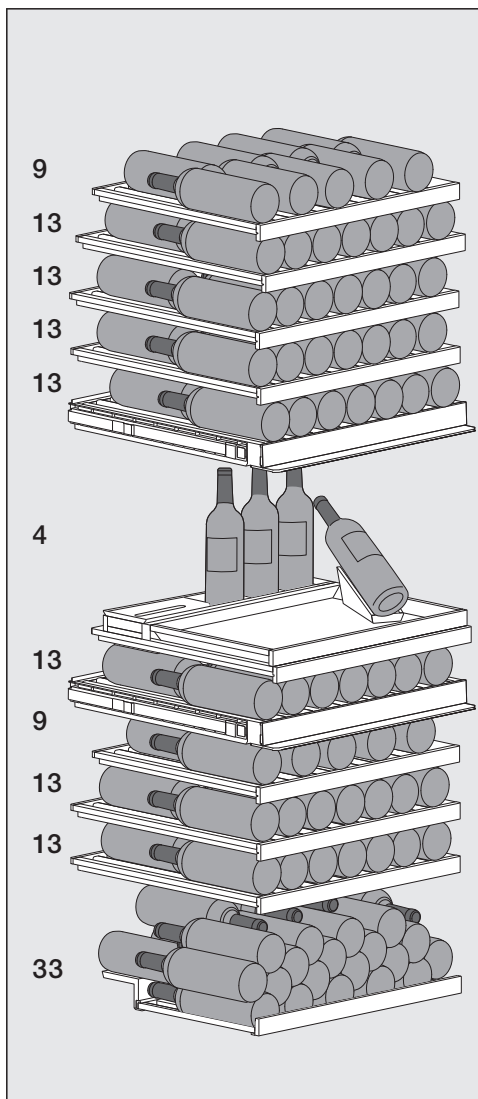


Up to 146 Bordeaux bottles (0.75 l) can be stored in the wine unit:


- 61 bottles in the upper wine conditioning zone

- 17 bottles in the middle wine conditioning zone (3 bottles in the bottle box, 1 bottle in the bottle presenter)
- 68 bottles in the lower wine conditioning zone (of which 33 bottles stacked on the stacking aid on the lower wooden shelf)


## Maximum load for the wooden shelves

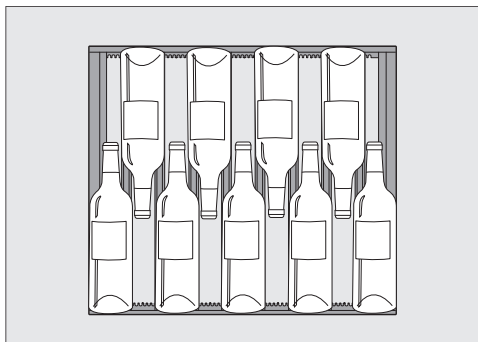


Arrangement of 9 bottles on the top wooden shelves in the upper and lower wine conditioning zones

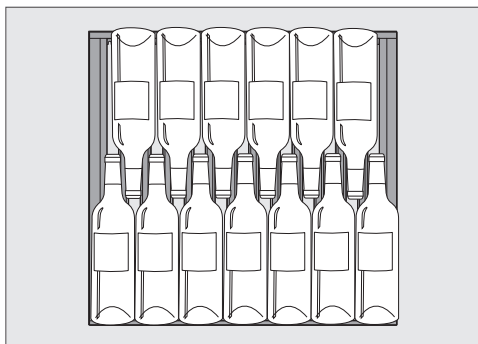

Arrangement of 13 bottles on the other wooden shelves

 Risk of damage due to overload. Exceeding the maximum recommended capacity can lead to damage to the wooden shelves. Do not exceed the maximum load-bearing capacity of 25 kg for each wooden shelf. Do not stack bottles on the wooden shelves.


### Maximum load with the stacking aid

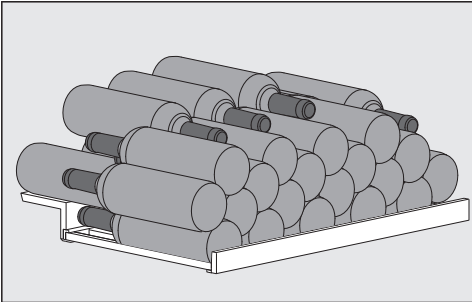


Arrangement of 33 wine bottles on the stacking aid

### Labelling the labelling strip (NoteBoard)

For quick and easy identification of the wines stored, you can write on the NoteBoards on the wooden shelves.

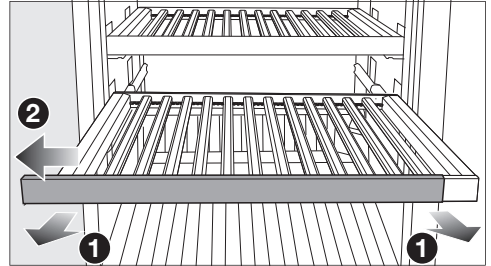

- Pull the wooden shelf out a little towards the front **1**.
- Pull the NoteBoard to one side away from the wooden shelf **2**.
- The labelling strip can be wiped clean with a damp cloth.

 Risk of damage from unsuitable cleaning agents.

Cleaning the labelling strips (NoteBoards) with a cleaning agent may damage the coating on them. Use clean water only to wipe the NoteBoards.

- Label the NoteBoard with the chalk pen supplied. Alternatively, we recommend the following products for labelling:
  - Liquid chalk pens, such as an edding 4095 chalk marker
  - Traditional blackboard chalk

## Familiarisation

---



Risk of damage due to writing with the wrong products.

Never write on the NoteBoard with a ballpoint pen, crayon or pencil, correction pencil, wax crayon, oil chalk or felt-tip pen (e.g. permanent marker, highlighter, foil pen, etc.). They are difficult or impossible to remove from the NoteBoard.

Only use the products recommended to write on the NoteBoard as these can be removed easily.

- Slide the NoteBoard onto the wooden shelf from the side.

## Before using for the first time



- Remove all packaging material and protective film.
- Clean the inside of the appliance and the accessories (see “Cleaning and care”).

## Connecting the wine unit


- Connect the wine unit to the electricity supply as described in “Installation – Electrical connection”.


Miele will then appear on the appliance display, followed by .



## Activating the charcoal filter (Active AirClean filter)




- Activate the Active AirClean filter display  (see “Adjusting settings – Activating the Active AirClean filter display ”).

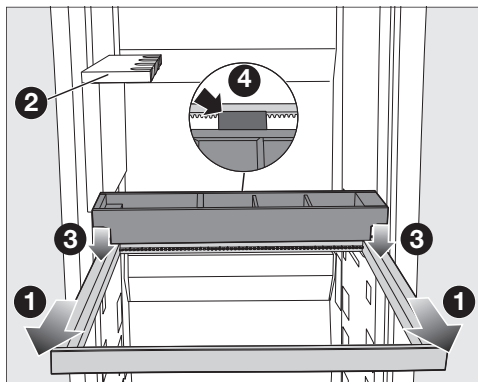
## Setting up the SommelierSet




Place the parts of the SommelierSet in the wine unit in the following order. The glasses holder  is already fitted as standard in the wine unit.



- Pull the wooden frame  fully out from under the glasses holder .

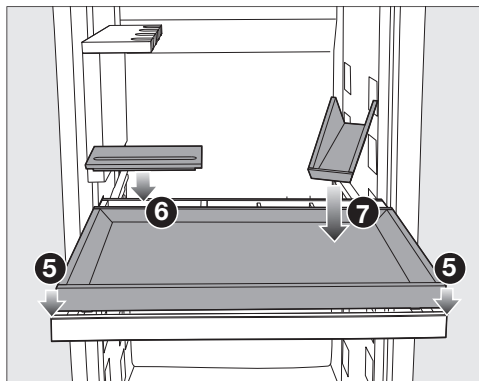
- Place the bottle box  on the wooden frame  from above so that the spacer on the bottle box rests against the back of the wooden frame .



- Place the tray  on the wooden frame from above.
- Place the lid on the accessories box .
- Place the bottle presenter on the tray .

# Commissioning

## Positioning the wooden slats on the wooden shelves

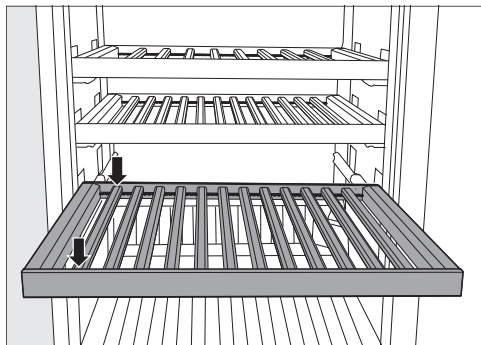


- Position the wooden slats at equal intervals on the wooden shelf and lock them into position.

This provides space on the wooden shelf for the maximum number of bottles (0.75 l; Bordeaux-style bottles).


## Setting up the stacking aid

The stacking aid helps to achieve the maximum capacity in the lower wine conditioning zone.

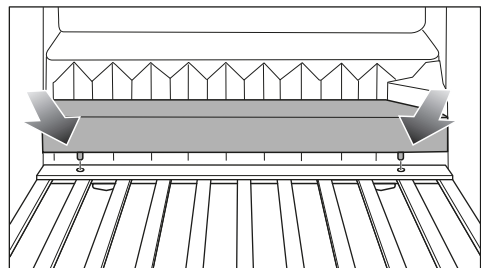

- Insert the stacking aid behind the lower wooden shelf.
- Snap the feet of the stacking aid into the holders on the left and right.

## Switching the wine unit on




- Tap  on the display.

If you do not interact with the display for a certain period of time, it switches to energy-saving mode and goes dark.

The wine unit will start to cool and the interior lighting will come on when the appliance door is opened.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the temperature required in the corresponding wine conditioning zones and for this temperature to then be shown as a constant temperature on the display.

## Switching the wine unit off

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .

The cooling and interior lighting are switched off.

 will appear in the display.

Please note: The wine unit is not disconnected from the power supply when it is switched off.

## Switching off for longer periods of time

If, during a long absence, the wine unit is switched off but not cleaned and the door left shut, there is a danger of mould building up inside the appliance.

The wine unit must be cleaned.

If the wine unit is not going to be used for a longer period of time, observe the following:

- Switch the wine unit off.
- Switch off at the wall and disconnect the plug from the socket, or disconnect the fuse.
- Clean the wine unit and leave the door ajar to air the wine unit and avoid odours building up inside it.

# Operation

## Setting the temperatures in the wine conditioning zones

The temperatures in the 3 wine conditioning zones can be set independently of one another.

A temperature of between 12 and 14 °C is recommended to store wine over the long term.

- Touch the temperature display for the wine conditioning zone you want to change.
- **Lower wine conditioning zone:** tap 🌡️.
- Swipe left or right until the temperature you want is shown in the middle.
- Tap the temperature you want to confirm.
- To leave this Settings level, tap ↩️.

The temperature display will then change back to the current temperature in the wine conditioning zone.

The temperature in the wine unit will rise:

- The more often the appliance door is opened and the longer it is kept open
- The more wine bottles are being stored
- The warmer the newly stored wine bottles are
- The higher the ambient temperature surrounding the wine unit This wine unit is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed.

## Temperature range

In all wine conditioning zones, it is possible to set temperatures between 5 and 20 °C.

## Temperature display for the wine conditioning zones

In normal operation, the temperature display shows the **current average temperature** inside the corresponding wine conditioning zone.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the temperature required and for this temperature to then be shown as a constant temperature in the display.



## Setting the humidity (ActiveHumidity) in the lower wine conditioning zone ∞--Δ

An ambient temperature of between 19 and 28 °C is required to ensure that the humidity level is set perfectly.

- Touch the temperature display for the lower wine conditioning zone.
- Swipe left or right until ∞--Δ is shown in the middle.
- Tap ∞--Δ.
- Swipe left or right until the humidity (Δ, ΔΔ, ΔΔΔ) you want is shown in the middle.
- Tap to confirm the setting.
- To leave this Settings level, tap ↩.

Depending on the ambient temperature and the set humidity level, it can take the appliance a few days to reach the set humidity level and for this to then be shown in the display.

## Humidity range

You can set the humidity to 3 levels and therefore adapt it to your individual needs.

- Δ: Low humidity
- ΔΔ: Medium humidity
- ΔΔΔ: High humidity

Please bear in mind that energy consumption will increase slightly as the set humidity level is increased.

If you would like to use the lower wine conditioning zone for the long-term storage of wine bottles with natural corks, we recommend setting a medium humidity level ΔΔ.

## Querying the current humidity level i

Depending on the ambient temperature and the set humidity level, it can take the appliance a few days to reach the set humidity level and for this to then be shown in the display.


- Touch the temperature display for the lower wine conditioning zone.
- Swipe left or right until ∞--Δ is shown in the middle.
- Tap i.

The display shows the **current humidity level** in the lower wine conditioning zone (the value is averaged over approx. 2 hours).

- Tap ✓ to exit the display.

# Operation

## SommelierSet

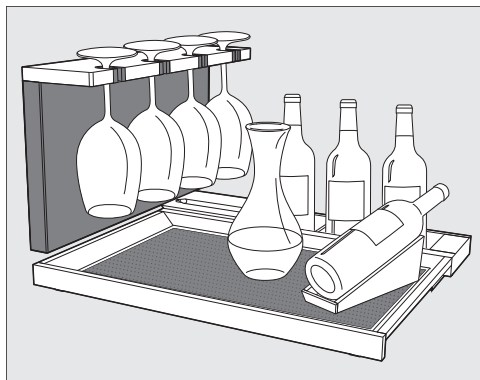


The SommelierSet can be used to have the wine in your wine unit ready for drinking. You can store wine glasses and accessories, decant your wine and store open bottles in the wine unit.

## Removable tray with silicone mat

The wooden components in your wine unit are untreated, delicate and not protected from external influences.

It is therefore best to remove any soiling from wooden components immediately.

Use the silicone mat to protect the tray.

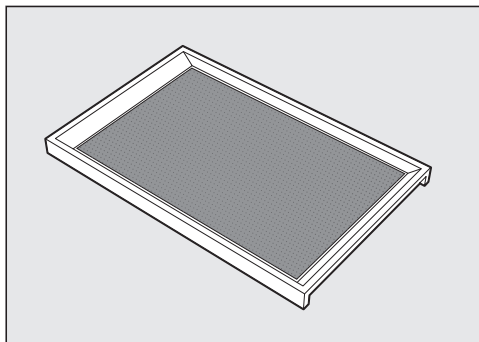


You can use the removable tray to carry the decanted wine directly to your guests.

The silicone mat ensures that glasses are held securely on the tray.

In addition, the wipe-clean silicone mat prevents unsightly stains on the tray.

When reinserting the tray, make sure that the tray and silicone mat are clean. Soiling that enters the appliance from outside (such as food or drink residues) can cause mould to form in the wine unit at increased temperature and humidity levels.


## Glasses holder

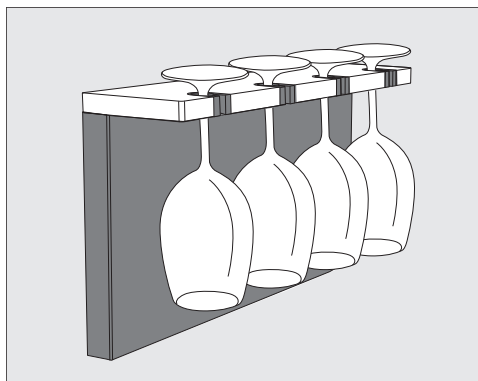

This can be used for storing and chilling wine glasses.


The separately extendable glasses holder offers space for 4 glasses.

## Bottle presenter

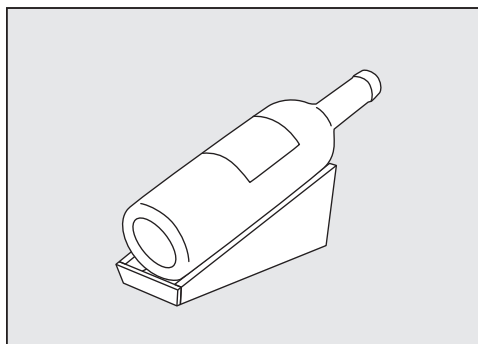


You can store opened bottles of wine in style in the bottle presenter.

## Bottle box

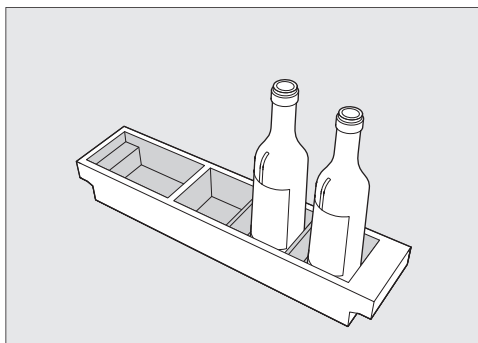

You can store opened bottles of wine in style in the bottle box.

## Accessories box

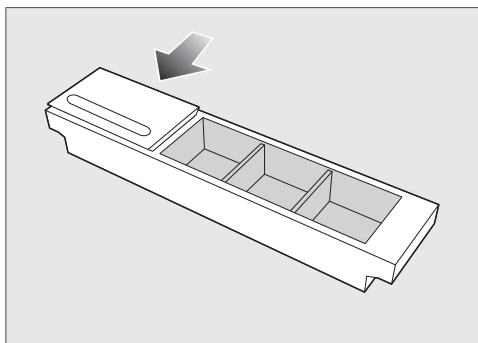


You can store accessories such as corkscrews or sommelier knives in the accessories box.

If necessary, close the accessories box with the lid and use the integrated pen tray.






# Adjusting settings

## Explanation of the different settings




The door alarm and other warnings are automatically disabled when the appliance is in Settings mode .


### Setting the brightness of the feature lighting



The feature lighting can be set separately at different brightness levels for each individual wine conditioning zone or switched off completely.

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Swipe left or right until the wine conditioning zone you want is shown in the middle.
- Tap the wine conditioning zone you want.
- Select the brightness you want by swiping the segment bar to the left or right (level 1–7).
- If you want to switch the feature lighting off completely, swipe to the left until the segment bar goes out completely.
- Confirm the setting you want by tapping the segment bar.
- Alternatively: confirm the setting you want by tapping .
- To leave this Settings level, tap .


### Switching the lock function / on

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .

When the lock function is switched on,  will light up orange.


- To leave this Settings level, tap .
- Open and close the appliance door. Only then will the lock function  be active.

### Deactivating the lock function / temporarily





- Touch the temperature display for the wine conditioning zone you want to change.
- Touch  for approx. 6 seconds.


The display switches to the temperature controls.

- Now select the required settings.

Opening and closing the appliance door will reactivate the lock function .


### Switching the lock function / off completely




- Tap .
- Touch  for approx. 6 seconds.
- Swipe left or right until  is shown in the middle.
- Tap .


When the lock function is switched off,  will light up white.

- To leave this Settings level, tap .


## Switching Sabbath mode on

When Sabbath mode  is switched on, you cannot change any settings.

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .

 will light up orange.


- To leave this Settings level, tap .


If Sabbath mode  is switched on, this is indicated on the display for approx. 3 s.





The display then switches off.


Ensure that the appliance door is properly closed, as visual and audible alarms are switched off.

## Switching Sabbath mode off

The Sabbath mode function  will switch off automatically after approx. 80 hours.





However, you can switch the Sabbath mode function  off early.

- Tap the black display.  
 will appear in the display.
- Tap .
-  will light up orange.
- Tap the  symbol again.




When Sabbath mode is switched off,  will light up white.


- To leave this Settings level, tap .


## Changing the time before the door alarm is triggered


- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Swipe left or right until the time you want between 30 seconds and 3 minutes 30 seconds is shown in the middle.
- Tap to confirm the setting.
- To leave this Settings level, tap .

## Setting up Miele@home for the first time





- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Tap the connection method you wish to use (app or WPS).


After you have successfully logged in,  will appear in the display.

If a connection could not be created,  will appear.

- In this case, start the process again.
- To leave this Settings level, tap .

## Deactivating the WiFi connection






- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Tap  to deactivate the WiFi connection.

 will appear in the display.


- To leave this Settings level, tap .

# Adjusting settings








## Activating the WiFi connection

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Tap  to activate the WiFi connection.
-  will appear in the display.


- To leave this Settings level, tap .

When the WiFi connection is active,  will light up on the display.

## Resetting the network configuration






- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Swipe right until  is shown in the middle.
- Tap .
- Tap .
- To leave this Settings level, tap .

All entered settings and values for Miele@home are reset to the default settings.






The WiFi connection has been deactivated.  will go out on the display.

The network configuration should be reset whenever a wine unit is being disposed of or sold, or if a used wine unit is being put into operation. All personal data is removed from the wine unit. This will also ensure that a previous owner is no longer able to access the wine unit.


 

## Switching off the keypad tone


- Tap .
  - Swipe left or right until  is shown in the middle.
  - Tap .
- If the keypad tone is switched off,  will light up white.
- To leave this Settings level, tap .


## Switching on the keypad tone

  - Tap .
  - Swipe left or right until  is shown in the middle.
  - Tap .
- If the keypad tone is switched on,  will light up orange.
- To leave this Settings level, tap .

## Changing the volume of the alarms and buzzers /





- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Select the volume you want by swiping the segment bar to the left or right (level 1–7).
- If you want to switch the alarms and buzzers off completely, swipe to the left until the segment bar goes out completely.
- Confirm the setting you want by tapping the segment bar.

When the alarms and buzzers are switched off,  will light up white.



When the alarms and buzzers are switched on,  will light up orange.

- To leave this Settings level, tap .





### Changing the display brightness


- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .
- Select the brightness you want by swiping the segment bar to the left or right (level 1–7).
- Confirm the setting you want by tapping the segment bar.
- To leave this Settings level, tap .

### Changing the temperature unit °C/°F





- Tap .
  - Swipe left or right until °C or °F is shown in the middle.
  - Tap °C or °F to change the temperature unit.
- °C or °F will appear on the display.
- To leave this Settings level, tap .

### Switching off demo mode

- Tap .
- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .

After demo mode  has been switched off, the wine unit shuts down and must be switched on again.




### Resetting the settings to their factory defaults


- Tap .
  - Swipe left or right until  is shown in the middle.
  - Tap .
-  will appear in the display.

- Tap .

The wine unit shuts down and must be switched on again.

### Activating the Active AirClean filter display

- Tap .
- Swipe left or right until  is shown in the middle.
- Tap .

If the Active AirClean filter display is activated,  will light up orange.

- To leave this Settings level, tap .

# Cleaning and care

The data plate located inside the wine unit must not be removed. It contains information which is required in the event of a fault.

Do not let water get into the electronic unit or the lighting.



**Risk of damage due to moisture ingress.**

The steam from a steam cleaner can damage plastic and electrical components.

Do not use a steam cleaner to clean the wine unit.



**Health risk due to soiling entering the appliance.**

Soiling that enters the appliance from outside (such as food or drink residues) can cause mould to form in the wine unit at increased temperature and humidity levels.

Only place clean wine bottles and clean accessories in the wine unit.

## Cleaning agents

Cleaning agents and care products used inside the wine unit must be food safe.

To avoid damaging the surfaces of the appliance, **do not use the following:**

- Cleaning agents containing soda, ammonia, acids or chlorides
- Cleaning agents containing descaling agents
- Abrasive cleaning agents (e.g. scouring powder, scouring liquid or pumice stones)
- Cleaning agents containing solvents
- Stainless steel cleaners

- Dishwasher cleaning agents
- Oven sprays
- Cleaning agents for ceramic hobs (except to clean the glass front)
- Glass-cleaning agents (except to clean the glass front: for this, a glass-cleaning agent containing a little alcohol, but no citric or similar additives, may be used)
- Hard, abrasive sponges and brushes (e.g. pot scourers)
- Eraser stain remover blocks
- Sharp metal scrapers

We recommend using a clean sponge cloth and lukewarm water with a little washing-up liquid to clean the surfaces of the appliance.

## Preparing the wine unit for cleaning

- Switch the wine unit off.

⏻ appears in the display and the cooling system is switched off.

- Take any wine bottles out of the wine unit and store them in a cool place.
- If necessary, take out all removable parts for cleaning (see “Familiarisation – Adjusting the interior fittings”).
- Take out any removable accessories for cleaning.
- Remove the labelling strips (NoteBoards) from the wooden shelves before cleaning them.




### Cleaning the inside of the appliance

Clean the wine unit at least once a month.

If soiling is left on for any length of time, it may become impossible to remove under certain circumstances. Surfaces may suffer discolouration or damage.


It is therefore best to remove any soiling immediately.

- Clean the interior with a clean sponge cloth, lukewarm water and a little washing-up liquid.
- Rinse all parts by hand. Do not wash in a dishwasher.
- The **wooden** shelves should only be wiped with a well wrung-out damp cloth. They must **not** be allowed to get wet.

 Risk of damage from unsuitable cleaning agents.  
Cleaning the labelling strips (NoteBoards) with a cleaning agent may damage the coating on them.  
Use clean water only to wipe the NoteBoards.

- After cleaning, wipe with clean water and dry with a cloth.
- Leave the door open to air the wine unit sufficiently for a short while and to prevent odour build-up.


### Removing and cleaning the silicone mats

 Risk of damage as a result of incorrect cleaning.

Washing the silicone mats in a dishwasher or washing machine will damage them.

The silicone mats should only be cleaned by hand.

- Remove the silicone mats from the tray and from the bottle box.
- Clean the silicone mats using a solution of hot water and a little washing-up liquid.
- Then dry the silicone mats with a cloth.
- Replace the silicone mats on the tray and into the bottle box only when they are completely dry.

 Risk of damage due to incorrect drying.

Drying the silicone mats in an oven will damage them.


Never place the silicone mats in the oven to dry.

## Cleaning and care


### Replacing the Active AirClean filter (charcoal filter)

New Active AirClean filters can be obtained from the Miele Customer Service Department, your Miele dealer or the Miele website.


The Active AirClean filters are located behind the NoteBoards (labelling strips) between the wine conditioning zones.

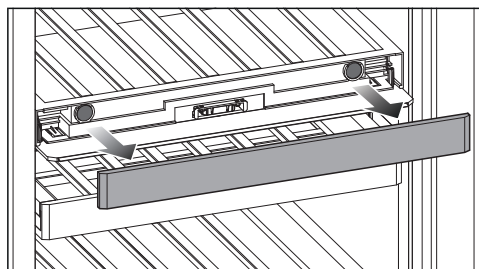


- Pull the NoteBoard off.

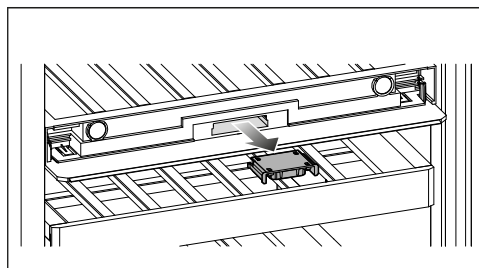


- Pull the filter holder out.

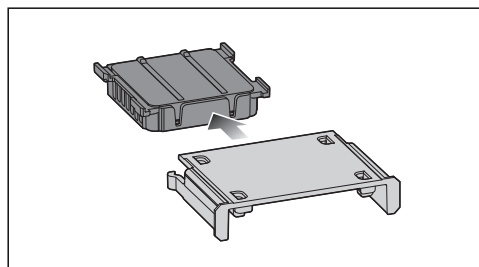


- Remove the used Active AirClean filter.
- Used Active AirClean filters can be disposed of with normal household waste.

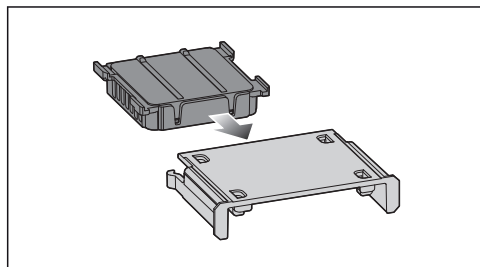

- Insert the new Active AirClean filter into the filter holder.

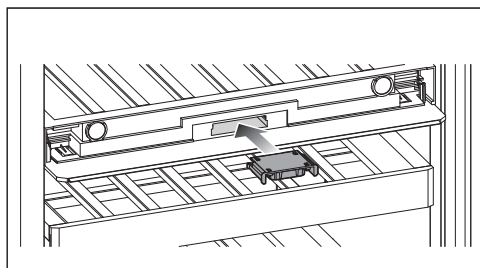

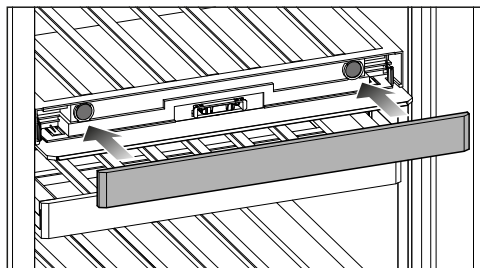

- Reinsert the filter holder with the new AirClean filter.



- Fit the NoteBoard in position.

## Confirming that the Active AirClean filter has been changed

- Touch the  symbol in the display.
-  will go out on the display and the counter will be reset.

## Cleaning the front of the appliance and the side panels


If soiling is left on for any length of time, it may become impossible to remove. Surfaces may suffer discolouration or damage. Therefore, it is best to remove soiling from the appliance front and side panels immediately.

All surfaces are susceptible to scratching. Contact with unsuitable cleaning agents can alter or discolour the surfaces.

See the information on “Cleaning agents” at the beginning of this section.

- Clean the surfaces with a clean sponge and a solution of warm water and washing-up liquid. A clean, damp microfibre cloth without cleaning agent can also be used.
- After cleaning, wipe with clean water and dry with a soft cloth.
- Clean the appliance door with a proprietary glass cleaner.

## Cleaning the door seal

 Risk of damage as a result of incorrect cleaning.  
If you treat the door seal with oils or grease, it can become porous.  
Do not use any oils or grease on the door seal.

- The door seal should be cleaned regularly with clean water, and then wiped dry with a soft cloth.

## Cleaning the ventilation gaps

A build-up of dust will increase the energy consumption of the appliance.

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner (you could use a Miele vacuum cleaner dusting brush, for example).

## After cleaning

- Replace all shelves and accessories in the wine unit.
- Switch the wine unit on.
- Place the wine bottles in the wine unit and close the appliance door.

## Automatic defrosting

The wine unit defrosts automatically.

# Troubleshooting

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact Customer Service.





More information to help you remedy faults yourself can be found at [www.miele.hk/en/support/customer-assistance](http://www.miele.hk/en/support/customer-assistance).



To prevent cold from escaping, open the appliance as little as possible until the fault has been corrected.


















| Problem  | Cause and remedy  |
|--|---|
| <b>The compressor is switching on more frequently and for longer periods of time, the temperature in the wine unit is falling.</b> | The ventilation openings have been covered or become dusty.<br>■ Do not block the ventilation openings.<br>■ Dust the ventilation openings regularly.   |
|  | The appliance door has been opened too frequently. A large number of wine bottles have been placed in the appliance.<br>■ Only open the appliance door when necessary and for as short a time as possible.<br>After a while, the temperature will return to normal by itself. |
|  | The appliance door is not properly closed.<br>■ Close the appliance door.<br>After a while, the temperature will return to normal by itself.  |
|  | The ambient temperature is too high. The higher the ambient temperature, the longer the compressor runs.<br>■ See the information in “Installation – Installation site”.  |
|  | The temperature in the wine unit is set too low.<br>■ Correct the temperature setting.  |







## General problems with the wine conditioning unit

| Problem  | Cause and remedy   |
|--|--|
| <b>The humidity inside the lower wine conditioning zone cannot be set to the required level.</b> | The display shows changes in the actual humidity in the wine unit with a time delay.<br>■ Check the humidity again at a later point in time.   |
|  | The ambient temperature is too high or too low.<br>■ Ensure an ambient temperature of 19 to 28 °C.   |
|  | The temperature in the lower wine conditioning zone was set too high.<br>■ Set a maximum temperature of 10 °C in the lower wine conditioning zone.   |
|  | The ambient humidity is too low.<br>■ If the ambient humidity is very low, it is sometimes not possible to achieve a high humidity level inside the wine unit.   |
|  | The humidity inside the wine unit depends on how often and for how long the door is opened, on the ambient temperature and ambient humidity, on how full the appliance is, and on the appliance settings.  |
| <b>There is no audible alarm even though the appliance door has been open for a long time.</b>   | <p>This is not a fault. The alarm has been switched off in Settings mode. If you want to switch the audible alarm back on again:</p> <ul style="list-style-type: none"> <li>■ Tap .</li> <li>■ Swipe left or right until  is shown in the middle.</li> <li>■ Tap .</li> <li>■ Select the volume you want by swiping the segment bar to the right.</li> <li>■ Confirm the setting you want by tapping the segment bar.</li> </ul> <p>When the alarms and buzzers are switched on,  orange will appear.</p> |

 

 




# Troubleshooting

## Display warnings

| Message   | Cause and remedy   |
|---|--|
|  lights up in the display and the wine unit is not getting cold. However, the appliance and the interior lighting are working fine. | <p>Demo mode has been activated.</p> <ul style="list-style-type: none"> <li>■ Tap .</li> <li>■ Tap .</li> <li>■ Swipe left or right until  is shown in the middle.</li> <li>■ Tap .</li> </ul> <p>After demo mode  has been switched off, the wine unit shuts down and must be switched on again.</p>   |
| Nothing is visible in the display. The display is completely blank.   | <p>Sabbath mode  is switched on: the interior lighting is switched off and the wine unit is cooling down.</p> <ul style="list-style-type: none"> <li>■ Tap the black display.</li> </ul> <p> will appear in the display.</p> <ul style="list-style-type: none"> <li>■ Tap .</li> </ul> <p> will light up orange.</p> <ul style="list-style-type: none"> <li>■ Tap the  symbol again.</li> </ul> <p>When Sabbath mode is switched off, the  symbol will light up white.</p> <hr/> <p>The display is not connected to the wine unit correctly.</p> <ul style="list-style-type: none"> <li>■ Was the door hinging changed correctly? Check the plug connection between the wine unit and the display again (see accompanying installation instructions).</li> </ul> <hr/> <p><b>Energy-saving mode</b> is switched on: if you do not interact with the display for a certain period of time, it switches to energy-saving mode and goes dark.</p> |
|  lights up in the display and the wine unit cannot be used.   | <p>The lock function has been activated.</p> <ul style="list-style-type: none"> <li>■ Unlock the wine unit temporarily or switch the lock function off completely (see “Adjusting settings”).</li> </ul>   |
|  lights up in the display and a buzzer sounds.  | <p>The Active AirClean filter display  is reminding you that the Active AirClean filter needs to be changed.</p> <ul style="list-style-type: none"> <li>■ Replace the Active AirClean filter (see “Cleaning and care – Replacing the Active AirClean filter”). Confirm that you have changed the Active AirClean filter by touching  in the display.</li> </ul> <p> will go out on the display.</p>   |

| Message  | Cause and remedy   |
|--|--|
|  will light up yellow in the display, an alarm will also sound and the interior lighting will flash. | <p>The <b>door alarm</b> has been activated.</p> <p>■ Tap .</p> <p>The alarm will stop,  will go out and the interior lighting will light up again constantly.</p>   |
|  will light up red in one of the wine conditioning zones and an alarm will also sound.               | <p>The temperature alarm has been activated. The temperature in the wine conditioning zone concerned has risen higher or fallen lower than the temperature set.</p> <p>■ Tap .</p> <p> goes out and the alarm will stop.</p> <p>The warmest temperature recorded in the wine conditioning zone concerned will flash for about 1 minute in the temperature display for the wine conditioning zone. Then the temperature display will change to the current temperature in the wine conditioning zone.</p> <p>You can exit from the flashing temperature display early:</p> <p>■ Touch the temperature display for the wine conditioning zone.</p> <p>The warmest temperature display will disappear. The temperature display will then revert to showing the current temperature in the wine conditioning zone.</p> <p>■ Remedy the cause of the alarm.</p> |


# Troubleshooting


| Message   | Cause and remedy  |
|---|---|
| <p> lights up red in the display and an alarm also sounds.</p>  | <p>Indication of a power failure: the temperature in the wine unit over the last few days or hours has risen too high because of a power failure or interruption to the power supply.</p> <p>■ Tap .</p> <p> goes out and the alarm will stop.</p> <p>The warmest temperature recorded in the wine unit will flash for about 1 minute in the temperature display. Then the temperature display will change to the current temperature.</p> <p>You can exit from the flashing temperature display early:</p> <p>■ Tap the temperature display.</p> <p>The warmest temperature display will disappear. The temperature display will then revert to showing the current temperature. The wine unit will go back to the last temperature setting when the power is back on.</p> <p>■ Remedy the cause of the alarm.</p> |
| <p> lights up red in the display and a fault code F with numbers may appear. An alarm is also sounding.</p> | <p>There is a fault.</p> <p>■ Tap  on the display to switch the alarm off.</p> <p>■ Contact the Miele Customer Service Department.</p> <p>To report the fault, you need the fault code and also the model identifier and serial number of your wine unit. You can access this information on the display:</p> <p>■ To do this, touch  on the display.</p> <p>The appliance data required will be shown on the display.</p> <p>Confirm with  to exit the information display and the fault code will be shown again on the display.</p> <p>The wine unit can be switched off directly from the fault message display.</p>  |
|   | <p>There is an appliance fault: this display always has priority over any settings which have just been selected.</p> <p>An appliance fault has priority over any current door and/or temperature alarms displayed.</p>   |








 


## Interior lighting

| Problem | Cause and remedy |
|---------|------------------|
|---------|------------------|

 Risk of electric shock due to exposed, live electrical components.  
When removing the lighting cover, there is a risk of coming into contact with live electrical components.  
Do not remove the lighting cover. The LED lighting may only be repaired or replaced by the Miele Customer Service Department.

 Risk of injury from LED lighting.  
This lighting corresponds to risk group RG 2. If the cover is defective, there is a risk of eye injury.  
If the lighting cover is defective, do not look from a close range directly into the lighting with optical instruments (e.g. magnifying glass or similar).

| Problem  | Cause and remedy   |
|--|--|
| <b>The interior lighting is not working.</b>                               | The wine unit is not switched on.<br>■ Switch the wine unit on.  |
|  | Sabbath mode  is switched on: the display is dark and the wine unit is cooling.<br>■ Tap the black display.<br> will appear in the display.<br>■ Tap  .<br> will light up orange.<br>■ Tap the  symbol again.<br>When Sabbath mode is switched off,  will light up white. |
|  | To avoid overheating, the interior lighting switches itself off automatically after approx. 15 minutes if the appliance door is left open. If this is not the case, then there is a fault.<br>■ Contact the Miele Customer Service Department.   |
| <b>The interior lighting is on even when the appliance door is closed.</b> | This is not a fault. The feature lighting is switched on.<br>■ To switch off the feature lighting, touch the sensor control for the feature lighting  in the display.<br>The  sensor control no longer lights up orange.   |

# Customer Service Department

---

Information to help you rectify faults yourself and about Miele spare parts can be found at [www.miele.com/service](http://www.miele.com/service).

## Contact in the event of a fault

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or Miele Customer Service.

You can book a Miele Customer Service call-out online at [www.miele.com/service](http://www.miele.com/service).

Contact information for Miele Customer Service can be found at the end of this document.

Please quote the model identifier and serial number of your appliance (SN) when contacting Miele Customer Service. Both numbers can be found on the data plate inside the refrigeration appliance or, depending on the model, in Settings mode under Information **i**.

## Guarantee

For information on the appliance guarantee specific to your country please contact Miele. See end of this booklet for contact details.

### **Multi-purpose microfibre cloth**

The microfibre cloth is suitable for removing fingerprints and light soiling from surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals.

### **MicroCloth Kit**

The MicroCloth Kit contains a universal cloth, a glass cloth and a polishing cloth. These cloths are extremely resistant to tearing and very robust. Thanks to very fine microfibres these cloths achieve an excellent cleaning performance.

### **MicroCloth HyClean**

The MicroCloth HyClean is a multi-purpose antibacterial cloth and is particularly tear resistant and durable. It can be used wet or dry, with or without cleaning agent.

### **Active AirClean filter**

The Active AirClean filters between the wine conditioning zones ensure optimum air quality by filtering the incoming air.

Optional accessories can be ordered from the Miele webshop. They can also be ordered from the Miele Customer Service Department (see end of this booklet for contact details) or from your Miele dealer.

# Installation

## Installation site



Risk of damage due to high humidity.

In environments with high humidity, condensation can build up on the external wine unit panels.

This condensation can cause corrosion on external appliance panels.

Install the wine unit with sufficient ventilation in a dry and/or air-conditioned room.

After installation, please make sure that the appliance door closes properly and that the specified ventilation gaps are adhered to.



Fire risk and risk of damage from appliances which give off heat.

Appliances which give off heat can catch fire and set fire to the wine unit.

Do not place appliances which give off heat, such as mini-ovens, double burner hobs or toasters on the wine unit.



Fire risk and risk of damage from open flames.

Open flames can set fire to the wine unit.

Keep open flames (e.g. a candle) away from the wine unit.

This appliance should be installed in a dry, well-ventilated room.

When deciding on the installation site, please bear in mind that the energy consumption increases if the wine unit is installed near a heater, a cooker or another appliance that gives off heat. Avoid direct sunlight.

The higher the ambient temperature, the longer the compressor runs and the higher the energy consumption is.

When installing the wine unit, please note the following:

- The socket must be easily accessible in an emergency, not concealed behind the appliance.
- The power plug and mains connection cable must not touch the rear of the wine unit as they could be damaged by vibrations from the appliance.
- Do not plug in other appliances into sockets behind this appliance.
- When installing the wine unit, make sure that the mains connection cable does not get trapped or damaged.
- Do not position or operate multi-socket adapters, distributor strips or other electronic devices (e.g. halogen transformers) at the rear of the appliance.
- The floor at the installation site must be horizontal and level and must be as high as the surrounding floor.

## Climate range

This wine unit is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed. The climate range is stated on the data plate inside the wine unit.

| Climate range | Ambient temperature |
|---------------|---------------------|
| SN            | 10 to 32 °C         |
| N             | 16 to 32 °C         |
| ST            | 16 to 38 °C         |
| T             | 16 to 43 °C         |
| SN-ST         | 10 to 38 °C         |
| SN-T          | 10 to 43 °C         |

A lower ambient temperature will cause the compressor to switch off for longer periods, meaning that the wine unit is unable to maintain the required temperature in some circumstances.

## Ventilation requirements



Fire risk and risk of damage due to insufficient ventilation.

If the wine unit is not ventilated sufficiently, the compressor will run more frequently and for longer periods. This will result in increased energy consumption and a higher operating temperature for the compressor. This may, in turn, cause damage to the compressor.

Please ensure that there is adequate ventilation around the wine unit.

It is essential to observe the required ventilation gaps.

The ventilation gaps must not be covered or blocked in any way.

They must also be regularly dusted.

Air at the back of the wine unit gets warm. Sufficient space for proper ventilation must therefore be ensured (see “Appliance dimensions”).

# Installation

## Installing several wine units/ refrigeration appliances

⚠ Risk of damage due to condensation on external appliance panels.

In environments with high humidity, condensation can build up between the external wine unit panels, which can cause corrosion.

Do **not** place different wine units/  
refrigeration appliances **directly** next  
to one another.

A distance of at least 70 mm must be  
maintained between the wine units/  
refrigeration appliances.

## Changing the door hinging

The wine unit is supplied with right-hand hinging. If left-hand hinging is required, the hinges must be changed (see accompanying installation instructions).

**Tip:** Place a suitable cover on the floor in front of the wine unit to protect the appliance door and your floor from damage.

⚠ Risk of injury and damage due to live electrical components.

You will come into contact with live electrical components while you are changing the hinging.

Switch off the appliance at the wall socket and withdraw the plug before changing the hinging.

⚠ Danger of injury and damage to the appliance due to heavy door.


There is an increased risk of injury and damage if the door hinging is installed by a single person.

Always change the door hinging with the help of a second person.

## Fitting supplied wall spacers

The wall spacers supplied must be used in order to achieve declared energy consumption values and to prevent the build-up of condensation at high ambient temperatures. The wine unit depth is increased by approx. 15 mm for appliances with wall spacers fitted.

If the wall spacers are not used, the functionality of the wine unit is not affected. Energy consumption does, however, increase slightly with less distance between the appliance and the wall.

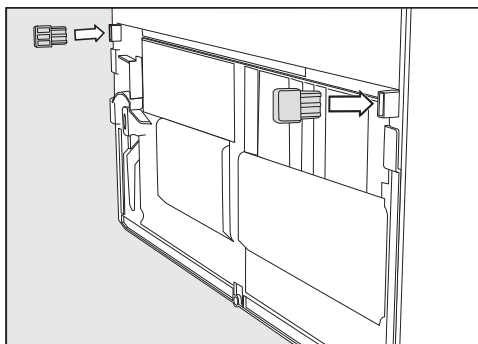

- Fit the wall spacers onto the back of the wine unit on the bottom left and right.

## Installing the wine unit

**⚠ Risk of injury and damage due to the wine unit tipping over.**

There is an increased risk of injury and damage if the wine unit is installed by a single person.

Two people are always required to install the wine unit.

**⚠ Risk of damage and injury caused by appliance door impact.**

The appliance door could hit the wall of the room resulting in damage to the door. If the door is made of glass, the damaged glass can lead to injuries.

Protect the appliance door by fitting a felt stopper, for example, to the wall of the room.

**⚠ Risk of damaging the floor.**

Moving the wine unit can cause damage to the floor.

Move the wine unit carefully on floors that are sensitive to scratching.

For easier installation, there are transport handles on the back at the top and transport wheels underneath the wine unit.

**Tip:** The wine unit must be empty when it is installed.

- Prepare the wine unit for installation as close as possible to its intended installation site.
- Connect the wine unit to the electricity supply as described in “Installation – Electrical connection”.
- Move the wine unit carefully to its intended installation site.

- Position the wine unit with the wall spacers (if fitted) or the back of the appliance against the wall.


## Aligning the wine unit

**⚠ Risk of damage and injury caused by the appliance door falling out or the wine unit tipping over.**

If the additional adjustable foot on the hinge plate at the bottom is not resting firmly on the floor, the appliance door can fall out or the wine unit can tip over.

Use the open spanner supplied with the appliance to unscrew the adjustable foot until it is resting on the floor.

Then unscrew the adjustable foot by a further quarter turn.

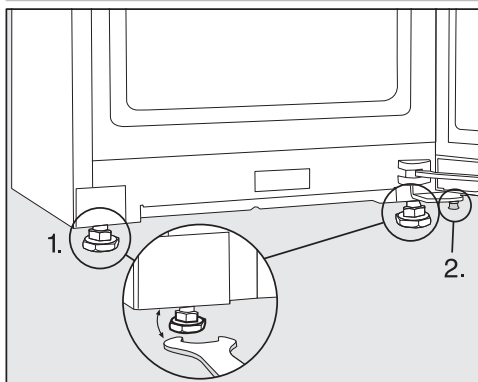


- Use the spirit level and the open spanner supplied to align the wine unit and support the appliance door.
1. Adjust the front adjustable feet.
  2. Unscrew the additional adjustable foot until it is touching the floor. Then unscrew the adjustable foot by a further quarter turn.

# Installation

## Integrating the wine unit in a run of kitchen units

The wine unit can be surrounded by kitchen units.

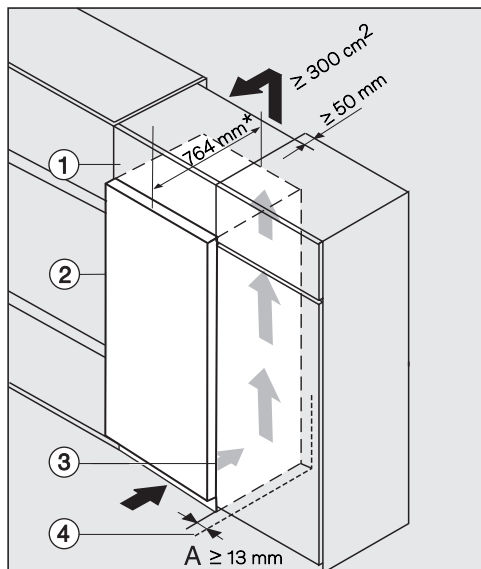

- ① Top box
- ② Wine unit, door depth = 75 mm
- ③ Kitchen unit
- ④ Wall

\* The appliance depth is increased by approx. 15 mm for wine units with wall spacers fitted.

⚠ Fire risk and risk of damage due to insufficient ventilation.

If the wine unit is not ventilated sufficiently, the compressor will run more frequently and for longer periods. This will result in increased energy consumption and a higher operating temperature for the compressor. This may, in turn, cause damage to the compressor.

Please ensure that there is adequate ventilation around the wine unit.

It is essential to observe the required ventilation gaps.

The ventilation gaps must not be covered or blocked in any way.

They must also be regularly dusted.

The larger the ventilation gap, the more economically the compressor will work.



- Install the wine unit next to the kitchen unit.
- The appliance front must protrude in front of furniture fronts by at least the door depth. This enables the appliance door to be opened and shut without being obstructed.
- When installing the wine unit next to a wall ④, a distance (A) must be maintained on the hinge side between the wall ④ and the wine unit ②.
- To match the height of the rest of the kitchen units, the wine unit can be fitted with a suitable top box ①.

A ventilation duct of at least 50 mm depth must be provided across the whole width of the top box.

The ventilation gap under the ceiling must be at least 300 cm<sup>2</sup> to ensure that warm air can escape without obstruction.


# Installation

## Appliance dimensions

### Installation dimensions/view from above

All dimensions are given in mm.


The wine unit will function correctly if the specified ventilation openings are kept clear.

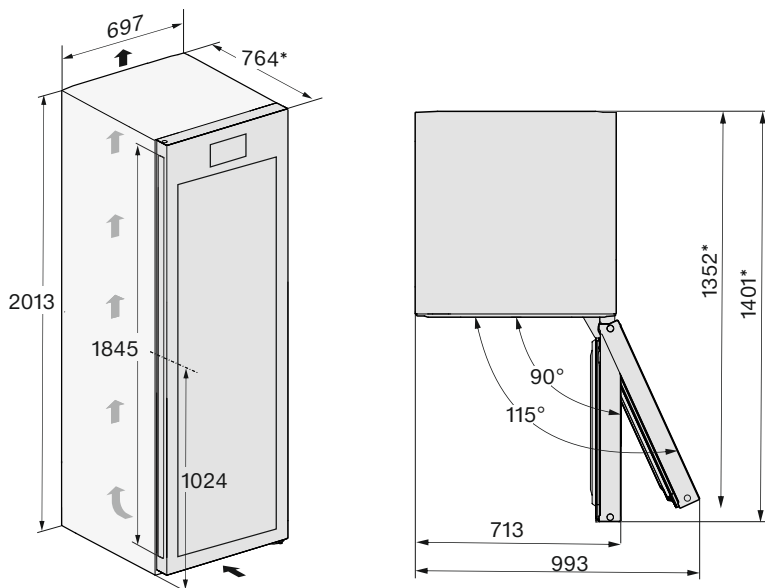

\* Dimensions without wall spacers fitted. Appliance depth is increased by 15 mm with the wall spacers supplied fitted.

## Connections

All dimensions are given in mm.

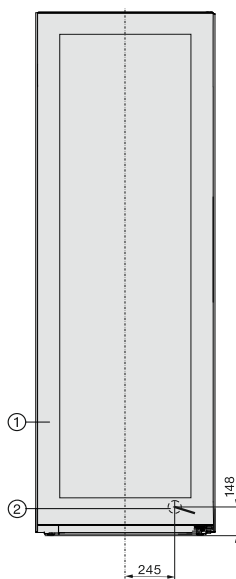

- ① View from the front
- ② Mains connection cable, length = 2000 mm  
A longer mains connection cable is available to order from the Miele Customer Service Department.



Make sure that the appliance plug connector has clicked into position correctly.

- Insert the power plug of the wine unit into the socket.

The wine unit is now connected to the electricity supply.

## Copyrights and licences

---

For the purpose of operating and controlling the communication module, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

Furthermore, the communication module integrated in the appliance contains software components which are distributed under open source licence conditions. The open source components contained in the appliance along with the corresponding copyright notices, copies of the licensing terms valid at the time and any further information can be accessed locally by IP via a web browser ([http\[s\]://<IP address>/Licenses](http[s]://<IP address>/Licenses)). The liability and warranty arrangements for the open source licences displayed in this location only apply in relation to the respective rights holders.

**Hong Kong, China**  
**Miele (Hong Kong) Ltd.**

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay  
Hong Kong  
Tel: (852) 2610 1025  
Fax: (852) 3579 1404  
E-mail: [customerservices@miele.com.hk](mailto:customerservices@miele.com.hk)  
Website: [www.miele.hk](http://www.miele.hk)

**Miele Experience Centre**

UG/F & 1/F, Henry House  
42 Yun Ping Road  
Causeway Bay  
Hong Kong  
Tel: (852) 2890 1018  
Fax: (852) 3579 1401  
E-mail: [ExperienceCentre@miele.com.hk](mailto:ExperienceCentre@miele.com.hk)

**International Head Office**

Miele & Cie. KG  
Carl-Miele-Straße 29  
33332 Gütersloh  
Germany

**Hong Kong, China**  
**Miele (Hong Kong) Ltd.**

香港九龍灣宏泰道23號  
Manhattan Place 41樓4101室  
電話: (852) 2610 1025  
傳真: (852) 3579 1404  
電郵地址: [customerservices@miele.com.hk](mailto:customerservices@miele.com.hk)  
網址: [www.miele.hk](http://www.miele.hk)

**Miele陳列室**

香港銅鑼灣恩平道42號亨利中心UG及一樓  
電話: (852) 2890 1018  
傳真: (852) 3579 1401  
電郵地址: [ExperienceCentre@miele.com.hk](mailto:ExperienceCentre@miele.com.hk)

KWT 4999 ...

en-HK

M.-Nr. 12 596 190 / 01