

Before the first use

 
⚠ Damage resulting from incorrect installation and connection. Installing and connecting the washing machine incorrectly will cause serious damage to property. See "Installation" in the operating instructions.

⚠ Damage resulting from failure to remove the transit bars. Failure to remove the transit bars can result in damage to the washing machine and to adjacent cabinetry or appliances. Remove the transit bars as described in "Installation" in the operating instructions.

The setting up procedure for the washing machine occurs in 4 steps.

1. Removing the transit bars
2. Setting up Miele@home
3. Commissioning TwinDos
4. Starting the calibration programme. For further information, please refer to the separate operating instructions.

Operating the washing machine

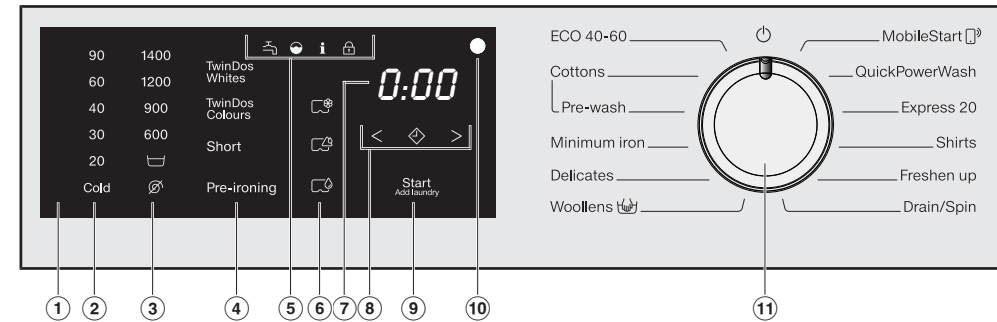

1. Control panel

2. **Temperature sensors** for selecting the temperature

3. **Spin speed sensors** for selecting the spin speed

4. **Sensors for TwinDos and Extras** You can activate TwinDos dispensing for a wash programme and add Extras to the programme.

5. Indicator lights

- Water inlet or drainage faults
- Excess detergent used
- Reminder about hygiene information or TwinDos cleaning
- The Add laundry function cannot be selected

6. CapDosing sensors

- Fabric care (e.g. fabric softener)
- Additives (e.g. detergent enhancers)
- Detergent (for the main wash only)

7. **Time display** After the programme has started, the programme duration will be shown in the display in hours and minutes.

8. < > sensors for the Delay start function

Operating the sensors

The sensors react to fingertip contact. Selection is possible as long as the respective sensor is illuminated. If a sensor is brightly lit, this means: currently selected. If a sensor is dimly lit, this means: selection possible

9. Start/Add laundry sensor

- A Touching the *Start/Add laundry* sensor starts the selected programme. The sensor lights up constantly.
- B Once the programme has been started, the *Start/Add laundry* sensor allows you to add laundry.

10. **Optical interface** For service technicians.

11. **Programme selector** for selecting programmes and for switching the washing machine off. The washing machine is switched on by selecting a programme, and switched off by turning the programme selector to the P position.

Washing environmentally and economically

- Programmes that are more efficient with regard to energy and water consumption generally have a longer running time. By extending the programme running time, the wash temperature that is actually reached can be reduced while still providing the same wash results.

- For example, the *ECO 40-60* programme has a longer running time than *Cottons* 40°C or 60°C, but the *ECO 40-60* programme is more efficient in terms of energy and water consumption.

- To get the most out of your machine, load the maximum dry load for the programme you are using.
- Use the *Express 20* programme for small, lightly soiled loads.

Washing

1. Preparing the laundry



 
■ Empty all pockets.

⚠ Damage due to foreign objects. Nails, coins, paper clips, and so on can cause damage to garments and components in the machine. Check the laundry before washing and remove any foreign objects.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (Please refer to the Miele website or Miele App for more information on stain removal).

2. Selecting a programme


1. **Selecting wash programmes using the programme selector**

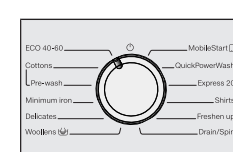

■ Turn the programme selector to the required programme. The programme running time appears in the time display.

2. **Selecting programmes using the MobileStart P programme selector position and Miele App**

 
To use *MobileStart P* , the washing machine must be signed on to the Wi-Fi network and Remote control must be switched on.

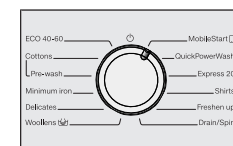

■ Turn the programme selector to the *MobileStart P* programme selector position. P appears in the time display.

Once the programme has started, the washing machine can be operated with the Miele App.

 3. Loading the washing machine

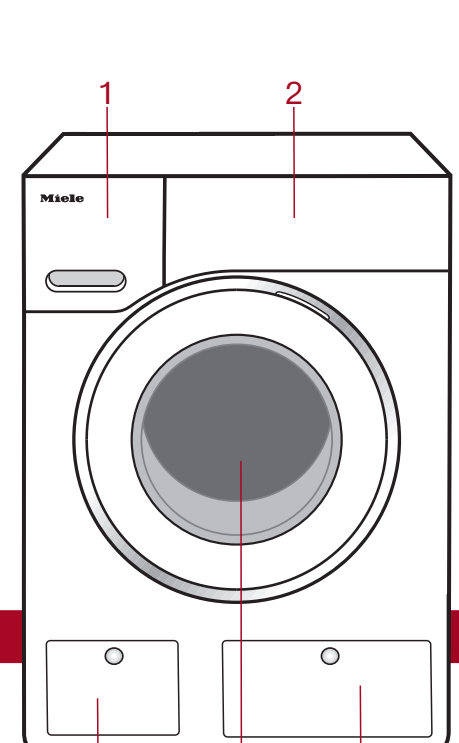

1. Detergent dispenser drawer
2. Control panel
3. Access to drain filter, drain pump and emergency release
4. Door
5. Access panel for TwinDos containers

 
3. Loading the washing machine

Opening the door




- Take hold of the door and pull it open.
- Unfold the laundry and load loosely in the drum.

Closing the door

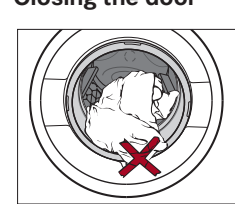

 - Make sure that no items are caught between the door and the seal.

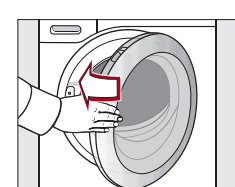

- Shut the door with a gentle swing.

4. Selecting programme settings

Selecting the temperature and spin speed

The wash programme's preset temperature and spin speed light up brightly. The choice of temperatures and spin speeds selectable for the wash programme light up dimly.

- Touch the sensor for the temperature you want. It will light up brightly.
- Touch the sensor for the spin speed you want. It will light up brightly.

Selecting Extras

The selection of Extras available for the wash programme lights up dimly.

- Touch the sensor for the Extra you want. It then lights up brightly.

Useful tip: You can select multiple Extras for a wash programme.

5. Adding detergent

There are several options for adding detergent.

TwinDos

TwinDos dispensing is automatically activated for all programmes in which dispensing is possible. The *TwinDos Colours* sensor lights up. The *TwinDos Whites* sensor lights up dimly in certain wash programmes.

Changing TwinDos dispensing

 
You can change the suggested colour composition of the laundry.

- Touch the *TwinDos Whites* sensor if required.

Deactivating TwinDos dispensing

- Touch the brightly lit *TwinDos Whites* or *TwinDos Colours* sensor. Both sensors light up dimly and dispensing is deactivated.

Detergent dispenser drawer

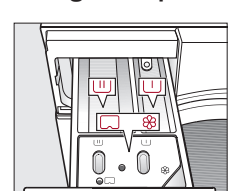

- Pull out the detergent dispenser drawer and add detergent to the compartments.

U Detergent for the pre-wash

 
U Detergent for the main wash

⊗/ Fabric softener, liquid starch or capsules

6. Starting the programme

Automatic safety lock

The washing machine has an automatic safety lock. If the *Start/Add laundry* sensor is not touched within 60 seconds, the display goes dark and the *Start/Add laundry* sensor control no longer flashes green. To switch the display back on, touch the < > sensor control. You then have another 60 seconds in which to start the wash programme.



- Touch the flashing *Start/Add laundry* sensor control.

The door will lock and the wash programme will start.

Adding or removing laundry during a programme sequence (AddLoad)

Laundry can be added or removed at any time, provided that the P symbol is not lit up on the control panel.

- Touch the *Start/Add laundry* sensor.

The display shows rotating bars L J ... L J ... L J.

When the word *Add* appears in the display, the door can be opened.

- Open the door and add or remove laundry.
- Close the door.
- Follow the process for starting a programme again. The wash programme will continue.

End of the programme

Changing the programme (safety lock)

It is not possible to change the programme, the temperature, the spin speed or the selected Extras after the programme has started. This prevents the appliance being operated unintentionally, e.g. by children.

Cancelling a programme

You can cancel a programme at any time after it has started.

- Turn the programme selector to the P position.
- Turn the programme selector to any position. The display shows rotating bars L J ... L J ... L J or -0-. The water is pumped away and the door lock is released.

Selecting a new programme

 
- Turn the programme selector to the required programme.
- Check that there is still detergent in the dispenser drawer. Add more detergent if necessary.
- Touch the *Start/Add laundry* sensor.

7. At the end of the programme

The door is locked in the Anti-crease phase.


- Turn the programme selector to the P position. -0- appears in the display and the P indicator light goes out. The door will unlock.

Useful tip: After the Anti-crease phase, the door will unlock automatically.

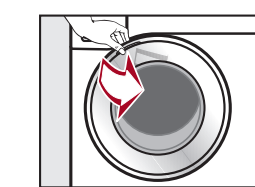

- Take hold of the door and pull it open.
- Remove the laundry.

 Items left in the drum could discolour other items in the next wash or become discoloured themselves. Check that all items have been removed from the drum.

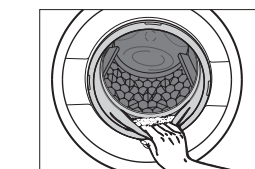

- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.

Useful tip: For safety reasons, close the door.

- Remove any used capsules from the detergent dispenser drawer.

Useful tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

 
Delay start/Extras

Delay start/SmartStart

You can delay the start of a programme from 30 minutes up to a maximum of 24 hours. This allows you to make use of night-time economy electricity rates, for example.

Selecting Delay start

- Select the programme required.

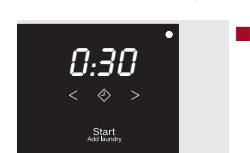

- Touch the < > sensor.

- Touch the < > sensor repeatedly until the required Delay start time appears in the time display.

- For less than 10 hours, the Delay start time changes in increments of 30 minutes.

- For more than 10 hours, the Delay start time changes in increments of 1 hour.

- Touch the flashing *Start/Add laundry* sensor.

The Delay start process starts and counts down in the time display.

SmartStart - setting time period

If the *P98 SmartGrid* programmable function is activated, the function of the < > sensor changes. The time display no longer shows the Delay start period, and instead shows the time period in which your washing machine can be started automatically. The procedure for setting this is the same as for the Delay start time. For further information, please refer to the separate operating instructions

Extras

You can select or deselect Extras by touching the corresponding sensor on the control panel.

Short

For light soiling with no visible staining. The wash duration is reduced.

Pre-ironing

In order to reduce creasing, the laundry undergoes a smoothing process at the end of the programme. For optimal smoothing, reduce the maximum load by 50%. Small loads achieve a better result. The garments must be suitable for drying in a tumble dryer P and suitable for ironing P .

Pre-wash

For laundry with large amounts of dirt, e.g. dust and sand.

◀ fold her

¹Energy labelling programme according to AS/NZS 2040.1 and AS/NZS 2040.2

Ⓐ = Short: Ⓑ = Pre-ironing

Ⓐ = Short: Ⓑ = Pre-ironing

◀ fold her

◀ fold her

PROGRAMME CHART

◀ fold he

◀ fold he

◀ fold here

CLEANING AND CARE

◀ fold here

PROBLEM SOLVING GUIDE

fold here

fold here

