

Operating and installation instructions

Cool outdoor kitchen module



To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	4
Sustainability and environmental protection	13
Caring for the environment	13
How to save energy	14
Installation	15
Installation site	15
Climate range	16
Combining outdoor kitchen modules	17
Installation example	18
Instructions for installing the outdoor kitchen	19
Module dimensions	20
Changing the door hinging, aligning the appliance door	21
Ordering printed installation instructions	21
Limiting the opening angle of the appliance door	21
Aligning the refrigeration appliance	22
Connecting the modules	23
Inserting the plugs	23
Electrical connection	24
Familiarising yourself with the appliance	26
Guide to the appliance	26
Control panel with display	27
Settings mode 	28
Party mode 	28
Holiday mode 	28
Lock function  / 	28
Switching off the refrigeration appliance 	28
Sabbath mode 	28
Information on Sabbath mode 	28
Time before door alarm  is triggered	29
Keypad tone  / 	29
Alarms and buzzers  / 	29
Display brightness 	29
Temperature unit °C/°F	29
Demo mode 	29
Factory default settings 	29
Information on the refrigeration appliance 	29
Active AirClean filter display 	29
Cleaning mode 	29
Safety	30
Appliance functions	30
SuperCool 	30

Adjusting the interior fittings	31
Moving the adjustable shelves	31
Moving the split shelf.....	31
Moving split shelves.....	31
Removing the pull-out shelf	32
Inserting the pull-out shelf	32
Optional accessories	32
Commissioning.....	33
Before using for the first time	33
Connecting the refrigeration appliance	33
Switching on the refrigeration appliance	33
Switching off the refrigeration appliance	33
Switching off for longer periods of time	33
Operation	35
Setting the temperature	35
Temperature range.....	35
Temperature display	35
Storing items in the refrigerator section	36
Different storage zones.....	36
Storing food correctly.....	37
Adjusting settings	38
Selecting the desired function in Settings mode 	38
Cleaning and care	46
Cleaning the stainless steel surface	46
Cleaning agents	46
Preparing the refrigeration appliance for cleaning.....	47
Cleaning the interior of the appliance	47
Replacing the Active AirClean filter	47
Cleaning the door seal	48
Cleaning the ventilation gaps	48
After cleaning.....	48
Automatic defrosting	48
Problem solving guide.....	49
Noises	55
Service.....	57
Contact in case of fault.....	57
Warranty	57

Warning and Safety instructions

This refrigeration appliance complies with current local and national safety requirements. However, inappropriate use can lead to personal injury and damage to property.

Please read the operating and installation instructions carefully before using the refrigeration appliance for the first time. They contain important information on installation, safety, use and maintenance. This will prevent both personal injury and damage to the refrigeration appliance.

Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the refrigeration appliance as well as in the warning and safety notes.

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these operating and installation instructions in a safe place and pass them on to any future owner.

Correct application

► This refrigeration appliance is intended for use in covered outdoor areas protected from sun, rain and inclement weather. It is suitable for installation as a built-under appliance in the corresponding cabinet. This stainless steel module offers a degree of protection from the weather, especially in combination with the accompanying cover (available as an accessory). Direct sunlight must be avoided. Ensure that appropriate shading measures are in place.

► The refrigeration appliance is intended exclusively for domestic use for cooling and storing food and drinks.

The refrigeration appliance complies with protection class IPX4, which means it is protected against splash water and can be used in protected outdoor areas.

The refrigeration appliance is not suitable for freezing food.

The refrigeration appliance is suitable for integrated underbench installation in the Miele outdoor kitchen.

Any other usage is not permitted.

Warning and Safety instructions

► This appliance is not suitable for storing and keeping cool medicines, blood plasma, laboratory preparations or similar substances or products. Incorrect use of the appliance for such purposes may cause deterioration of the items stored. The appliance is also not suitable for use in areas where there is a risk of explosion.

Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the appliance.

► This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision and instruction concerning its use by a person responsible for their safety.

They may only use the appliance unsupervised if its operation has been clearly explained to them and they are able to use it safely and are able to understand and recognise the possible dangers caused by incorrect operation.

Safety with children

► Younger children must be kept away from the refrigeration appliance unless they are constantly supervised.

► Older children may only use the appliance when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

► Cleaning work may only be carried out by older children under the supervision of an adult.

► Please supervise children in the vicinity of the appliance and do not let them play with it.

► Danger of suffocation. Whilst playing, children may become entangled in packaging material (such as plastic wrapping) or pull the packaging material over their head, presenting the risk of suffocation. Keep packaging material away from children.

Technical safety

► The refrigerant circuit has been checked for leaks. The refrigeration appliance complies with all current local and national safety requirements.

Warning and Safety instructions



If the cooling circuit is damaged, refrigerant and oil can escape and ignite.

► **Warning: fire hazard/flammable materials.** This symbol is on the compressor and indicates flammable materials. Do not remove this sticker.

The refrigerant inside the appliance (details on the data plate) is environmentally friendly but flammable.

The use of this refrigerant does, however, sometimes lead to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the refrigerant flowing around the cooling circuit. Unfortunately, these effects cannot be avoided, but they do not affect the performance of the refrigeration appliance.

When transporting and installing the refrigeration appliance, ensure that no parts of the cooling circuit are damaged. Splashes of refrigerant can damage the eyes and leaking refrigerant can ignite.

In the event of any damage:

- Avoid naked flames or anything which creates a spark.
- Disconnect the refrigeration appliance from the mains electricity supply.
- Ventilate the room in which the refrigeration appliance is located for several minutes.
- Call Customer Service.

► The more refrigerant there is in a refrigeration appliance, the larger the room should be in which it is installed. In the event of a leakage, if the appliance is in a small room, there is the danger of a combustible gas/air mixture building up. For every 8 g of refrigerant, at least 1 m³ of room space is required. The amount of refrigerant in the refrigeration appliance is stated on the data plate inside the appliance.

► If the ventilation openings are covered or blocked, a combustible gas/air mixture can form if the cooling circuit is damaged. It is essential to observe the required ventilation openings. The ventilation openings must not be covered or blocked in any way.

Warning and Safety instructions

- ▶ To avoid the risk of damage to the appliance, make sure that the connection data (fuse rating, frequency and voltage) on the data plate corresponds to the household supply. Check that this is the case before connecting the appliance.
Consult a qualified electrician if in any doubt.
- ▶ The electrical safety of this appliance can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ Temporary or permanent operation with a self-sufficient or non-mains synchronous energy supply system (e.g. isolated networks, back-up systems) is possible. A requirement for the operation is that the energy supply system complies with all current local and national requirements that apply to stand-alone, solar and/or battery systems. The protective measures provided in the installation and in this Miele product must also be assured in their function and operation in isolated operation or in non-mains synchronous operation, or replaced with equivalent measures in the installation.
- ▶ If the power supply cord is damaged, it must only be replaced with a specific power supply cord of the same type (available in the Miele online shop or from Miele Customer Service). For safety reasons, replacement may only be carried out by a suitably qualified specialist or Miele Customer Service.
- ▶ Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. These do not guarantee the required safety of the appliance (e.g. danger of overheating).
- ▶ If moisture gets into electrical components or into the power supply cord, it could cause a short circuit. Therefore, do not operate the refrigeration appliance in areas where there may be moisture or splashing water.
- ▶ This appliance must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Do not use a damaged appliance. It could be dangerous. Check the appliance for visible signs of damage.
- ▶ For safety reasons, this appliance may only be used when it has been fully installed.

Warning and Safety instructions

- ▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:
 - the mains circuit breaker has been switched off, or
 - the screw-out fuse is removed (in countries where this is applicable), or
 - it is switched off at the wall socket and the plug is withdrawn from the socket. Do not pull the power supply cord but the mains plug to disconnect your appliance from the mains electricity supply.
- ▶ Installation, repairs, and other work by unqualified persons could be extremely dangerous. The manufacturer cannot accept liability for unauthorised work.
Installation, maintenance and repairs must only be carried out by a qualified specialist or Miele Customer Service.
- ▶ The manufacturer's warranty will be invalidated if the refrigeration appliance is not repaired by a qualified specialist or Miele Customer Service.
- ▶ If defective safety-relevant components are replaced, Miele can only guarantee full compliance with safety requirements if genuine Miele replacement parts are used.
- ▶ This refrigeration appliance is supplied with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This lamp must only be used for the purpose for which it is intended. The lamp is not suitable for room lighting. Replacement lamps may only be installed by a qualified specialist or Miele Customer Service. This refrigeration appliance contains several light sources with at least energy efficiency class G.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.

Correct installation

- ▶ Always wear protective gloves when transporting and installing the refrigeration appliance.
- ▶ Two people are required to install the refrigeration appliance.

Warning and Safety instructions

- ▶ Change the door hinging (if necessary) as described in the installation instructions.
- ▶ The outdoor kitchen module must be installed on a firm, level and stable surface.
- ▶ There may be a risk of injury due to protruding parts and sharp edges.
Wear gloves that offer protection against cuts during assembly.
- ▶ The module must be positioned horizontally with a maximum inclination of 1–2°. The adjustable feet can be adjusted to compensate for uneven ground.
- ▶ There is a risk of trapping on the plinth panel. Do not move the modules with the plinth panel fitted.
- ▶ Do not route any 230 V power supply cords through the modules. Only use the supplied cable glands when routing the 12 V power supply cords. Ensure that the power supply cords are not routed past sharp edges.

Correct use

- ▶ This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use it in ambient temperatures for which it is not designed. The climate class is stated on the data plate inside the refrigeration appliance. A lower ambient temperature will cause the compressor to switch off for longer periods, meaning that the refrigeration appliance is unable to maintain the required temperature.
- ▶ The ventilation cross-sections must not be covered or blocked in any way. This can impair the proper ventilation of the appliance, increase the energy consumption and cause damage to the components.
- ▶ Risk of damage due to greasy or oily foods. If the refrigeration appliance is used for storing refrigerated items which contain fat or oil, make sure that they do not come into contact with plastic components. Any spillages of oil or fat could cause stress cracks to the plastic and cause it to break or split.

Warning and Safety instructions

- ▶ Risk of fire and explosion due to flammable mixtures of gases. Do not store any explosive materials or products containing flammable propellants (e.g. spray cans) in the refrigeration appliance. Electrical components can cause flammable mixtures of gases to ignite. The spray cans in question can be identified by the contents printed on the can or by a flame symbol. Electrical components can cause escaping gases to ignite.
- ▶ Danger of explosion. Do not operate any electrical equipment (e.g. an electric ice cream maker) inside the refrigeration appliance. This can cause sparking and explosion.
- ▶ Food stored for too long may present a risk of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food, as well as the temperature at which it is stored. Follow the instructions given on the food manufacturer's packaging regarding storage conditions and use-by dates.
- ▶ Protect your module from the weather after use by covering it with the WeatherShield cover (optional accessory). Make sure that there is no residual moisture before you put the cover on.
- ▶ Danger of lightning. Do not use the outdoor kitchen during a thunderstorm.
- ▶ The stainless steel surfaces will show signs of wear due to weathering and use as a storage and work surface. This will not affect the functioning in any way. Be careful when handling scratch-sensitive surfaces to minimise signs of wear.
- ▶ The shelves must not be overloaded. The maximum load weight of the upper split shelf is 15 kg per shelf, the other 2 shelves can each be loaded with a maximum of 40 kg, and the pull-out basket with a maximum of 30 kg.

Accessories and spare parts

- ▶ Miele assumes no liability for the use of accessories that are not genuine Miele accessories. Miele is not liable for warranty, guarantee and/or product liability claims if damage or defects are due to the use or installation of accessories that do not originate from Miele or have not been approved by Miele.
- ▶ Miele original spare parts are kept in stock for at least 10 years and up to 15 years after discontinuation of your refrigeration appliance.

Cleaning and care

- ▶ Do not use any oils or grease on the door seals, as these will cause the seals to deteriorate and become porous with time.
- ▶ Do not use a steam cleaning appliance to clean this appliance. Steam could reach the electrical components and cause a short circuit.
- ▶ Do not use a pressure washer or water jet to clean the appliance.
- ▶ Sharp-edged or pointed objects will damage the evaporator, causing irreversible damage to the refrigeration appliance. Therefore, do not use any pointed or sharp-edged objects to remove frost and ice.
- ▶ Never place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.
- ▶ Do not use defrosting sprays or de-icers. Defrosting sprays and de-icers can contain substances which could damage the plastic parts or which might cause a build-up of explosive gases and pose a danger to health.

Transport

- ▶ To avoid damage to the refrigeration appliance, always transport it upright and in its packaging.
- ▶ Risk of injury and damage! The refrigeration appliance is very heavy and must be transported by two people.

Disposal of your old appliance

- ▶ Children playing could become trapped in the refrigeration appliance and could suffocate.
 - Remove the appliance door(s).
 - Remove the drawers.
 - Leave the adjustable shelves in the refrigeration appliance so children cannot climb inside.
 - If your old refrigeration appliance has a door lock, destroy it. This way you will prevent the risk of playing children accidentally locking themselves in and endangering their lives.
- ▶ Risk of electric shock!
 - Cut the electrical plug off the power supply cord.
 - Cut the power supply cord off the old appliance.

Warning and Safety instructions

Dispose of the electrical plug and power supply cord separately from the old appliance.

► During and after disposal, make sure that the refrigeration appliance is not placed near petrol or other flammable gases and liquids.

► Risk of fire due to escaping oil or refrigerant.

The refrigerant and oil inside the appliance are flammable. In high enough concentrations, escaping refrigerant or oil can ignite if they come into contact with an external heat source.

During disposal, make sure that the cooling circuit is not damaged. This prevents refrigerant and oil escaping in an uncontrolled manner (see the data plate for details of the refrigerant).

► Splashes of coolant can damage the eyes. Be careful not to damage any part of the pipework whilst awaiting disposal, e.g. by

- puncturing the refrigerant channels in the condenser,
- bending any pipework, or
- scratching the surface coating.

Symbol on the compressor (depending on model)

This information is only relevant for recycling. There is no risk during normal operation.



► The oil in the compressor can be fatal if swallowed or if it penetrates the airways.

Caring for the environment

Disposal of the packing material

The packaging material is used for handling and protects the appliance from transport damage.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites. Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Only for Australia: Note for installer: Expanded polystyrene (EPS) packaging included. Please retain and dispose of EPS packaging responsibly. For further information, please contact Miele.

Disposing of your old appliance

Electrical and electronic appliances contain many valuable materials. They also contain certain materials, compounds, and components which were essential for their correct functioning and safety. These could be hazardous to human health and to the environment if disposed of with general waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Take care not to damage your refrigeration appliance before or during disposal in an authorised, environmentally friendly manner. This is to ensure that refrigerant in the cooling circuit and oil in the compressor is contained, and will not leak into the environment.

Please dispose of it at your local community waste collection/recycling centre for electrical and electronic appliances, or contact Miele. You are also responsible for deleting any personal data that may be stored on the appliance prior to disposal. You should remove any old batteries which are not securely enclosed by the appliance and remove any lamps without destroying them, where this is possible. These must be taken to a suitable collection point where they can be handed in free of charge. Please ensure that your old appliance presents no danger to children while being stored awaiting disposal.

Sustainability and environmental protection

How to save energy ...

Installation site	The refrigeration appliance has to cool more often at higher ambient temperatures and consumes more energy in the process. Therefore: - Do not install the refrigeration appliance near a heat source (barbecue, heater element, cooker). - Protect the refrigeration appliance from direct sunlight. - Ensure that the limits for the permissible ambient temperature are observed. - Clean the ventilation openings on a regular basis to remove any dust.
Temperature setting	The colder the temperature, the higher the energy consumption. The following settings are recommended: - 4 to 5 °C in the refrigerator section.
Use	Energy consumption is increased by heat input and impeded air circulation. Therefore: - Only open the appliance door when necessary and for as short a time as possible. Arrange the refrigerated items in a way that makes it easy to find in the appliance. - Always close the appliance door properly after opening it. - Allow warm items to cool down before placing them in the refrigeration appliance. - Do not overfill the compartments to allow air to circulate.

Installation site

 Fire risk and danger of damage from open flames!

Open flames can set fire to the refrigeration appliance.

Keep open flames (e.g. a candle) away from the refrigeration appliance.

 Fire hazard and risk of damage from appliances that give off heat.

Appliances that give off heat can catch fire and set fire to the refrigeration appliance.

The power supply cord must not come into contact with heat sources.

This refrigeration appliance must not be installed underneath a cooktop.

This refrigeration appliance is intended for use in covered outdoor areas protected from sun, rain and inclement weather. It is suitable for installation as a built-under appliance in the corresponding cabinet. This module offers a degree of protection from the weather, especially in combination with the accompanying cover (available as an accessory). Direct sunlight must be avoided. Ensure that appropriate shading measures are in place.

Please note the following when installing the refrigeration appliance:

- The mains socket must not be located directly behind the appliance and should be easily accessible.
- The mains plug and power supply cord must not touch the rear of the refrigeration appliance as they could be damaged by vibrations from the appliance.
- Other appliances must also not be plugged into a socket located directly behind this refrigeration appliance.
- During installation of the refrigeration appliance, make sure that the power supply cord does not get trapped or damaged.
- Do not position or operate multi-socket adapters, distributor strips or other electronic devices (such as halogen transformers) at the rear of the appliance.
- The floor at the installation site must be horizontal, stable and level and must be as high as the surrounding floor. The adjustable feet can be adjusted to compensate for uneven ground.

Installation

Climate range

This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use it in ambient temperatures for which it is not designed.

The climate range is stated on the data plate inside the refrigeration appliance.

Climate range	Ambient temperature
SN-T	10 to 43 °C

This refrigeration appliance is designed for operation at a maximum ambient temperature of 43 °C.

Correct operation is ensured at ambient temperatures down to -10 °C.

Ensure that the limits for the permissible ambient temperature are observed when the refrigeration appliance is in operation.



Risk of damage due to excessively cold temperatures.
If the ambient temperature falls below -10 °C, further operation of the refrigeration appliance may result in damage to the appliance.
Switch off the refrigeration appliance and empty it to prevent the contents from freezing and bottles from bursting. Clean the refrigeration appliance and close the appliance door.

Only when the ambient temperature falls below -20 °C must the switched-off refrigeration appliance be moved to a warmer environment to protect the appliance function.

Combining outdoor kitchen modules

The Miele outdoor kitchen has a modular design. Individual modules can be flexibly combined to create a complete kitchen solution. The modules are connected by placing them next to each other and screwing them together. Thanks to the sophisticated design, the modules can be combined with each other in a variety of ways – entirely according to your individual requirements and installation situation.

The following table shows examples of possible module combinations:

		Installation on the right side									
		Fire ¹	Cook	Cool	Wash	Store S	Store M	Store Gas M	Store L	Corner	Table
Installation on the left side	Fire ¹	×	✓	×	✓	✓	✓	✓	✓	✓	✓
	Cook	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Cool	×	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Wash	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Store S	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Store M	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Store Gas M	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Store L	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Corner	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
	Table	✓	✓	✓	✓	✓	✓	✓	✓	✓	×
Sear Pro ²		×	×	×	×	×	✓	✓	✓	✓	×


✓ = Module combination is possible.

×

¹ Fire/Fire Pro/Fire Pro IQ; ² Installation of Sear Pro on the respective module

Installation

Installation example

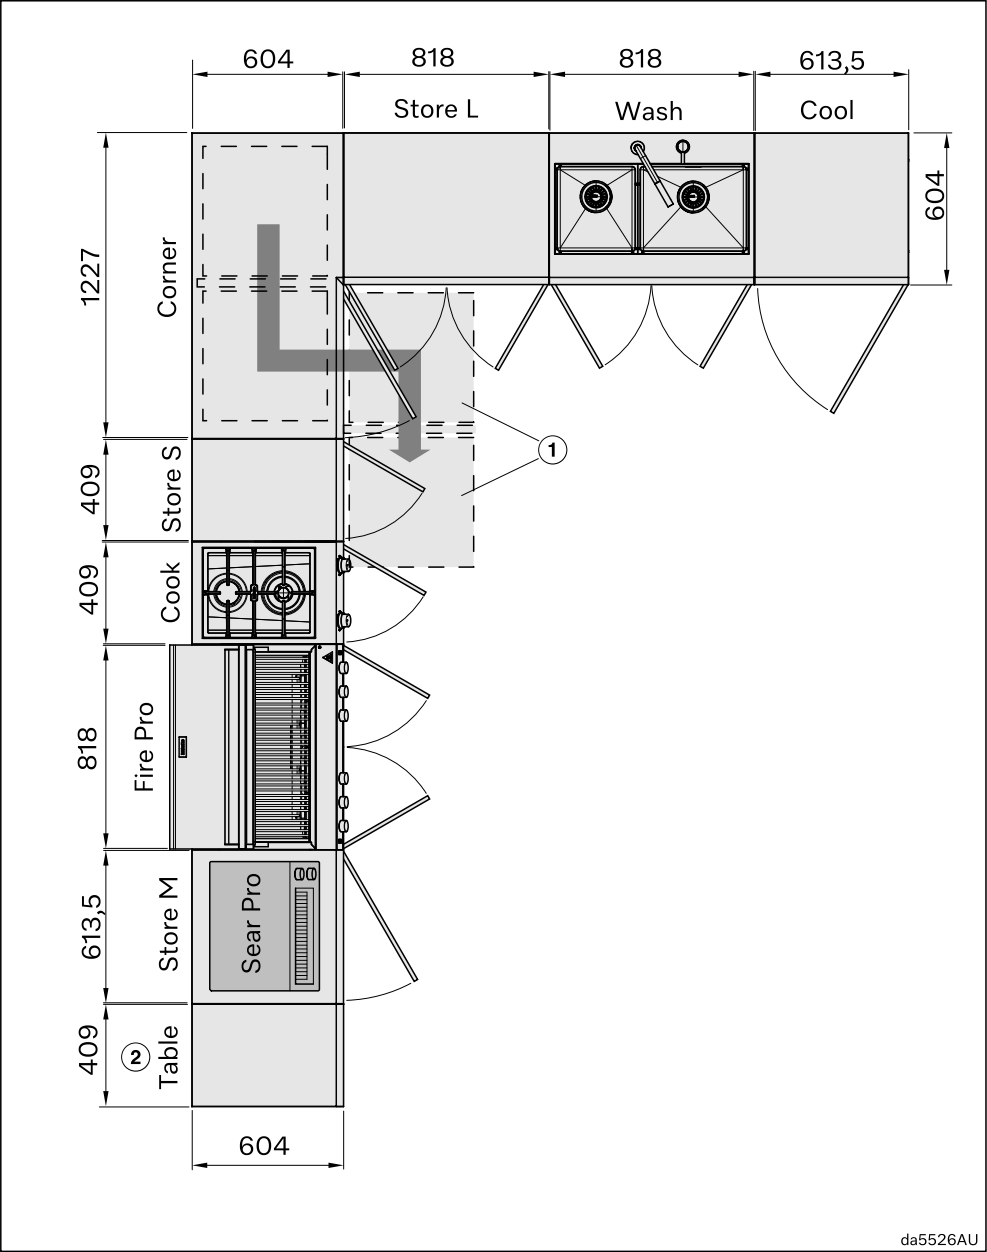

da5526AU

- ① Position of the extended pull-outs of the Corner module

The doors of the Store S and M, Cook and Cool modules can be hinged on either the right or the left.

Detailed dimensions can be found in the dimensional sketches of the modules.

- ② To ensure stability, the Table module may only be installed on the Store S, M or Cook modules if they are connected to other modules.

the module to be placed there. A height difference of up to 3.5 cm can be compensated for per module.

- **Align modules one after the other:** Starting from this highest point, align the height of the adjacent modules one after the other. Use a spirit level to ensure correct alignment.
- **Connect modules step by step:** Start at one end of the outdoor kitchen and connect the modules – directly adjacent elements in each case – one after the other.


Instructions for installing the outdoor kitchen

The installation requirements for your outdoor kitchen may vary depending on the nature of the installation site and the chosen configuration. The following general recommendations should make installation easier for you:

- **Pre-assemble modules individually:**
The modules are supplied pre-assembled. However, a number of steps are still required to complete the assembly. Assemble each module completely before integrating it into the overall outdoor kitchen.
- **Set up connection modules first:**
Start with the modules that have gas, electricity or water connections. Check whether the connections can be installed as planned.
- **Install the plinth panels last:** Do not attach the plinth panels until all modules are correctly aligned and connected to each other.
- **Determine the highest point:**
Determine the highest point of the installation site and align the height of

Installation

Module dimensions

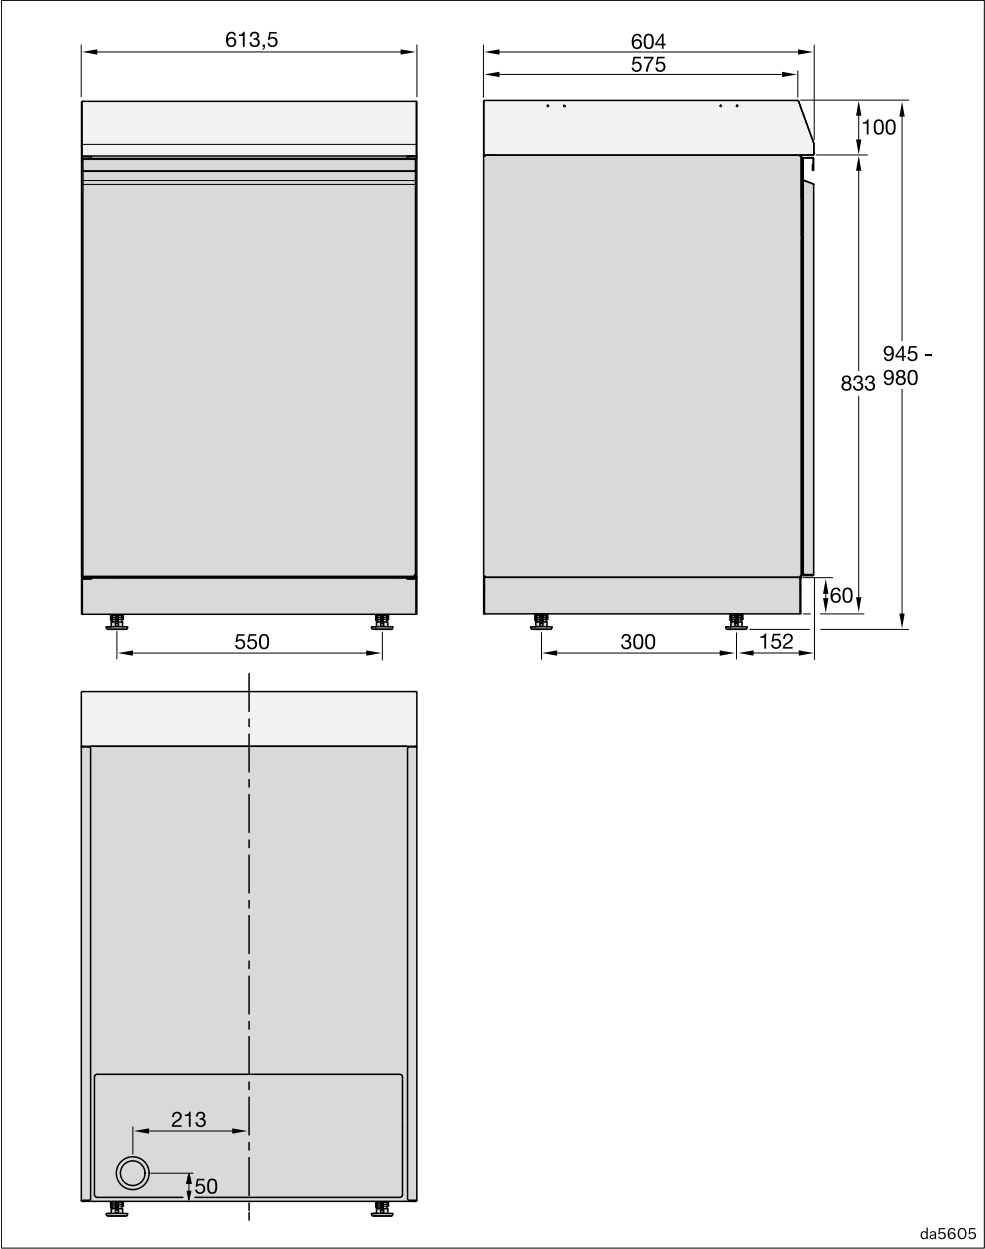

Changing the door hinging, aligning the appliance door

⚠ Danger of injury and damage to the appliance due to heavy door. There is an increased danger of injury and damage if the door hinging is installed by a single person. Always change the door hinging with the help of a second person.

⚠ Risk of crushing at the hinge. Fingers can get trapped in or around the hinge. Do not reach into the hinge when opening and closing the door.

The refrigeration appliance is supplied with right-hand hinging. If a left-hand hinging is required, the door hinging must be changed (see installation instructions) before the refrigeration appliance is connected to the other modules.

Be careful not to damage the door seal. If the door seal is damaged, the appliance door may not close properly and cooling will be insufficient.

i Carry out the door hinging change in accordance with the installation instructions (see QR code).



Material number 13 042 030

Ordering printed installation instructions


You can order printed installation instructions free of charge from Miele. All the contact information you need for Miele can be found at the end of this document. Quote the model identifier and the serial number from the data plate when placing your order.

Limiting the opening angle of the appliance door

The door hinges are set at the factory to enable the door to be opened wide.

If required, the opening angle can be limited to approx. 90° using the enclosed pins.

The locking pins for limiting the door opening must be fitted before the refrigeration appliance is installed.

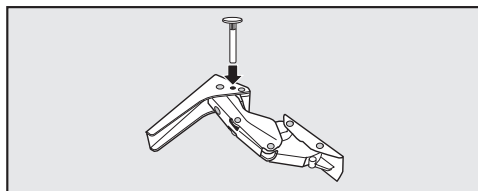

■ Insert the pin in the door hinge from above.

Installation

Aligning the refrigeration appliance


⚠ Risk of damaging the adjustable feet.

The adjustable feet can break off.

The adjustable feet should be almost fully screwed in when you push the refrigeration appliance into place.


Useful tip: Loosen the 2 rear feet by half a turn before pushing the appliance in. After pushing the appliance into the niche, the adjustable feet will be easier to adjust from the front.

- Grasp the unit with both hands and slide the module to the desired position.
- Align the module horizontally and with adjacent modules.

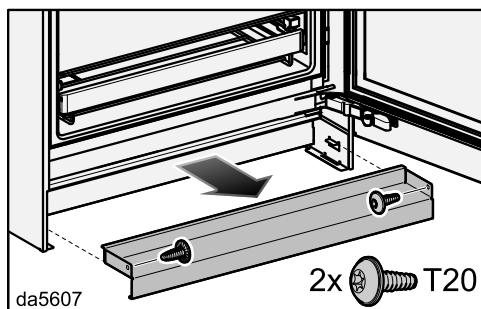

- Remove the plinth panel from the refrigeration appliance.
- Adjust the front and rear feet alternately according to the niche height and make sure the refrigeration appliance is correctly aligned.

Proceed as follows:

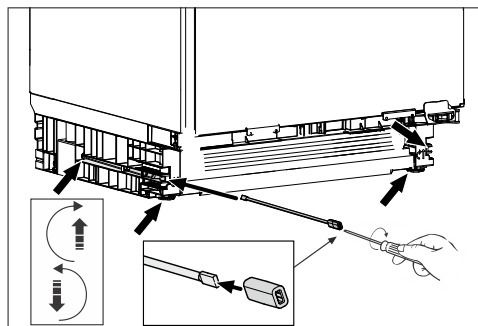


- Adjust both rear adjustable feet with appropriate screws at the front right and left in the plinth using the rod supplied and a flat-head screwdriver.
- Fully unscrew the 2 front adjustable feet alternately with the rear ones. The maximum adjustment range is 6 cm.

Useful tip: As soon as the feet have been unscrewed slightly, you can adjust them with a screwdriver at the bottom of the adjustable foot.


- Screw the plinth panel back onto the refrigeration appliance.

Connecting the modules

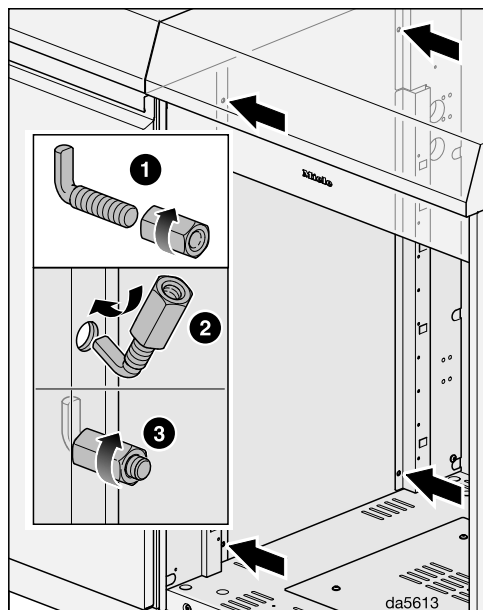

- Connect the modules using the enclosed hooks and nuts. Use 4 hooks per side. Screw on the nuts by hand without using any tools.

Inserting the plugs

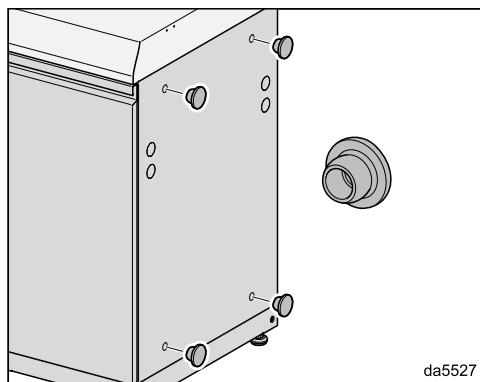

- If the module is freestanding or located at the end of a run of kitchen modules, insert the enclosed plugs in the visible side panel.

Installation

Electrical connection

The refrigeration appliance must only be connected to an earthed socket using the power supply cord supplied.

The socket should be easily accessible after the refrigeration appliance has been installed. If the socket is not easily accessible, ensure that a suitable means of disconnection is provided on the installation side for each pole.



Risk of fire from overheating.

Connecting the appliance to a multi-socket plug adapter or to an extension lead can overload the cable.

For safety reasons, do not use an extension cable or multi-socket adapter.

All electrical work must be carried out by a suitably qualified and competent person in strict accordance with national and local safety regulations.

For safety reasons, we recommend using a suitable residual current device (RCD) in the relevant electrical installation for connecting the refrigeration appliance.

If the power supply cord is damaged, it must only be replaced with a specific power supply cord of the same type (available from Miele).


The data plate indicates the nominal power consumption and the connection data. Compare this information with the data of the on-site electrical connection. If in any doubt, consult a qualified electrician.

Temporary or permanent operation with a self-sufficient or non-mains synchronous energy supply system (e.g. isolated networks, back-up systems) is possible. A requirement for the

operation is that the energy supply system complies with all current local and national requirements that apply to stand-alone, solar and/or battery systems.

The protective measures provided in the domestic installation and in this Miele product must also be assured in their function and operation in isolated operation or in non-mains synchronous operation, or replaced with equivalent measures in the installation.

Connecting the refrigeration appliance

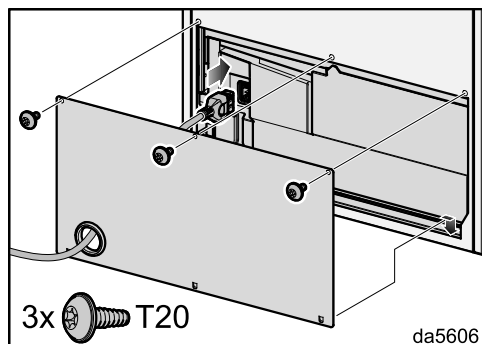

- Remove the cover on the rear of the appliance.

- Insert the mains plug through the cover and plug it into the back of the refrigeration appliance.

Make sure that the plug connector has locked into position correctly.

- Then reinstall the cover.

- Route the power supply cord directly out of the cover.


- Insert the mains plug of the refrigeration appliance into the socket and switch it on.

The refrigeration appliance is now connected to the mains power supply.

- Check the power supply cord regularly for damage. Replace a damaged power supply cord immediately.

Familiarising yourself with the appliance


Guide to the appliance

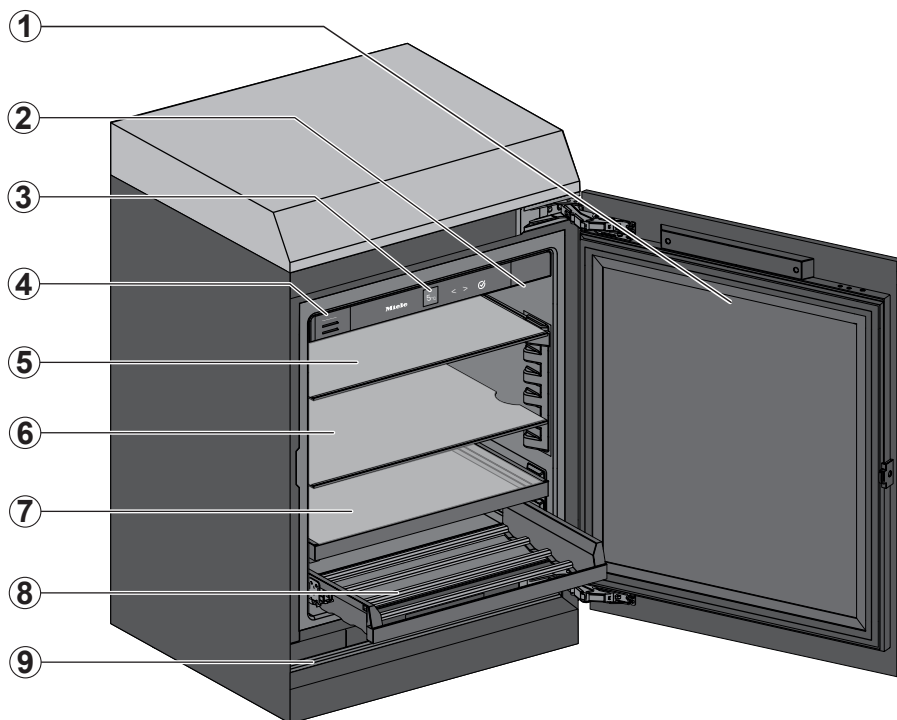

- ① Appliance door
- ② Interior lighting
- ③ Display
- ④ Charcoal filter (Active AirClean filter)
- ⑤ Split shelf (FlexiBoard):
Slide the front section of the glass plate backwards to create space for tall containers in the front area.
- ⑥ Adjustable shelf
- ⑦ Pull-out shelf (with removable glass plate)
- ⑧ Pull-out basket
- ⑨ Ventilation grille

Familiarising yourself with the appliance

Control panel with display

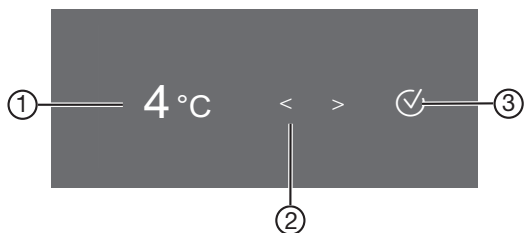

- ① Temperature display for the refrigerator section
- ② Sensors for selecting a setting
- ③ ✓ sensor control for confirming a selection and accessing Settings mode ⚙

Familiarising yourself with the appliance

Settings mode

Party mode

The Party mode function is recommended if you wish to chill large amounts of food quickly.

The Party mode function should be switched on around 4 hours before placing food in the appliance.

The Party mode function will switch itself off automatically after approx. 24 hours.

If there is a power cut, the Party mode function is switched off.

Holiday mode

The Holiday mode function is useful when you go on holiday and, for example, you do not wish to switch off the refrigerator section completely or do not need a high degree of cooling.

When Holiday mode is switched on, the refrigerator section is regulated to a temperature of 14 °C. In this way, the refrigerator section remains in operation whilst saving energy.

Items which do not spoil quickly can be stored in the refrigeration appliance for some time at this moderate refrigerator section temperature. Energy consumption is lower than in normal operation. This also prevents the build-up of odours and mould, which can occur if the refrigerator section is switched off and the appliance door is closed.

Lock function /

When the lock function is switched on, it protects the refrigeration appliance from being switched off unintentionally and being adjusted unintentionally by unauthorised persons, e.g. children.

If you just want to quickly adjust the temperature, for example, you can deactivate the lock function temporarily.

Switching off the refrigeration appliance

See “Commissioning – Switching the refrigeration appliance off”.

Sabbath mode

The refrigeration appliance offers a Sabbath mode for the purpose of religious observance.

When Sabbath mode is switched on, the following are deactivated temporarily:

- the interior lighting when the appliance door is opened
- all audible and visual signals
- the display
- reminders (e.g. Active AirClean filter display): the set time interval is paused

All other functions switched on previously remain activated.

When Sabbath mode is switched on, you cannot configure any settings on your refrigeration appliance.

Information on Sabbath mode

You can call up the Sabbath mode version here.

Familiarising yourself with the appliance

Time before door alarm is triggered

You can set the time before the appliance door alarm is triggered here.

Keypad tone /

You can switch the keypad tone on or off here (see “Adjusting settings”).

Alarms and buzzers /

You can change the volume of the alarms and buzzers (e.g. in the event of a door alarm or a fault message) here. Alternatively, you can switch the alarms and buzzers off completely if you find them annoying (see “Adjusting settings”).

Display brightness

You can adjust the display brightness to the lighting conditions in the room here.

Temperature unit °C/°F

You can set the required temperature unit (°Celsius or °Fahrenheit) here.

Demo mode

You can switch off demo mode here if it has been switched on as a default setting ( will appear in the display).

Demo mode allows the refrigeration appliance to be presented in a specialist dealer showroom without the cooling system being switched on. Do not activate this setting for domestic use.

Factory default settings

You can reset the refrigeration appliance's settings to the default settings.

Useful tip: Reset the refrigeration appliance's settings to the default settings when disposing of your refrigeration appliance, selling it or putting a used refrigeration appliance into operation. Depending on the model, this will reset the network configuration so that your personal data is deleted from the refrigeration appliance. This will also ensure that a previous owner is no longer able to access the refrigeration appliance.

Information on the refrigeration appliance

You can call up the model identifier and serial number of your refrigeration appliance here.

Keep this appliance data to hand:

- when reporting an appliance fault to Miele Customer Service (see “Customer Service”)
- when retrieving information from the EPREL database (see “Customer Service”)

Active AirClean filter display

Filtering the air through the Active AirClean filter (available as an accessory) ensures that the air remains free from odours.

The Active AirClean filter display will remind you approx. every 6 months that the Active AirClean filter has to be replaced.

You can activate the Active AirClean filter display here.

Cleaning mode

The Cleaning mode  function makes it easier to clean the refrigerator section.

Familiarising yourself with the appliance

The interior lighting remains switched on, even though the refrigerator section is switched off. The buzzer will stop and the symbols in the display will also go out.

Safety

The refrigeration appliance is fitted with a door alarm to avoid increased energy consumption and refrigerated items becoming warm if the appliance door is left open.

If the appliance door is left open for a longer period of time,  will appear in the temperature display. An alarm will also sound and the interior lighting will flash.

The amount of time before the door alarm is triggered can be changed (see “Adjusting settings – Changing the time before the door alarm is triggered”).

The door alarm’s buzzer can also be switched off (see “Adjusting settings – Changing the volume of the alarms and buzzers”).

The alarm will stop and  will go out in the display as soon as the appliance door is closed.

Switching the door alarm off early

■ Tap .

 goes out and the alarm will stop. The interior lighting will light up constantly.

If the appliance door is not closed, the door alarm will sound again after around 1 minute.

Appliance functions

SuperCool

When switched on, the SuperCool function can be used to rapidly reduce the temperature in the **refrigerator section** to its lowest setting (depending on the ambient temperature). The refrigeration appliance will work at full power and lower the temperature.

Select this function for the rapid chilling of large amounts of food.

The SuperCool function should be switched on **immediately before placing** items in the interior (see “Operation – Switching SuperCool  on”).

The SuperCool function will switch itself off automatically after approx. 18 hours.


Useful tip: To save energy, you can switch off the SuperCool  function early yourself once items are sufficiently chilled.

Familiarising yourself with the appliance

Adjusting the interior fittings

Moving the adjustable shelves

The shelves can be adjusted according to the height of the items.

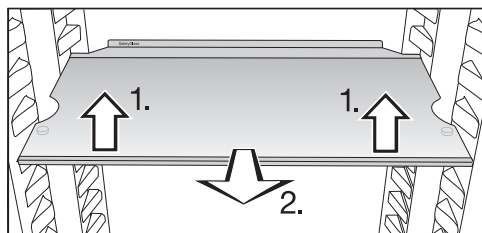


- Raise the shelf slightly at the front and pull it forwards a little.
- Lift it until the notches at the side are in line with the shelf supports. The shelf can then be raised or lowered to the required level.
- Push the shelf in.

Stoppers prevent the shelves from being dislodged by mistake.

The raised edge on the protective strip at the back must face upwards to prevent items from touching the rear panel and freezing to it.


Moving the split shelf

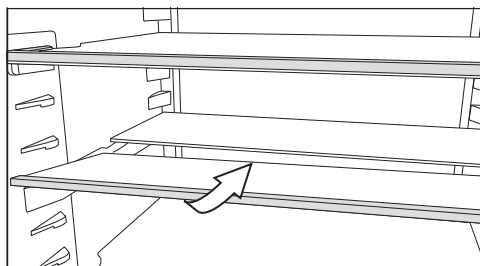

- Lift up the front section of the glass plate slightly at the front and slide it carefully underneath the rear section.

Moving split shelves

- Take both sections of the glass plate out of the appliance.

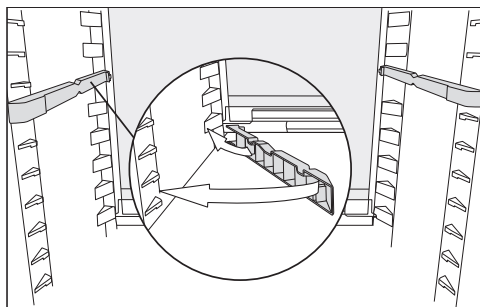


- Attach the 2 adapters to the support ribs on the left and right at the desired height.

The glass plate with the raised edge must be fitted at the back.

Familiarising yourself with the appliance

Removing a glass plate

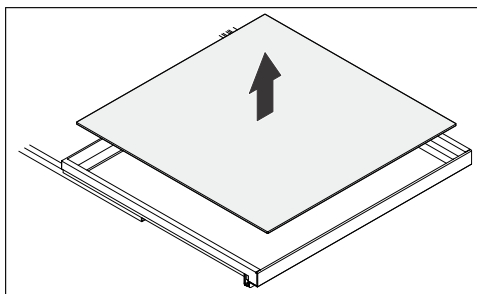

- Remove the glass plate by lifting it upwards.


Removing the pull-out shelf

The pull-out shelf can be removed for cleaning.

 Risk of damage and injury from the glass plate.


The glass panel forming the base of the pull-out shelf can drop to the floor and shatter.

Remove the glass plate before removing the shelf.

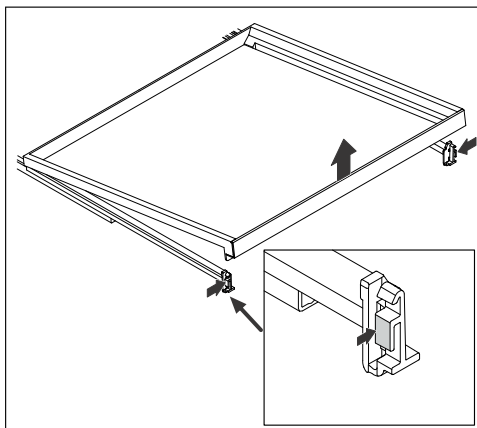

- Press in lightly on both sides and remove the shelf by lifting it upwards.

Inserting the pull-out shelf

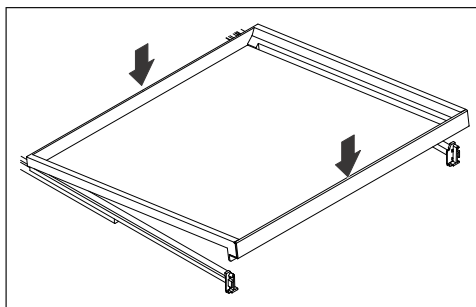

- Place the shelf on the rails at the rear.
- Lower the front of the shelf until it clicks into place.

Optional accessories

A range of useful Miele accessories and care products is available for your appliance.

Products specially tailored to your refrigeration appliance – such as appliance care products and accessories – are available from the Miele online shop and Miele Customer Service.

You can access the Miele online shop via the following QR code:



Before using for the first time

- Carefully unpack the glass shelves from the separate box.
- Remove all packaging material and protective film.
- Remove all advertising materials and labels from the inside of the refrigeration appliance (exception: do not remove the data plate).
- Clean the inside of the appliance and the accessories.

Connecting the refrigeration appliance

- Connect the refrigeration appliance to the mains power supply as described in “Installation – Electrical connection”.

Miele will appear in the display, followed by the  symbol.

Switching on the refrigeration appliance

- Open the appliance door.
- Touch the  sensor control on the control panel.

The refrigeration appliance will start to cool and the interior lighting will come on when the appliance door is opened.

The refrigeration appliance will adjust to the preset temperature.

To enable the temperature to get sufficiently cold inside the refrigeration appliance, allow the appliance to run for a few hours. Do not place items in the refrigeration appliance until it has reached the preset temperature.

Switching off the refrigeration appliance

- Touch the  sensor control on the control panel.

 appears in the display.

- Tap .
- Use the < sensor to scroll to the .
- Tap .

 appears in the display.

The cooling and interior lighting are switched off.

Please note: The refrigeration appliance is not disconnected from the mains power supply when it is switched off.

Switching off for longer periods of time

If, during a long absence, the refrigeration appliance is switched off but not cleaned and the door is left shut, there is a danger of mould building up inside the appliance. It is essential to clean the refrigeration appliance if it is not going to be used for a long time.

If the refrigeration appliance is not going to be used for a longer period of time, observe the following:

- Switch off the refrigeration appliance.
- Switch off at the wall and withdraw the mains plug from the socket, or switch off the mains circuit breaker.
- Clean the refrigeration appliance thoroughly and close the appliance door to prevent small animals or insects from entering the refrigeration

Commissioning

appliance when it is stored outdoors.
Check the interior regularly for
odours.

- Leave the refrigeration appliance open
when it is stored in a closed room to
prevent odours building up inside the
appliance.

Setting the temperature

We recommend a temperature of **4 °C** in the refrigerator section.

- Touch the  sensor control on the control panel.
-  appears in the display.
- Tap .
- Use the < and > sensors to change the temperature.
- Tap .

The temperature display will then change back to the current temperature in the refrigeration appliance.

The temperature in the refrigeration appliance will always **rise**:

- the more often the appliance door is opened and the longer it is kept open.
- the more items that are stored in it.
- the warmer the freshly stored items are.
- the higher the ambient temperature surrounding the refrigeration appliance. This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use it in ambient temperatures for which it is not designed.

Temperature range

The temperature in the refrigerator section can be adjusted from 2 to 14 °C.

Temperature display

In normal operation, the temperature display shows the **current mean temperature** in the refrigerator.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the

temperature required and for this temperature to then be shown constantly in the display.

Switching SuperCool on

The SuperCool function should be switched on **immediately before placing** items in the appliance.

When the SuperCool function is switched on, the appliance may make more noise than usual.

- Touch the  sensor control on the control panel.
-  appears in the display.
- Tap .
- Use the < sensor to scroll to the  symbol.
- Tap .

When the SuperCool function is **switched on**, a dot appears in the upper corner of the display .

- Use the > sensor control to scroll to the temperature you want and touch .

Switching SuperCool off

The SuperCool function will switch itself off automatically after approx. 18 hours. The refrigeration appliance will then run at normal power again.

Useful tip: To save energy, you can switch off the SuperCool function early yourself once items are sufficiently chilled.

- Touch the  sensor control on the control panel.
-  appears in the display.
- Tap .

Operation

- Use the < sensor to scroll to the ❄ symbol.

- Tap ✓.

When the SuperCool function is **switched off**, the dot in the upper corner of the display goes out •.

- Use the > sensor control to scroll to the temperature you want and touch ✓.

Storing items in the refrigerator section

⚠ Risk of explosion due to flammable mixes of gases.

Electrical components can cause flammable mixes of gases to ignite.

Do not store any explosive materials or products containing flammable propellants (e.g. spray cans) in the refrigeration appliance. The spray cans in question can be identified by the contents printed on the can or by a flame symbol. Electrical components can cause escaping gases to ignite.

⚠ Risk of damage due to greasy or oily items.

If storing items which contain a lot of fat or oil in the refrigeration appliance, make sure that it does not come into contact with plastic components as this could cause stress cracks or break the plastic.

Make sure that no fat or oil leaks onto the plastic parts of the refrigeration appliance.

If there is insufficient air circulation, the cooling performance will decrease and energy consumption will increase.

To allow air to circulate efficiently, do not pack items too closely together in the appliance.

Do not cover the fan in the rear wall of the appliance.

Different storage zones

Due to the natural air circulation, there are different temperature zones in the refrigerator section.

Cold, heavy air sinks to the lowest section of the refrigerator section. Make use of the different sections when placing items in the appliance.

This is a refrigeration appliance with automatic temperature distribution (DynaCool). The refrigeration appliance switches the fan on automatically when the cooling system for the refrigerator section switches on. This means that the cold is distributed evenly in the refrigerator section and the difference between the various temperature zones is less pronounced. All stored food is thus cooled to approximately the same temperature.

Coldest area

The coldest area in the refrigerator section is on the lower shelf.

A temperature setting of 4 °C combined with appropriate hygiene measures delays the propagation of bacteria, e.g. salmonella and listeria, which can lead to serious food poisoning.

Useful tip: Do not store items in such a way that they touch the rear panel of the refrigerator section. Otherwise the items may freeze to the rear panel.

Storing food correctly

Ensure that food stored in the refrigerator section is **in packaging or covered properly**. This will prevent food smells from affecting other foods, food from drying out, and also cross-contamination of bacteria. This is especially important when storing meat products. Make sure that food such as raw meat and fish in particular does not come into contact with other food.

By ensuring that the temperature settings are correct and by taking appropriate hygiene measures, you can prolong the storage life of your food considerably. This prevents food waste.

Remember that the freshness of the food when first placed in the appliance is the most important factor in determining how long it will stay fresh.

Protein rich food

Please note that foods rich in protein deteriorate faster than others. Shellfish, for example, deteriorates faster than fish, and fish deteriorates faster than meat.

Adjusting settings

Selecting the desired function in Settings mode

- Touch the  sensor control on the control panel.

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Select the function you want using the < or > sensor.
- Touch  to select the function you want.

When the function is **switched on**, a dot appears in the upper corner of the display .

- Touch  to deselect a selected function.

When the function is **switched off**, the dot in the upper corner of the display goes out.

Exiting Settings mode

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

■ **Alternatively:**

Wait approx. 15 seconds after the last press of a sensor.
Settings mode is then exited automatically.

	Settings mode
	Switch Party mode on or off.
	Switch Holiday mode on or off.
	Switch the locking function on, deactivate it temporarily or switch it off completely.
	Switch the refrigeration appliance off.
	Switch Sabbath mode on or off.
	Call up the Sabbath mode version.
	Change the time before the door alarm is triggered.
	Switch the keypad tone on or off.
	Change the volume of the alarms and buzzers or switch off the alarms and buzzers completely.
	Adjust the display brightness.
	Change the temperature unit.
	Switch the demo mode off (only visible when switched on).
	Reset the settings to their factory default settings.
	Access information about your refrigeration appliance.
	Activate the Active AirClean filter display.
	Switch Cleaning mode on or off.

Adjusting settings

The door alarm and other warnings are automatically disabled when the appliance is in Settings mode .

Switching Party mode on

The Party mode  function should be switched on around 4 hours before placing food in the appliance.

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the .
- Tap .
- Use the < or > sensor control to scroll to the .
- Tap .

When Party mode  is switched on, a dot appears in the upper corner of the display .

- **To leave Settings mode** , use the < or > sensor control to scroll to the .
- Tap .
- Use the < or > sensor control to scroll to the  and touch .

When Party mode  is switched on, the SuperCool  function is switched on automatically.

Switching Party mode off

The Party mode function  will switch itself off automatically after approx. 24 hours.

To save energy, you can switch off the Party mode function early yourself once items are sufficiently chilled.

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the .

- Tap .

- Use the < or > sensor control to scroll to the .

- Tap .

When the Party mode function  is switched off, the dot in the upper corner of the display goes out.

- **To leave Settings mode** , use the < or > sensor control to scroll to the .
- Tap .
- Use the < or > sensor control to scroll to the  and touch .

Switching Holiday mode on

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the .
- Tap .
- Use the < or > sensor control to scroll to the .
- Tap .

When Holiday mode  is switched on, a dot appears in the upper corner of the display .

- **To leave Settings mode** , use the < or > sensor control to scroll to the .
- Tap .
- Use the < or > sensor control to scroll to the  and touch .

 Health risk due to consumption of spoiled food.

The shelf life and quality of items in the refrigerator section may deteriorate if the temperature remains above 4 °C for an extended period.

Only ever switch on the Holiday mode function  for a limited period.

Do not store sensitive and perishable items during this time.

Switching Holiday mode off

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.

- Tap .

- Use the < or > sensor control to scroll to the  symbol.

- Tap .

When the Holiday mode function  is switched off, the dot in the upper corner of the display goes out.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.

- Tap .

- Use the < or > sensor control to scroll to the  symbol and touch .

Switching the lock function / on

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.

- Tap .

- Use the < or > sensor control to scroll to the  symbol.

- Tap .

When the safety lock function  is switched on, a dot appears in the upper corner of the display .

- Open and close the appliance door. The safety lock function  will now be activated.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.

- Tap .

- Use the < or > sensor control to scroll to the  symbol and touch .

Deactivating the lock function / temporarily

- Tap .

 will appear in the display.

- Touch the  sensor control for approx. 6 seconds.

 will appear in the display.

- Tap .

- Now select the required settings.

- Tap .

Closing the appliance door will reactivate the safety lock function .

Switching the lock function / off completely

- Tap .

 will appear in the display.

- Touch the  sensor control for approx. 6 seconds.

 will appear in the display.

- Use the < or > sensor control to scroll to the  symbol.

Adjusting settings

- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

When the safety lock function is switched off,  appears in the display.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Switching off the refrigeration appliance

- Tap .
-  appears in the display.
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

 appears in the display.

The cooling and interior lighting are switched off.

Please note: The refrigeration appliance is not disconnected from the mains power supply when it is switched off.

Switching Sabbath mode on

- Tap .
-  appears in the display.
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

- Use the < or > sensor control to scroll to the  symbol.

- Tap .

When the Sabbath mode function  is switched on, a dot appears in the upper corner of the display .

The display switches off after approx. 3 seconds.

Ensure that the appliance door is properly closed, as visual and audible alarms are switched off.

Switching Sabbath mode off

The Sabbath mode function  will switch off automatically after approx. 80 hours.

However, you can switch the Sabbath mode function  off early.

- Tap .

 will appear in the display.

- Tap .

When the Sabbath mode function  is switched on, a dot appears in the upper corner of the display .

- Tap .

When the Sabbath mode function  is switched off, the dot in the upper corner of the display goes out.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.

- Tap .

- Use the < or > sensor control to scroll to the  symbol and touch .

Changing the time before the door alarm is triggered

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < and > sensors to set the time you want between 30 seconds and 3 minutes: 30 seconds.
- Tap .
- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Switching on the keypad tone

- Tap .
-  appears in the display.
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

If the keypad tone is switched on,  will appear. A dot also appears in the upper corner of the display •.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Switching off the keypad tone

- Tap .
-  appears in the display.
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

If the keypad tone is switched off,  will appear.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Changing the volume of the alarms and buzzers /

- Tap .
-  appears in the display.
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < and > sensors to select the volume you want for alarms and buzzers.
- If you want to switch the alarms and buzzers off completely, scroll to the left until the segment bar goes out completely.
- Tap .

When the alarms and buzzers are switched off,  will appear.

Adjusting settings

- **To leave Settings mode** ⚙️, use the < or > sensor control to scroll to the ↩ symbol.
- Tap ✓.
- Use the < or > sensor control to scroll to the ↩ symbol and touch ✓.

Adjusting the display brightness ☀

- Tap ✓.
- ☹ appears in the display.
- Use the < or > sensor control to scroll to the ⚙️ symbol.
- Tap ✓.
- Use the < or > sensor control to scroll to the ☀ symbol.
- Tap ✓.
- Use the < and > sensors to select the display brightness you want.
- Tap ✓.
- **To leave Settings mode** ⚙️, use the < or > sensor control to scroll to the ↩ symbol.
- Tap ✓.
- Use the < or > sensor control to scroll to the ↩ symbol and touch ✓.

Changing the temperature unit °C/°F

- Tap ✓.
- ☹ appears in the display.
- Use the < or > sensor control to scroll to the ⚙️ symbol.
- Tap ✓.
- Use the < or > sensor control to scroll to the °C or °F symbol.
- Tap ✓.

The temperature unit °C or °F is now selected.

- **To leave Settings mode** ⚙️, use the < or > sensor control to scroll to the ↩ symbol.
- Tap ✓.
- Use the < or > sensor control to scroll to the ↩ symbol and touch ✓.

Switching off demo mode ■

- Tap ✓.
- Miele will then appear in the appliance display, followed by the temperature display.
- Tap ✓.
- Use the < or > sensor control to scroll to the ■ symbol.
- Tap ✓.

After demo mode ■ has been switched off, the refrigeration appliance shuts down and must be switched on again.

Resetting the settings to their factory default settings 🏠

- Tap ✓.
- ☹ appears in the display.
- Use the < or > sensor control to scroll to the ⚙️ symbol.
- Tap ✓.
- Use the < or > sensor to scroll to the 🏠 symbol.
- Tap ✓.
- Use the > sensor to scroll to the 🔄 symbol.
- Tap ✓.

The refrigeration appliance shuts down and must be switched on again.

Activating the Active AirClean filter display 🌐

- Tap ✓.

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

When the Active AirClean filter display  is activated, a dot appears in the upper corner of the display .

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Switching on Cleaning mode

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

When Cleaning mode  is switched on, a dot appears in the upper corner of the display .

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Switching off Cleaning mode

- Tap .

 appears in the display.

- Use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol.
- Tap .

When Cleaning mode  is switched off, the dot in the upper corner of the display disappears.

- **To leave Settings mode** , use the < or > sensor control to scroll to the  symbol.
- Tap .
- Use the < or > sensor control to scroll to the  symbol and touch .

Cleaning and care

The data plate located inside the refrigeration appliance must not be removed. It contains information which is required in the event of a fault.

Do not let water get into the electronic unit or the lighting.



Risk of damage due to moisture ingress.

The steam from a steam cleaning appliance can damage plastic parts and electrical components.

Do not use a steam cleaner to clean the refrigeration appliance.

Cleaning the stainless steel surface

The stainless steel surfaces will show signs of wear due to weathering and use as a storage and work surface. This will not affect the functioning in any way.

- Be careful when handling scratch-sensitive surfaces to minimise signs of wear.

All module surfaces are susceptible to scratching.

Never use abrasive sponges or cleaning agents.

Powder-coated surfaces could be discoloured or damaged if unsuitable cleaning agents are used. The surfaces are susceptible to scratching.

Clean powder-coated surfaces with a soft sponge cloth, lukewarm water and a little washing-up liquid.

Never use abrasive sponges or cleaning agents.

Various substances can attack the surface and lead to material damage. Potentially harmful substances include: unsuitable cleaning agents, oils and fats, alcohol and other beverage residues, animal residues, resins, acids and other chemicals. Always remove soiling immediately.

Only use suitable, mild cleaning agents for cleaning.

Regular, proper cleaning plays a key role in maintaining functionality and a good visual appearance.

Cleaning agents

Cleaning and conditioning agents used in the interior of the refrigeration appliance must be food safe.

To avoid damaging the surfaces of your appliance, **do not use**:

- cleaning agents containing soda, ammonia, acid or chloride
- cleaning agents containing descaling agents
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- stainless steel cleaning agents
- dishwasher cleaners
- oven sprays
- glass-cleaning agents
- hard, abrasive sponges and brushes, e.g. pot scourers
- dirt eraser sponges
- sharp metal scrapers

We recommend using lukewarm water with a little washing-up liquid to clean the appliance.

Preparing the refrigeration appliance for cleaning

Useful tip: Switch Cleaning mode  on. The cooling system in the refrigerator section is switched off, but the interior lighting remains switched on.

- In Settings mode , use the < or > sensor to scroll to the  symbol.
- Tap .

When Cleaning mode  is switched on, a dot appears in the upper corner of the display •.

If Cleaning mode  is switched on, this will be indicated in the start display. The cooling system in the refrigerator section is switched off, but the interior lighting remains switched on.

- Take the items out of the refrigeration appliance and store them in a cool place.
- Take out any removable accessories for cleaning.

Cleaning the interior of the appliance

Clean the appliance regularly, or at least once a month.


If soiling is left on for any length of time, it may become impossible to remove under certain circumstances. Surfaces may suffer discolouration or damage.
Remove any soiling immediately.

- Clean the **interior** with a clean sponge, lukewarm water and a little washing-up liquid.
- After cleaning, wipe with clean water and dry with a cleaning cloth.


- Clean the condensate channel and drain hole using a cotton swab or similar item.
- Leave the door open to air the refrigeration appliance sufficiently for a short while and to prevent odour build-up.

Replacing the Active AirClean filter

New Active AirClean filters are available from Miele Customer Service, from a specialist dealer or on the Miele website.

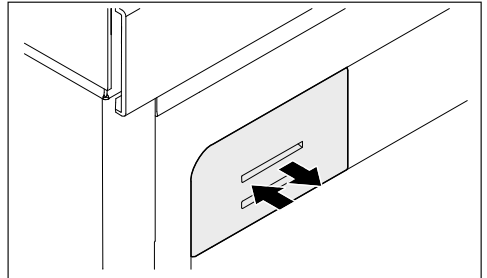


- Press in the filter holder, release it again and pull it out.

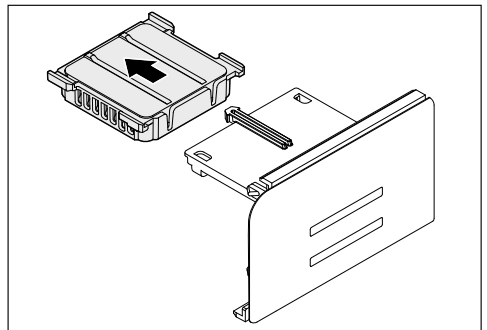


- Remove the used Active AirClean filter.
- Used Active AirClean filters can be disposed of with normal household waste.

Cleaning and care

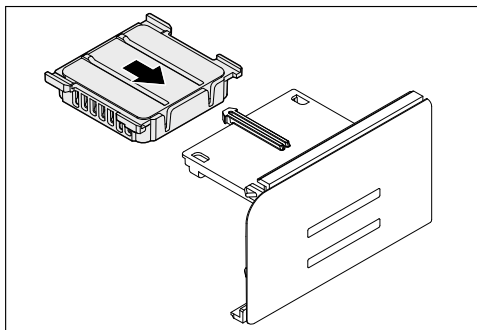

- Insert the new Active AirClean filter.

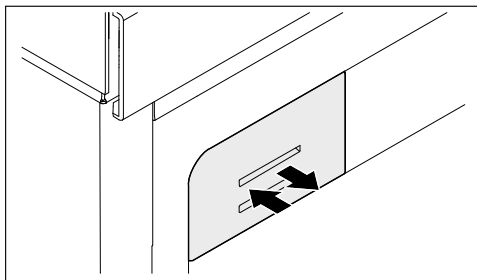

- Push the filter cover in as far as it will go.

Cleaning the door seal

 Risk of damage due to incorrect cleaning.

If you treat the door seal with oils or grease, it can become porous.

Do not use any oils or grease on the door seals.

- The door seal should be cleaned regularly with clean water, and then wiped dry with a soft cloth.

Cleaning the ventilation gaps

A build-up of dust will increase the energy consumption of the appliance.

- The ventilation gaps should be cleaned on a regular basis with a brush or vacuum cleaner (you could use a Miele Vacuum Cleaner dusting brush, for example).

After cleaning

- Touch the  sensor control on the control panel.

 will appear in the display.

- Tap .

When Cleaning mode  is switched off, the dot in the upper corner of the display goes out.

- Use the < and > sensor controls to scroll to the  symbol and touch .

The refrigeration appliance will start cooling again.

- Refit all removable parts and accessories in the refrigeration appliance.
- Switch on the SuperCool  function for a while so that the temperature inside the refrigeration appliance will drop quickly.
- Place items in the refrigeration appliance as soon as it reaches the required coldness.
- Close the appliance door(s).

Automatic defrosting

This refrigeration appliance defrosts automatically.

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact Customer Service.

More information to help you remedy faults yourself can be found at www.miele.com.au/support/customer-assistance or www.miele.co.nz/support/customer-assistance.



To prevent cold from escaping, avoid opening the appliance door until the fault has been corrected.

Problem	Possible cause and remedy
The refrigeration appliance is not cooling.	The refrigeration appliance is not switched on. ■ Switch the refrigeration appliance on.
	The mains plug is not inserted in the socket correctly or not switched on, or the plug connector is not inserted into the socket at the back of the appliance correctly. ■ Insert the mains plug into the mains socket and the plug connector into the appliance socket and switch on.
	The mains circuit breaker has tripped. There could be a fault with the refrigeration appliance, the household electrical wiring or another electrical appliance. ■ Contact a qualified electrician or Customer Service.
The compressor runs continuously.	This is not a fault. To save energy, the compressor runs at a lower speed when less cooling is required. This increases the running time of the compressor.
The compressor is switching on more frequently and for longer periods of time. The temperature in the refrigeration appliance is too low.	The ventilation openings are covered or have become too dusty. ■ Do not block the ventilation openings. ■ Clean the dust from the ventilation openings on a regular basis.
	The appliance door has been opened too frequently. A large amount of items has been placed in the appliance. ■ Only open the appliance door when necessary and for as short a time as possible.

Problem solving guide

Problem	Possible cause and remedy
	After a while, the temperature will return to normal by itself.
	The appliance door is not properly closed. ■ Close the appliance door. After a while, the temperature will return to normal by itself.
	The ambient temperature is too high. The higher the ambient temperature, the longer the compressor runs. ■ See the information in “Installation – Installation site”.
	The refrigeration appliance was not properly installed in the niche. ■ Install the refrigeration appliance in the niche as described in the installation instructions.
	The temperature setting in the refrigeration appliance is too low. ■ Correct the temperature setting.
	The SuperCool ❄ function is still switched on. ■ Switch off the SuperCool ❄ function earlier to save energy.
The temperature in the refrigeration appliance is too high. The frozen food (depending on the model) could defrost.	This is not a fault. The temperature setting is too high. ■ Correct the temperature setting. ■ Check the temperature again after 24 hours.
	The ambient temperature is too low for this refrigeration appliance. If the ambient temperature is too low, the compressor will run less frequently. The temperature in the refrigeration appliance is rising. ■ See the information in “Installation – Installation site”. ■ Increase the ambient temperature.
Ice or condensation has built up inside the refrigeration appliance. The appliance door may not close correctly.	The door seal has come out of its groove. ■ Check that the door seal is correctly seated in the groove.
	The door seal is damaged. ■ Check if the door seal is damaged.

Problem	Possible cause and remedy
The door seal is damaged and needs to be replaced.	No tools are required to change the door seal. ■ Change the door seal. A replacement is available from Miele.

Other problems

Problem	Possible cause and remedy
There is no audible alarm even though the appliance door has been open for a long time.	This is not a fault. The alarm has been switched off in Settings mode. If you want to switch the audible alarm back on again: ■ Tap   appears in the display. ■ Use the < or > sensor control to scroll to the  symbol. ■ Tap  ■ Use the < or > sensor control to scroll to the  symbol. ■ Tap  ■ Use the < and > sensors to select the volume you want for alarms and buzzers. ■ Tap  When the alarms and buzzers are switched on,  will appear.

Messages in the display

Message	Possible cause and remedy
■ lights up in the display, the refrigeration appliance does not get cold even though the controls and the interior lighting are working.	Demo mode has been activated. ■ Tap  Miele will appear initially in the display, followed by the start screen. ■ Tap  ■ In Settings mode  , use the < or > sensor to scroll to the ■ symbol. ■ Tap  After demo mode ■ has been switched off, the refrigeration appliance shuts down and must be switched on again.

Problem solving guide

Message	Possible cause and remedy
 is lit up in the display and the refrigeration appliance cannot be used.	The Cleaning mode function is still switched on. ■ Touch the  sensor control on the control panel to switch off Cleaning mode.  will appear in the display. ■ Tap . When Cleaning mode  is switched off, the dot in the upper corner of the display goes out. ■ Use the < or > sensor control to scroll to the  symbol and touch . The refrigeration appliance will start cooling again.
Nothing is visible in the display. The display is dark.	Sabbath mode  is switched on: the interior lighting is switched off and the refrigeration appliance is cooling down. ■ Tap .  will appear in the display. ■ Tap . When the Sabbath mode function  is switched on, a dot appears in the upper corner of the display •. ■ Tap . When the Sabbath mode function  is switched off, the dot in the upper corner of the display goes out.
 is lit up in the display and the refrigeration appliance cannot be used.	The lock function has been activated. ■ Unlock the refrigeration appliance temporarily or switch the lock function off completely (see “Selecting further settings – Deactivating the lock function /  temporarily/Switching the lock function /  off completely”).
The  symbol lights up in the display and a buzzer also sounds.	The Active AirClean filter display  is reminding you that the Active AirClean filter needs to be changed. ■ Replace the Active AirClean filter (see “Cleaning and care – Replacing the Active AirClean filter”) and confirm that you have changed the Active AirClean filter by tapping . The  symbol will go out in the display.

Message	Possible cause and remedy
 lights up in the display; an alarm will also sound and the interior lighting will flash.	The door alarm has been activated. ■ Tap . The alarm stops, the  symbol goes out and the interior lighting lights up constantly again. ■ Close the appliance door.
 lights up in the display and a fault code F with numbers may appear. An alarm tone also sounds.	There is a fault. ■ Switch the alarm off by tapping . ■ Call Customer Service. To report the fault, you need the fault code and also the model identifier and serial number of your refrigeration appliance. You can access this information  in the display: ■ Tap . The appliance data required will be shown in the display. ■ Tap . ■ To switch off the refrigeration appliance, use the < or > sensor to scroll to the  symbol. ■ To exit the information display, use the < or > sensor to scroll to the  symbol. ■ Tap . There is an appliance fault: this display always has priority over any settings which have just been selected. An appliance fault has priority over any current door and/or temperature alarms in the display.

Interior lighting

Problem	Possible cause and remedy
	Risk of electric shock due to exposed, live electrical components! When removing the lighting cover, there is a risk of coming into contact with live electrical components. Do not remove the lighting cover. The LED lighting must only be repaired or replaced by a qualified technician.

Problem solving guide



Danger of injury from LED lighting.

This lighting corresponds to risk group RG 2. If the cover is defective, there is a risk of eye injury.

Do not look from a close range directly into the lighting with optical instruments (e.g. magnifying glass or similar).

Problem	Possible cause and remedy
The interior lighting is not working.	The refrigeration appliance is not switched on. ■ Switch the refrigeration appliance on.
	Sabbath mode is switched on: the display is black and the refrigeration appliance is cooling. ■ Tap . will appear in the display. ■ Tap .
	When the Sabbath mode function is switched on, a dot appears in the upper corner of the display . ■ Tap .
	When the Sabbath mode function is switched off, the dot in the upper corner of the display goes out.
The interior lighting is pulsating.	To avoid overheating, the interior lighting switches itself off automatically after approx. 15 minutes if the appliance door is left open. If this is not the case, there is a fault. ■ Call Customer Service.
	This is not a fault. The door alarm has been activated.

Noises

The refrigeration appliance is producing various noises during operation.
 If the cooling performance is low, the refrigeration appliance will conserve energy but operate for longer. The volume will be lower.
 Items will be chilled faster if the cooling performance is high.
 The volume will be higher.

Sound emission of the refrigeration appliance

The A-weighted emission sound pressure level during operation of the refrigeration appliance is below 70 dB(A) (sound power rel. 1 pW).

Normal noises	What is causing the noises?
Hissing	Refrigerant is being injected into the cooling circuit.
Bubbling, gurgling, splashing	Refrigerant is circulating through the pipes.
Humming	The refrigeration appliance is cooling.
Clicking	The thermostat is switching the compressor on or off.
Humming, whirring	The fan is running. The automatic door opener (depending on the model) is opening or closing the appliance door.
Cracking	Material in the refrigeration appliance is expanding.
Rattling	Valves or flaps are active.
Buzzing (refrigeration appliances with water container)	Water is being pumped out of the water container.
Slurping (refrigeration appliances with soft-close mechanism)	The appliance door with soft-close mechanism is being opened or closed.
Please bear in mind that a certain amount of noise is unavoidable (from the compressor and the refrigerant circulating through the cooling circuit).	

Problem solving guide

Noises	Possible cause and remedy
Vibrating, rattling, clinking	The refrigeration appliance is uneven. Use a level to check and adjust the alignment of the refrigeration appliance. The refrigeration appliance is aligned by raising or lowering the adjustable feet (depending on the model) underneath it. For niches of 140 cm and more: place the stabilising rods supplied underneath the appliance base.
	Drawers, baskets or shelves are jiggling or are stuck. Check all removable items and refit them correctly.
	Bottles or containers are touching. Separate bottles or containers slightly.
	The transport cable clips (depending on the model) are hanging loose at the back of the appliance. Remove the transport cable clips.

You can find information on how to remedy faults yourself at www.miele.com.au/support/customer-assistance or www.miele.co.nz/support/customer-assistance and about Miele spare parts at www.miele.com.au/service or www.miele.co.nz/service.

Contact in case of fault

In the event of a fault which you cannot remedy yourself, please contact Miele.

You can book a Miele customer service call-out online at www.miele.com.au/service or www.miele.co.nz/service.

Contact information for Miele can be found at the end of this booklet.

Please quote the model and serial number of your appliance when contacting Miele. Both of these can be found on the data plate inside the refrigeration appliance or, depending on the model, in the settings mode under information **i**.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Miele Australia Pty. Ltd.

ACN 005 635 398, ABN 96 005 635 398

Miele Head Office Melbourne:

Level 4, 141 Camberwell Road

Hawthorn East, VIC 3123

1300 464 353 (1300 4 MIELE)

info@miele.com.au

www.miele.com.au

Hong Kong, China

Miele (Hong Kong) Ltd.

41/F - 4101, Manhattan Place

23 Wang Tai Road, Kowloon Bay

Hong Kong

Tel.: (852) 2610 1025

Fax: (852) 3579 1404

E-mail: customerservices@miele.com.hk

Website: www.miele.hk

India

Miele India Pvt. Ltd.

1st Floor, Copia Corporate Suites,

Commercial Plot 9,

Mathura Road, Jasola,

New Delhi - 110025

E-mail: customercare@miele.in

Website: www.miele.in

Malaysia

Miele Sdn Bhd

Suite 12-2, Level 12

Menara Sapura Kencana Petroleum

Solaris Dutamas No. 1, Jalan Dutamas 1

50480 Kuala Lumpur, Malaysia

Phone: +603-6209-0288

Fax: +603-6205-3768

Miele Global Headquarters Germany

Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Federal Republic of Germany

Miele New Zealand Ltd.

IRD 98 463 631

Head Office:

8 College Hill

Freemans Bay, Auckland 1011

0800 464 353 (0800 4 MIELE)

customercare@miele.co.nz

www.miele.co.nz

Singapore

Miele Pte. Ltd.

29 Media Circle

#11-04 ALICE@Mediapolis

Singapore 138565

Tel: +65 6735 1191

Fax: +65 6735 1161

E-mail: info@miele.com.sg

Internet: www.miele.sg

South Africa

Miele (Pty) Ltd

63 Peter Place, Bryanston 2194

P.O. Box 69434, Bryanston 2021

Tel.: (011) 875 9000

Fax: (011) 875 9035

E-mail: info@miele.co.za

Internet: www.miele.co.za

Thailand

Miele Appliances Ltd.

BHIRAJ TOWER at EmQuartier

43rd Floor Unit 4301-4303

689 Sukhumvit Road

North Klongton Sub-District

Vadhana District

Bangkok 10110, Thailand

Cool M

en - AU, NZ

M.-Nr. 13 089 610 / 02