


Operating and installation instructions Downdraft extractor

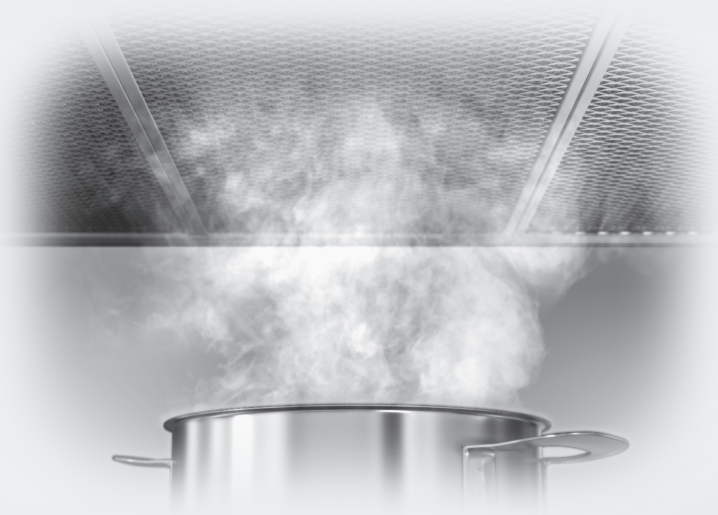

To prevent the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warning and Safety instructions	4
Sustainability and environmental protection	11
Familiarising yourself with the appliance	12
Extractor overview	12
Components	13
Grease filters and panel	13
Charcoal filters	13
Cooktop lighting	13
Ambient lighting	14
Functions	14
Fan power levels	14
Run-on function	14
Reduced extraction height	15
Operating hours counter	15
Networking	15
Adaptive Con@ctivity	16
Power management	16
Commissioning	17
Selecting extraction mode or recirculation mode	17
Networking	18
Requirements for networking	18
Performing Scan & Connect	18
Signing off Wi-Fi and remote control	18
Setting up Con@ctivity	19
Activating Con@ctivity 3.0 via the home Wi-Fi network	19
Activating Con@ctivity 3.0 via a direct Wi-Fi connection	19
Signing on the remote control	20
Signing off the remote control	20
Operation	21
Switching the fan on	21
Selecting a power level	21
Selecting the run-on time	21
Switching the fan off	21
Run-on in Plug&Play operation	21
Switching on the cooktop lighting	22
Dimming the cooktop lighting	22
Switching the cooktop lighting off	22
Switching the ambient lighting on/off	22
Switching ambient mode on/off	22
Retracting the deflector plate	23
Cooking with Con@ctivity (automatic mode)	23

Deactivating Con@ctivity temporarily	24
Adjusting settings	25
Intervals for the grease filter operating hours counter	25
Intervals for the charcoal filter operating hours counter	25
Activating/Deactivating Power management	26
Reducing the extraction height	27
Energy saving tips	28
Cleaning and care	29
Housing.....	29
Grease filters and edge extraction panel	29
Removing the panel.....	31
Cleaning the drip tray.....	31
Inserting the panel.....	32
Resetting the grease filter operating hours counter	32
Change grease filters.....	32
NoSmell active charcoal filters.....	33
Resetting the charcoal filter operating hours counter	33
Disposing of the charcoal filters	33
Reactivatable charcoal filters	33
Problem solving guide	34
Service	35
Contact in case of fault.....	35
Position of the data plate	35
Warranty	35
Copyright and licences	35
Installation	36
Before installation	36
Installation materials.....	36
Appliance dimensions.....	37
Installation dimensions	38
Sealing the gaps	44
Installation examples	45
Connection for air extraction	46
Non-return flap.....	46
Electrical connection	47
Technical data	48
Optional accessory for recirculation mode.....	48

Warning and Safety instructions

This rangehood complies with all relevant local and national safety requirements. However, inappropriate use can lead to personal injury and damage to property.

Read the operating and installation instructions carefully before using the rangehood. They contain important information on the safety, installation, use and maintenance of the appliance. This prevents both personal injury and damage to the rangehood.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in "Installation" and in the "Warning and Safety instructions".

Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and pass them on to any future owner.

Correct application

- ▶ The appliance is not suitable for outdoor use.
- ▶ It must only be used to extract vapours and remove odours from cooking.

Any other usage is at the owner's risk. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety, and are able to recognise the dangers of misuse.

Safety with children

- ▶ Young children must not be allowed to use the rangehood.
- ▶ Older children may only use the rangehood if its operation has been clearly explained to them and they are able to use it safely. They must be able to understand and recognise the possible dangers caused by incorrect operation.
- ▶ Cleaning work may only be carried out by older children under the supervision of an adult.
- ▶ Children should be supervised near the appliance. Ensure that they do not play with the appliance.

► Danger of suffocation! Whilst playing, children may become entangled in packaging material (such as plastic wrapping) or pull it over their head with the risk of suffocation. Keep packaging material away from children.

Technical safety

► Installation, maintenance or repairs by unqualified persons could be extremely dangerous. The manufacturer cannot accept liability for unauthorised work. Installation, maintenance and repairs must only be carried out by a qualified specialist or Miele Customer Service.

► A damaged appliance can be dangerous. Check it for visible signs of damage. Do not use a damaged appliance.

► The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system. It is most important that this basic safety requirement is present and tested regularly and, where there is any doubt, the household wiring system should be inspected by a qualified electrician.

► Temporary or permanent operation with a self-sufficient or non-mains synchronous energy supply system (e.g. isolated networks, back-up systems) is possible. A requirement for the operation is that the energy supply system complies with all current local and national requirements that apply to stand-alone, solar and/or battery systems. The protective measures provided in the installation and in this Miele product must also be assured in their function and operation in isolated operation or in non-mains synchronous operation, or replaced with equivalent measures in the installation.

► The connection data (voltage and frequency) on the data plate of the rangehood must match the mains electricity supply in order to avoid the risk of damage to the rangehood.

Compare this before connecting the appliance to the mains electricity. If in doubt, consult a qualified electrician.

► Do not connect the appliance to the mains electricity supply by a multi-socket unit or an extension lead. Extension leads are a fire hazard and do not guarantee the required safety of the appliance.

► For safety reasons, this appliance may only be used after it has been built in.

► This rangehood must not be installed and operated in mobile installations (e.g. on a ship).

Warning and Safety instructions

► Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

Only open the housing as described in the instructions given in the installation sheet and in the “Cleaning and care” section of this booklet. Under no circumstances should any other parts of the housing be opened.

► The manufacturer’s warranty will be invalidated if repairs are not carried out by a qualified specialist or Miele Customer Service.

► If the mains connection cable is damaged, it must only be replaced by a Miele authorised service technician or suitably qualified and competent electrician in order to avoid a hazard.


► The lamps are a built-in component of the lighting. Replacement lamps must only be installed by a qualified specialist or by Miele Customer Service.

► During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply. It is only completely isolated from the electricity supply when:

- the mains circuit breaker is switched off, or
- it is switched off at the wall socket and the plug is withdrawn from the socket. Do not pull the mains connection cable but the mains plug to disconnect your appliance from the mains electricity supply.

Warning and Safety instructions

Using at the same time as other heating appliances that depend on the air from the room

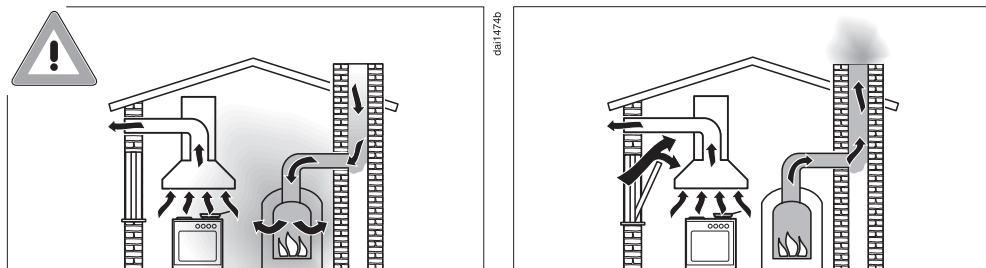

⚠ Danger of toxic fumes!

Great care should be taken when using the rangehood in the same room or the same area of the house as another heating appliance that depends on the air from the room.

Such heating appliances draw in air from the room and duct exhaust gases out through a chimney or extraction ducting. They include gas, oil, wood and coal-fired boilers and heaters, continuous flow or other water heaters, gas cooktops and ovens. The rangehood draws in air from the kitchen and from neighbouring rooms. This applies to the following modes of operation:

- extraction mode
- recirculation mode with a recirculation box installed outside the room.

If there is insufficient air, an underpressure will occur. The heating appliance may be starved of oxygen. This impairs combustion. Harmful gases could be drawn from the chimney or extraction ducting back into the room.

This could have potentially fatal consequences. Risk of death!

Warning and Safety instructions

In order to ensure safe operation and to prevent gases given off by a heating appliance from being drawn back into the room, when the rangehood and the heater are both operated simultaneously, an underpressure in the room of 0.04 mbar (4 Pa) is the maximum permissible.

Sufficient ventilation can be maintained by air inlets which cannot be blocked, e.g. in windows, doors and outside wall vents. The diameter of the inlet openings must enable sufficient ventilation. A ventilation brick alone is not generally sufficient to ensure safe ventilation.

The overall ventilation condition of the dwelling must be taken into account. If in any doubt, the advice of a competent builder or, for gas, a qualified gas fitter (registered with an official gas safety body in accordance with national safety regulations) must be sought.

If the rangehood is being operated in recirculation mode, whereby the air is redirected into the room in which it is installed, the above restrictions do not apply.

Correct use

► Risk of crushing! Do not reach into the travel area of the deflector plate as it moves up or down.

► Open flames are a fire hazard!

Never use an open flame under the rangehood. To avoid the danger of fire, do not flambé or grill over an open flame. When switched on, the rangehood could draw flames into the filter. Kitchen grease deposits could ignite.

► Always switch the rangehood on when a cooking zone is in use, otherwise condensation may collect in the rangehood, which could cause corrosion.

► Overheated oil and fat can ignite, causing fire damage to the rangehood.

When cooking with oil or fat, chip pans and deep fat fryers etc., do not leave the pans unattended. Similarly, never leave an open grill unattended when grilling.

► Do not use the rangehood without the filters in place. This way you will avoid the risk of grease and dirt getting into the appliance and hindering its smooth operation.

Warning and Safety instructions

- ▶ The rangehood can get very hot during cooking due to heat rising from the cooktop.
Do not touch the housing or the grease filters until the rangehood has cooled down.

Correct installation

- ▶ To determine whether the extractor may be operated in conjunction with your cooktop, please refer to the information provided by the cooktop's manufacturer.
- ▶ The downdraft extractor must not be installed next to solid fuel stoves.
- ▶ The rangehood must not be operated in combination with a gas cooktop.
- ▶ The distances given in “Installation” must be observed when fitting the downdraft extractor.
- ▶ There may be a risk of injury due to protruding parts and sharp edges.
Wear gloves that offer protection against cuts during assembly.
- ▶ All ducting, pipework and fittings must be of non-flammable material and comply with all relevant national and local building regulations.
- ▶ The appliance must not be connected to a chimney or vent flue which is in current use for exhausting fumes from appliances burning gas or other fuels. Neither should it be connected to ducting which ventilates rooms with fireplaces.
- ▶ If exhaust air is to be extracted into a chimney or ventilation duct no longer used for other purposes, seek professional advice.

Cleaning and care

- ▶ There is a risk of fire if cleaning is not carried out as described in these operating instructions.
- ▶ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

Warning and Safety instructions

Accessories and spare parts

- ▶ We recommend using original Miele accessories. Using spare parts or accessories from other manufacturers will invalidate the warranty and Miele cannot accept liability.
- ▶ We recommend replacing faulty components with original Miele parts. If original Miele parts are installed correctly, Miele guarantees full compliance with safety requirements and the warranty remains valid.
- ▶ Miele original spare parts are kept in stock for at least 10 years and up to 15 years after discontinuation of your rangehood.

Disposal of the packing material

The transport and protective packaging has been selected from materials which are environmentally friendly for disposal, and can normally be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Only for Australia: Note for installer: Expanded polystyrene (EPS) packaging included. Please retain and dispose of EPS packaging responsibly. For further information, please contact Miele.

Disposing of your old appliance


Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances. You are also responsible for deleting any personal data that may be stored on the appliance prior to disposal. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

Familiarising yourself with the appliance

Extractor overview

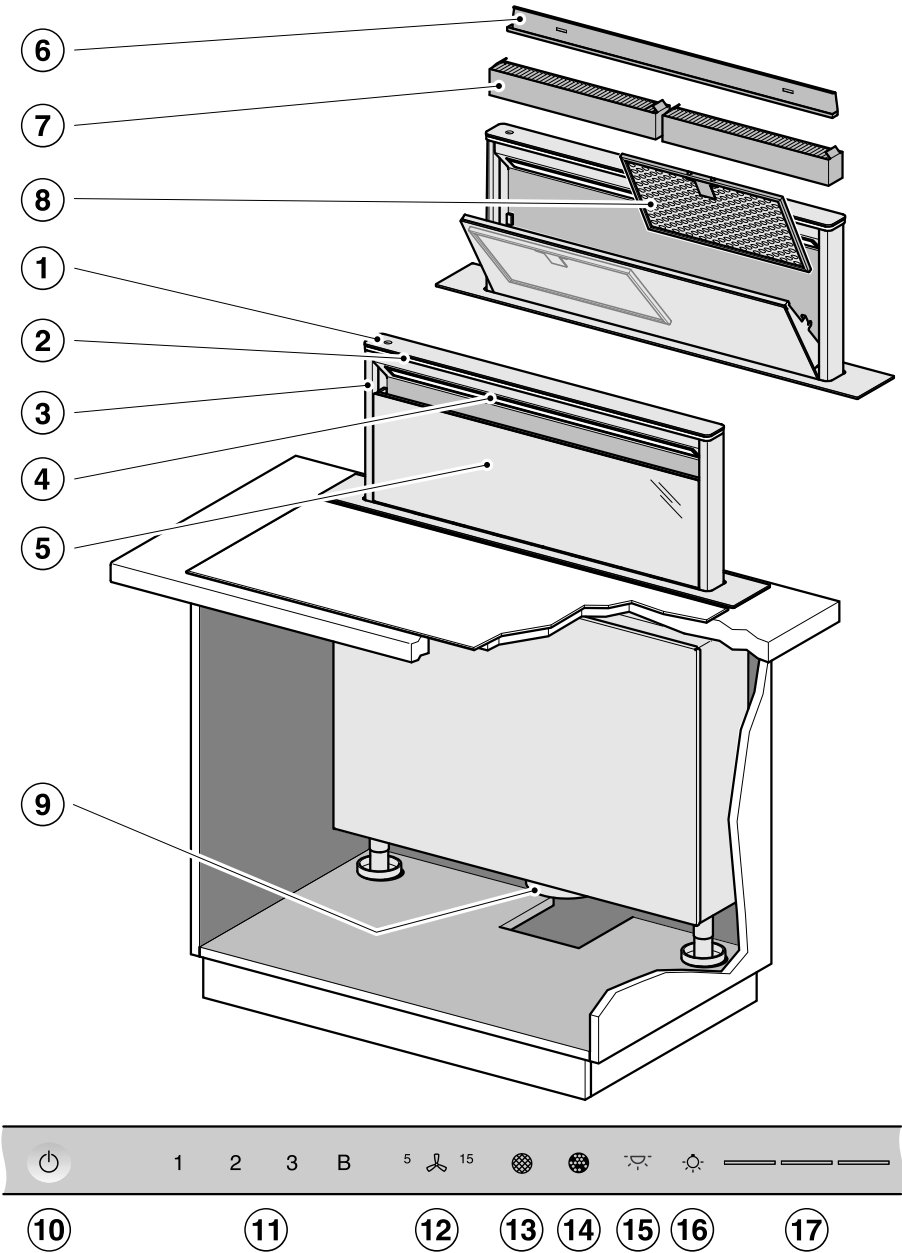

da5569

Familiarising yourself with the appliance

- ① Control panel
- ② Ambient lighting
- ③ Retractable deflector plate
- ④ Cooktop lighting
- ⑤ Edge extraction panel
- ⑥ Drip tray
- ⑦ Charcoal filters
Single-use or reactivatable charcoal filters (optional accessories available for recirculation mode)
- ⑧ Grease filter
- ⑨ Exhaust connection
- ⑩ Sensor for switching the rangehood on and off
- ⑪ Sensors for switching the fan on and off and for setting the fan power level
- ⑫ Sensor for the run-on function
- ⑬ Sensor for the grease filter operating hours counter
- ⑭ Sensor for the charcoal filter operating hours counter
- ⑮ Sensor control for switching the ambient lighting on and off
- ⑯ Sensor for switching the cooktop lighting on and off and for dimming the lighting
- ⑰ Sensors for selecting and displaying lighting levels

Components

Grease filters and panel

The edge extraction panel and the re-usable metal grease filters in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the rangehood.



Risk of fire

Oversaturated grease filters are a fire hazard.

Clean the grease filters at regular intervals.

Heavily soiled grease filters hinder the extraction power and will lead to increased levels of soiling in the rangehood and in the kitchen.

Charcoal filters

With recirculation mode and Plug & Play recirculation mode, 2 charcoal filters must be fitted in addition to the grease filters. These are designed to absorb cooking odours.

The charcoal filters are available as optional accessories. There are charcoal filters available that need to be replaced at the end of their operating time and others that can be reactivated.

Cooktop lighting

The cooktop lighting can be switched on and off and dimmed independently of the fan.

Familiarising yourself with the appliance

Ambient lighting

The ambient lighting provides atmospheric lighting.

You can switch on the ambient lighting at any time while the extractor is in use.

Ambient mode

If you use the ambient lighting without switching on the fan and the cooktop lighting, the deflector plate extends approx. 2 cm into the ambient position.

Functions

Air extraction mode

The cooking vapours are drawn in by the rangehood. The air is then passed via the edge extraction panel through the grease filters, cleaned and then directed outside.

Recirculation mode

(with conversion kit and charcoal filter as optional accessories)

The cooking vapours are drawn in by the rangehood then passed via the edge extraction panel and cleaned first by the grease filters and then by charcoal filters. The air is then circulated back into the kitchen.

For recirculation operation, we recommend that the air is fed into the kitchen through a duct with an outlet, e.g. in the plinth panel.

Recirculation mode Plug&Play

If the installation space is not sufficient for an air duct, the air can also be guided into the plinth under the kitchen furniture in Plug&Play operation. Please follow the instructions in "Installation".

Kitchen ventilation

Ensure that the kitchen is well ventilated when operating the rangehood.

In extraction mode, the efficiency of the rangehood is improved by the incoming air.

In recirculation mode, the moisture produced during cooking remains in the kitchen. Ventilation helps to dissipate moisture.

Fan power levels

Select power levels **1** to **3** for light to heavy cooking vapours, odours or build-up of heat.

Increase the power level as the level of vapours, odours or heat increases.

For short periods of cooking food with intensive vapours, odours or heat, e.g. when searing meat, select Booster setting **B.** or **B.**. The fan will automatically switch back from the Booster settings after a few minutes.

Run-on function

The run-on function enables the extractor to continue running for a pre-determined time before switching itself off automatically.

This helps to remove any lingering vapours and odours from the air after cooking. It also reduces the risk of residues accumulating in the extractor and any resultant odours.

Familiarising yourself with the appliance

Reduced extraction height

If you select a reduced extraction height in the settings, the deflector plate will only extend approx. 10 cm when the fan or cooktop lighting is switched on.

- If you use pans or low pots or cook with pots that have a side steam outlet in the lid, the reduced suction height optimises extraction.
- When installed in a cooking island, the reduced extraction height allows more of the cooktop to be viewed from the rear.

Operating hours counter

The number of hours that the extractor has been used for is stored in memory.

When the grease filter symbol  lights up, the grease filters must be cleaned.

When the charcoal filter symbol  lights up, the charcoal filter must be replaced or reactivated (if suitable for reactivating).

You can set the operating hours counter intervals to suit the type of cooking you do.

Deactivate the operating hours counter for the charcoal filter if you are operating the extractor in extraction mode.

Networking

Your rangehood is equipped with an integrated Wi-Fi module. The Wi-Fi module makes it possible to connect to your home network and to use the Miele App on a mobile device.

Once your rangehood has been connected via Wi-Fi, the connection is automatically re-established every time it is switched on.

Make sure that your Wi-Fi network signal is strong enough in the place where you intend to install your rangehood.

Connecting your rangehood to your Wi-Fi network will increase energy consumption, even when the rangehood is switched off.

Smart Extras via the Miele App*

Networking via the Miele App gives you access to numerous Smart Extras, including:

- Accessing status information.
- Using additional helpful functions.
- Keep your rangehood up to date with the latest Miele developments via software updates.

You can find more detailed information about Smart Extras on the Miele website, in the Apple App Store® or in the Google Play Store™.

*This is a separate digital offer from Miele & Cie. KG. The range of functions can vary depending on the model and the country. Acceptance of the General Terms and Conditions and Privacy Policy for Miele digital products and services in the Miele App is required. Miele reserves the right to change or discontinue the digital offers at any time.

Familiarising yourself with the appliance

Adaptive Con@ctivity

With the Con@ctivity function, the rangehood is automatically controlled in conjunction with a Miele cooktop. The rangehood and Miele cooktop must be connected to the home Wi-Fi network or have a direct Wi-Fi connection.

The extractor can also be operated manually at any time during automatic operation.

If you regularly select a higher power level, for example, automatic operation will adapt to your behaviour (Miele Con@ctivity Plus).

Power management

The rangehood is fitted with a Power management system. The Power management system is designed to help save energy. It ensures that the fan power level is reduced automatically and that the lighting is switched off.

- The second Booster setting switches back to the first Booster setting after 2 minutes (even if the Power Management system is deactivated).

The first Booster setting switches back to level **3** after 5 minutes.

- From fan power levels 3, 2 and 1, the power will be reduced by one level after 2 hours and then in 30-minute stages until the fan finally switches off.
- The cooktop lighting will switch off automatically after 12 hours.

Selecting extraction mode or recirculation mode

The rangehood can be operated with either extraction mode or recirculation mode. The power of the fan is adapted to suit the selected mode of operation. The rangehood is set up at the factory for recirculation mode. It has to be reset for extraction mode.

To reset it for extraction mode, the operating hours counter for the charcoal filter(s) has to be deactivated.

- With the deflector plate retracted, touch the On/Off sensor .

All symbols light up with reduced brightness.

- Press and hold the run-on option control  until the grease filter  and charcoal filter  symbols light up.

- Touch the charcoal filter symbol .

The charcoal filter symbol  and one of the fan power levels will flash.

- Touch the **B** control.

- Confirm your choice by touching the charcoal filter sensor .

All the indicator lights will go out.

Extraction mode has now been set.

If you do not confirm your selection within 4 minutes, the rangehood will automatically revert to the previous setting.

Activating/Deactivating Plug & Play

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control .

After a few seconds, the grease filter  and charcoal filter  symbols light up, and after a further 7 seconds the **1** fan power level indicator lights up.

- Then touch in turn

- the **1** control,
- the lighting control  and
- the lighting control .

When Plug & Play is deactivated, the indicators **1** and **3** will flash.

When Plug & Play is activated, the indicators **1** and **3** will light up constantly.

- To activate, touch **B**.

The **1** and **3** indicators light up constantly.

- Touch **1** to deactivate.

The **1** and **3** indicators will flash.

- Confirm the setting by pressing the run-on control .

All the indicator lights will go out.

Commissioning

Networking

Requirements for networking

Note the following requirements for networking:

1. A home network is available at the installation site.
Have the Wi-Fi password ready.
2. The Miele App is available on a mobile device.
3. You have a user account in the Miele App.

Performing Scan & Connect

- Scan the QR code.

If you have installed the Miele App and have a user account, you will be taken directly to the networking steps.

If you have not yet installed the Miele App, you will be taken to the Apple App Store® or the Google Play Store™.

- Install the Miele App and set up a user account.
- Scan the QR code again.

The Miele App will guide you through the set-up process.



Signing off Wi-Fi and remote control

To set up a new Wi-Fi connection or a connection with a remote control, the existing connections must be disconnected first.

The sign-off process will always sign off the Wi-Fi and a connected remote control at the same time.

The remote control is an optional accessory and not available in all countries.

- With the deflector plate retracted, touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control ⁵  until the grease filter  and charcoal filter  symbols light up.
- Touch the **1** control.

With an existing Wi-Fi connection **2** and **3** will light up constantly.

If a remote control is signed on, **B** will also light up.

- Touch the **1** control.

2 will light up constantly, **3** will flash on and off.

After a few seconds **2** and **3** will flash on and off. The connection has now been disconnected.

- Quit disconnection mode on the rangehood by touching the run-on control ⁵ .
- Also sign off the remote control. See the operating instructions supplied with the remote control for information on how to do this.

All connections have been disconnected. You can establish a new connection.

015496 DAHAXXQ-qr-v02

Setting up Con@ctivity

Activating Con@ctivity 3.0 via the home Wi-Fi network

Prerequisites:

- Home Wi-Fi network
- Wi-Fi enabled Miele cooktop

- Connect the rangehood and cooktop to the home Wi-Fi network (see “Networking”).

The Con@ctivity function will be activated automatically.

Activating Con@ctivity 3.0 via a direct Wi-Fi connection

Rather than connecting to the home network, you can establish a direct connection between the cooktop and the rangehood.

Prerequisites:

- Wi-Fi enabled Miele cooktop

- With the deflector plate retracted, touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control  until the grease filter  and charcoal filter  symbols light up.
- Touch the **3** control.

2 will light up constantly, **3** will flash on and off.

The rangehood will be ready for connection in the next 10 minutes.

- Start the Wi-Fi connection on the cooktop. For further details, see the cooktop operating instructions.

When successfully connected, **2** and **3** will light up constantly.

- Confirm the setting by pressing the run-on control .

If it is not possible to connect, **2** and **3** flash or the process is cancelled.

- Disconnect the connection to the rangehood (see “Signing out of Wi-Fi”) **and** to the cooktop.
- Repeat the process.

With a direct Wi-Fi connection, it is not possible to connect the cooktop and the rangehood to a home network. This means that, for example, the appliance then cannot be operated via the Miele App. Should a connection to the home network be required at a later date, the direct Wi-Fi connection between the cooktop and the rangehood must be disconnected first (see “Signing out of Wi-Fi”).

Commissioning

Signing on the remote control

Miele DARC 7 is an optional accessory (not available in all countries)

- With the deflector plate retracted, touch the On/Off control  on the extractor.

All symbols light up with reduced brightness.

- Press and hold the run-on option control ⁵¹⁵ until the grease filter  and charcoal filter  symbols light up.
- Touch the **B** control.

2 will light up constantly, **3** will flash on and off.

- Start the sign-on process on the remote control. For further details, see the remote control operating instructions.

When successfully signed on, **2** and **3** will light up constantly.

- Confirm the setting by pressing the run-on control ⁵¹⁵.

Signing off the remote control

- For information about the sign-off process, see “Commissioning – Signing off Wi-Fi and remote control”.

Risk of crushing!

Do not reach into the travel area of the deflector plate as it moves up or down.

Switching the fan on

- With the deflector plate retracted, touch the On/Off control .

All symbols light up with reduced brightness.

- Switch the fan on by touching one of the controls from **1** to **B**.

The deflector plate extends.

The fan switches to the desired level.

Selecting a power level

- Select the power level required by touching a control from **1** to **B**.

- If you touch the **B** control, the first Booster setting is activated.

The **B**• symbol lights up.

- If you touch the **B** control again, the second Booster setting is activated.

The **B**•• symbol lights up.

Switching back the Booster settings

The second Booster setting switches back to the first Booster setting after 2 minutes.

The first Booster setting switches back to level **3** after 5 minutes.

Selecting the run-on time

- After you have finished cooking, touch the run-on control  with the fan still switched on:

- Once: the fan will switch itself off after 5 minutes (**5**  lights up).
- Twice: the fan will switch itself off after 15 minutes ( **15** lights up).
- If you touch the run-on control  again, the fan will remain on ( will go out).

Switching the fan off

- Touch the control for the active power level.

The fan switches off.

If the cooktop lighting is also switched off, the deflector plate retracts after 1 minute.

Run-on in Plug&Play operation

If you switch off the fan in Plug&Play mode, it will run on at level **1**.

Run-on ensures that the plinth is ventilated after cooking.

Depending on the last active fan level, run-on lasts between 2 and 30 minutes.

You can switch off the fan immediately during run-on by pressing **1** or the On/Off sensor .

This function is independent of the run-on function .

Operation

Switching on the cooktop lighting

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Touch the lighting control  briefly.

The deflector plate extends.

The lighting will switch on at maximum brightness. All 3 bars next to the lighting control  light up.

Dimming the cooktop lighting

- To change the brightness, press and hold the lighting control  with the lighting switched on.

The brightness will gradually dim until you release the control.

- Press and hold the lighting control  again.

The brightness will gradually increase until you release the control.

- Alternatively, you can select 1 of 3 brightness levels by touching the bars next to the lighting control .

Switching the cooktop lighting off

- Touch the lighting control .

The cooktop lighting will switch off.

If the fan is also switched off, the deflector plate retracts after 1 minute.

Switching the ambient lighting on/off

You can switch on the ambient lighting at any time while the extractor is in use.

- Press the  control to switch the ambient lighting on and off.

Switching ambient mode on/off

- With the deflector plate retracted, touch the On/Off control .

- Press the control for the ambient lighting .

The deflector plate extends approx. 2 cm into the ambient position. The ambient lighting switches on.

- Press the  control to switch the ambient lighting off.

- If you switch on the fan or the cooktop lighting in ambient mode, the deflector plate extends.
- If you switch off the ambient lighting, fan and cooktop lighting when the deflector plate is extended and switched on, the deflector plate moves to the ambient position.

Retracting the deflector plate

- Touch the On/Off control .

The fan, cooktop lighting and the ambient lighting are switched off.

All symbols go out.

The deflector plate retracts.

If the fan and lighting are switched off, the deflector plate retracts automatically after 1 minute.

Cooking with Con@ctivity (automatic mode)

- Switch on a cooking zone at any power level.

The cooktop lighting will come on.


After a few seconds the fan will switch on, first at power level **2**, then it will switch immediately to power level **1**.

The rangehood selects the power level automatically during cooking.

This is determined by the total output of the cooktop, i.e. the number of cooking zones in operation and the power levels selected.

If you select a higher power level on the cooktop or are using several cooking zones, the rangehood will switch to a higher power level.

When you reduce the power level on the cooktop or the number of cooking zones being used, the rangehood power level will also be reduced.

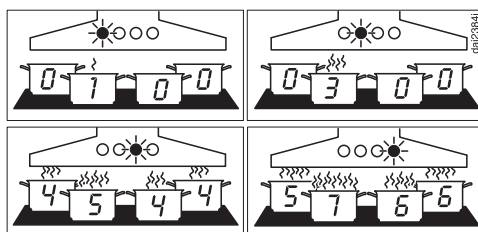

Examples for power levels **1** to **B**

Frying with Con@ctivity

- For example, you switch on the cooktop at the highest power level to heat cookware for frying. You reduce the power level after approx. 10 seconds to 4 minutes (60 seconds to 5 minutes for a HiLight cooktop).

The extractor recognises a frying process.

The extractor switches itself on and when the cooktop power level has been reduced, the extractor switches to fan power level 3 and remains at that level for approx. 5 minutes.

After that the extractor power level is determined automatically by the Con@ctivity function.

You can select another power level manually before then.

Operation

Deactivating Con@ctivity temporarily

- Con@ctivity is temporarily deactivated if you:
 - select a different fan power level, or
 - switch off the extractor, or
 - select the run-on function  ⁵1⁵.
- The extractor returns to Con@ctivity if:
 - you do not operate the extractor for approx. 5 minutes, or
 - the fan level you have selected corresponds to the power level selected by Con@ctivity, or
 - the extractor fan and the cooktop have been switched off for at least 30 seconds. Con@ctivity is reactivated the next time the cooktop is switched on.

Deactivating Con@ctivity for the entire cooking process

- Switch the fan on **before** the cooktop.

Con@ctivity is deactivated until the extractor is switched off.

If the extractor and the cooktop have been switched off for at least 30 seconds after cooking, Con@ctivity is reactivated the next time the cooktop is switched on.

Intervals for the grease filter operating hours counter

The factory setting is a cleaning interval of 30 hours.

- Select a shorter interval of 20 hours if you fry food regularly.
- A shorter cleaning interval is also recommended if you only cook occasionally. This is to prevent grease from hardening on the filter and making cleaning more difficult.
- Select a longer interval of 40 or 50 hours if you use very little fat for cooking.

Changing the intervals for the grease filter operating hours counter

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control  until the grease filter  and charcoal filter  symbols light up.

- Touch the grease filter symbol .

The grease filter symbol  and one of the fan power level indicators will flash.

The fan power level indicators **1** to **B** show the time set:

1	20 hours
2	30 hours
3	40 hours
B	50 hours

- Touch the relevant control to select the duration required.
- Confirm your choice by touching the grease filter control . If you do not confirm your selection within

4 minutes, the extractor will automatically revert to the previous setting.

Intervals for the charcoal filter operating hours counter

The factory default setting is an interval of 180 hours.

- If you frequently cook dishes with strong odours, we recommend shortening the interval to 120 hours.
- If you rarely cook dishes with strong odours, you can extend the interval to 240 hours.

Altering or deactivating the charcoal filter operating hours counter intervals

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control  until the grease filter  and charcoal filter  symbols light up.

- Touch the charcoal filter symbol .

The charcoal filter symbol  and one of the fan power levels will flash.

Fan power level indicators **1** to **B** show the interval set:

1	120 hours
2	180 hours
3	240 hours
B	deactivated

- Touch the relevant control to select the interval required.
- Confirm your choice by touching the charcoal filter touch control . If you do not confirm your selection within

Adjusting settings

4 minutes, the extractor will automatically revert to the previous setting.

Activating/Deactivating Power management

Keep in mind that deactivating this function may increase energy consumption.

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control ⁵ ¹⁵.

After a few seconds, the grease filter  and charcoal filter  symbols light up, and after a further 7 seconds **1** lights up.

- Then touch in turn

- the lighting control ,
- the **1** control and then again
- the lighting control .

When the Power Management system is activated, **1** and **B** light up constantly. When it is deactivated, **1** and **B** flash.

- To deactivate the Power Management system, touch **1**.

1 and **B** will flash.

- To activate, touch **B**.

1 and **B** will light up constantly.

- Confirm the setting by pressing the run-on control ⁵ ¹⁵.

All the indicator lights will go out.

If you do not confirm your selection of setting within 4 minutes, the extractor will revert to the previous setting.

Deactivating/Activating the sensor control buzzer

When a function is selected with the sensors, a short buzzer will sound for confirmation.

The buzzer can be deactivated.

- Touch the On/Off control .

All symbols light up with reduced brightness.

- Press and hold the run-on option control ⁵ ¹⁵.

After a few seconds, the grease filter  and charcoal filter  symbols light up, and after a further 7 seconds **1** lights up.

- Touch **1** 3 times.

If the buzzer is activated, **2** and **3** light up constantly.

If it is deactivated, **2** and **3** flash.

- Touch **1** to deactivate the buzzer.

2 and **3** will flash.

- To activate, touch **B**.

2 and **3** will light up constantly.

 
- Confirm the setting by pressing the run-on control ⁵ ¹⁵.

All the indicator lights will go out.

If you do not confirm your selection of setting within 4 minutes, the extractor will revert to the previous setting.

Reducing the extraction height

- With the deflector plate retracted, touch the On/Off control .



- At the same time, touch the first and third bar next to the lighting control twice .

The deflector plate extends to the reduced height of approx. 10 cm.

- Switch on the fan or the cooktop lighting.

When switching off, the deflector plate first extends to the maximum height and then retracts again.


The deflector plate extends again to the reduced height when it is switched on again.

- To switch back to the maximum extension height, touch the first and third bar next to the lighting control  twice again when the deflector plate is retracted.

Energy saving tips

This rangehood operates very efficiently and economically. The following will help you to save even more energy when using it:

- Ensure that there is sufficient ventilation in the kitchen when cooking. In extraction mode, if there is insufficient air flow the rangehood cannot operate efficiently and this causes increased operating noise levels.
- Always cook with the lowest possible setting. This produces fewer cooking vapours, so you can use a lower rangehood power level and therefore benefit from reduced energy consumption.

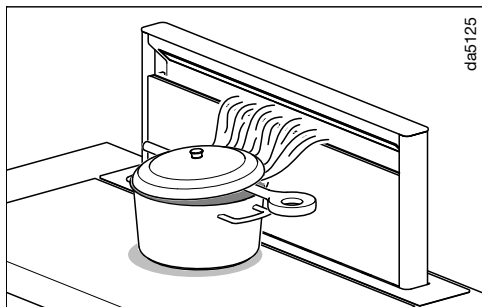

- If strong cooking vapours are produced during cooking, place the cookware as close as possible to the rangehood.

Whenever possible, keep pots and pans covered while cooking. This prevents heat escaping unnecessarily.

If you are cooking with open pots, put a lid on at an angle. For example, place a cooking spoon between the pot and the lid. The deflection of the cooking vapours in the direction of the extractor ensure optimal extraction.

- Clean or change the filters at regular intervals. Heavily soiled filters reduce performance, increase the risk of fire and are unhygienic.
- Use the Con@ctivity function. The rangehood will switch on and off automatically. The rangehood will select the optimum power level for the cooking you are doing, which ensures low energy consumption.
- If you are operating the rangehood manually, please note the following:
 - Check the power level selected on the rangehood. A low power level is usually sufficient. Only use the Booster setting when necessary.
 - When a large volume of cooking vapours are being produced, switch to a high power level in good time. This is more efficient than operating the rangehood for longer to try to capture cooking vapours which have already been distributed throughout the kitchen.
 - Make sure that you switch the rangehood off after use. If cooking vapours and odours still need to be removed from the kitchen air after cooking, use the run-on function. The fan will switch off automatically after the selected run-on time.

Housing

General information

Unsuitable cleaning agents can damage the surfaces and control elements.

Do not use any cleaning agents containing soda, acid, chloride, or solvent.

Do not use any abrasive cleaning agents, e.g. powder cleaners or cream cleaners and abrasive sponges, or pot scourers or sponges which have been used previously with abrasive cleaning agents.

 Moisture in the rangehood can cause damage.

Make sure that water does not get into the rangehood.

- Clean all surfaces and control elements using a small amount of warm water and dishwashing liquid. Apply with a soft sponge.
- After cleaning, wipe the surfaces dry using a soft cloth.

Important for appliances with glass surfaces

- Glass surfaces can be cleaned using a proprietary non-abrasive cleaning agent designed specifically for use on glass.

Grease filters and edge extraction panel

 Fire hazard!

Oversaturated grease filters are a fire hazard.

Clean the grease filters at regular intervals.

The edge extraction panel and the reusable metal grease filters in the appliance remove solid particles (grease, dust, etc.) from the kitchen vapours, preventing soiling of the rangehood.

The grease filters and the panel must be cleaned at regular intervals.

Heavily soiled grease filters hinder air extraction and will lead to increased levels of soiling in the rangehood and in the kitchen.

Grease filter cleaning intervals

Grease which has collected in the rangehood hardens over time and makes cleaning more difficult. It is therefore recommended that the edge extraction panel and the grease filters should be cleaned regularly (at least every 3–4 weeks) to avoid a build-up of grease.

The operating hours counter reminds you to clean the edge extraction panel and the grease filters regularly via the grease filter symbol  which will light up.

Cleaning and care

Removing the panel and grease filters

Opening the panel

- With the deflector plate retracted, touch the On/Off sensor .
- Touch the lighting control  briefly.

The deflector plate extends.




Risk of crushing!


If you switch off the fan and the lighting when the deflector plate is extended, the deflector plate will automatically retract after 1 minute. Risk of injury. Risk of damage to the opened panel.

To prevent the deflector plate from retracting, leave the lighting switched on.

The panel is held in place by magnets.

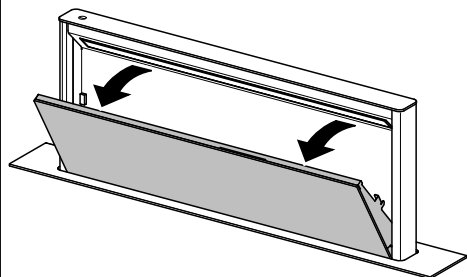

- Pull the top of the panel forwards and swing it open.

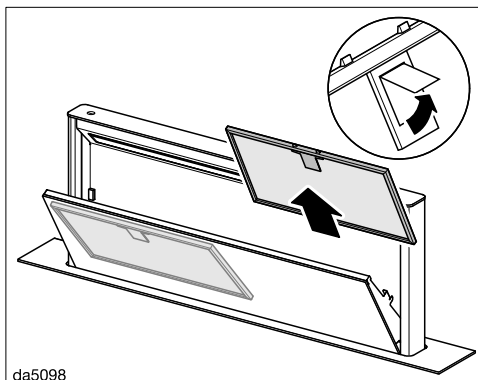

- Open the grease filter retainer catch and remove them.

Cleaning the grease filters by hand

- Clean the filters with a soft nylon brush in a mild solution of hot water and a small amount of washing-up liquid. Do not use undiluted washing up liquid.

Unsuitable cleaning agents

Unsuitable cleaning agents can cause damage to the surface of the filters if used regularly.

Do not use:

- cleaning agents containing descaling agents,
- powder cleaners or cream cleaners,
- aggressive all-purpose cleaning agents or spray cleaners for grease,
- oven sprays.

Cleaning the grease filters in the dishwasher

⚠ Risk of damage due to excessively high temperatures in the dishwasher. Excessively high temperatures may cause the grease filters to become unusable, if they become deformed, for example.

Select a programme that does not exceed the recommended temperature.


Also follow the information provided in the operating instructions for the dishwasher.

- Place the grease filters upright or slightly inclined in the lower basket. Ensure the spray arm is not obstructed.
- Use a standard household cleaning detergent.
- Select a programme with a maximum wash temperature of 65 °C.

Depending on the detergent used, the internal filter surfaces may become discoloured. This will not affect the functioning of the grease filters in any way.

- After cleaning, leave the filters to dry on an absorbent surface before refitting them.

Removing the panel

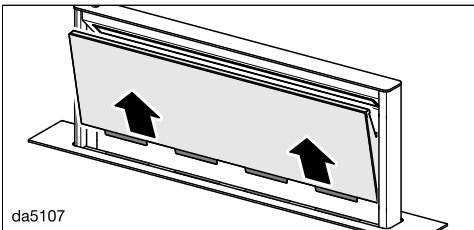

- Pull the opened panel up and out to remove it and place it on a soft surface.

Cleaning the panel


- Follow the instructions under "Housing".

The panel is not suitable for cleaning in a dishwasher.

- When removing the filters and panel for cleaning, also clean off any residues of oil or fat from the now accessible housing to prevent the risk of these catching fire.


Cleaning the drip tray

Condensate collects in the drip tray underneath the grease filters. The drip tray can be removed for cleaning.

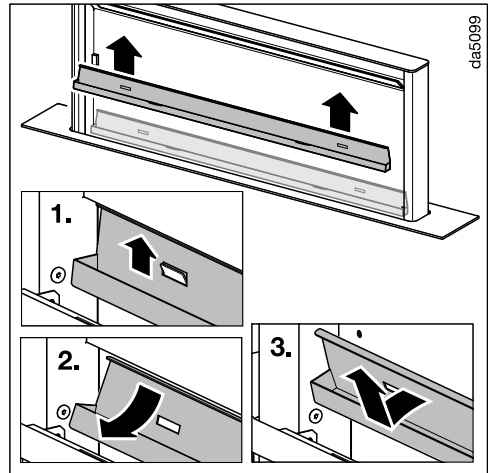


- Carefully pull the drip tray up and out of the holders. Pour away any condensate that has collected in it and then clean the tray with a damp cleaning cloth.

Cleaning and care

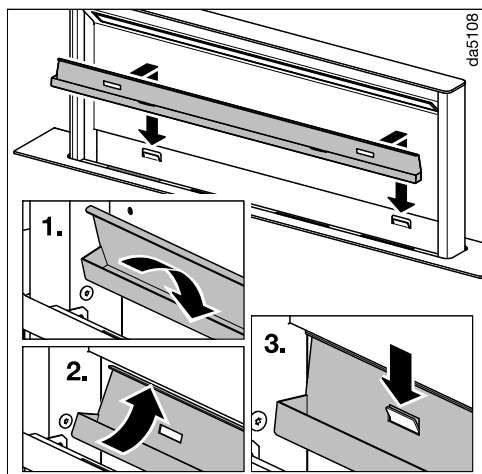


- Hook the drip tray back into the holders after cleaning.

Inserting the panel

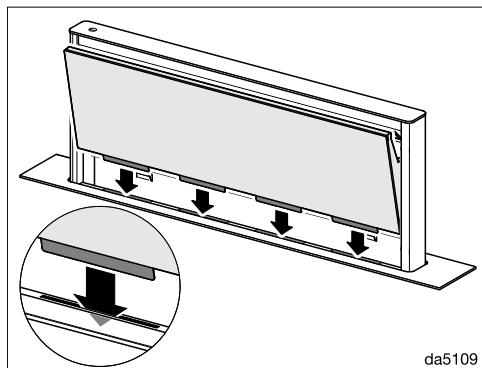

- Insert the panel into the slots on the deflector plate.

- Refit the grease filters. When inserting the grease filters, make sure that the latch faces outwards.

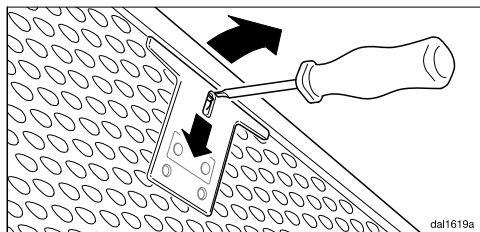

- If a grease filter is inadvertently fitted upside down, insert a small screwdriver blade into the slit to disengage the clip.
- Swing the panel closed until the magnets hold it in place.

Resetting the grease filter operating hours counter

After cleaning, the operating hours counter needs to be reset.

- While the fan is switched on, press the grease filter control  for approx. 3 seconds until only **1** is flashing.

The grease filter symbol  goes out.

Change grease filters

Regular use and cleaning can cause the filter surfaces to wear.

If you notice any damage, replace the grease filters.

You can obtain grease filters from Miele customer service (see end of these operating instructions) or from your Miele specialist dealer.

NoSmell active charcoal filters


With recirculation mode, two charcoal filters must be fitted in addition to the grease filters. These are designed to absorb cooking odours.

Charcoal filters are available to order via the Miele online shop (see the end of this booklet for contact details) or directly from Miele.

The part number of the charcoal filter required is listed under “Technical data”.

Fitting/Replacing the charcoal filters

- Remove the panel and remove the drip tray as previously described.
- Take the charcoal filters out of their packaging.

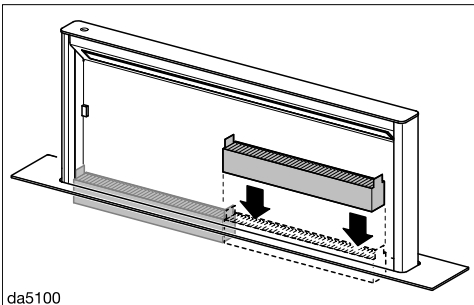

- Insert the charcoal filters into the deflector plate. Make sure the tabs are facing up.
- Refit the drip tray and the panel.

When to change the NoSmell active charcoal filters

Replace the charcoal filters when they no longer absorb kitchen odours effectively, or at least every 6 months.

The operating hours counter will remind you to replace the charcoal filters by lighting up the charcoal filter symbol .

Resetting the charcoal filter operating hours counter

After changing the charcoal filters, the operating hours counter needs to be reset.


- Touch the charcoal filter control  for approx. 3 seconds with the rangehood switched on until only the indicator light for level 1 is flashing.

The charcoal filter symbol  goes out.

Disposing of the charcoal filters

- Used charcoal filters can be disposed of with the normal household waste.

Reactivatable charcoal filters

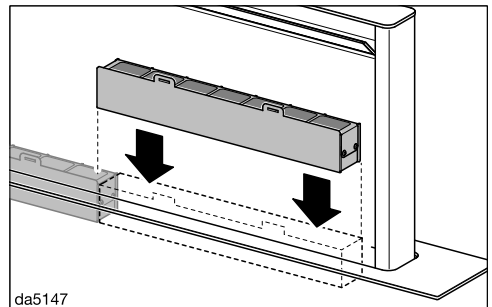

Reactivatable charcoal filters are available for this rangehood. They can be used several times after being reactivated in the oven.

Please follow the operating instructions supplied with the filter.

Problem solving guide

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact Customer Service.

More information to help you remedy faults yourself can be found at www.miele.com.au/support/customer-assistance or www.miele.co.nz/support/customer-assistance.



Problem	Possible cause and remedy
The deflector plate stops while extending.	The deflector plate is blocked by a heavy object, for example. If the deflector plate is blocked when it is extended, it retracts a little and stops. ■ Touch the On/Off sensor . The deflector plate extends and then retracts.
The deflector plate stops while retracting.	An object has become lodged in the deflector plate. If the deflector plate is blocked during retraction, it extends a little and stops. ■ Touch the On/Off sensor . ■ Switch on the fan or the lighting. The deflector plate extends.

You can find information on how to remedy faults yourself at www.miele.com.au/support/customer-assistance or www.miele.co.nz/support/customer-assistance and about Miele spare parts at www.miele.com.au/service or www.miele.co.nz/service.

Contact in case of fault

In the event of any faults which you cannot remedy yourself, please contact Miele.

You can book a Miele customer service call-out online at www.miele.com.au/service or www.miele.co.nz/service. Contact information for Miele can be found at the end of this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

Position of the data plate

The data plate can be found on the front of the housing.

Warranty

The manufacturer's warranty for this appliance is 2 years.

For further information, please refer to your warranty booklet.

Copyright and licences

For the purpose of operating and controlling the communication module, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/ These software components are protected by copyright. The copyright powers of Miele and third parties must be respected.

In addition, the integrated communication module contains software components which are distributed under open source licensing terms. You can access these open source components along with the associated copyright notices, copies of the valid licensing terms, and any additional information locally via IP using a web browser ([http\[s\]://<IP address>/Licences](http[s]://<IP address>/Licences)). The liability and warranty arrangements for the open-source licences displayed in this location only apply in relation to the respective rights holders.

Installation

Before installation



Before installation, it is important to read the information given on the following pages as well as the “Warning and Safety instructions” at the beginning of this booklet.

Installation materials



08095672

6 screws, M4 x 8 mm




01056271

8 screws, 4 x 15 mm



11597030

2 screws, M4 x 100 mm

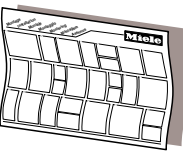


dina3mle

Installation plan

See the installation plan for details on the individual steps involved in the installation of this appliance.

Appliance dimensions

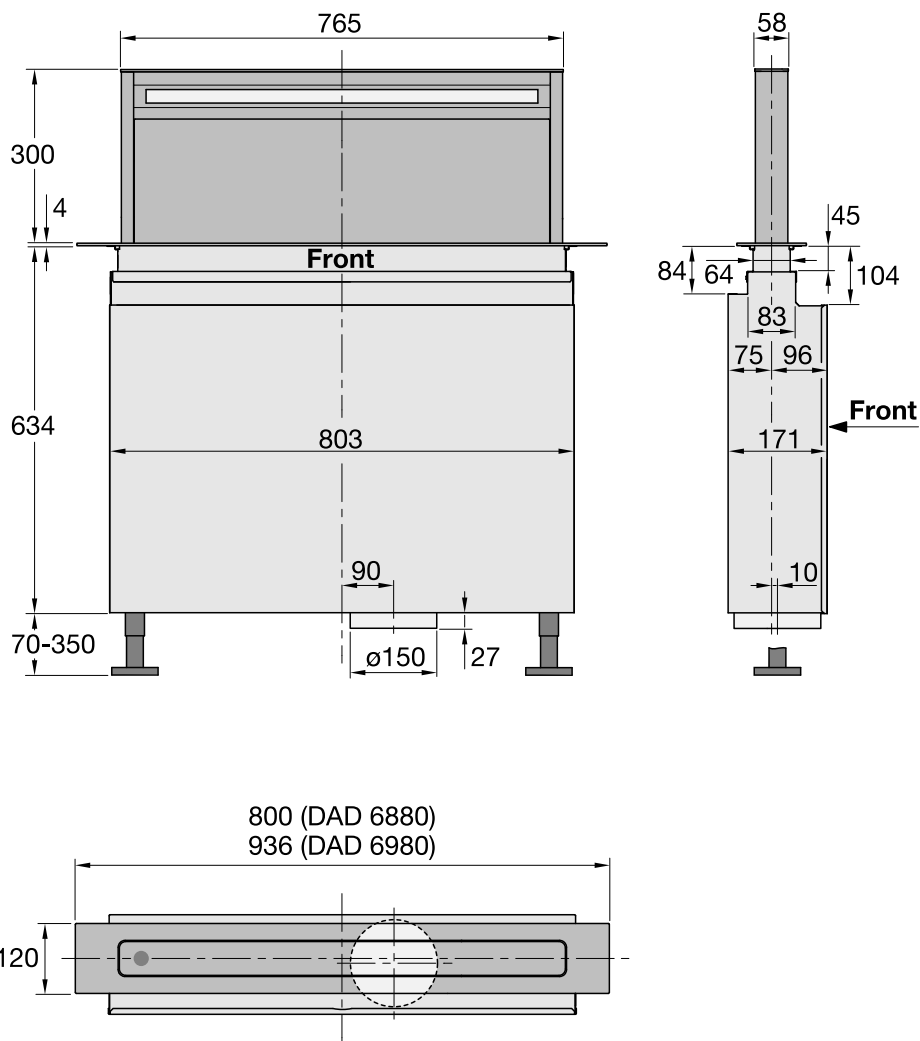

da5555b

Installation

Installation dimensions




Risk of heat damage.

The heat from a gas cooktop can damage the extractor.

The extractor must not be operated in combination with a gas cooktop.


If you are planning to install an oven/cooker in front of the extractor, the appropriate installation advice and dimensions regarding cool air circulation must be observed.

The installation location must remain accessible. It must also be possible to access and dismantle the extractor from the front in the event of servicing.

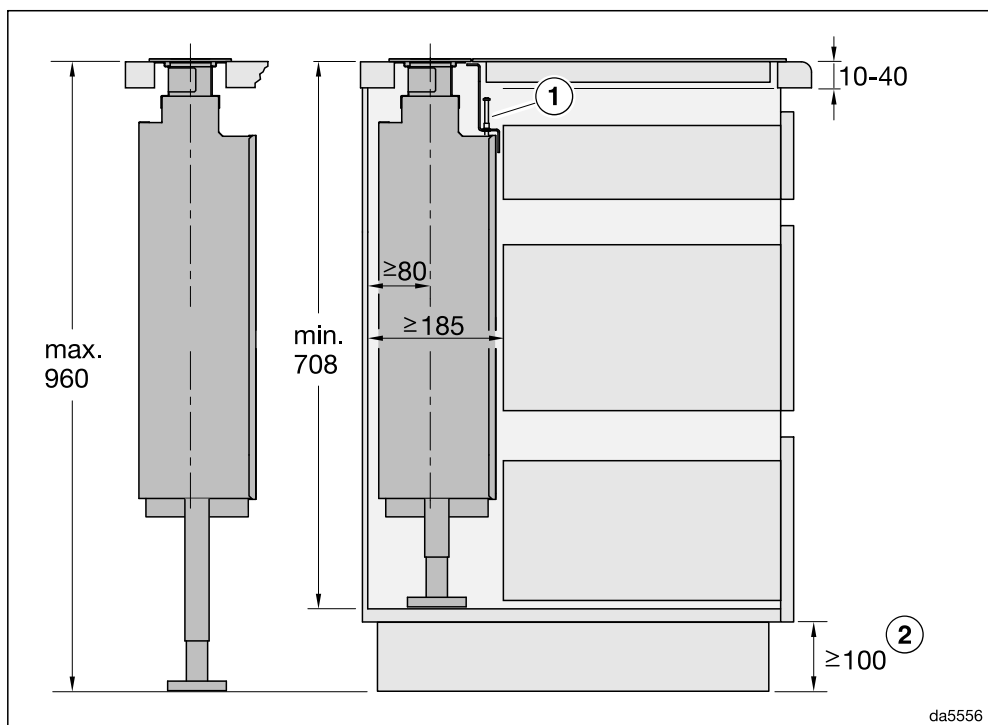

- ① If you install the extractor and the cooktop flush-fit against each other in the same cut-out, you must use the enclosed angle trim.
- ② The minimum dimension is required if flat ducting is laid under the cabinets or the DUU 600 recirculation box is used.

DAD 6880: installation of the extractor and the cooktop in separate cut-outs

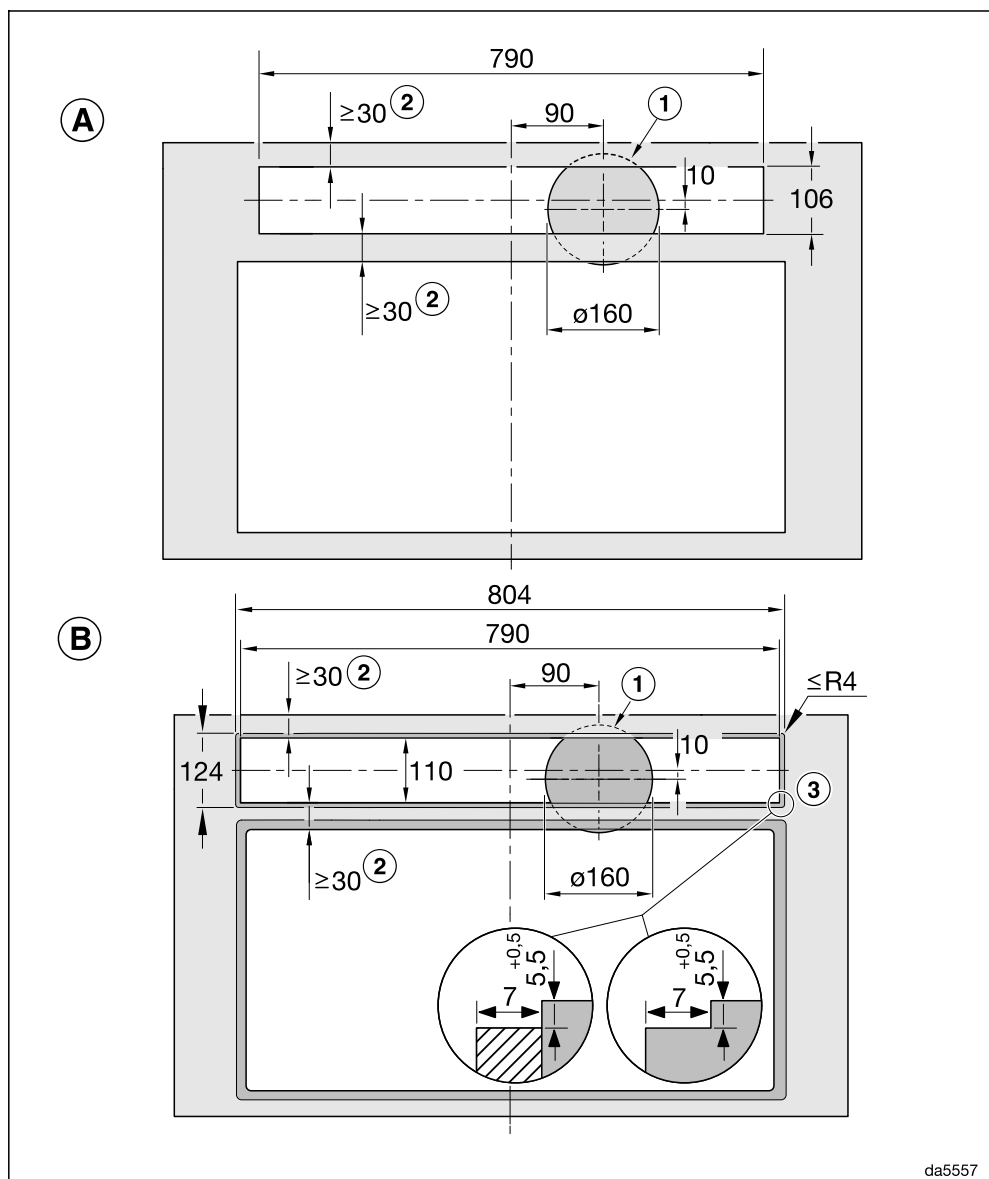

A Surface-mounted installation


B Flush-fit installation

Installation

DAD 6880: side-by-side installation of the extractor and the cooktop in the same cut-out

Example: combination with KM 8684 FL or KM 8685 FL

Surface-mounted installation

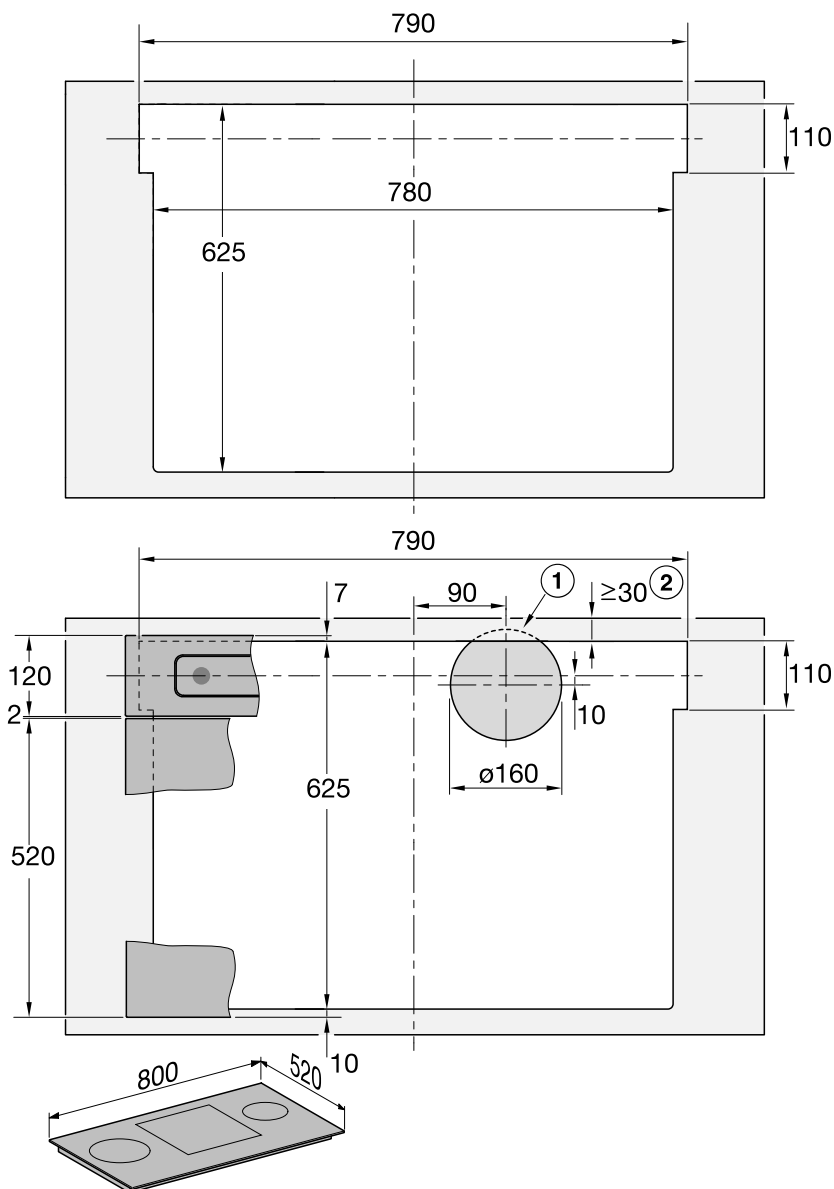


da5561

DAD 6880: side-by-side installation of the extractor and the cooktop in the same cut-out


Example: combination with KM 8684 FL or KM 8685 FL

Flush-fit installation

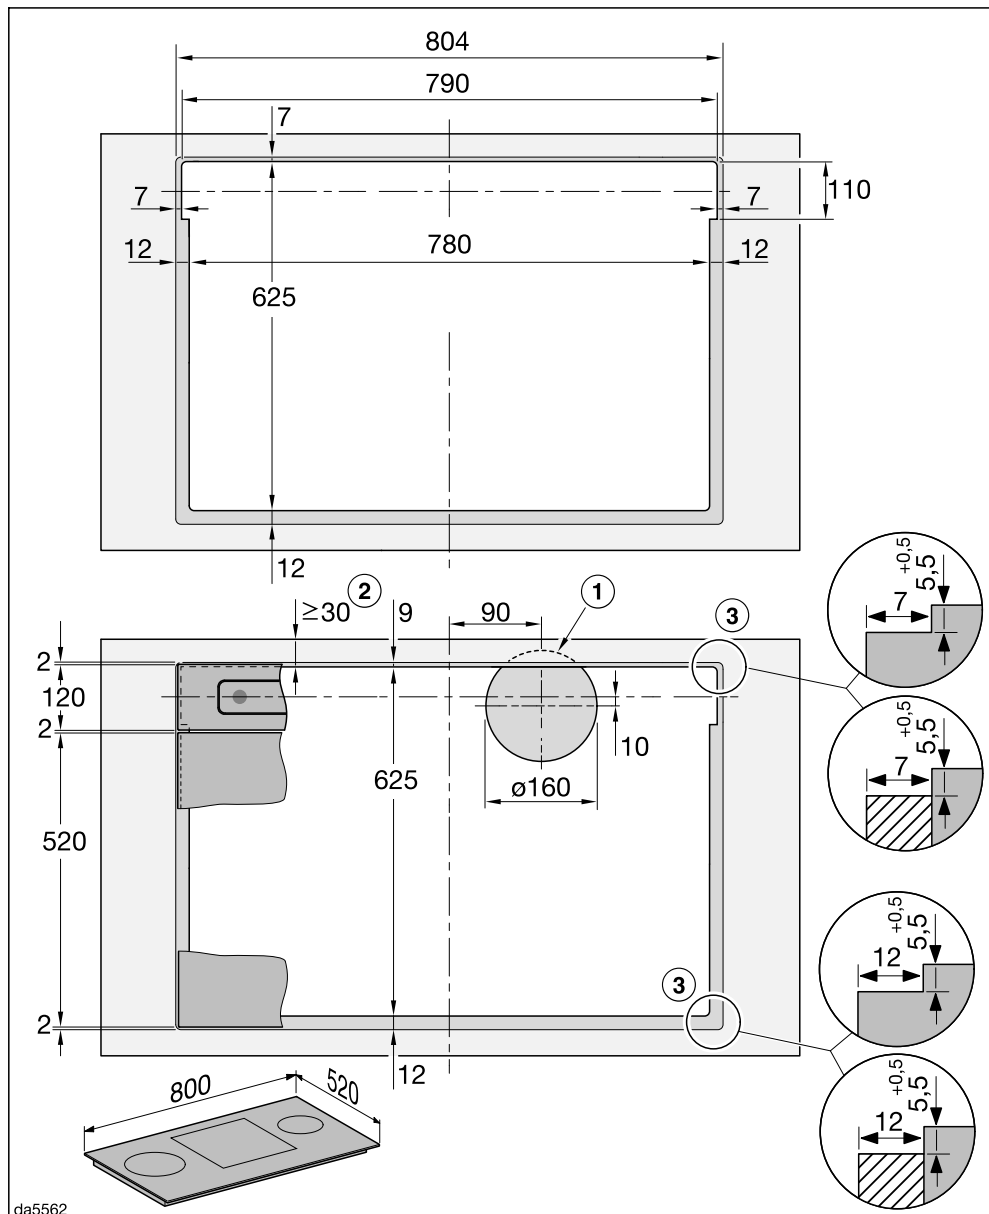

Installation

DAD 6980: installation of the extractor and the cooktop in separate cut-outs

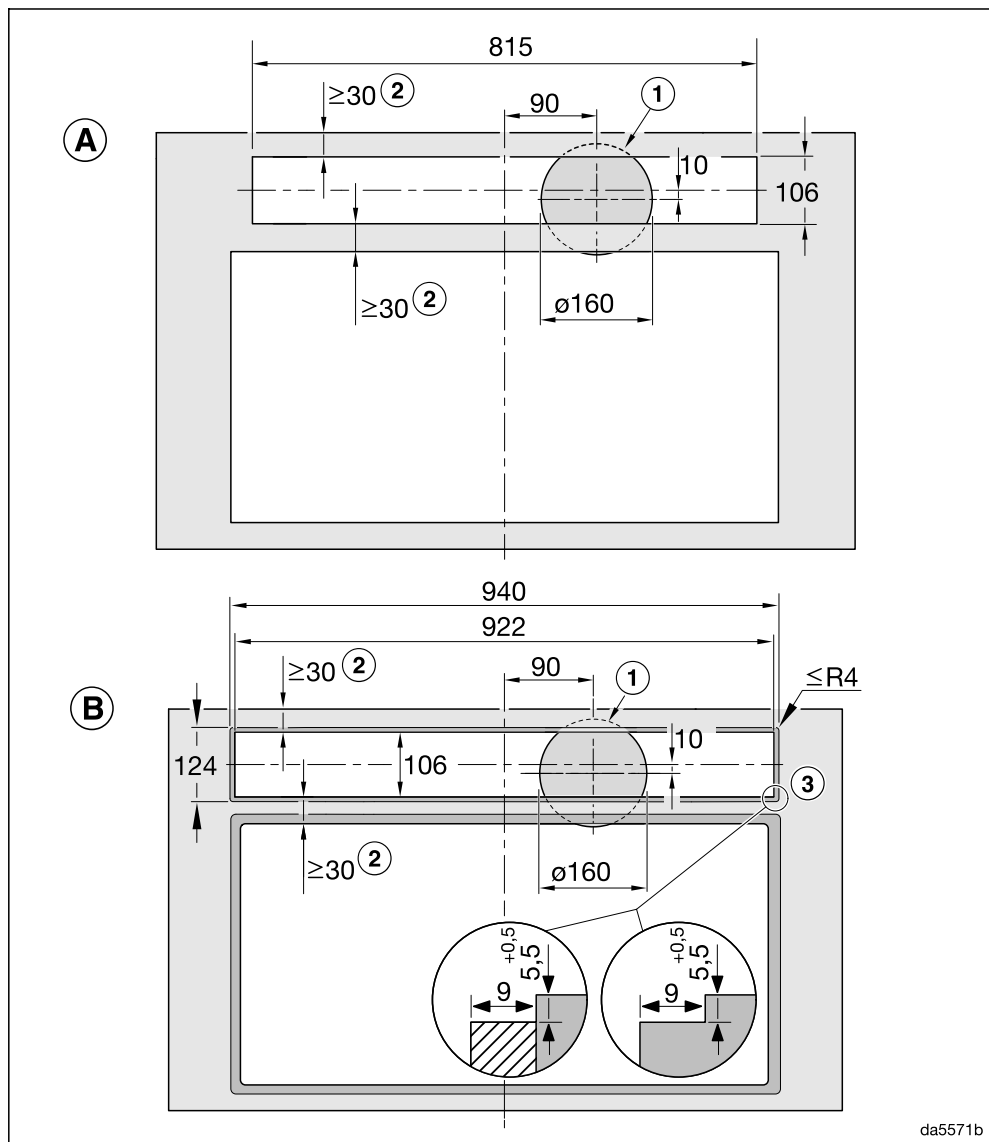


A Surface-mounted installation

B Flush-fit installation

DAD 6980: side-by-side installation of the extractor and the cooktop in the same cut-out

Example: combination with KM 8695 FL

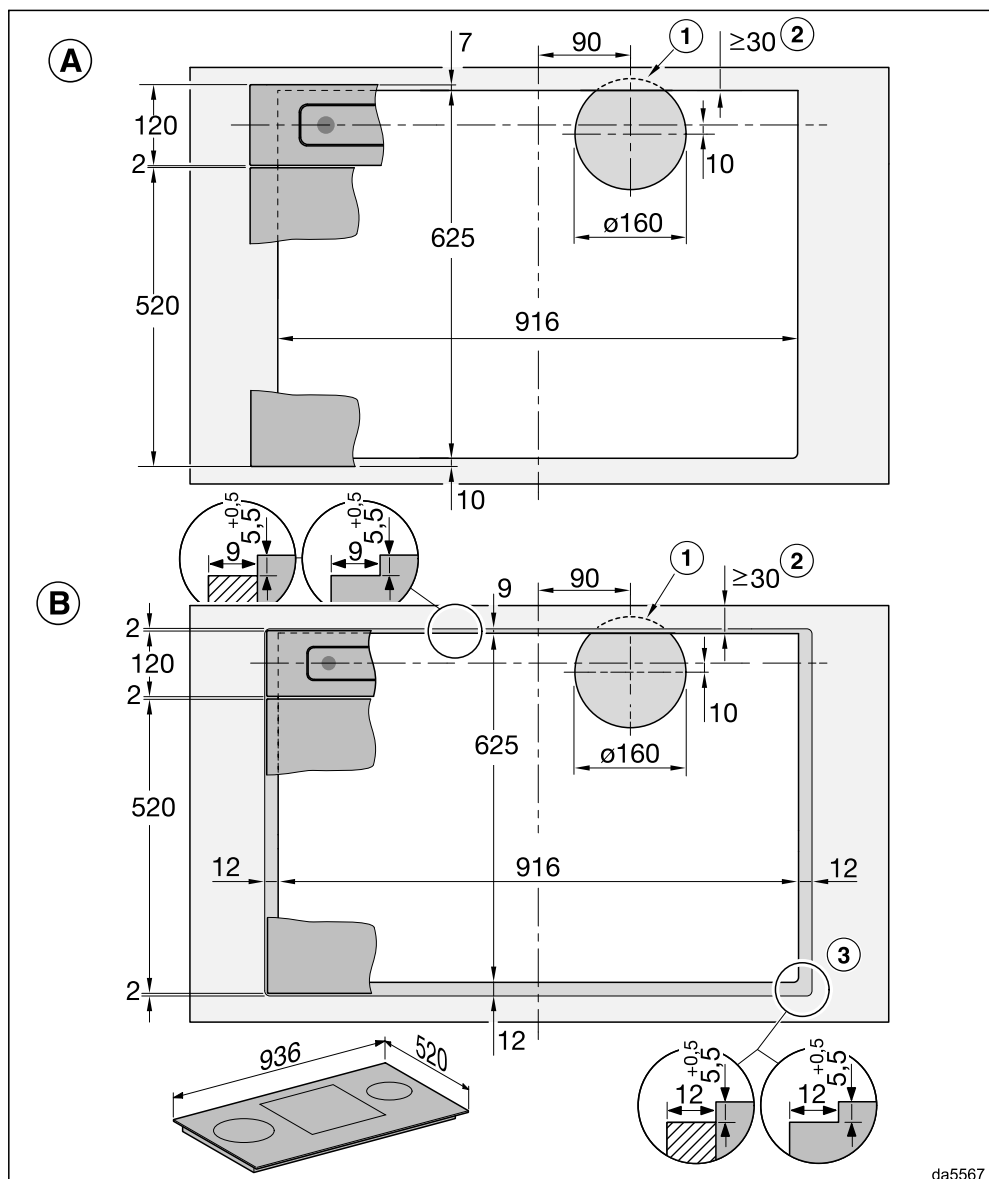

- Ⓐ Surface-mounted installation
- Ⓑ Flush-fit installation

Installation

- ① Cut-out for vent ducting Ø 150 mm in unit floor
- ② Make sure that the worktop is stable enough to support the weight.
- ③ Stepped cut-out for flush-fit installation in a worktop.
 - Note the different milling widths for the cooktop and the extractor.
 - Instead of a stepped cut-out, a wooden frame (not supplied) can be installed 5.5 mm below the top edge of the worktop.
 - To prevent the milling behind the glass panel from showing through, colour the milling in black.

Please also observe the notes on installation in the operating and installation instructions of the cooktop.

Sealing the gaps




Damage caused by unsuitable sealant.

Unsuitable sealant can damage natural stone.

For natural stone worktops and natural stone tiles, only use silicone sealant that is specially formulated for natural stone. Please follow the manufacturer's instructions.

- Use a heat-resistant silicone sealant (min. 160 °C) to seal the gap between the downdraft extractor and worktop with a flush-fit installation and between the downdraft extractor and cooktop when the two are installed adjacent to one another.

Installation examples

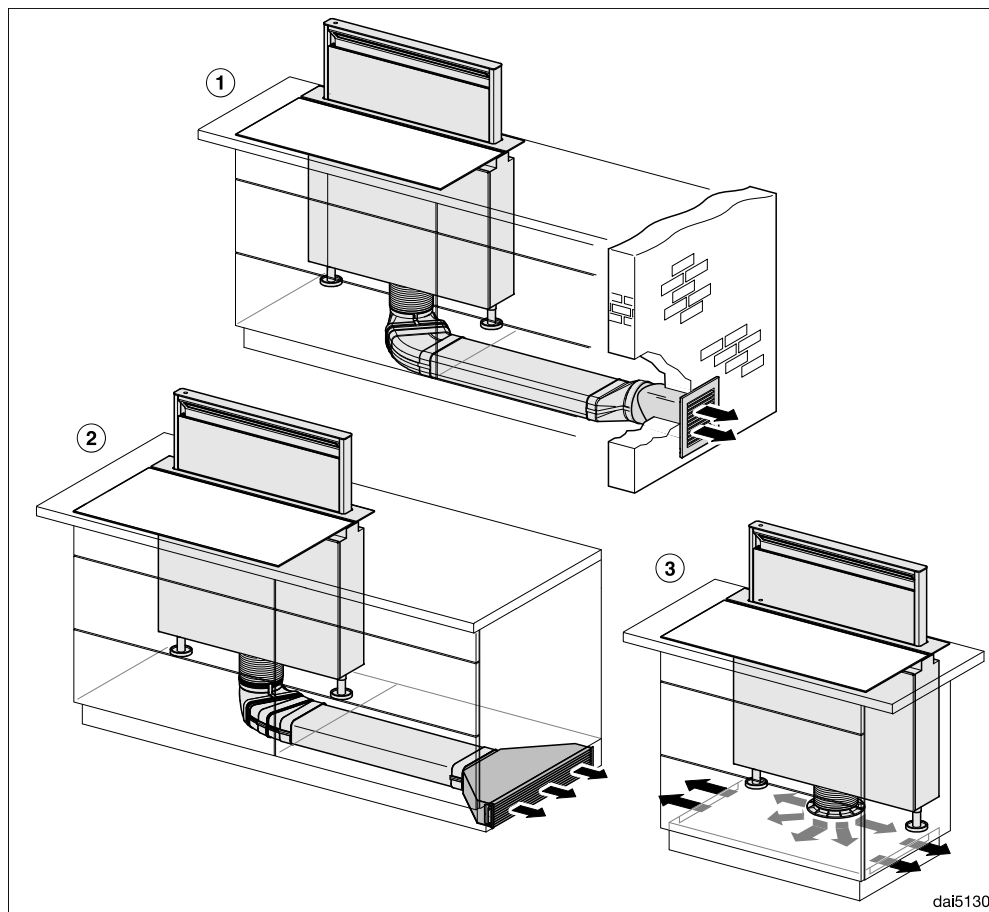

da5130

- ① Exhaust air with flat ducting and DMK 150-1 wall box
- ② Recirculation with flat ducting and DUU 600 recirculation box
- ③ Plug&Play operation with DUP 150 conversion kit
 During Plug&Play operation, ensure sufficient ventilation of the plinth area, e.g. through gaps in the plinth panel.
 The cross-section of the openings must be at least 425 cm^2 in total.
 If the floor meets the ground or is exposed to outside air, the heat transfer coefficient of the floor must not exceed $0.5 \text{ W}/(\text{m}^2 \text{ K})$.
 The electronic unit of the extractor must be switched to Plug&Play operation, see "Before using for the first time – Setting up Plug&Play".

Installation

Connection for air extraction


Only use smooth pipes or flexible ducting made from approved non-flammable materials for exhaust ducting.

To achieve the most efficient air extraction with the lowest noise levels, please note the following:

- The diameter of the exhaust ducting must not be smaller than the cross-section of the exhaust connection (see "Appliance dimensions"). This is particularly applicable when using flat ducting.
- The exhaust ducting must be as short and straight as possible.
- Only use wide radius bends.
- The exhaust ducting must not be kinked or compressed.
- All connections must be strong and airtight.
- If the ducting has flaps, these must be opened when the rangehood is switched on.

Any constriction of the airflow will reduce extraction performance and increase operating noise.

Vent flue

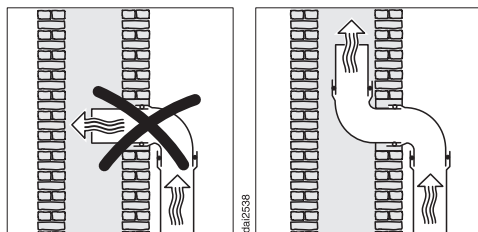

If the exhaust air is to be ducted into a vent flue, the ducting must be directed in the flow direction of the flue.

If the flue is used by several ventilation units, the cross-section of the flue must be large enough.

Non-return flap

- Make sure you use a non-return flap in the exhaust air system.

A non-return flap ensures that when the rangehood is not in operation, the duct is closed and no exchange of room and outside air can take place.

If the exhaust air is ducted through an outside wall, a Miele wall vent or a Miele roof vent (available as an optional accessory) is recommended. These are fitted with an integrated non-return flap.

Miele will not accept warranty claims for any functional defects or damage caused by inadequate ducting.

Electrical connection

The rangehood is supplied with a mains connection cable with moulded plug ready for connection to a suitable earthed socket.

If the socket is not easily accessible or if the appliance is to be hard-wired, ensure that a suitable means of disconnection is provided on the installation side for each pole.



Risk of fire from overheating.

Connecting the rangehood to multi-socket adapters or extension cables can overload the cables.

For safety reasons, do not use an extension cable or multi-socket adapter.

All electrical work must be carried out by a suitably qualified and competent person in strict accordance with national and local safety regulations.

For safety reasons, we recommend using a suitable residual current device (RCD) in the relevant electrical installation for connecting the rangehood.

If the mains connection cable is damaged, it must only be replaced with a specific mains connection cable of the same type (available from Miele). For safety reasons, such replacement may only be carried out by a suitably qualified and competent electrician or a Miele authorised service technician, in order to avoid a hazard.

The data plate indicates the nominal power consumption and the connection data. Compare this information with the data of the on-site electrical connection. If in any doubt, consult a qualified electrician.

Temporary or permanent operation with a self-sufficient or non-mains synchronous energy supply system (e.g. isolated networks, back-up systems) is possible. A requirement for the operation is that the energy supply system complies with all current local and national requirements that apply to stand-alone, solar and/or battery systems. The protective measures provided in the domestic installation and in this Miele product must also be assured in their function and operation in isolated operation or in non-mains synchronous operation, or replaced with equivalent measures in the installation.

Technical data

Fan motor	180 W
Deflector plate motor	60 W
Cooktop lighting	12 W
Ambient lighting	8 W
Total rated load	260 W
Mains voltage, frequency	AC 230 V, 50 Hz
Fuse rating	10 A
Length of power supply cord	1.5 m
Weight	34 kg

Wi-Fi module

Frequency band	2.400–2.4835 GHz
Maximum transmission power	< 100 mW

Optional accessory for recirculation mode

Charcoal filter set DKF 30-P or DKF 30-R (reactivatable). The sets contain 2 charcoal filters.

You need the DUP 150 installation kit for Plug&Play operation. The kit contains a socket, a hose and the DKF 30-P charcoal filter set.

Note for comparative testing

Energy efficiency must be calculated using extraction mode. The rangehood is set up at the factory for recirculation mode. To re-set it for extraction mode the operating hours counter for the charcoal filter(s) has to be deactivated (see “Using for the first time”).

Miele Australia Pty. Ltd.

ACN 005 635 398

ABN 96 005 635 398

Level 4, 141 Camberwell Road
Hawthorn East, VIC 3123

1300 464 353 (1300 4 MIELE)

info@miele.com.au

www.miele.com.au

Miele New Zealand Limited

IRD 98 463 631

8 College Hill
Freemans Bay, Auckland 1011

0800 464 353 (0800 4 MIELE)

customercare@miele.co.nz

www.miele.co.nz

Miele Global Headquarters

Germany

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh

Federal Republic of Germany

DAD 6880, DAD 6980

en-AU, NZ

M.-Nr. 12 815 870 / 00