 





⚠ It is essential to read the operating instructions and pay particular attention to the warnings and safety notes.

How the control field works

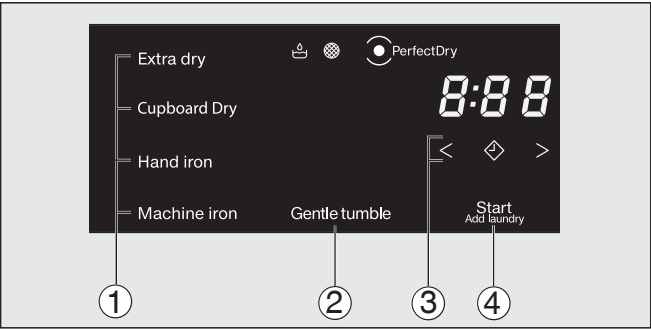


The ①-④ sensor controls react to fingertip contact. If a sensor control is illuminated, it can be selected.  
◊ sensor control = delay start period (then use < > to select the duration).

 Select the drying level

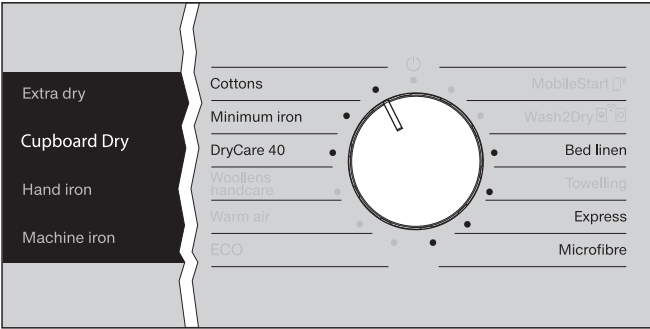

- Touch the sensor control for the drying level.
- If a sensor control is brightly lit, this means it is currently selected
- If a sensor control is dimly lit, this means it can be selected

Select the time

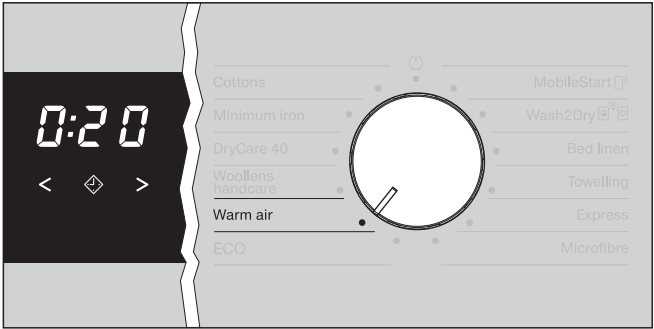


- Touch the < or > sensor control until the required duration lights up.
- You can select a duration of between 0:20 minutes and 2:00 hours.

① Sort the laundry and load the drum




- ☒ = do not tumble dry
- ⦿ = normal/higher temperature
- ◻ = select *Gentle tumble* or *DryCare 40*
- Load the laundry

② Select and start the programme

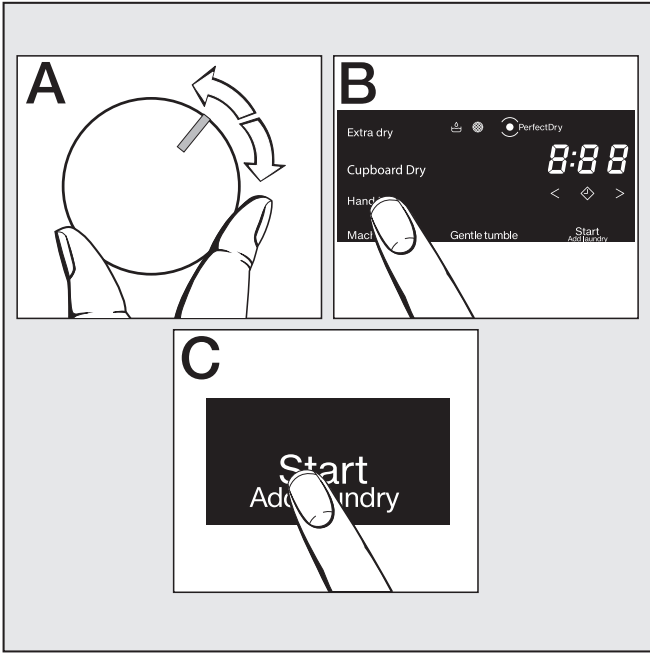

- Select the programme
- Select the drying level or duration
- Touch the *Start/Add laundry* sensor

③ Unload the laundry

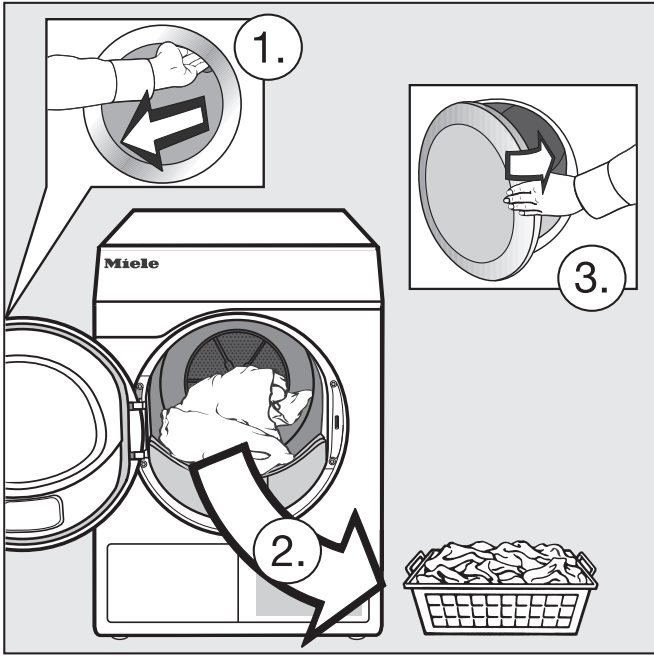

- End of programme: 0:00 is displayed
- Open the door
  - Unload the laundry

| Programmes                                                          | kg | Fabrics                                                                                                                                                           | + |
|---------------------------------------------------------------------|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| <b>Cottons</b><br>Extra dry, CupboardDry, Hand iron, Machine iron   | 8  | Jackets, workwear, overalls, aprons, baby clothes, t-shirts, underwear, cotton blankets, boil-proof table linen                                                   | ✓ |
| <b>Minimum iron</b><br>Normal, Hand iron                            | 4  | Workwear, overalls, tops, dresses, trousers, table linen, tights                                                                                                  | ✓ |
| <b>DryCare 40</b><br>CupboardDry, Hand iron, Machine iron           | 4  | – All fabrics that are free of wool and are washable at temperatures of 40 °C and above<br>– Trousers, jackets or shirts made of cotton, mixed fibres, synthetics | ● |
| <b>Woollens handcare</b>                                            | 2  | Pullovers, knitted garments, tights and socks                                                                                                                     | – |
| <b>Warm air</b>                                                     | 8  | Jackets, pillows, sleeping bags, items made up of multiple layers, heavy cotton table cloths, individual items of laundry                                         | ✓ |
| <b>ECO</b>                                                          | 8  | Cotton items with normal residual moisture, such as those suitable for <i>Cottons</i>                                                                             | – |
| <b>MobileStart</b>                                                  | 8  | After connection: the Miele app is used to select programmes and operate the appliance                                                                            | – |
| <b>Wash2Dry</b>                                                     | 8  | After connection: the programme is selected automatically in conjunction with the programme selection on the connected washing machine                            | – |
| <b>Bed linen</b><br>Extra dry, CupboardDry, Hand iron, Machine iron | 4  | Bed linen, pillowcases                                                                                                                                            | – |
| <b>Towelling</b>                                                    | 8  | Full towelling load: hand towels, bath towels, spa towels, bathrobes, face flannels                                                                               | – |
| <b>Express</b><br>Extra dry, CupboardDry, Hand iron, Machine iron   | 4  | Items suitable for the <i>Cottons</i> programme                                                                                                                   | – |
| <b>Microfibres</b><br>Extra dry, CupboardDry                        | 8  | Microfibre mops and cleaning cloths                                                                                                                               | – |


(kg) Maximum weight of dry laundry in kg

(+) *Gentle tumble*: ✓ Can be selected / ● Always active / – Cannot be selected




Clean after drying and when the  indicator light comes on\*


Tip: Have a vacuum cleaner ready

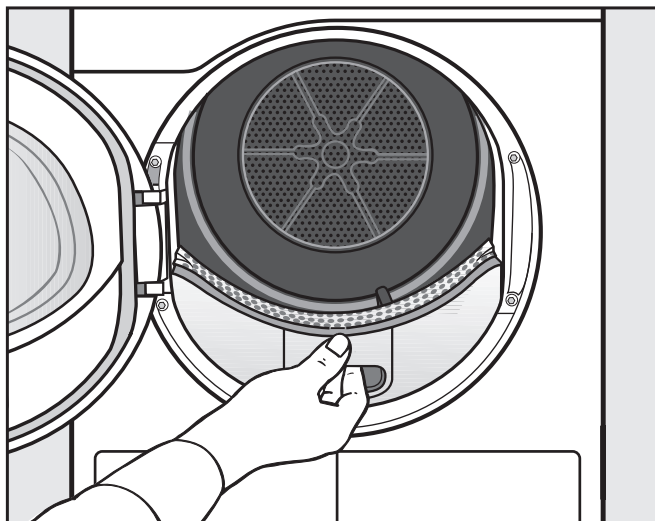

- Remove the fluff filter

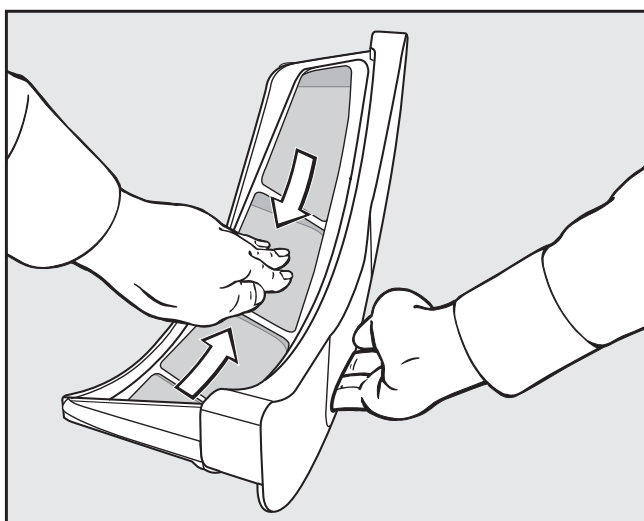


- Remove the fluff with your fingers or with a vacuum cleaner
- For heavy soiling: see the operating instructions

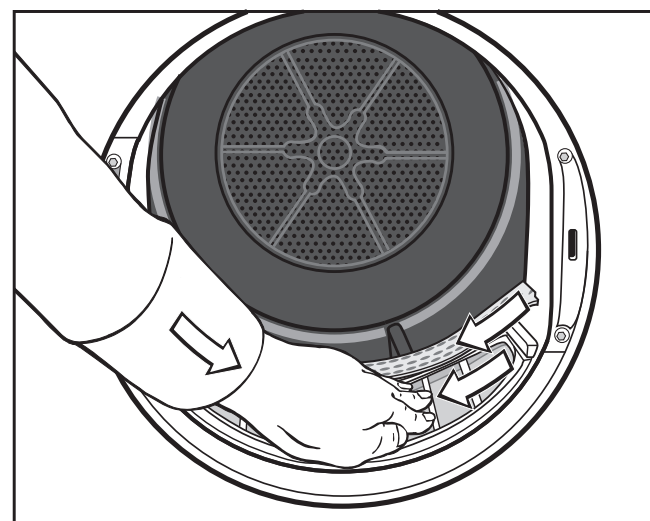


- Remove the fluff with your fingers or with a vacuum cleaner
- For heavy soiling: see the operating instructions


Clean once a day when in continuous use and when the  indicator light comes on\*

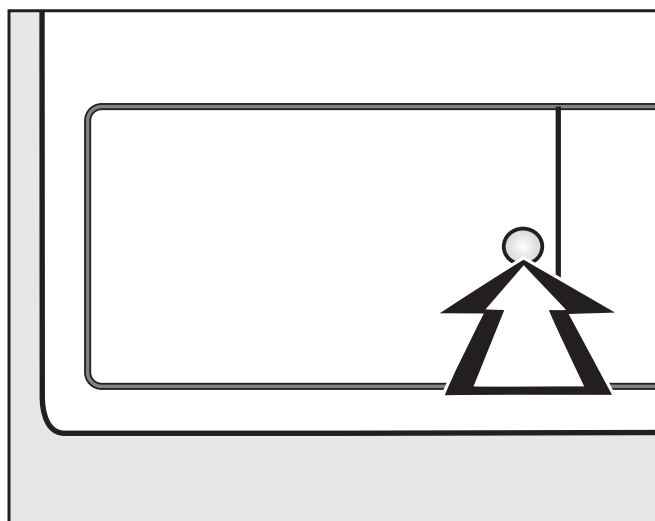

- Open the access panel

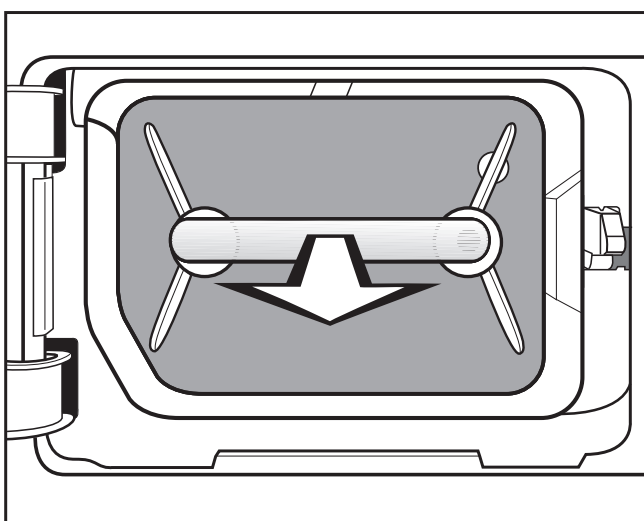

- Pull the plinth filter out by the handle

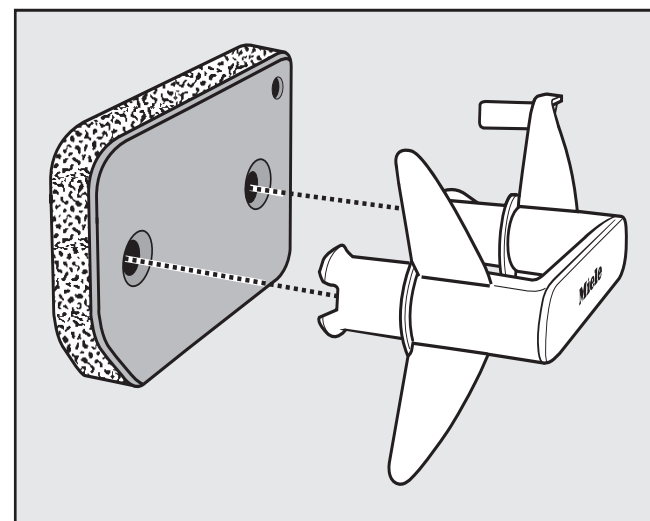

- Pull the handle out of the plinth filter
- Rinse the plinth filter, squeeze it gently and leave it to dry
  - Check the plinth filter at regular intervals for signs of wear
- Connect the handle
- Reinsert the plinth filter

\* **Switch off the  indicator light:**

- Open and close the door while the tumble dryer is switched on.

