 



⚠ Please read the instruction manual before installing and using this machine and observe all warning and safety instructions.

1 Before you begin

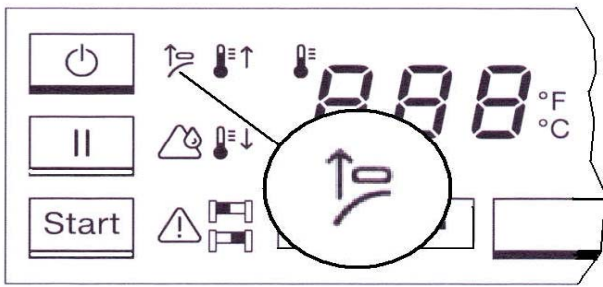


- Turn on the iron with the "On / Off" button .
- The "Finger guard" symbol will flash.
- Now activate the finger guard by lifting it.

 2 Ironing

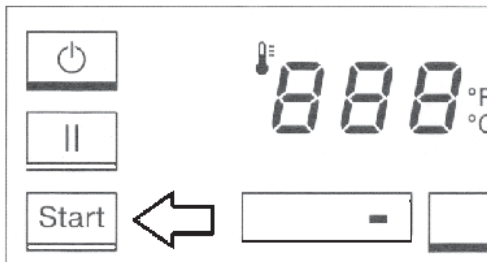

- The Start button begins to flash as soon as the minimum temperature is reached.
- Now press the flashing "Start" button to start up the ironer.

 3 Select the temperature

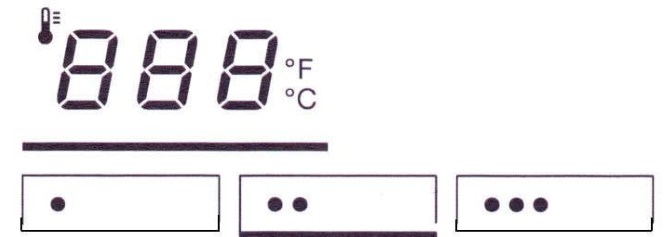

- Set the corresponding heater plate temperature according to the type of fabric.

Type of fabric	Symbol	Temperature
Nylon / Polyester / Other synthetics	•	212 - 230 °F (100 - 110 °C)
Silk / Wool	••	231 - 302 °F (111 - 150 °C)
Cottons / Linens	•••	304 - 362 °F (151 - 185 °C)


4 Selecting the iron speed



- Select the roller speed.

Symbol	Speed range
-	Low speed range
--	Medium speed range
---	High speed range

5 Laundry feed

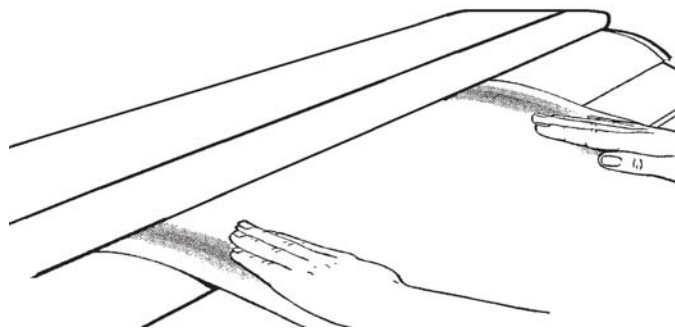

- Lay the item parallel to the roller at the beginning of the laundry infeed table.
- Smooth the item.
- Feed the item into the machine.

6 FlexControl footswitch

 


- While ironing, press the FlexControl footswitch with your foot to switch the iron to steaming mode and steam the laundry.

Continuing the ironing procedure

- Remove your foot from the footswitch again to continue with the ironing procedure.

Ironing with a coin-operated payment system

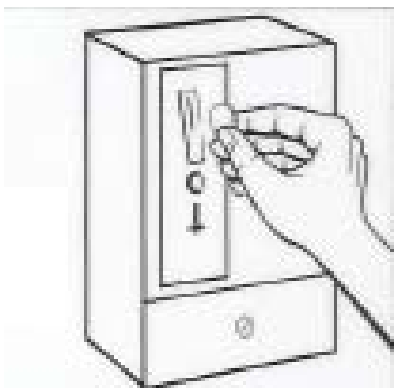

- Turn on the iron using the "On / Off" button .
- The display symbol flashes.
- Insert the coin or token.
- The symbol will go out in the display.
- Select the corresponding temperature range according to the type of laundry.
- Select the roller speed.

 
After the indicator light goes out, the rotary iron is ready for ironing and the countdown of the purchased ironing time begins.

- Press the Start button to begin ironing.

At the end of the ironing time, the heater plate lowers and the roller comes to a standstill. The symbol flashes. More ironing time can be purchased at any time.

⚠ Please read the instructions before installing and using this machine and observe all warning and safety instructions.

1 Preparing for use

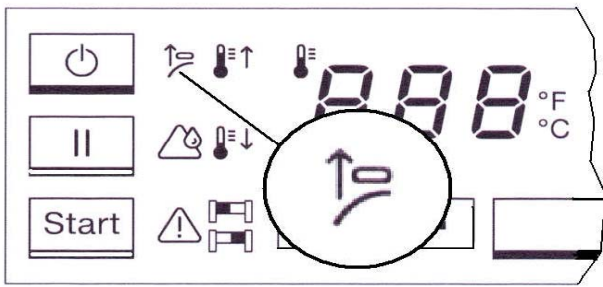


- Switch the flatwork ironer on by pressing the On / Off button.

The "Finger guard" symbol will flash in the display.

- Now activate the finger guard by lifting it.

 
2 Ironing

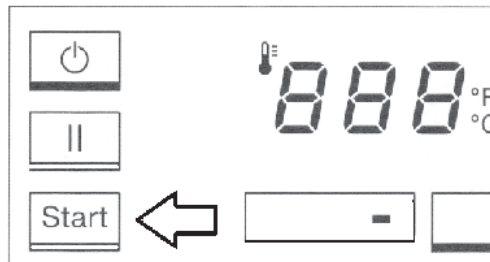

The "Start" button begins to flash as soon as the flatwork ironer has reached the minimum temperature.

- Now press the flashing "Start" button to start up the flatwork ironer.

 3 Selecting a temperature

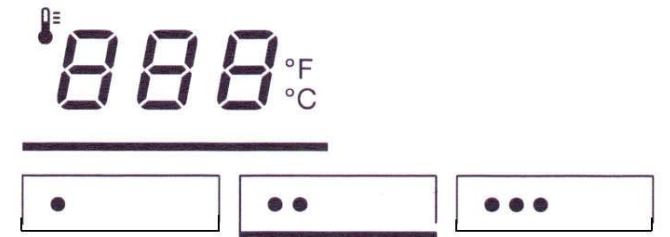

- Select the temperature according to the type of fabric.

Fabric	Symbol	Temperature
Nylon / Artificial silk	•	100 - 110 °C
Silk / Woolens	••	111 - 150 °C
Cottons / Linens	•••	151 - 185 °C


4 Selecting the ironer speed



- Select the roller speed you want.

Symbol	Speed range
-	Low speed range
--	Medium speed range
---	High speed range

 5 Laundry feed

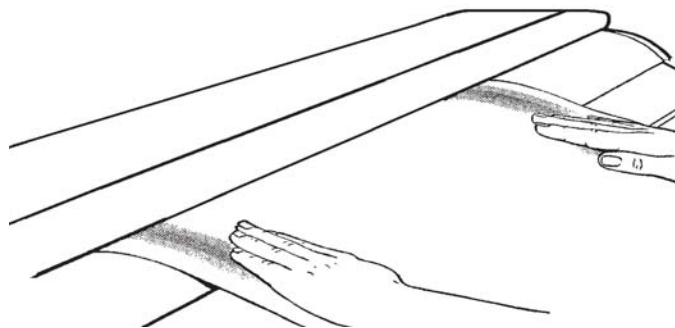

- Lay the item parallel to the roller at the start of the laundry infeed table.
- Smooth the item.
- Feed the item into the machine.

6 FlexControl foot switch

 


- During ironing, press down the "FlexControl" foot switch to change to Steam mode.

Continuing ironing

- Remove your foot from the foot switch to continue ironing.

Ironing with a coin-operated payment system

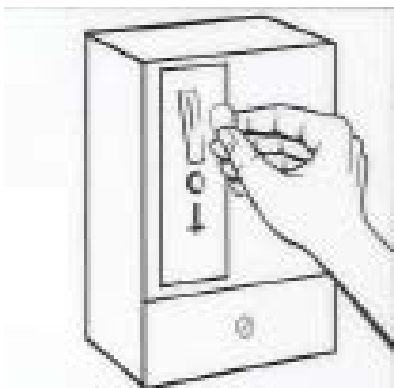

- Switch the flatwork ironer on by pressing the "On / Off" button.

The symbol will flash in the display.

- Insert the coin or token.

The symbol will go out in the display.

- Select the temperature range according to the type of laundry.

- Select the roller speed you want.

When the symbol goes out in the display, the flatwork ironer is ready to operate and the ironing time purchased will begin to count down.

- Press the Start button to start the flatwork ironer.

At the end of the ironing time, the heater plate disengages, heating will switch off and the roller comes to a standstill. The symbol flashes in the display. More ironing time can be purchased at any time.