 
 


Touch display and sensor controls

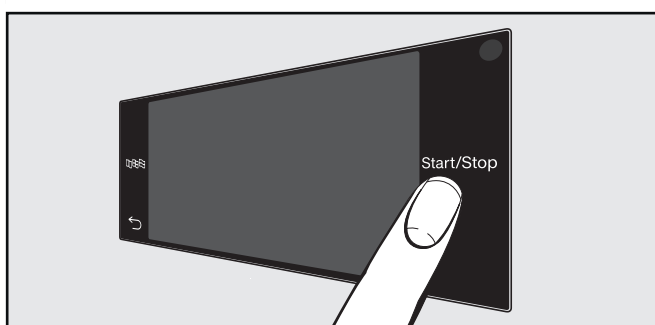

- To switch on: press the ① button. The , and *Start/Stop* sensor controls and the sensor controls in the display react to finger tip contact.

 
Help with operation

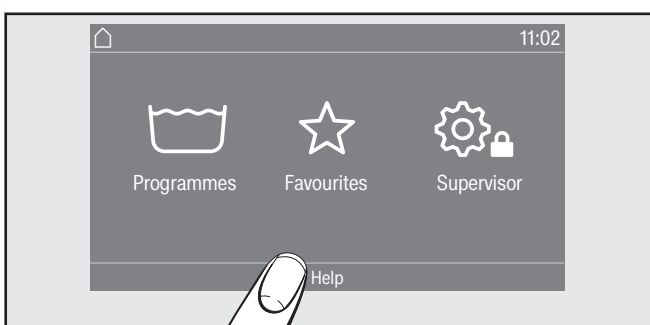

Tips for operation can be shown in the display.


- Touch the *Help* sensor control.
- Swipe right to left across the display.

1 Selecting the language

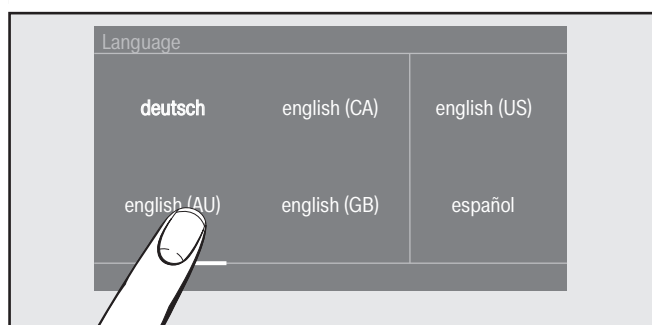


- Touch the sensor control.
- Swipe right or left across the display until the language you want appears.
- Select the language.

 2 Loading the laundry

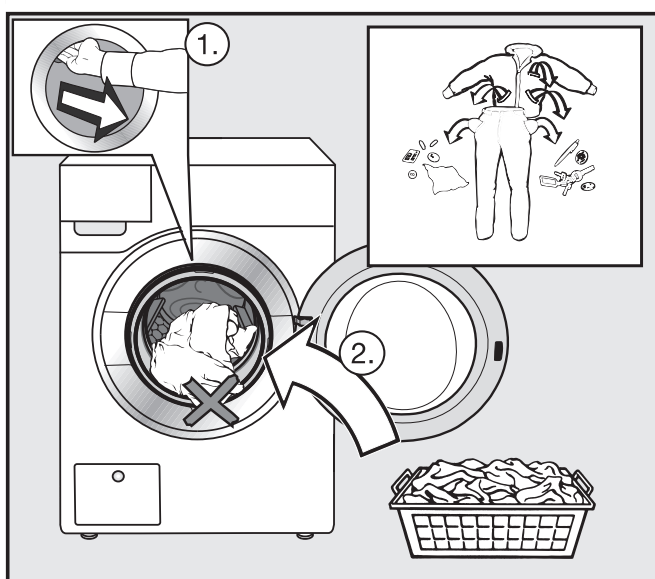


- Open the door.
- Load the laundry, sorted by colour and care label.
- Shut the door with a gentle swing. Do not trap items in the door.

 3 Adding detergent

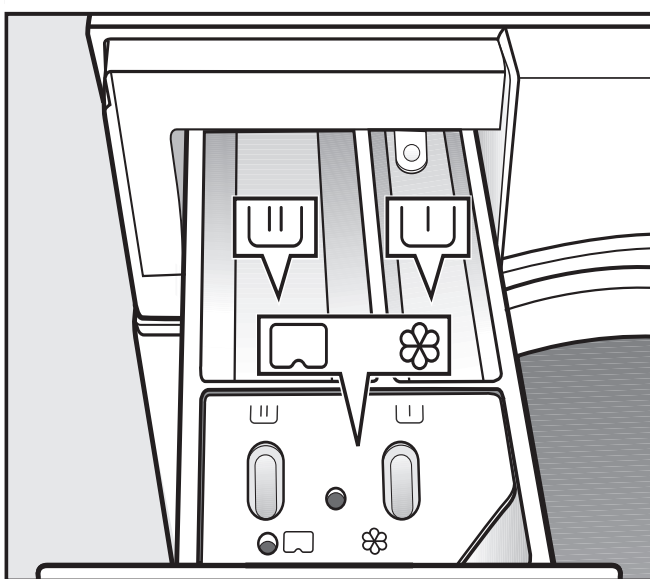


- Detergent for the pre-wash.
- Detergent for the main wash.
- Fabric softener, liquid starch or capsules.

 4 Selecting and starting the programme

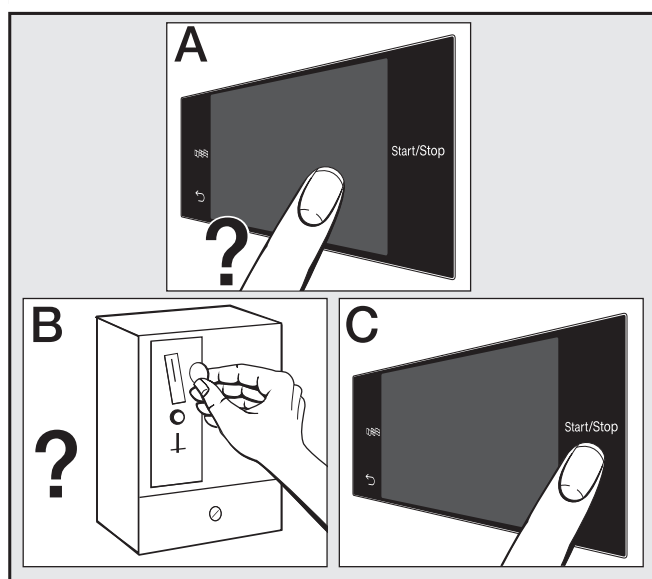

- Select a programme. Change the temperature, spin speed and Extras (A).
- Insert payment (B).
- Touch the *Start/Stop* sensor control (C).

 
5 Unloading the laundry

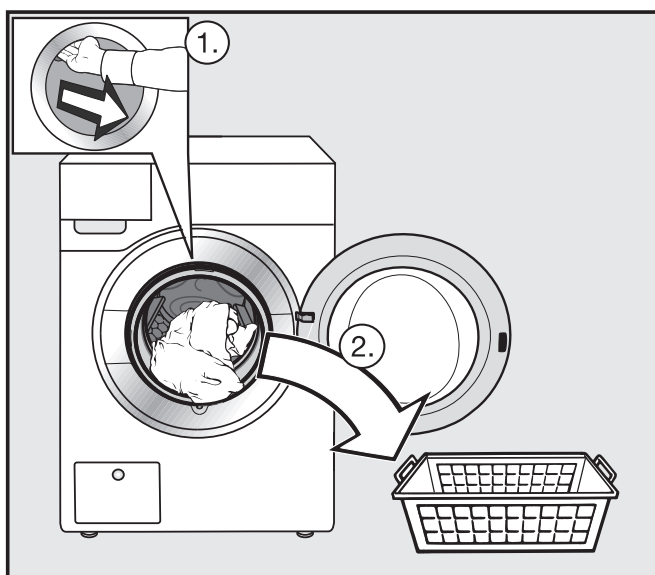

Anti-crease/Finish appears on the display.


- Release the door with the *Start/Stop* sensor control.
- Open the door and remove the laundry.

 Opening the door in the event of a power failure ... Drain pump

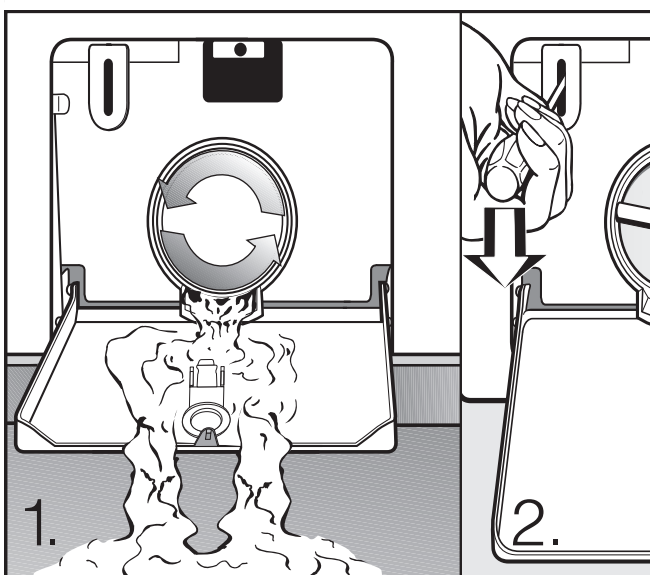

- Open the access panel to the drain system.
- Allow the water to drain off. Be careful: the water may be hot.
- Release the door with a screwdriver.

 Opening the door in the event of a power failure ... Drain valve

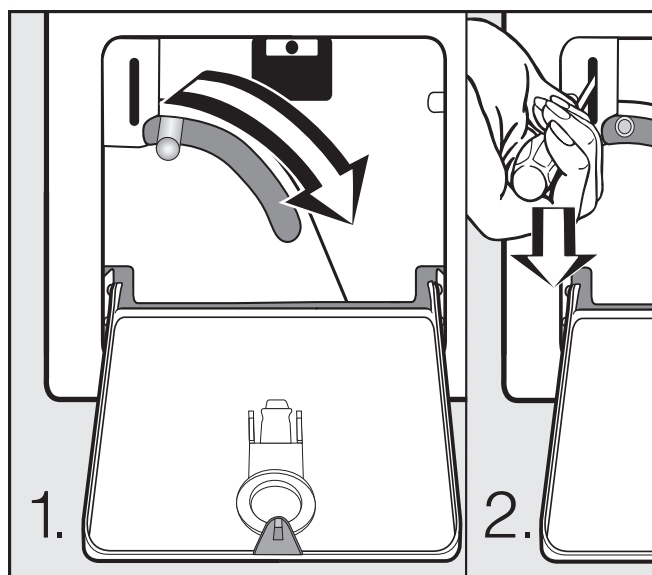

- Open the access panel to the drain system.
- Allow the water to drain off.
- Release the door with a screwdriver.



Programme		Load
Cottons/Whites 75 °C to 90 °C		max. 8.0 kg
Items	Textiles made from cotton and linen, e.g. bed linen, baby clothes, underwear.	
Cottons/Coloured items cold to 60 °C		max. 8.0 kg
Items	Cotton or mixed fibre textiles, e.g. t-shirts, trousers.	
Tip	– For dark-coloured fabric, use a colour detergent or liquid detergent.	
Minimum iron cold to 60 °C		max. 4.0 kg
Items	Synthetic and mixed fibre textiles as well as easy care cotton.	
Tip	– Reduce the spin speed for fabric that creases easily.	
Delicates cold to 60 °C		max. 3.0 kg
Items	Delicate garments made from synthetic fibre, mixed fibre and viscose.	
Tip	– Wash textiles containing wool or silk in the Woollens or Silks programme. – Deselect the spin speed for fabric that creases easily.	
Express cold to 60 °C		max. 4.0 kg
Items	Cotton garments that have hardly been worn or are only very lightly soiled.	
Towelling 40 °C to 60 °C		max. 8.0 kg
Items	Towels and bathrobes made from terrycloth.	
Tip	– For dark-coloured fabric, use a colour detergent or liquid detergent.	
Shirts cold to 60 °C		max. 3.0 kg
Items	Shirts and blouses.	
Tip	– Wash silk shirts and blouses in the Silks programme. – Reduce the maximum load size by half if you have selected the <i>Pre-ironing</i> Extra.	
Dark garments 30 °C to 60 °C		max. 4.0 kg
Items	Black and dark items made from cotton or mixed fibres.	
Tip	– Wash inside out. – Use colour detergents.	
Denim 30 °C to 60 °C		max. 4.0 kg
Items	Denim shirts, blouses, trousers and jackets.	
Tip	– Wash denim inside out.	
Woollens cold to 40 °C		max. 3.0 kg
Items	Machine-washable woollens and woollen blends.	
Tip	– Use detergent formulated for woollens.	
Cottons PRO 60 °C		max. 8.0 kg
Items	Mixed fibre textiles (50 % cotton and 50 % polyester).	
Tip	– Extra energy-efficient wash programme for commercial cotton or cotton/synthetic blend textiles with normal levels of soiling, e.g. workwear.	

The list represents only a selection of possible programmes. Further programmes are described in the operating instructions.

