 





⚠ It is a mandatory requirement to read the operating instructions and pay particular attention to the warnings and safety instructions.

Touch display and sensor controls

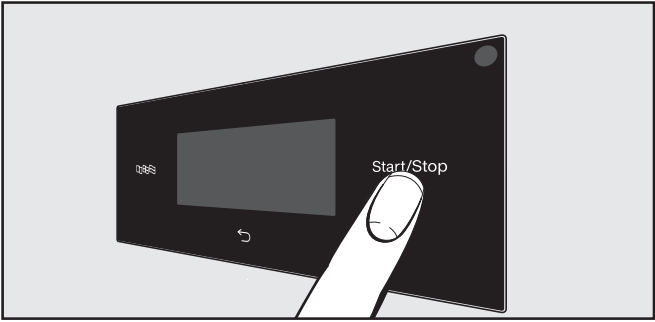


 ■ To switch on: press the ① button. The , and *Start/Stop* sensor controls and the sensor controls in the display react to finger tip contact.

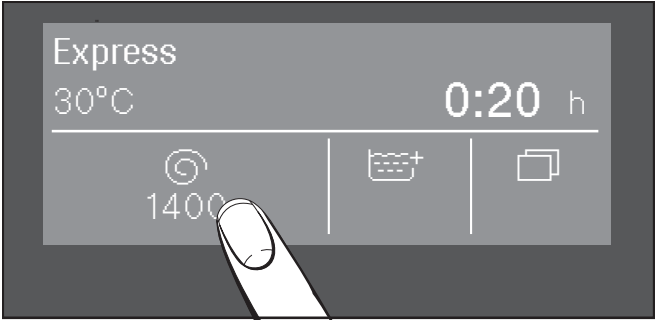


You can change or activate the spin speed or Extras by touching the or sensor controls.

1 Selecting the language

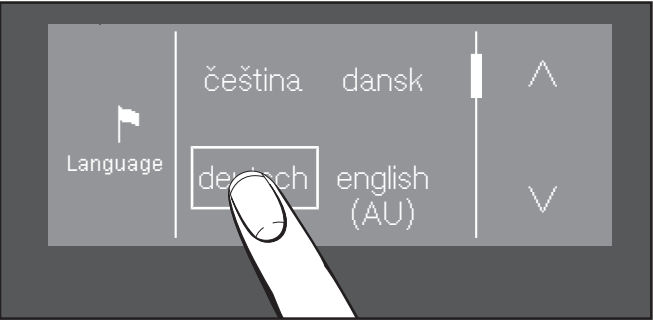


■ Touch the sensor control.
■ Touch the or sensor control until the language you want appears in the display.
■ Select the language.

2 Loading the laundry

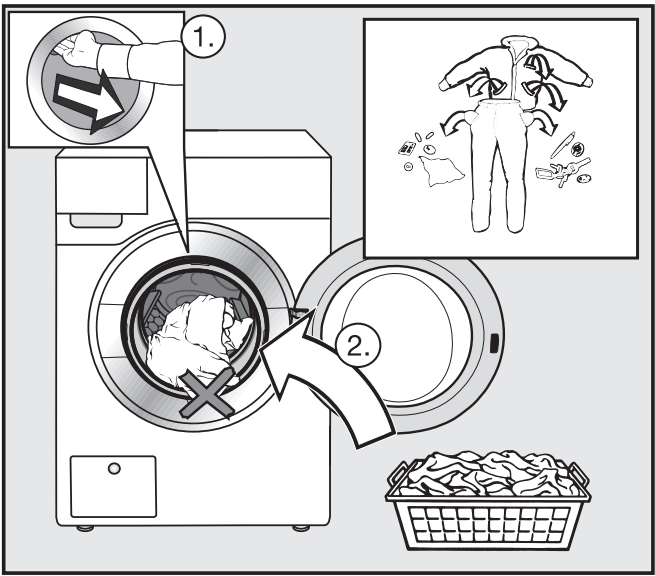


■ Open the door.
■ Load the laundry, sorted by colour and care label.
■ Shut the door with a gentle swing. Do not trap items in the door.

3 Adding detergent

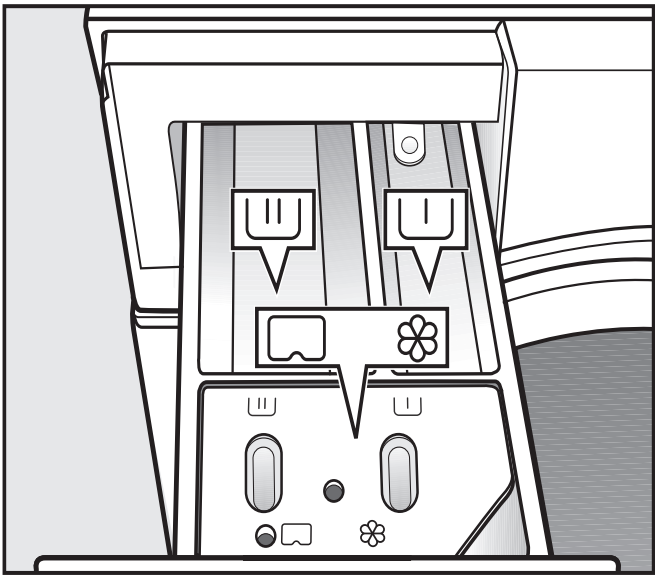


Detergent for the pre-wash.
 Detergent for the main wash.
 Fabric softener, liquid starch or capsules.

4 Selecting and starting the programme

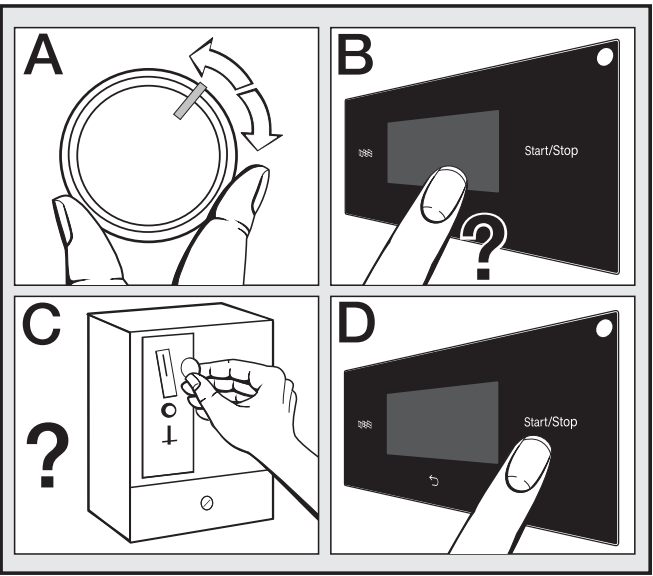


■ Select a programme (A).
■ Select the temperature, spin speed and Extras (B).
■ Insert payment (C).
■ Touch the *Start/Stop* sensor control (D).

5 Unloading the laundry

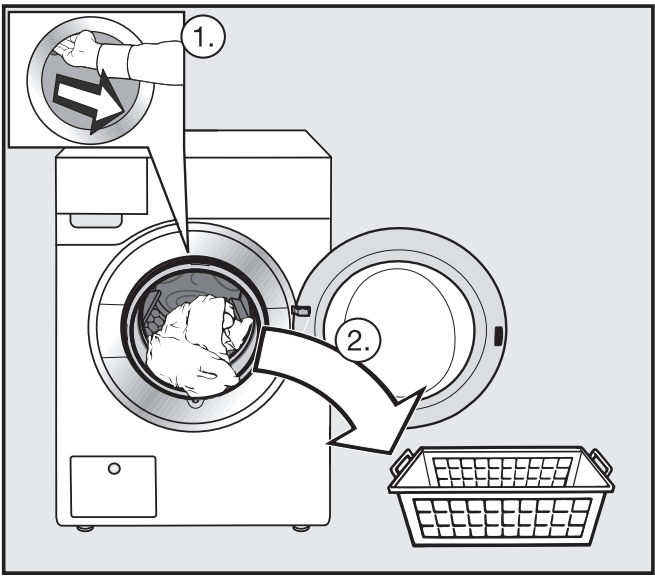


Anti-crease/Finish appears on the display.
■ Release the door with the *Start/Stop* sensor control.
■ Open the door and remove the laundry.

Opening the door in the event of a power failure
... Drain pump

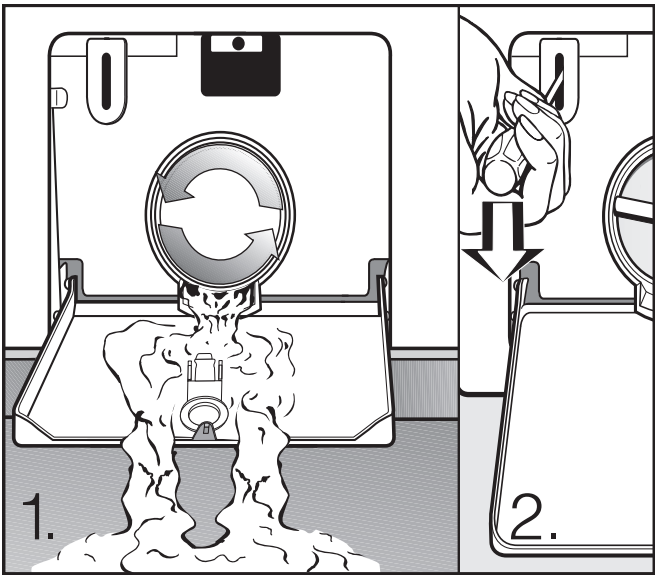

■ Open the access panel to the drain system.
■ Allow the water to drain off. Be careful: the water may be hot.
■ Release the door with a screwdriver.

Opening the door in the event of a power failure
... Drain valve

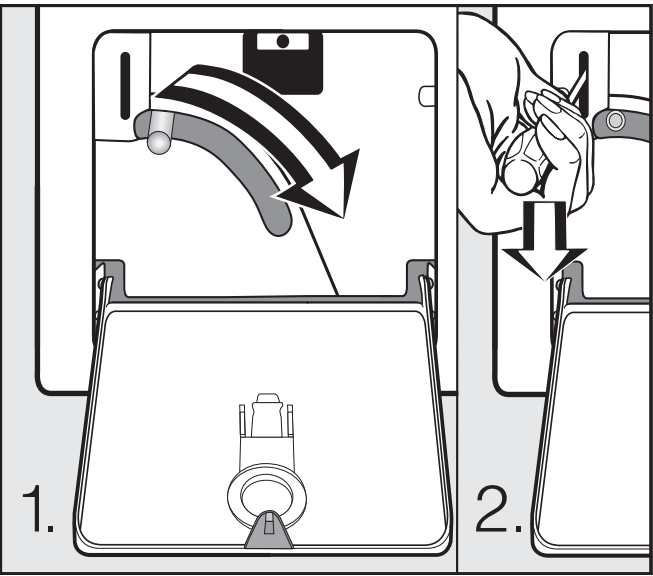

■ Open the access panel to the drain system.
■ Allow the water to drain off.
■ Release the door with a screwdriver.



Programmes		Load
 Cottons 20 °C to 90 °C		max. 7.0 kg
Items	Cotton, linen and mixed fibre textiles.	
Tip	– Select the temperature according to the instructions on the care label, the detergent, the type of soiling and the hygiene requirements. – For dark-coloured fabric, use a colour detergent or liquid detergent.	
Cottons PRO 60 °C		max. 7.0 kg
Items	Mixed fibre textiles (50 % cotton and 50 % polyester).	
Tip	– Extra energy-efficient wash programme for commercial cotton or cotton/synthetic blend textiles with normal levels of soiling, e.g. workwear.	
 Express 30 °C		max. 3.5 kg
Items	Cotton garments that have hardly been worn or are only very lightly soiled.	
 Minimum iron 30 °C to 40 °C		max. 3.5 kg
Items	Synthetic and mixed fibre textiles as well as easy care cotton.	
Tip	– Reduce the spin speed for fabric that creases easily.	
 Delicates 30 °C		max. 2.5 kg
Items	Delicate garments made from synthetic fibre, mixed fibre and viscose.	
Tip	– Wash textiles containing wool or silk in the Woollens or Silks programme. – Deselect the spin speed for fabric that creases easily. – Use detergent for delicates.	
 Woollens 20 °C		max. 2.5 kg
Items	Machine-washable woollens and woollen blends.	
Tip	– Use detergent formulated for woollens.	
Disinfection programmes		
Disinfection/RKI		max. 7.0 kg
Items	Thermal disinfection: cotton, linen and mixed fibre textiles. Chemo-thermal disinfection: cotton, linen and mixed fibre textiles, sorted by colour.	
Tip	– Single-bath disinfection process. No water intake via the fabric conditioner compartment.	
Disinfection (laundry)		max. 4.0 kg
Items	71 °C/65 °C: cotton or mixed fibre textiles, sorted by colour. MRSA: minimum-iron textiles, sorted by colour, provided they are suitable for disinfection.	
Tip	– Add MRSA disinfectants to the fabric softener compartment.	
Further disinfection programmes		max. 7.0 kg
Items	Thermal disinfection: cotton, linen and mixed fibre textiles. Chemo-thermal disinfection: cotton, linen and mixed fibre textiles, sorted by colour.	
Tip	– No water intake via the fabric conditioner compartment.	

The list represents only a selection of possible programmes. Further programmes are described in the operating instructions.

