

## Quick Start Guide



## for dishwashers

**These short instructions are not a substitute for the operating instructions supplied with the machine.**

 
It is essential to familiarise yourself with the dishwasher before using it for the first time. Take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.

en-AU, NZ

# Guide to the appliance


---

## Control panel

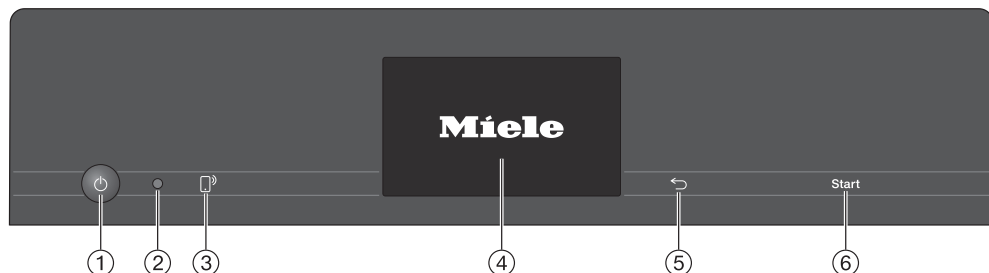


- ① **On/Off sensor**  
For switching the dishwasher on and off.
- ② **Optical interface**  
For service technicians.
- ③ **Remote control sensor**  
For activating/deactivating the Remote control option.
- ④ **Touch display**  
For further information, see “Guide to the appliance - Display functions” in the operating instructions.
- ⑤ **Back sensor**  
For navigating back to the previous menu or deleting values which have been set previously.
- ⑥ **Start sensor**  
For starting the selected programme.

# Brief instructions

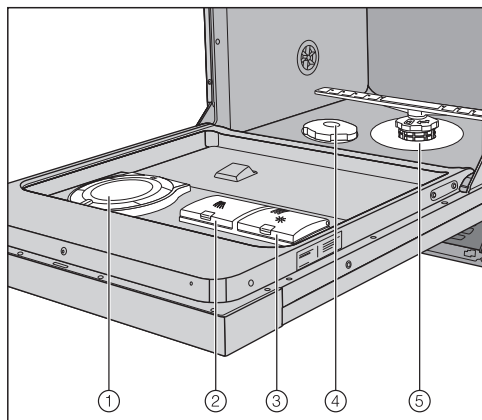 

 - ① AutoDos (automatic dispensing)
- ② Detergent compartment
- ③ Rinse aid reservoir
- ④ Salt reservoir
- ⑤ Filter combination

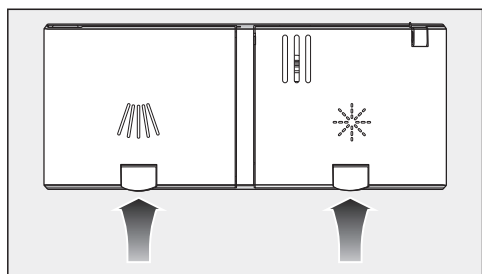

## ❶ Filling the salt reservoir ⚙️ (depending on water hardness)

- Remove the lower basket from the wash cabinet and unscrew the salt reservoir cap.

⚠️ Damage to the water softener from detergents.

Dishwasher detergent will damage the water softener.

Do not fill the salt reservoir with powder or liquid detergent.

⚠️ Risk of corrosion due to saline solution.

Water or saline solution will run out of the reservoir when the cap is opened. Saline solution that runs out can cause corrosion in the wash cabinet and to the dishwasher load. The salt reservoir should therefore only be opened to replenish the salt.

- Fill the salt reservoir with approx. 2 l of water (first use only).
- Place the funnel provided over the salt reservoir and carefully fill with dishwasher salt until the reservoir is full.
- Clean any excess salt from around the reservoir opening and then screw the salt reservoir cap on again firmly.
- Immediately after filling the salt container, run the *QuickPowerWash* ④ 65 °C programme with the ⏱️ *Express* option and without any load in the dishwasher to dissolve and remove any traces of salt from the cabinet.

## 2 Adding rinse aid ☼

- Lift the yellow button on the lid of the rinse aid container ☼.
- Only fill with rinse aid until the fill level indicator turns dark when the door is open horizontally.
- Close the lid making sure it clicks into place.
- Wipe up any spilled rinse aid. This prevents over-foaming occurring during the next programme.

## 3 Loading the dishwasher

### 4 Detergent dispensing

 
There are two ways of dispensing the detergent.

During automatic dispensing, the AutoDos function will automatically dispense the required amount of detergent for each programme once a PowerDisk has been inserted.


If you have deactivated automatic dispensing, you can dispense detergent manually.

### Automatic detergent dispensing


Before you can use AutoDos, you must insert a PowerDisk containing powder detergent into the PowerDisk compartment.

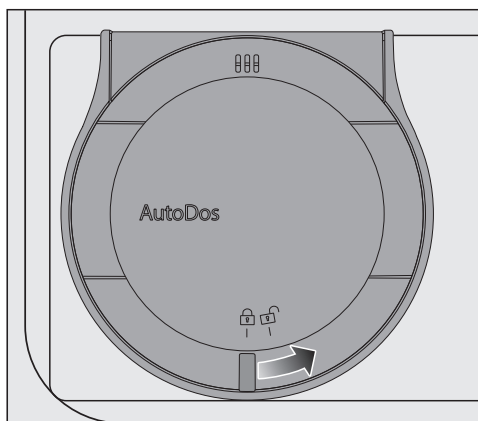

 
- Slide the yellow catch of the AutoDos lid to ☐ and open it.
- Before you use AutoDos for the first time, remove the transport lock from the PowerDisk compartment.

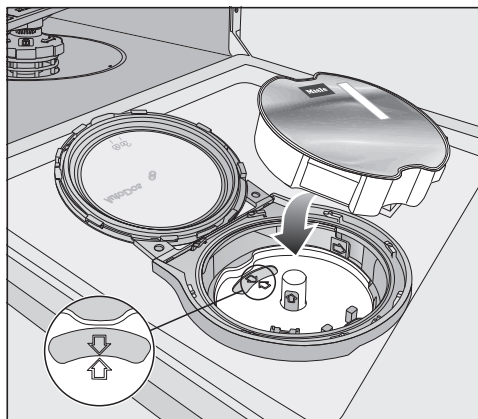

- If the arrows in the PowerDisk holder and in the viewing window are not pointing towards each other, remove the PowerDisk holder.

- 
- Put the holder back into place so that the arrows point towards each other and the holder lies flat. When doing this, only hold the PowerDisk holder by the yellow tab in the middle. Do not hold it by the side tab.
  - Insert the new PowerDisk and press it evenly downwards until it sits flush.
  - Close the AutoDos lid and slide the yellow catch until it is aligned with the  symbol.


The  *AutoDos* function will be activated automatically. This setting applies to all programmes and can be changed in a programme's "Extras" menu.

If the PowerDisk is not in the correct starting position, it will be rotated automatically. Wait until this process is finished before you start a programme.

This setting applies to all programmes and can be changed in a programme's "Extras" menu.

### **Manual detergent dispensing**


Dispense detergent manually if you have deactivated automatic dispensing.

- Follow the detergent dosage recommended by the manufacturer on the packaging.
- Unless directed otherwise, use one detergent tab or add 20 to 30 ml of detergent to the detergent compartment, depending on the degree of soiling of the crockery.
- Lift the yellow catch on the lid of the detergent compartment .

The lid will open.

- Fill the detergent compartment with detergent and push the lid shut until you hear it click into place.

## 5 Switching on

- Close the door.
- Turn on the tap if it is turned off.
- Touch the  sensor.

The "Programmes" menu will appear in the display.

## 6 Selecting a programme

- Select the required programme in the display.


The display will change to the "Extras" menu.

## 7 Selecting Extras (if required)

All available Extras are shown in the display.

- Select the Extras you want.
- If you want to cancel the selection of an Extra, touch the sensor for the Extra again.

## 8 Activating the timer (if required)


- Touch the  Timer option in the display.
- Select the function you want.
- Set the time you want for the timer and confirm with *OK*.

## 9 Starting a programme


- Touch the *Start* sensor.

## 10 Programme end - Switching off

The signal tones may sound at the end of the programme.

The programme has finished when the message  Finished appears in the display and the door has opened slightly (if applicable).

The drying fan may continue to run for a few minutes at the end of the programme.

- The dishwasher can be switched off at any time using the  sensor.
- Confirm the query Switch appliance off? with *Yes*.



**Risk of damage due to steam.**

Steam from the dishwasher could damage the edges of delicate worktops when you open the door at the end of the programme if the fan is no longer running.

If you have deactivated the automatic door opening function but would still like to open the door at the end of the programme, make sure that you open the door fully.


## 11 Unloading the dishwasher

Dishes tend to break and chip more easily when they are hot. Allow the dishes to cool until they are comfortable enough to handle before unloading them.

 
# Cleaning and care

## Cleaning the spray arms


Particles of food can get stuck in the spray arm jets and bearings. The spray arms should therefore be inspected regularly (approx. every 2–4 months).


 Do not run a wash programme without the lower spray arm or without the filters fitted.

- Switch the dishwasher off.
- Take out the cutlery tray (if your dishwasher is fitted with one).
- Push the upper spray arm upwards to engage the inner ratchet. Then unscrew the spray arm by rotating the screw thread anti-clockwise (overhead perspective).

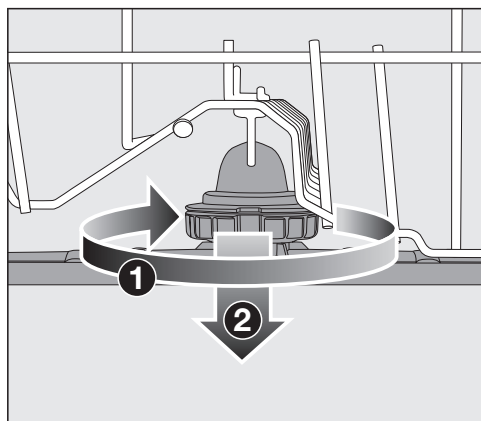

 
- Rotate the screw thread of the middle spray arm clockwise (overhead perspective) ① (see diagram) and remove the spray arm ②.
- Remove the lower basket.

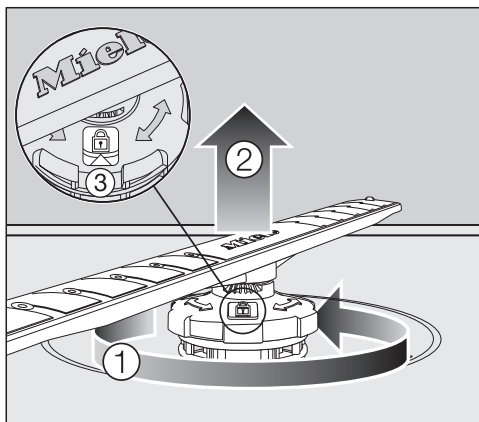

- Rotate the screw thread of the lower spray arm anti-clockwise ① and pull the spray arm upwards to remove ②.
- Use a pointed object to push food particles stuck in the jets into the spray arm.
- Rinse the spray arm thoroughly under running water.
- Refit the upper and middle spray arms.
- Refit the lower spray arm and ensure that the filter combination lies flat in the base of the wash cabinet.
- Rotate the screw thread of the lower spray arm clockwise until the arrow in the viewing window points ③ to the lock symbol .
- Make sure the spray arms can rotate freely.

## Checking the filters in the wash cabinet

 
 Do not run a wash programme without the filters or without the lower spray arm fitted.

The message Remove filters and clean them if necessary will appear in the display after every 50 programme sequences.


- Monitor the condition of the filter combination regularly and clean it if necessary.
- Confirm the message with OK.

## Cleaning the filters

- Switch the dishwasher off.
- Remove the lower spray arm.
- Before removing the filter combination, remove any coarse soiling to prevent it from entering the circulation system.

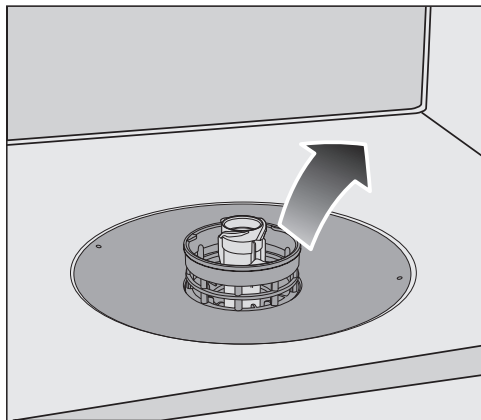


- Remove the filter combination.

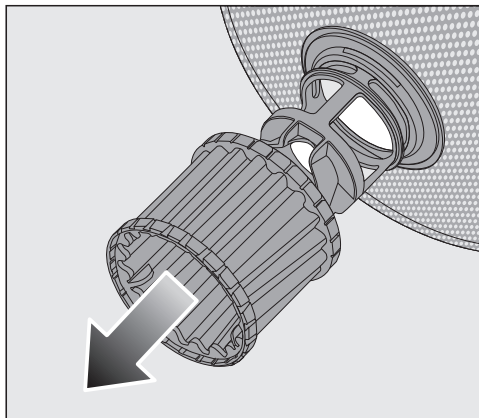 







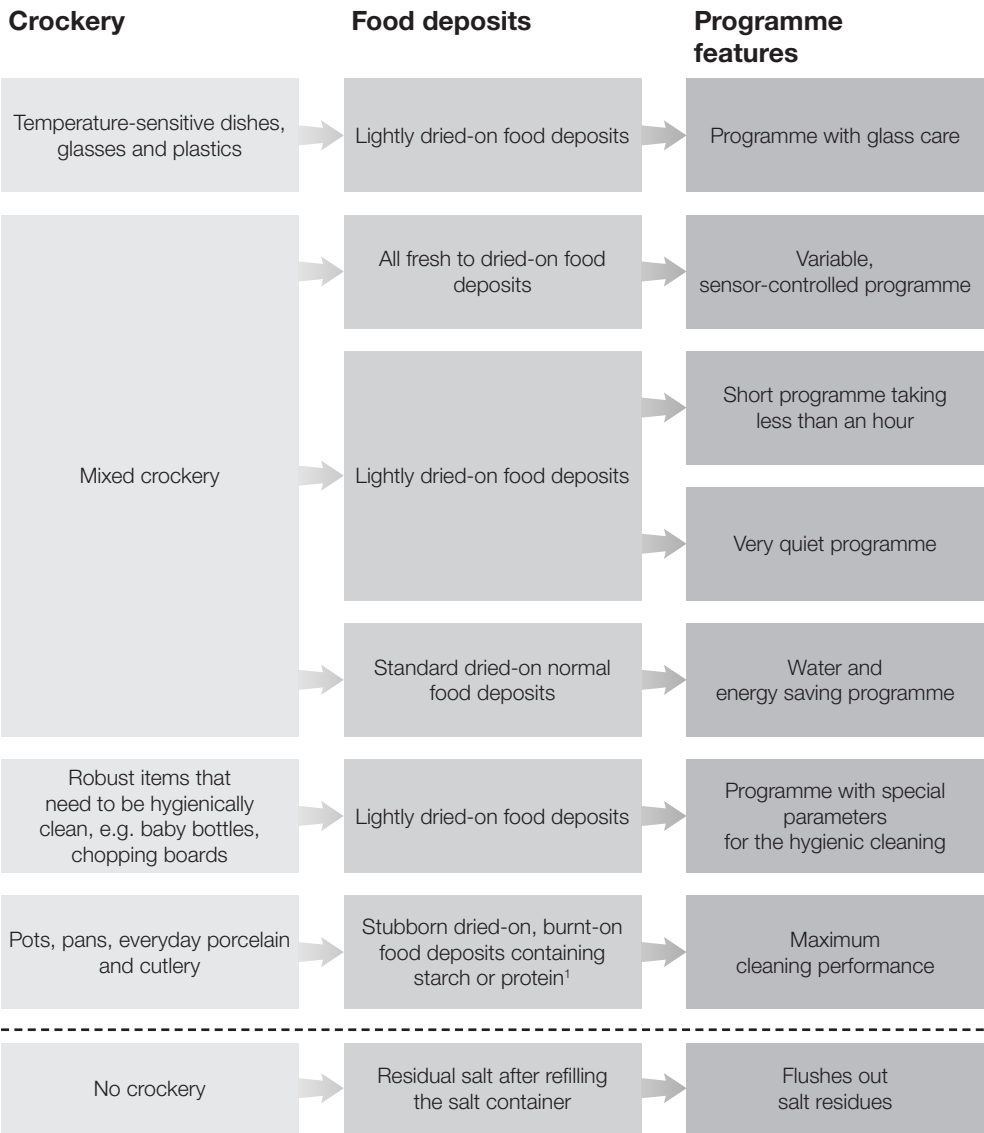 










- In order to clean the inside of the filter, pull the microfilter downwards and away from the filter combination.
- Rinse all the parts under running water.
- Push the microfilter back onto the filter combination.
- Refit the filter combination so that it lies flat in the base of the wash cabinet.
- Refit the lower spray arm to the filter combination using the screw thread.
- Rotate the screw thread clockwise until the arrow in the viewing window points to the lock symbol .

 

# Programme chart



<sup>1</sup> Food such as potatoes, pasta, rice or stews can leave starchy deposits. Deposits containing protein can be left by food such as fried meat or fish.

Programme <sup>2</sup>	 <sup>3</sup>	Consumption estimate <sup>4</sup>						
 <b>Gentle 45 °C</b> 	20 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>Auto 45–65 °C</b> 	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>QuickPowerWash 65 °C</b> 	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>ExtraQuiet 55 °C</b> 	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>ECO</b>	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>Hygiene 70 °C</b> 	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>Intensive 75 °C</b> 	30 ml	<table><tr><td>Energy consumption</td><td><div><div></div></div></td></tr><tr><td>Water consumption</td><td><div><div></div></div></td></tr><tr><td>Programme duration</td><td><div><div></div></div></td></tr></table>	Energy consumption	<div><div></div></div>	Water consumption	<div><div></div></div>	Programme duration	<div><div></div></div>
Energy consumption	<div><div></div></div>							
Water consumption	<div><div></div></div>							
Programme duration	<div><div></div></div>							
 <b>QuickPowerWash 65 °C</b>  + <b>Express</b> 	-	<div>Programme duration 13 minutes, no heating up, solely for flushing out salt.</div>						

<sup>2</sup> The programmes can be combined with the “Express” or “IntenseZone” programme options (see “Programme options”).  
You can also select the “Extra clean”, “Extra dry” and “Second interim rinse” function (if available) (see “Settings”).

<sup>3</sup> Recommended amount of detergent (see “Detergent”).

<sup>4</sup> The estimated values may change due to the selected settings or programme options, or the conditions in which the appliance is being used.