

ESW 7110

14 cm high gourmet warming drawer without handle

for preheating crockery, keeping food warm and low temperature cooking.



- The ultimate in enjoyment – low temperature cooking
- Always at the right temperature – 4 functions
- Convenient and easy – Touch control
- Opening the drawer couldn't be easier – Push2open
- Better safe than sorry – timer function with automatic switch-off

EAN: 4002516169918 / Material number: 11093340 /
Old Material Number: 30711040GB

Operating modes	
Cup warming	•
Plate warming	•
Operating modes	
Keeping food warm	•
Low temperature cooking	•
User convenience	
Push2open mechanism	•
Fully telescopic runners for easy loading and unloading of the warming drawer	•
Control panel with sensor controls	•
Timer function	•
Sabbath programme	•
Safety	
Cool front	•
Technical data	
Total rated load in kW	0,70
Voltage in V	230
Frequency in Hz	50-60
Fuse rating in A	10
Number of phases	1
Mains cable with plug	•
Length of supply lead in m	2,0
Construction type and design	
Gourmet warming drawer	•
ContourLine	•
Handleless	•
Appliance colour	Stainless steel/Clean Steel
Convenience features	
Pre-heating crockery	•
Keeping food warm	•
Perfect cooking results at low temperature	•
User convenience	
Miele@home	•
Control panel with symbols	•
Stop programming	•
Efficiency and sustainability	
Power rating in off mode in W	0,3
Power rating in standby mode in W	0,8
Power rating in networked standby in W	2,0
Time until automatic switch to off mode in min	20
Time until automatic switch to standby in min	20
Time until automatic switch to networked standby in min	20
Cleaning and care	
Stainless steel/CleanSteel finish	•
Flush control panel	•
Safety	
Anti-slip mat	•

ESW 7110

14 cm high gourmet warming drawer without handle

for preheating crockery, keeping food warm and low temperature cooking.



EAN: 4002516169918 / Material number: 11093340 /
Old Material Number: 30711040GB

Safety switch-off

•

Accessory drawer

Capacity 6 place settings

Technical data

Temperatures min. in °C

40

Temperatures max. in °C

85

Appliance height in mm

141

Appliance depth in mm

570

Useable interior height in mm

80

Appliance width in mm

595

Accessories included


Anti-slip mat

1


ESW 7110

14 cm high gourmet warming drawer without handle

 for preheating crockery, keeping food warm and low temperature cooking.

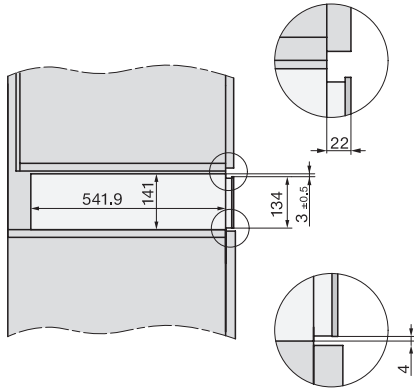

 side view ESW7x10 EVS7010, installation drawing, GB, AU

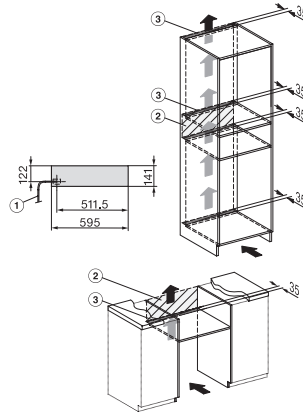

ESW7010, ESW7110 - installation drawing – Installation – GB, AU

- 1) Front view, 2) Mains connection cable, L=2,000 mm,
- 3) ventilation cut-out min. 180 cm², 4) no connection in this area