Miele

Operating and Installation Instructions
Fridge-freezer Combination



To prevent accidents and damage to the range, you **must** read all instructions supplied before installing or using the appliance.

en-US

M.-Nr. 13 076 920

Contents

IMPORTANT SAFETY INSTRUCTIONS **5**

Sustainability and environmental protection **15**
How to save energy 16

Installation **18**
Installation site 18
Ventilation requirements 19
Installing the refrigeration appliance 20
Aligning the refrigeration appliance 21
Aligning the fridge zone door 21
Aligning the drawer 22
Water connection 23
- Safety notes for the plumbed water connection 23
- Connecting the refrigeration appliance to the water inlet 24
- Inserting the water container 25
- Inserting the water filter (active charcoal filter) 26
- Checking the water system for leaks 26

Electrical connection 27
Appliance dimensions 29
- Completely surrounded by kitchen cabinetry 31
- Installation next to a wall 32

Overview **33**
Display 35
Settings mode 36
- Party mode 36
- Vacation mode 36
- Ice maker 36
- QuickIce 36
- Lock function 37
- Switching off the refrigeration appliance 37
- Sabbath mode 37
- Information on Sabbath mode 37
- Time before door alarm is triggered 37
- Temperature level in the PerfectFresh zones 37
- Humidifier 37
- Networking 37
- Keypad tone 37
- Alarms and audible signals 37
- Display brightness 38
- Temperature unit °C/°F 38
- Demo mode 38
- Factory default settings 38
- Information about the refrigeration appliance 38
- Charcoal filter (AirClean System) indicator 38
- Water filter indicator 38
- Cleaning position of the ice cube tray 39
- Cleaning mode 39

Safety 39
- Temperature alarm in the freezer zone 39
- Door alarm 40

Appliance functions 41
- SuperCool&AirClean 41
- SuperFreeze 41

Contents

Adjusting the interior fittings 42
Maximum load weights..... 42
Removing and moving the door shelves/door rack for bottles 42
Adjusting the holders in the door shelves/door rack for bottles 42
Removing or moving the shelves..... 43
Using the bottle rack in the dividing plate..... 43
Removing the drawers from the fridge zone 44
Inserting the drawers in the fridge zone 44
Removing ice cube containers... 45
Removing containers from the top freezer drawer and putting them back 45
Removing containers from the bottom freezer drawer and putting them back..... 45
Accessories supplied 46
Optional accessories 47

Commissioning..... **48**
Before using for the first time..... 48
Connecting the refrigeration appliance 48
Inserting charcoal filters (Air-Clean System) into the fridge zone 48
Switching on the refrigeration appliance..... 50
Networking..... 50
Performing Scan & Connect..... 51
Putting the water dispenser into operation..... 52
Putting the ice maker into operation..... 53
Putting the humidifier into operation..... 54
Switching off the refrigeration appliance..... 56
Switching off the fridge zone or freezer zone separately..... 56
Switching the fridge zone or freezer zone back on again separately..... 56
To note when switching off for longer periods of time..... 56

Operation..... **58**
Temperature display 58
Temperature range in the fridge zone 58
Temperature range in the freezer zone 58
Setting the temperature in the refrigerator/freezer sections 59
Switching on SuperCool&Air-Clean 59
Switching off SuperCool&Air-Clean 59
Switching on SuperFreeze 60
Switching off SuperFreeze 60
Storing food in the fridge zone..... 60
Different storage zones 60
Should food be stored loose or in packaging? 61
Storing food in the PerfectFresh Active zone..... 61
Humidity-controlled compartment 62
Dry compartment..... 63
Freezing and storing fresh food..... 65
Water dispenser..... 66
Ice maker..... 67

Customizing settings **68**

Cleaning and care **79**
Defrosting..... 79
Cleaning agents..... 79
Preparing the refrigeration appliance for cleaning 79
Cleaning the Interior 80

Contents

Cleaning accessories by hand or in the dishwasher 80
Removing, dismantling, and cleaning accessories 81
Dismantling the door rack for bottles 81
Removing the dividing plate for cleaning and reinserting it 81
Removing the compartment lid for cleaning and reinserting it..... 82
Cleaning the ice maker 82
Changing the water filter (active charcoal filter) 82
Reactivating the charcoal filter (AirClean system) in the oven..... 83
Cleaning the machine front and the side panels..... 84
Cleaning the door seal 84
Cleaning the ventilation openings... 84
After cleaning 85

Frequently asked questions..... **86**
Interior lighting..... 97
Causes of noises 98

Customer Service **100**
Contact in the event of a fault 100
Appliance warranty and product registration 100

Information..... **101**
Declaration of conformity..... 101
Copyrights and licenses 101

This refrigeration appliance complies with current safety requirements. Inappropriate use can, however, lead to personal injury and material damage.
Please read the operating and installation instructions carefully before using the refrigeration appliance for the first time. They contain important information on installation, safety, use, and maintenance. This will prevent both personal injury and damage to the refrigeration appliance.
Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the refrigeration appliance as well as in the “IMPORTANT SAFETY INSTRUCTIONS”.
Miele cannot be held liable for injury or damage caused by non-compliance with these instructions.
Keep these operating and installation instructions in a safe place and pass them on to any future owner.

Appropriate use

▶ This refrigeration appliance is intended for use in the home and in similar environments, for example:
– in shops, offices, and similar work settings
– on agricultural estates
– by the guests in hotels, motels, bed and breakfasts, and other typical home settings
This refrigeration appliance is not intended for outdoor use.

▶ This refrigeration appliance is intended for domestic use only for cooling and storing food and drink, as well as for storing deep frozen food, freezing fresh food, making ice, and dispensing drinking water. Any other usage is at the owner’s risk and could be dangerous.

▶ This refrigeration appliance is not suitable for storing and keeping cool medicines, blood plasma, laboratory preparations, or other similar substances or products that are subject to the Medical Device Directive. Incorrect use of the refrigeration appliance for such purposes may cause deterioration of the items stored. The refrigeration appliance is also not suitable for use in areas where there is a risk of explosion.
Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

IMPORTANT SAFETY INSTRUCTIONS

▶ This refrigeration appliance may only be used by people (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they are supervised while using it.

Safety with children

▶ Children must be kept away from the refrigeration appliance unless they are constantly supervised.

▶ Children may only use the appliance even without supervision if they have been shown how to use it in a safe manner, and if they are able to recognize and understand the potential risks of improper use.

▶ To reduce the risk of injury, do not allow children to play in, on or near the appliance.

▶ Risk of suffocation. While playing, children may become entangled in packaging material (such as plastic wrapping) or pull the packaging material over their head, presenting the risk of suffocation. Keep packaging material away from children.

Technical safety

▶ The coolant circuit has been checked for leaks. The refrigeration appliance complies with statutory and regulatory requirements.



If the cooling circuit is damaged, refrigerant and oil can escape and ignite.

▶ Warning: fire hazard/flammable materials. This symbol is on the compressor and indicates flammable materials. Do not remove this sticker.

The refrigerant inside the appliance (details on the data plate) is environmentally friendly but flammable.
The use of this refrigerant does, however, lead to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the refrigerant flowing around the cooling circuit. Unfortunately, this cannot be avoided, but it does not affect the performance of the refrigeration appliance.
When transporting and installing the refrigeration appliance, ensure that no parts of the cooling circuit are damaged. Splashes of refrigerant can damage the eyes and leaking refrigerant can ignite.
In the event of damage:

- Avoid open flames or ignition sources which create a spark.
- Disconnect the refrigeration appliance from the power supply.
- Ventilate the room where the refrigeration appliance is located for several minutes.
- Contact Miele Service.

▶ The more refrigerant there is in a refrigeration appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of a combustible gas/air mixture building up. For every 8 g of refrigerant, at least 35.3 ft^3 (1 m^3) of room space is required. The amount of refrigerant in the refrigeration appliance is stated on the data plate inside the appliance.

▶ If the ventilation openings are covered or blocked, a combustible gas/air mixture can form if the cooling circuit is damaged. It is essential to observe the required ventilation openings. The ventilation openings must never be obstructed.

▶ To avoid the risk of damage to the appliance, make sure that the connection data (fuse rating, frequency and voltage) on the data plate corresponds to the household supply.
Check that this is the case before connecting the appliance. Consult a qualified electrician if in any doubt.

▶ The electrical safety of the appliance can only be guaranteed when correctly grounded. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.

▶ Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronized with the grid power supply (e.g., island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with national and local codes.
The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronized with the grid power supply, or these measures must be replaced by equivalent measures in the installation.

▶ The outlet must not be concealed behind the appliance and must be easily accessible so that the appliance can be quickly disconnected from the electrical supply in case of an emergency. If free access is not possible, an all-pole isolating switch must be integrated in the permanent electrical installation according to the installation regulations.

▶ If the power cord is damaged, disconnect the refrigeration appliance from the power supply immediately. Contact Miele Service.

▶ If the power cord is damaged, it must only be replaced with a specific power cord of the same type (available from from Miele Service). For safety reasons, this replacement may only be carried out by a qualified specialist or Miele Service.

▶ Do not connect the appliance to the electrical supply with a power bar or extension cord. These are a fire hazard and do not guarantee the required safety of the appliance.

▶ If moisture gets into electrical components or into the power cord, it could cause a short circuit. Therefore, do not operate the machine in areas where there may be moisture or splashing water (e.g., garages, laundry rooms).

▶ This appliance must not be installed and operated in mobile installations (e.g. on a ship).

▶ Do not use a damaged appliance. It could be dangerous. Check the appliance for visible signs of damage.

▶ This refrigeration appliance is not intended for use as a built-in appliance.

▶ The machine must be disconnected from the power supply during installation, maintenance, and repair work, and installation work on the fresh water connection. The machine is only completely isolated from the power supply when:

- the fuses have been switched off, or
- the circuit breaker has been removed completely, or
- the power cord has been unplugged. Pull on the plug and not on the power cord when disconnecting it from the power supply.

▶ Unauthorized installation, maintenance, and repairs, or a faulty plumbed water connection can result in considerable danger for the user, for which the manufacturer cannot accept liability. Installation, maintenance, and repairs, installation work on the plumbed water connection, and all repairs on the water dispenser must only be carried out by a qualified specialist or Miele Service.

▶ The ice maker must be connected only to a cold-water line.

▶ Miele cannot be held liable for damage caused by a faulty connection to the fresh water supply.

▶ The manufacturer's warranty may be invalidated if the refrigeration appliance is not repaired by a qualified specialist or by Miele Service.

▶ If defective safety-relevant components are replaced, full compliance with safety requirements may only be guaranteed if genuine Miele replacement parts are used.

▶ This refrigeration appliance is supplied with a special bulb to cope with particular conditions (e.g., temperature, moisture, chemical resistance, abrasion resistance, and vibration). This bulb must only be used for the purpose for which it is intended. The bulb is not suitable for room lighting. Replacement bulbs may only be installed by a qualified specialist or by Miele Service. This refrigeration appliance contains several light sources with at least energy efficiency class G.

Proper installation

▶ The refrigeration appliance is heavy and can tip forward when the appliance doors and drawers are open:

- At least 2 people are required to transport or move the refrigeration appliance.
- At least 2 people are required to install the refrigeration appliance.
- Never leave the refrigeration appliance unattended while it is being installed.
- Align the refrigeration appliance using the adjustable feet so it stands firm and level. Ensure that the additional adjustable foot on the hinge plate at the bottom is resting on the floor.

▶ Always wear protective gloves when transporting and installing the refrigeration appliance.

Correct use

▶ This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed. The climate range is stated on the data plate in the interior cabinet of the refrigeration appliance. A lower ambient temperature will cause the compressor to switch off for longer periods, meaning that the refrigeration appliance is unable to maintain the required temperature.

▶ The ventilation openings must never be obstructed. This can impair the proper ventilation of the appliance, increase the energy consumption and cause damage to the components.

▶ Risk of damage due to greasy or oily foods. If the refrigeration appliance or the appliance door is used for storing food which contains fat or oil, make sure that it does not come into contact with plastic components. Any spillages of oil or fat could cause stress cracks to the plastic and cause it to break or split.

▶ Risk of fire and explosion due to flammable mixes of gases. Do not store any explosive materials or products containing flammable propellants (e.g., spray cans) in the refrigeration appliance. Electrical components can cause flammable mixes of gases to ignite. The spray cans in question can be identified by the contents printed on the can or by a flame symbol. Electrical components can cause escaping gases to ignite.

▶ Risk of explosion. Do not operate any electrical equipment (e.g., an electric ice-cream maker) inside the refrigeration appliance. This can cause sparking and explosion.

▶ Risk of injury and damage. Do not store cans or bottles containing carbonated drinks or liquids which could freeze in the freezer section. Otherwise they could burst.

▶ Risk of injury and damage. When chilling drinks in the freezer section, make sure that bottles are not left in for more than one hour. Otherwise they could burst.

▶ Risk of injury. Never handle frozen food or the metal parts of the appliance with wet hands. Your hands may freeze to the frozen food or to the metal.

▶ Risk of injury. Do not take ice cubes out with your bare hands and never place ice cubes or ice pops in your mouth straight from the freezer section. The very low temperature of the frozen food can cause frost burn to the lips and tongue.

▶ Do not refreeze partially or fully defrosted food. Consume defrosted food as soon as possible, as it will lose its nutritional value and spoil if left for too long. Defrosted food may only be refrozen after it has been cooked.

▶ When eating stored food, there is a danger of food poisoning. Storage times will depend on several factors, including the freshness and quality of the food, as well as the temperature at which it is stored. Observe the manufacturer's "use-by" dates and storage instructions.

▶ To ensure that fresh food placed in the freezer freezes through to the core as quickly as possible, the maximum freezing capacity must not be exceeded. The maximum freezing capacity for freezing within a 24-hour period is given on the data plate: "Freezing capacity ... lbs/ 24 hrs".

Accessories and parts

▶ Miele assumes no liability for the use of accessories that are not genuine Miele accessories. Miele may not be liable for warranty, guarantee, and/or product liability claims if damage or defects are due to the use or installation of accessories that do not originate from Miele or have not been approved by Miele.

Cleaning and maintenance

▶ Throw away the first 3 batches of ice to rinse the ice maker and the water pipes. Do this:

- before using for the first time
- if the ice maker has not been used for a long time (more than 5 days)
- regularly when in continuous use (at least once a month) to remove ice residues from the system (to avoid a blockage of the water supply)
- before switching off the ice maker for a long period of time

▶ Do not use any oil or grease on the door seals.
They can cause the seals to deteriorate over time.

IMPORTANT SAFETY INSTRUCTIONS

▶ WARNING! DANGER of injury and damage! Do not use any mechanical tools or other types of aid which are not recommended by the manufacturer to accelerate the defrosting process.

▶ Never use a steam cleaner to clean the appliance.
The steam can reach the electrical components and cause a short circuit.

▶ Sharp edged or pointed objects will damage the evaporator, causing irreversible damage to the appliance. Do not use sharp edged or pointed objects to

- remove frost or ice,
- separate frozen foods or remove ice trays.

▶ Never place electric heaters or candles in the appliance to defrost it. These can damage the plastic parts.

▶ Do not use defrosting sprays or de-icers. Defrosting sprays and de-icers can contain substances which could damage the plastic parts or which might cause a build-up of explosive gases and pose a danger to health.

Transport

▶ To avoid damage to the refrigeration appliance, always transport it upright and in its packaging.

▶ Risk of injury and damage. The refrigeration appliance is very heavy and must be transported by at least 2 people.

Disposal of your old appliance

▶ DANGER! Risk of child entrapment! Children could become trapped in the refrigeration appliance and could suffocate.

- Remove the appliance door(s).
- Remove the drawers.
- Leave the adjustable shelves in the refrigeration appliance so children cannot climb inside.
- If your old refrigeration appliance has a door lock, destroy it. This will prevent the risk of children playing accidentally locking themselves in and endangering their lives.

▶ Risk of electric shock!

- Cut the electrical plug off the power cord.
- Cut the power cord off the old appliance.

Dispose of the electrical plug and power cord separately from the old appliance.

▶ Ensure that the appliance is not stored in the vicinity of gasoline or inflammable gases and liquids during and after disposal.

▶ Risk of fire due to escaping oil or refrigerant.
The refrigerant and oil inside the appliance are flammable. In high enough concentrations, escaping refrigerant or oil can ignite if they come into contact with an external heat source.
During disposal, make sure that the cooling circuit is not damaged. This prevents refrigerant and oil escaping in an uncontrolled manner (see the data plate for details of the refrigerant).

▶ Splashes of coolant can cause damage to the eyes. Be careful not to damage any part of the pipework while awaiting disposal, e.g. by

- puncturing the coolant channels in the evaporator,
- kinking any pipework,
- scratching the surface coating.

Symbol on the compressor (depending on model)

This information is only relevant for recycling. There is no risk during normal operation.



▶ The oil in the compressor can be fatal if swallowed or if it penetrates the airways.

IMPORTANT SAFETY INSTRUCTIONS

Symbol on the rear of the appliance (depending on model)

This label or a similar one is only relevant for recycling. Do not remove the lable.



▶ The note refers to foam panels in the appliance door and/or housing.

Disposal of the packing material

The cardboard box and packing materials protect the appliance during shipping.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children. Danger of suffocation!

Disposing of your old appliance

Electrical and electronic appliances contain many valuable materials. They also contain certain materials, compounds, and components which were essential for their correct functioning and safety. These could be hazardous to your health and to the environment if disposed of with household waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with household waste.



Take care not to damage your refrigerator before or during disposal in an authorized, environmentally-friendly manner.
This is to ensure that refrigerant in the cooling circuit and oil in the compressor is contained, and will not leak into the environment.

Instead, please make use of officially designated collection and disposal locations to dispose of and recycle electrical and electronic appliances in your local community, with your dealer, or with Miele, free of charge. By law, you are solely responsible for deleting any personal data from the appliance prior to disposal. You are legally obliged to remove any old batteries which are not securely enclosed by the appliance and to remove any lamps without destroying them, where this is possible. These must be taken to a suitable collection point where they can be handed in free of charge. Please ensure that your old appliance poses no risk to children while being stored for disposal.

Sustainability and environmental protection

How to save energy ...

Installation site

The refrigeration appliance has to cool more often at higher ambient temperatures and consumes more energy in the process. Therefore, you should:

- Install the refrigeration appliance in a well-ventilated room.
- Do not install the refrigeration appliance near to a heat source (heater element, range).
- Protect the refrigeration appliance from direct sunlight.
- Ensure an ideal ambient temperature of 68°F (20°C).
- Clean the ventilation gaps on a regular basis to remove any dust.

Temperature setting

The colder the temperature, the higher the energy consumption. The following settings are recommended:

- 39°F (4°C) in the fridge zone
- PerfectFresh Active zone just above 32°F (0°C).
- 0°F (-18°C) in the freezer zone

Use

Energy consumption is increased by heat input and impeded air circulation. Therefore:

- Only open the appliance door/appliance doors when necessary and for as short a time as possible. Arrange the food in such a way that makes it easy to find in the appliance.
- Always close the appliance door/appliance doors properly after opening it.
- Allow hot food and drinks to cool down before placing them in the refrigeration appliance.
- Store food well packaged or covered.
- Do not overfill the compartments to allow air to circulate.
- Place frozen food in the refrigerator section to defrost.
- Keep drawers and shelves arranged as they were when the appliance was delivered.

- Maintain a distance of 1 3/16" (30 mm) between the back of the appliance and the wall.

Installation site

⚠ Risk of fire and damage from appliances that give off heat.

Appliances that give off heat can catch fire and set fire to the refrigeration appliance.

The power cord must not come into contact with heat sources.

Do not place appliances which give off heat, such as mini-ovens, double burners, or toasters on the refrigeration appliance.

⚠ Fire hazard and risk of damage from open flames.

Open flames can set fire to the refrigeration appliance.

Keep open flames (such as a candle) away from the refrigeration appliance.

⚠ Risk of fire and damage due to improper installation.

If the electrical plug and power cords touch the back of the refrigeration appliance, they may be damaged by vibrations and cause a short circuit.

Electrical plugs or power cords must not touch the refrigeration appliance.

Power cords must not be trapped or damaged.

Do not connect any other appliances to sockets located directly behind this refrigeration appliance.

Do not place or operate power bars, distributor strips, or other electronic devices (such as halogen transformers) behind the appliance.

This appliance should be installed in a dry, well-ventilated room.

The floor at the installation site must be horizontal and level and must be as high as the surrounding floor.

⚠ Risk of damage due to high humidity.

In environments with high humidity, condensation can build up on external refrigeration appliance panels. This condensation can cause corrosion on external appliance panels.

Install the refrigeration appliance in a dry and/or air-conditioned room with sufficient ventilation.

After installation, please make sure that the appliance door/appliance doors closes/close properly and the refrigeration appliance is installed in accordance with these installation instructions. The ventilation opening specifications must be observed.

When deciding on the installation site, please bear in mind that your refrigeration appliance will use more energy if installed near to a heater, a range, or another appliance that gives off heat. Avoid direct sunlight. Higher ambient temperatures increase energy consumption as the compressor runs for longer.

Climate range

This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed. The climate range applicable to your refrigeration appliance can be found on the data plate inside the appliance.

The compressor runs less frequently at low ambient temperatures. This can cause the internal temperature in the refrigeration appliance to rise with the risk of food deteriorating and going off.

Climate range	Ambient temperature
SN	50 to 90°F (10 to 32°C)
N	61 to 90°F (16 to 32°C)
ST	61 to 100°F (16 to 38°C)
T	61 to 109°F (16 to 43°C)
SN-ST	50 to 100°F (10 to 38°C)
SN-T	50 to 109°F (10 to 43°C)

Ventilation requirements

⚠ Fire hazard and risk of damage due to inadequate ventilation.


If the refrigeration appliance is not ventilated sufficiently, the compressor will run more frequently and for longer periods. This causes increased energy consumption and an increased compressor operating temperature, which can result in damage to the refrigeration appliance.

Please ensure that there is adequate ventilation around the refrigeration appliance.

It is essential to observe the required ventilation openings.

The ventilation openings must never be obstructed.

Clean the ventilation areas regularly to remove dust and dirt.

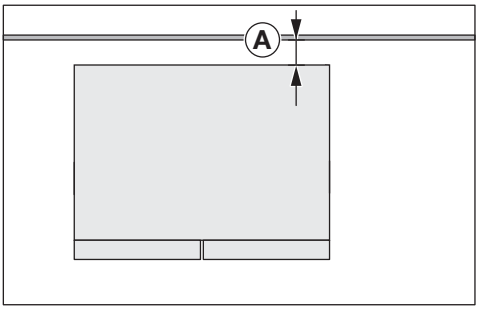

The energy consumption was calculated with a distance Ⓐ = 1" (30 mm) between the back of the appliance and the wall. If the distance to the wall is less than 1" (30 mm), the functionality of the refrigeration appliance is maintained, but energy consumption increases slightly. Condensation can also form at high ambient temperatures.

Air at the back of the refrigeration appliance gets warm. Sufficient space for proper ventilation must therefore be ensured (see “Installation dimensions”).

Installing the refrigeration appliance

⚠ Risk of injury and damage due to the refrigeration appliance tipping over.
There is an increased risk of injury and damage if the refrigeration appliance is installed by a single person.
Two people are required for installing the refrigeration appliance.

⚠ Risk of damage and injury caused by appliance door impact.
The appliance door could hit the wall of the room resulting in damage to the door. If the door is made of glass, the damaged glass can lead to injuries.
Protect the appliance door by installing a felt stopper, for example, to the wall of the room.

⚠ Risk of damaging the floor.
Moving the refrigeration appliance can cause damage to the floor.
Move the refrigeration appliance carefully on floors that are sensitive to scratching.


For easier installation, there are transport handles on the back at the top and transport wheels underneath the refrigeration appliance (depending on the model).

The refrigeration appliance must be empty when it is installed.

- Connect the refrigeration appliance to the water supply as described in “Plumbed water connection”.
- Connect the refrigeration appliance to the power supply as described in “Electrical connection”.
- Move the refrigeration appliance carefully to its intended installation site.
- Position the refrigeration appliance with its back facing the wall, taking the necessary distance into account.

Aligning the refrigeration appliance

⚠ Risk of damage and injury due to the refrigeration appliance tipping over.
If the additional adjustable feet ❷ are not resting firmly on the floor, the refrigeration appliance may tip over.
Make sure the refrigeration appliance has additional support in the front area as described below.

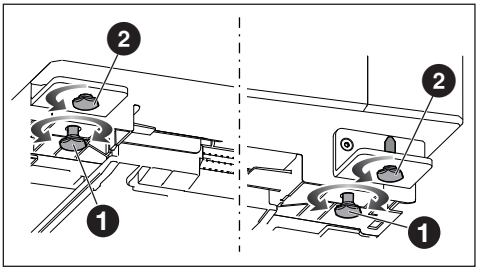


■ Align the refrigeration appliance using a level and the wrench supplied and make sure the refrigeration appliance has additional support in the front area.

- Adjust the adjustable feet ❶ so the refrigeration appliance stands firm and level.
- Unscrew the additional adjustable feet ❷ until they are touching the floor. Then unscrew the adjustable feet by a further quarter turn.

Aligning the fridge zone door

The appliance doors/drawers are set correctly at the factory.
If the door gap or the distance between the fridge section and freezer section appears uneven, you can readjust the alignment yourself.

Align the fridge zone door with the top hinge bracket as described below:

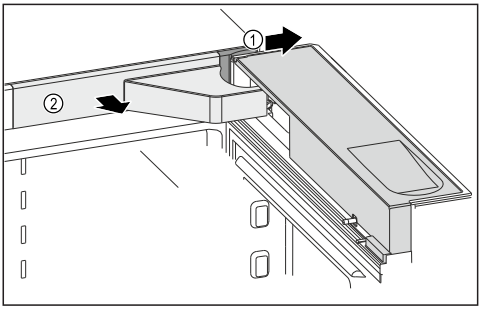


■ Open the appliance door.

■ Remove the cover ①.

The cover ② is connected to the refrigeration appliance via a cord.

■ Carefully pull the cover ② forward and place it on top of the appliance.

⚠ Risk of injury due to appliance door falling out.
As soon as you completely remove the screws on the door hinge, the appliance door may fall out.
Loosen the screws but do not remove them completely. Hold the appliance door firmly.

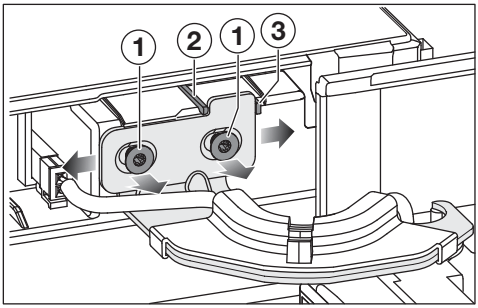

- Loosen the screws ①.


Depending on which direction the appliance door will be moved, the relevant securing element must be removed first.

- Remove securing element ② if you want to move the appliance door to the left.
- Remove securing element ③ if you want to move the appliance door to the right.
- Move the appliance door until the desired position is reached.
- Now tighten the screws ①.
- Secure the covers.

Aligning the drawer

The appliance doors/drawers are set correctly at the factory.
If the door gap or the distance between the fridge section and freezer section appears uneven, you can readjust the alignment yourself.


Align the drawer on both fixing brackets as described below.

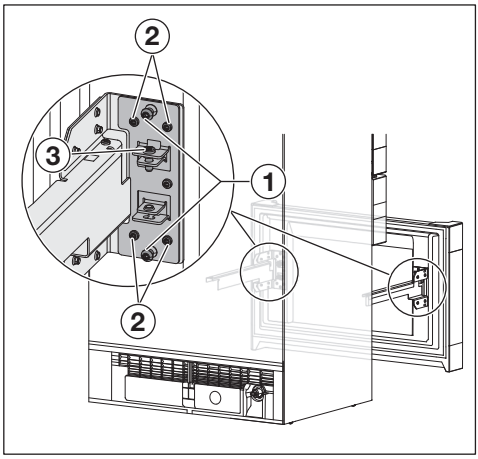

- Pull the drawer out as far as it will go.
- Remove the container from the drawer.

Aligning the drawer horizontally:
Carry out the steps one after the other on both fixing brackets.

- Remove the screws ① (up to 4 screws per drawer, depending on the model). The screws are no longer needed.
- Undo the screws ②.
- Depending on the desired position of the drawer, move the drawer to the left or right.

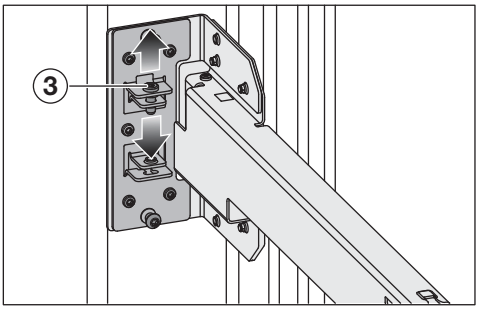

Aligning the drawer vertically:

Carry out the steps on the right **or** left fixing bracket.

- Depending on the desired position of the drawer, loosen screw ③ or tighten screw ③.
- Move the appliance door until the desired position is reached.
- Once the drawer is in the desired position, tighten the screws ②.

Water connection

Safety notes for the plumbed water connection

⚠ Risk of injury and material damage if plumbed water connection is not connected properly.

Failing to connect the plumbed water connection properly can result in personal injury and/or material damage.

The appliance may only be connected to the plumbed water connection by qualified service provider.

⚠ Disconnect the refrigeration appliance from the power supply before connecting it to the water supply.

Close the shut-off valve before connecting the refrigeration appliance to the water supply.

⚠ WARNING! Risk to health and risk of damage due to contaminated water!

The quality of the incoming water must conform to the requirements for drinking water in the country where the refrigeration appliance is being used.

Connect the refrigeration appliance to the drinking-water supply.

The appliance meets the requirements of
NSF/ANSI/CAN 611-2022: Drinking Water System Components - Health Effects and
NSF/ANSI/CAN 372-2020: Drinking Water System Components - Lead Content.

Connection to the water supply must comply with the applicable regulations in the country where the appliance is being installed. All units and systems used to supply water to the refrigeration appliance must also comply with the applicable regulations in the respective country.

For correct functioning (dispensing rate, size of ice cubes, noise level), the water connection pressure needs to be between 21.7 psi and 90 psi (1.5 bar and 6.2 bar).
If the water connection pressure exceeds 90 psi (6.2 bar), a pressure reducing valve must be installed.

The water supply line and the inlet solenoid valve on the refrigeration appliance are suitable for a water connection pressure of up to 145 psi (10 bar).

Connect the hose directly to the plumbed water supply. Avoid connection to a water supply in which the water might stagnate.
Stagnant water in the water supply can affect the taste of water and ice cubes. Use fresh water to ensure that the quality of the ice cubes remains high.

Connecting the refrigeration appliance to the water inlet

Only use the stainless steel hose supplied. The stainless steel hose must not be shortened, extended, or replaced by a different hose.

The stainless steel hose must only be replaced by an original Miele part. The food-grade, stainless steel hose is available to order from the Miele online store, from Miele Service, or from your local Miele dealer.

A faucet must be provided between the stainless steel hose and the plumbed water connection to ensure that the water supply can be cut off if necessary.


Make sure that the shut-off valve is still accessible after the appliance has been installed.

Ensure that the connections are tight and leak-proof.

⚠ Risk of damage to the stainless steel hose.
The water supply from the faucet to the ice cube maker has been interrupted.
Do not bend or damage the stainless steel hose.

A faucet with a 3/4" BSPT thread must be incorporated when connecting to the water inlet.


The solenoid valve ② is located at the back of the refrigeration appliance at the bottom. The solenoid valve also has a 3/4" BSPT connection thread.

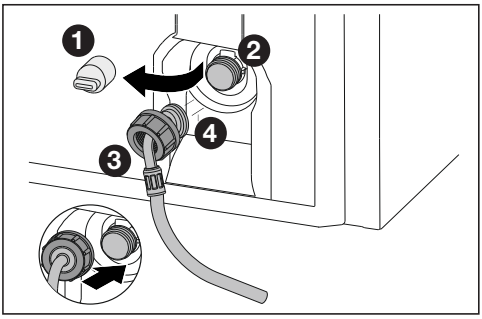

- Pull the cover ❶ off the solenoid valve ❷.
- Push the nut ❸ over the angled end of the hose ❹ as far as it will go, holding the nut ❸ securely.

⚠ Take care not to damage the solenoid valve.
The threads in the solenoid valve can be damaged.
Position the nut carefully and screw it into position, ensuring it is straight.


- Position the nut ❸ carefully on the solenoid valve ❷ and hold it in place.
- Screw the nut ❸ onto the thread by hand, ensuring it is straight, until the nut ❸ is secure and tight.

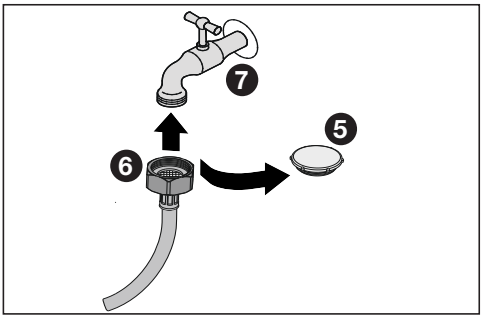

- Remove the cap ❺ from the stainless steel hose.
- Now attach the stainless steel hose to the faucet ❼ using the nut ❻.
- Then tighten the nut ❻ in a clockwise direction.
- Slowly open the faucet ❼ and check the whole water system for leaks.

Inserting the water container


The water filter is inserted behind the left-hand drawer in the fridge zone.

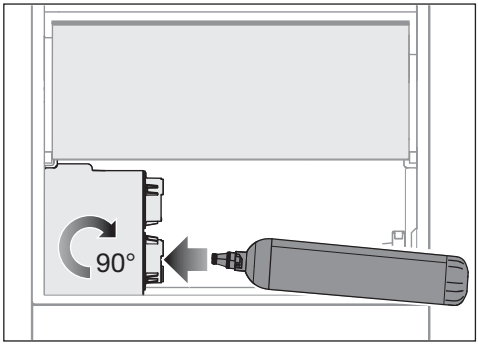

- Remove the left-hand drawer from the fridge zone.
- Remove the protective cap from the water container and dispose of it.
- Insert the water container and turn it to the right as far as it will go (approx. 90°).
- Replace the drawer.

Inserting the water filter (active charcoal filter)

The water filter is inserted behind the left-hand drawer in the fridge zone.

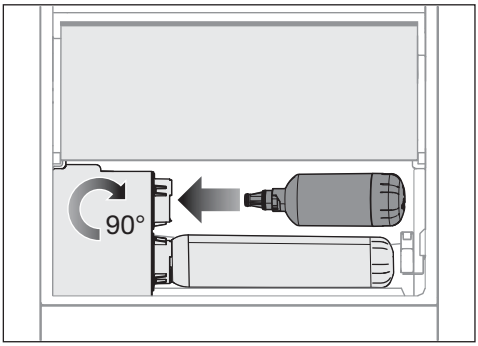

- Remove the left-hand drawer from the fridge zone.
- Remove the red protective cap from the water filter and dispose of it.
- Insert the water filter and turn it to the right as far as it will go (approx. 90°).

⚠ Risk of damage caused by water running out.
If the water filter is not inserted correctly, there is a risk of water flowing into the refrigeration appliance under the PerfectFresh drawer.
When inserting the new water filter, make sure that you screw it in as far as it will go.

- Replace the drawer.

After inserting a water filter, dispose of the first 3 liters of water dispensed from the water dispenser following the change.
The water filter is now ready for use.

Activate the reminder function in Settings mode so that you are reminded to change the filter after 6 months.

- Tap the ⚙ symbol.
- Swipe left or right until the ⬭ symbol is shown in the middle.
- Tap the ⬭ symbol.

When the water filter indicator is activated, the ⬭ symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Checking the water system for leaks

Before setting up and aligning the refrigeration appliance in the desired location, check the entire water system for leaks.

- Slowly open the faucet.
- Check that the water inlet, hoses, and connections are tight and that no water is leaking.

If the water system is tight, you can complete the installation of the refrigeration appliance.

Electrical connection

⚠ Risk of electric shock!

The refrigeration appliance must only be switched on when it has been installed in accordance with the installation instructions.

Ground the refrigeration appliance.

The refrigeration appliance must not be grounded via a gas line.

If in doubt, have a suitably qualified electrician check that the installation and the refrigeration appliance complies with relevant regulations.

Do not install a fuse into neutral current or grounding electrical circuit.

Do not use an extension cord or power bar.

Do not use a frayed or damaged power cord.

⚠ Risk of electric shock!

For protection against electric shock, this refrigeration appliance is equipped with a pole-free electrical plug which is protected against reverse polarity. The electrical socket must be properly grounded.

Do not remove the round grounding connector pin from the electrical plug.

Use only a grounded plug adapter.

Wait for 1 hour after installation before plugging the refrigeration appliance into the power supply. This allows coolant and refrigeration oil to settle in accordance with regulations.

Ensure that the voltage of the power supply corresponds with the connection voltage of the refrigeration appliance. A power supply of 110–120 V, 60 Hz, and 10–16 Amp, which is protected by a power switch or a fuse, is required to operate the refrigeration appliance.

The manufacturer recommends operating the refrigeration appliance on a separate circuit to avoid overloading the electrical circuit.

All relevant legal electrical, fire, and building regulations must be observed when installing the socket and/or the refrigeration appliance.

In certain countries, refrigeration appliances are required to be connected to the electrical supply via a wall-mounted ON/OFF switch.

To avoid the risk of fire, electric shock, or other injuries, the refrigeration appliance must be installed and connected by a suitably qualified electrician in accordance with all relevant local and national regulations and standards, including fire prevention.

The outlet must not be concealed behind the refrigeration appliance and must be easily accessible so that the appliance can be quickly disconnected from the electrical supply in case of an emergency.

If the outlet is no longer accessible after installation, an additional means of disconnection must be provided for all poles. Suitable means of disconnection include switches with an all-pole con-

tact gap of at least (3 mm. These can be circuit breakers, fuses, and relay switches.

The electrical plug and power cord must not come into contact with the back of the refrigeration appliance as vibrations can cause damage to these components. This could result in a short circuit.


Do not plug in other appliances behind the refrigeration appliance.

Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronized with the grid power supply (e.g., island networks, backup systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard. The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronized with the grid power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of VDE-AR-E 2510-2.

The refrigeration appliance must not be used with so-called **energy saving devices** either. These reduce the amount of energy supplied to the appliance, causing it to overheat.

If the power cord needs to be replaced, this must be performed by a qualified electrician.

Connection dimensions

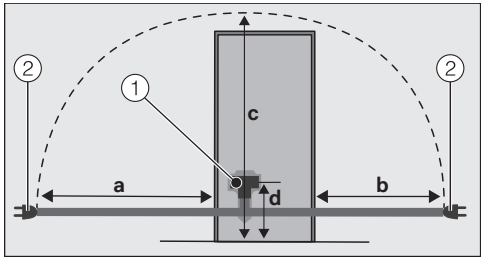

Back of the refrigeration appliance
① Appliance plug connector
② Electrical plug
a = approx. 82 11/16" (2,100 mm)
b = approx. 51 3/16" (1,300 mm)
c = approx. 86 5/8" (2,200 mm)
d = approx. 5 13/16" (148 mm)

Connecting the refrigeration appliance

- Plug the appliance plug connector into the socket.

Make sure that the appliance plug connector has clicked into position correctly.

- Insert the electrical plug of the refrigeration appliance into the socket.


The refrigeration appliance is now connected to the power supply.


Appliance dimensions


Installation dimensions/view from above

The refrigeration appliance will function correctly if the specified ventilation openings are kept clear.

The energy consumption was calculated with a distance of 1 3/16" (30 mm) between the back of the appliance and the wall. If the distance to the wall is less than 1 3/16" (30 mm), the functionality of the refrigeration appliance is maintained, but energy consumption increases slightly.

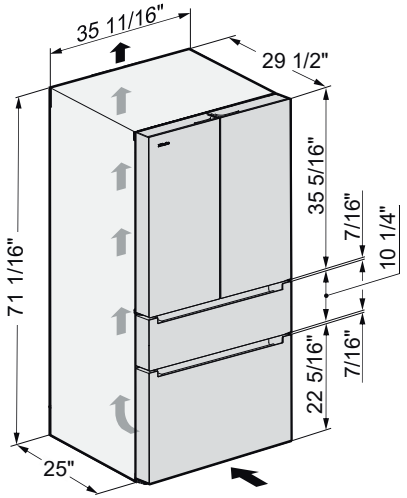


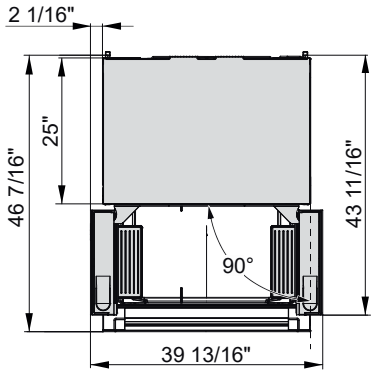

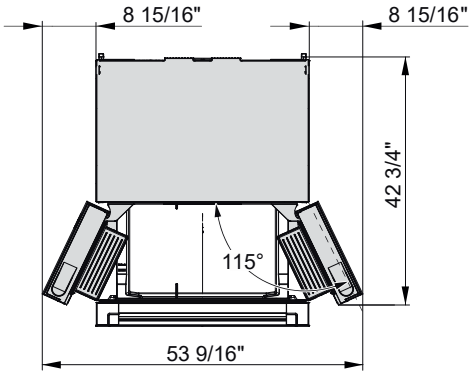

Installation

Connections

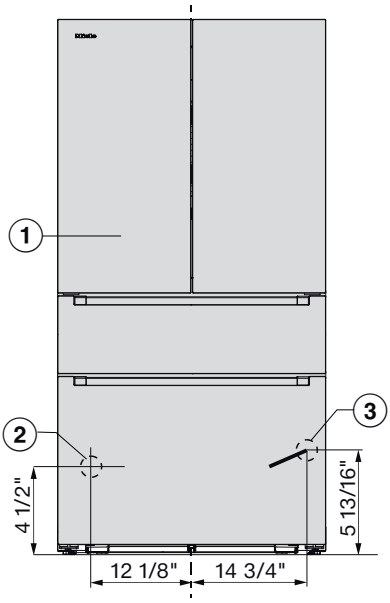


① Front view

② Water connection, length = 6' 6" (2,000 mm)


③ Power cord, length = 86 5/8" (2,200 mm)

Completely surrounded by kitchen cabinetry

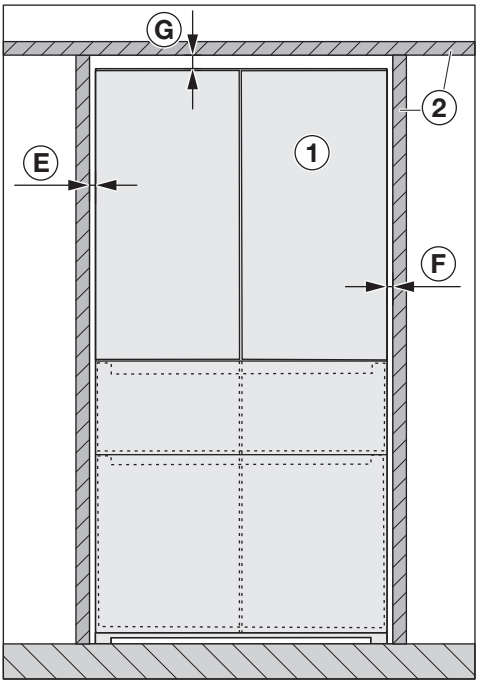

Front view
① Refrigeration appliance
② Kitchen cabinetry
Ⓔ min. 3/16" (4 mm)
Ⓕ min. 3/16" (4 mm)
Ⓖ min. 1" (25 mm)


⚠ Risk of damage to the appliance door(s).
The appliance doors cannot open wide enough.
The appliance ① must project beyond the front of the adjacent piece of kitchen cabinetry ② by at least the dimension Ⓑ **and** the depth Ⓒ of the appliance door.

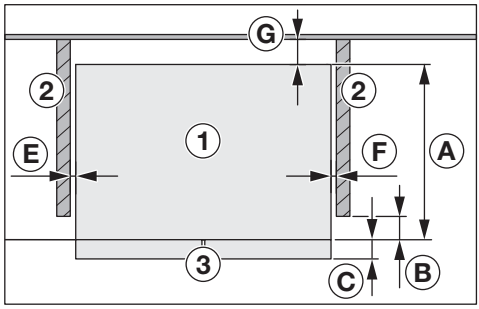


Top view
① Refrigeration appliance
② Kitchen cabinetry
③ Front
Ⓐ 25" (635 mm)
Ⓑ 1/2" (12 mm)
Ⓒ 4 1/2" (115 mm)
Ⓔ min. 3/16" (4 mm)
Ⓕ min. 3/16" (4 mm)
Ⓖ min. 1 3/16" (30 mm)

Installation next to a wall

⚠ Risk of damage to the appliance door(s).
The appliance doors could hit the wall of the room resulting in damage to the doors.
The minimum safety distance Ⓔ between the refrigeration appliance ① and the room wall ④ is required.

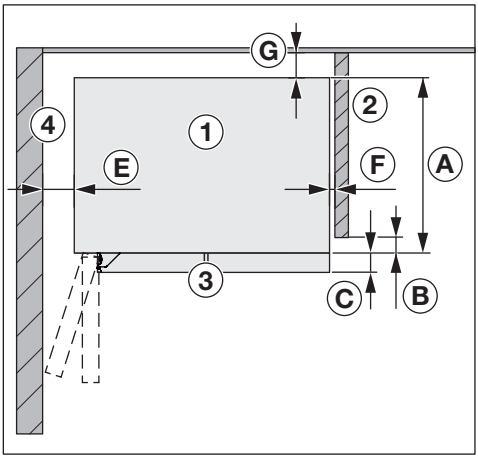

Top view
① Refrigeration appliance
② Kitchen cabinetry
③ Front
④ Room wall
Ⓐ 25" (635 mm)
Ⓑ 1/2" (12 mm)
Ⓒ 4 1/2" (15 mm)
Ⓔ 4" (100 mm) (90° door opening angle)
Ⓔ 8 11/16" (220 mm) (115° door opening angle)
Ⓕ min. 3/16" (4 mm)
Ⓖ min. 1 3/16" (30 mm)

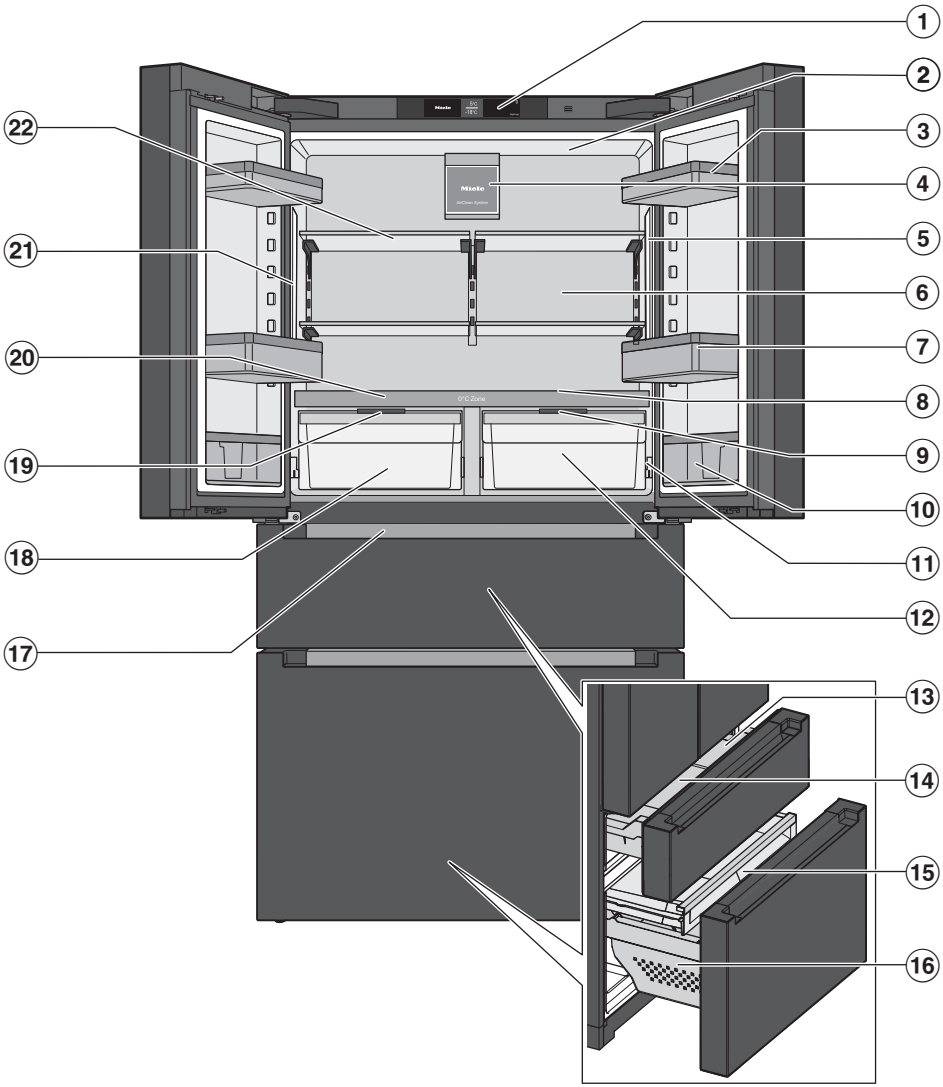
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22

Overview

① Display

② Top interior lighting

③ Door shelves

④ Fan with lighting and with charcoal filter (AirClean System)

⑤ Side interior lighting

⑥ Dry back wall to prevent condensate

⑦ Door rack for bottles with movable bottle holder (divider):
Place large bottles and containers here. The bottle holder provides a more secure hold for smaller bottles when opening and closing the appliance door.

⑧ Internal water container and humidifier:
Fruit and vegetables are humidified every time the door is opened and approx. every 90 minutes.

⑨ Compartment lid for setting the humidity:
The humidity level is increased depending on the position of the compartment lid: ◊ not increased or ◊◊◊ increased.

⑩ Narrow door shelf with movable holder:
For storing small items.

⑪ Condensate channel and condensate drain hole:
Precipitated condensate runs off and evaporates automatically.

⑫ PerfectFresh Active zone (humidity-controlled compartment, can also be used as a dry compartment):
Store fruit and vegetables here at 32 to 37°F (0 to 3°C) and with an ideal humidity setting ◊◊◊ thanks to active humidification (humidifier).

⑬ Top freezer drawer

⑭ Ice-cube container

⑮ Internal flat freezer drawer:
For storing flat food to be frozen such as frozen herbs.

⑯ Freezer drawer: For storing large items of frozen food.

⑰ Ice-cube maker with integrated ice cube tray and light

⑱ PerfectFresh Pro zone (humidity-controlled compartment, can also be used as a dry compartment):
Store fruit and vegetables here at 32 to 37°F (0 to 3°C) and with an ideal humidity setting ◊◊◊.

⑲ Lid for setting the moisture level in the humidity-controlled compartment


⑳ Dividing plate with bottle rack

㉑ Water dispenser ◊:
You can dispense chilled water here.

㉒ Adjustable shelf

Display

The display can be scratched by pointed or sharp objects, e.g., pens.
Only touch the display with your fingertips.
It is possible that the display will not react to finger contact if your fingers are cold.

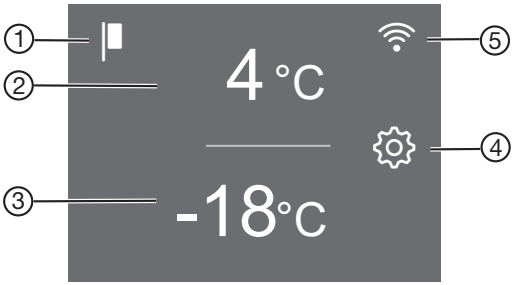

① Demo-mode display
(only visible when the Demo-mode function has been switched on)

② Display the required temperature for the fridge zone, set the temperature from 37 to 48°F (3°C to 9°C), select and deselect the SuperCool&AirClean function

③ Display the required temperature for the freezer drawer, set the temperature from 5 to -11°F (-15°C to -24°C), select and deselect the SuperFreeze function

④ Settings mode sensor control
for adjusting various settings in Settings mode

⑤ Display for connection status
(only visible if networking has been set up)

Settings mode

Party mode

The Party mode function is recommended if you wish to chill or freeze large amounts of fresh food or drinks quickly and if you need ice cubes.

When Party mode is switched on, the SuperCool&AirClean and SuperFreeze functions are activated automatically.

The ice maker is also activated if it was not previously turned on.

Tip: Turn on the Party mode function approx. 4 hours before placing food and drinks in the appliance.

The Party mode function will switch itself off automatically after approx. 24 hours.

If there is a power outage, the Party mode function is switched off.

Vacation mode

The Vacation mode function is useful when you go on vacation and, for example, you do not wish to turn off the fridge zone completely or do not need a high degree of cooling.
In this way, the fridge zone remains in operation while saving energy.

The fridge zone and the PerfectFresh zones are regulated to a temperature of 60°F (15°C).

The freezer zone remains switched on at the previously set temperature.

Previously activated functions such as Party mode or SuperCool&AirClean are deactivated.

Food which does not spoil quickly can be stored in the refrigeration appliance for some time at this moderate fridge zone temperature, providing it is **wrapped**.
This also prevents the build-up of odors and bacteria which can occur if the fridge zone is switched off and the appliance door is closed.

⚠ Health risk caused by decomposing food.
The usability and quality of food in the fridge zone may deteriorate if the temperature remains above 39°F (4°C) for an extended period.
Only ever switch on the Vacation mode function for a limited period.
Do not store any temperature-sensitive food which spoils easily, such as fruit, vegetables, fish, meat, and dairy products, during this time.
Once you have switched off the function, clean the fridge zone and reactivate the charcoal filters.

Ice maker

The ice maker produces approx. 2.87 lb (1.3 kg) of ice cubes in 24 hours at a temperature of 0°F (-18°C).

You can turn the ice maker on or off here.

QuickIce

The ice maker can produce up to approx. 3,75 lb (1.7 kg) of ice cubes in 24 hours.

The QuickIce function only appears in Settings mode if the ice maker function has previously been activated.

Lock function

When the lock function is turned on, it protects the refrigeration appliance from being turned off or adjusted unintentionally by unauthorized persons, e.g., children.

If you just want to quickly adjust the temperature, for example, you can deactivate the lock function temporarily in Settings mode.

Switching off the refrigeration appliance

See "Commissioning – Switching off the refrigeration appliance".

Sabbath mode

The refrigeration appliance features a Sabbath mode for the purposes of religious observance.

When Sabbath mode is switched on, the following are deactivated temporarily:

- interior lighting
- all audible and visual signals
- the display
- the ice maker
- the water dispenser
- an active Wi-Fi connection
- reminders (e.g., AirClean System filter indicator): The set time interval is paused

All other functions switched on previously remain activated.

Information on Sabbath mode

You can call up the Sabbath mode version here.

Time before door alarm is triggered

You can set the time before the door alarm is triggered after opening the appliance door/drawer here.

Temperature level in the PerfectFresh zones

The temperature in the PerfectFresh zones is automatically controlled between 32 and 37°F (0 and 3°C).

However, if you would like it to be warmer or colder, e.g., when storing fish, you can adjust the temperature slightly in increments.

Humidifier

You can turn the humidifier on or off here and set the intensity of the humidification.

The humidifier provides additional humidity in the PerfectFresh Active zone's humidity-controlled compartment.

Networking

Here you can set up networking for the first time, deactivate and activate the Wi-Fi, or reset the network configuration (see "Adjusting settings").

Keypad tone

You can turn the keypad tone on or off here.

Alarms and audible signals

You can change the volume of the alarms and audible signals (e.g., in the event of a door alarm or a fault message) here. Alternatively, you can turn the alarms and audible signals off completely if you find them annoying.

Display brightness ☼

You can adjust the display brightness to the lighting conditions in the room here.

Temperature unit °C/°F

You can set the required temperature unit (°Celsius or °Fahrenheit) here.

Demo mode

Demo mode allows the refrigeration appliance to be presented in the dealer showroom without the cooling system being turned on. Do not activate this setting for domestic use.

You can turn off demo mode here if it has been turned on as a default setting (will appear on the display).

Factory default settings

You can reset the refrigeration appliance's settings to the default settings here.

Tip: Reset the refrigeration appliance's settings to the default settings when disposing of your refrigeration appliance, selling it, or putting a used refrigeration appliance into operation. This will reset the network configuration so that your personal data is deleted from the refrigeration appliance. It will also ensure that a previous owner is no longer able to access the refrigeration appliance.

Information about the refrigeration appliance i

You can call up the model number and serial number of your refrigeration appliance here.

Keep this appliance data to hand; you will need it:

- for integrating the refrigeration appliance into your Wi-Fi network
- when reporting an appliance fault to Miele Service (see "Service")
- when retrieving information from the EPREL database (see "Service")

Charcoal filter (AirClean System) indicator

Filtering the air through the Active AirClean filter ensures that the air remains free from dust and odors.

The yellow charcoal filter indicator on the display reminds you to reactivate the charcoal filters approximately every 6 months.

If the charcoal filters have already been reactivated 5 times, the symbol will light up yellow on the display to remind you to replace the charcoal filters.

You can activate the reminder function here.

Water filter indicator

Filtering the water via the water filter ensures that the fresh water is free from chlorine and other substances that impair the taste and smell.

The yellow water filter indicator on the display reminds you to change the water filter approximately every 6 months.

You can activate the reminder function here.

Cleaning position of the ice cube tray

The ice cube tray of the ice maker moves automatically to the cleaning position (see “Commissioning – Putting the ice maker into operation”).

The ice cube tray cleaning function only appears in Settings mode if the ice maker function has previously been activated.

Cleaning mode

The cleaning mode function makes it easier to clean the fridge zone.

The interior lighting remains switched on even though the fridge zone is switched off. The audible signal will stop and the symbols on the display will also go out.

Safety

Temperature alarm in the freezer zone

The refrigeration appliance has been equipped with a temperature alarm so that the temperature in the freezer zone cannot rise unnoticed.

If the temperature becomes too warm, the symbol will light up red in the temperature display of the freezer zone. An alarm will also sound until the cause of the alarm is rectified or the alarm is switched off.

The set temperature determines when the appliance recognizes a temperature as being too warm.

The audible and visual signals will be activated in the following situations:

- You turn on the refrigeration appliance and the temperature in the freezer zone differs greatly from the set temperature.
- A lot of warm room air enters the freezer zone when you are rearranging or taking out frozen food.
- You are freezing large amounts of food at once.
- You are freezing warm food.
- A power outage has occurred.
- The refrigeration appliance has a fault.

⚠ Health risk caused by decomposing food.
If the temperature in the freezer remains above 0°F (-18°C) for a long time, the frozen food may start to defrost. This will reduce the storage life of the food.
Check whether the frozen food has started to defrost. If it has, check that the food is safe to use and if it is, then use it as soon as possible or cook it before freezing it again.

Turning the temperature alarm off early

Before you switch the temperature alarm off, you must determine the cause and rectify it.

If the alarm disturbs you, it can be turned off early.

■ Tap the symbol.

The symbol will go out and the alarm will stop.

The freezer zone temperature display will flash for approx. 1 minute to show the warmest temperature measured so far. The current temperature then appears.

Door alarm

To prevent energy loss when the appliance door/drawer is open, the refrigeration appliance is equipped with a door alarm. This prevents food becoming warm if the door is left open.

If an appliance door/freezer drawer is left open for an extended period of time, the symbol will light up yellow on the temperature display. An alarm will also sound and the interior lighting will flash.

The time until the door alarm is triggered can be customized in Settings mode. The audible alarm can also be switched off.

As soon as the appliance door/freezer drawer is closed, the alarm stops sounding and the symbol disappears from the display.

Turning the door alarm off early

■ Tap the symbol.

The alarm will stop, the symbol will go out, and the interior lighting will light up again constantly.

If the appliance door is not closed, the door alarm will sound again after around 1 minute.

Appliance functions

SuperCool&AirClean ❄

When switched on, the SuperCool&AirClean function ❄ can be used to rapidly reduce the temperature in the **fridge zone** to its lowest setting (depending on the ambient temperature). The refrigeration appliance will work at full power and lower the temperature.

Select this function for the rapid chilling of large amounts of fresh food or drink.

If you want to rapidly chill large amounts of fresh food or drinks, switch on the SuperCool&AirClean function ❄ **immediately before placing items inside**.

Tip: You should also activate the SuperCool&AirClean function ❄ temporarily if you are storing strong-smelling food in the fridge zone. When the SuperCool&AirClean function ❄ is selected, the charcoal filter works even harder to further reduce odors in the fridge zone.

The SuperCool&AirClean function ❄ will switch itself off automatically after approx. 18 hours.

SuperFreeze ❄

When switched on, the SuperFreeze function ❄ can be used to rapidly reduce the temperature in the **freezer zone** to its lowest setting (depending on the ambient temperature). The refrigeration appliance will work at full power and lower the temperature. Select this function before freezing fresh food. Fresh food will be frozen quickly, so that the nutritional value, vitamin content, appearance, and taste are maintained.

The SuperFreeze ❄ function must be switched on approx. **6 hours before the food to be frozen is placed in the freezer** (see “Operation – Switching on SuperFreeze ❄”). When you are freezing the **maximum amount of food**, the SuperFreeze function ❄ should be switched on **24 hours beforehand**.

The SuperFreeze function ❄ turns off automatically after a maximum of 72 hours. The exact amount of time will vary according to how much fresh food is placed in the freezer.


Adjusting the interior fittings


Maximum load weights

- Left and right appliance door: 26.5 lb (12 kg)
- Top freezer drawer: 75 lb (34 kg)
- Internal freezer drawer: 62 lb (28 kg)
- Bottom freezer drawer: 53 lb (24 kg)

Removing and moving the door shelves/door rack for bottles


Only move the door shelves/door rack for bottles in the appliance door when they are empty.

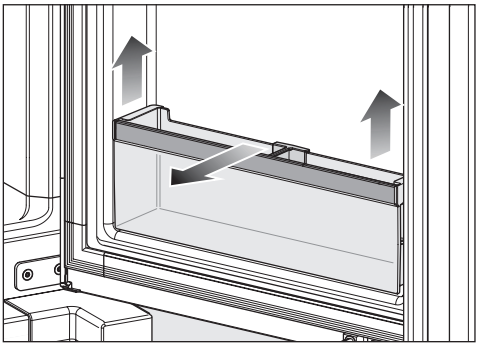

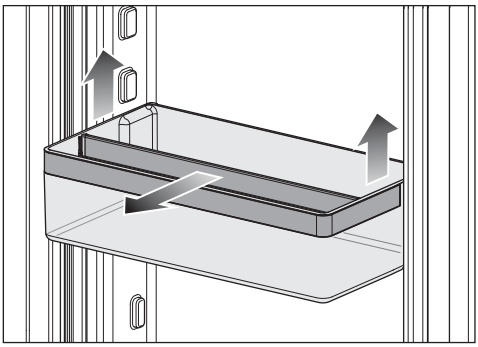


■ Push the door shelves/door rack for bottles upward, then remove them by pulling them forward.

Adjusting the holders in the door shelves/door rack for bottles

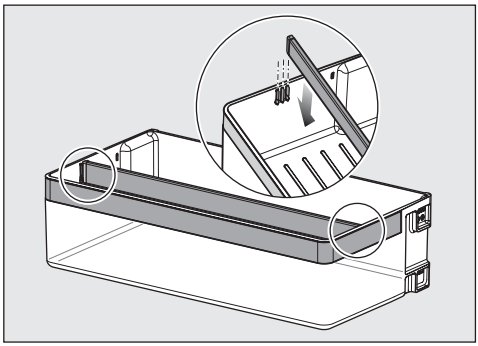


■ Pull the divider upward and set it to the desired position.

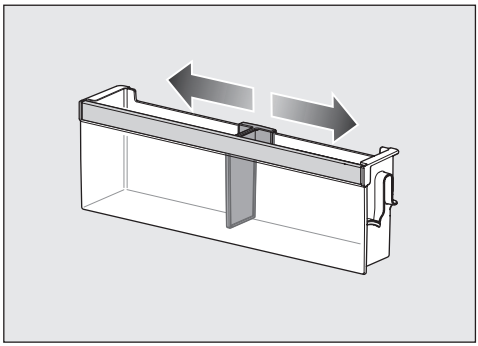

■ Move the holder to the right or left.

Removing or moving the shelves


The retainers for the shelves can scratch the rear panel of the fridge zone if they are attached at an angle. Take care to install the shelves horizontally and hook the retainers in fully.

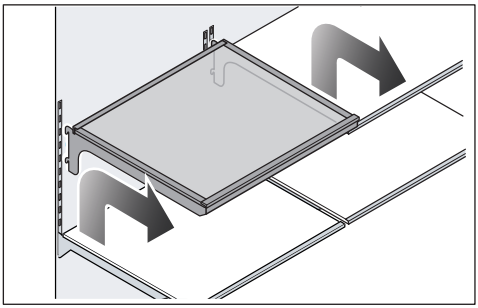


- Raise the shelf slightly so that the shelf is lifted with the retainers over the guide at the back.
- Pull the shelf out to the front.
- Remove the shelf or place the shelf in the required position, with the retainers engaged in the guide.

Using the bottle rack in the dividing plate

All or half of the dividing plate can be used as a bottle rack.

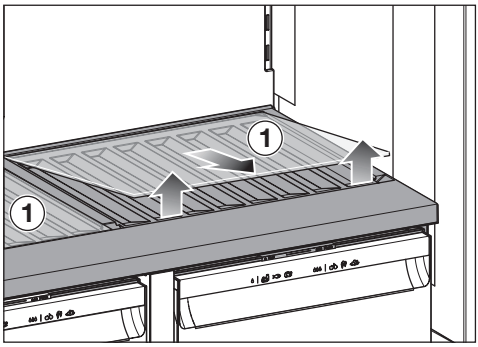


- Remove the glass shelf ① from the dividing plate by lifting the glass shelf at the recesses at the front. Store the glass shelf separately.

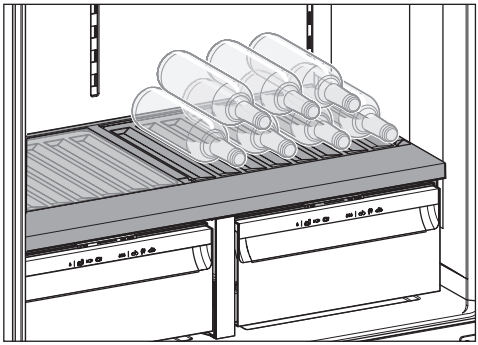

- Insert the bottles with the base facing the rear panel.

Removing the drawers from the fridge zone

- Pull the drawer out as far as it will go.

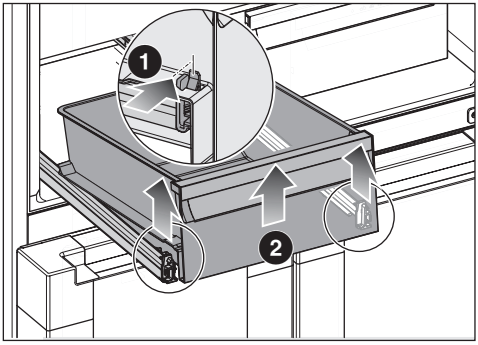

The drawer is secured by retainers at the front. These retainers must be released before removal.

- Press the left and right retainers ❶ inward at the same time.


The drawer detaches from the telescopic runners.

- Lift the drawer at the front ❷ and remove it forward.


Push the telescopic runners back in again to avoid damaging them.

Inserting the drawers in the fridge zone

- Pull the telescopic runners all the way out.

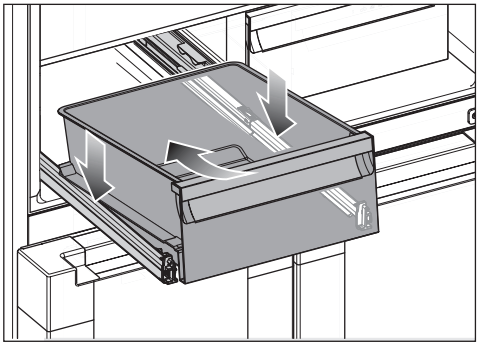

- Position the drawer from above at an angle onto the rear of the telescopic runners, then lower the drawer at the front.

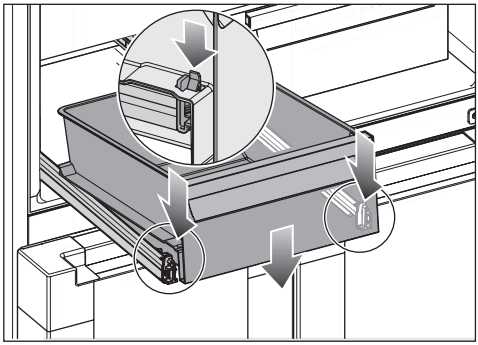


- Grasp one telescopic runner at a time from below and push it forward until you hear it click into place.
- Push the drawer in.

Removing ice cube containers

Ice cube production does not stop when the ice cube container is removed.


- Pull the top freezer drawer out as far as it will go.

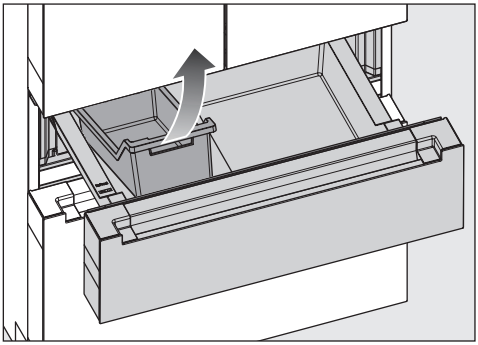

- Tilt the ice cube container forward and pull the ice cube container up and out to remove it.


Removing containers from the top freezer drawer and putting them back

- Pull the top freezer drawer out as far as it will go.

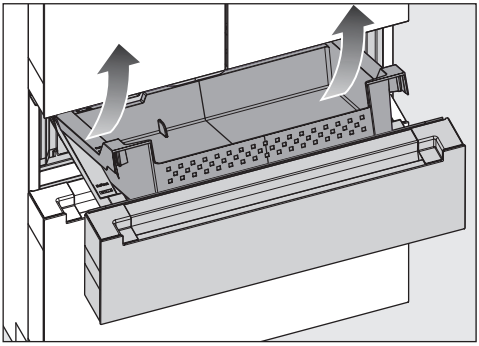

- Lift the front of the container and remove it upward at an angle.

Reinsert the containers in reverse order:

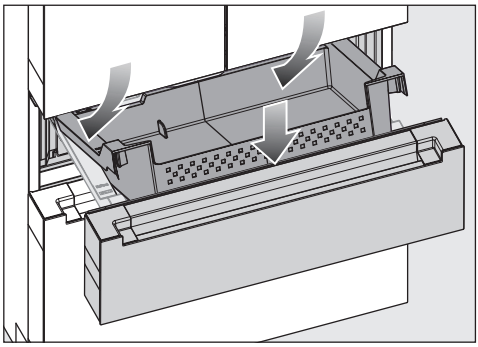


- Place the container on the rails at the rear.
- Lower the front of the container so that it encloses the side rails.
- Reinsert the ice cube container.


Removing containers from the bottom freezer drawer and putting them back

- Pull the bottom freezer drawer out as far as it will go.

The internal freezer drawer will move out automatically. The freezer drawer cannot be removed.

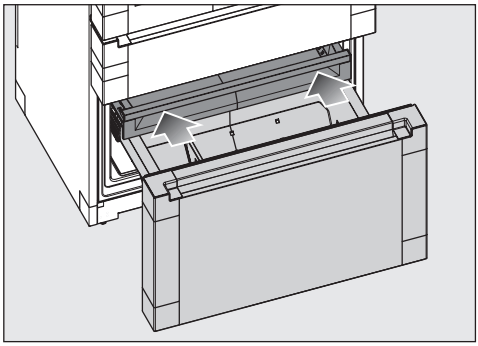


- Push the internal freezer drawer back in.

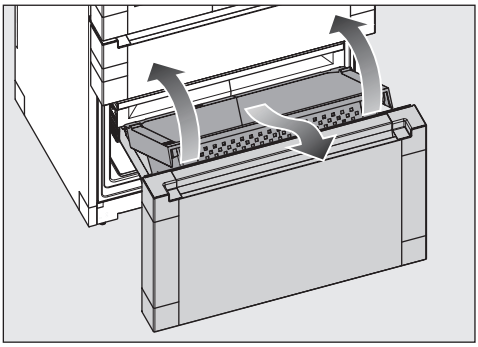

- Lift the front of the container and remove it forward at an angle.

Reinsert the containers in reverse order:

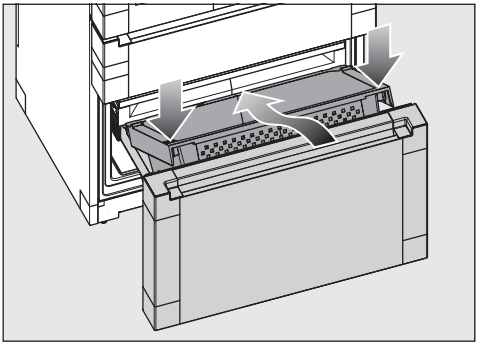

- Place the container on the rails at the rear.
- Lower the front of the container so that it encloses the side rails.

Accessories supplied

Appliance plug

Stainless steel hose (water supply)

Water filter (active charcoal filter)

The water filter is inserted behind the left-hand drawer in the fridge zone.

Your refrigeration appliance is equipped with a water filter (active charcoal filter) that filters fresh water for making ice cubes and using the water dispenser.

The water filter does not filter bacteria or microbes out of the water. The water filter removes chlorine and unpleasant odors and flavors so that only high-quality water is used for ice cubes and drinking water.

The water filter needs to be replaced on a regular basis.

You can also operate the water system without a water filter if, for example, there is an external water filter in the domestic installation.

New water filters are available from Miele Service, your Miele specialist dealer, or online.

Water container

The water filter is inserted behind the left-hand drawer in the fridge zone.

With a capacity of 1 liter, the water container supplies the water dispenser with chilled water. The water temperature depends on the temperature in the fridge zone.

Charcoal filter (Longlife AirClean system)

The charcoal filters neutralize unpleasant odors in the fridge zone and stop odors from being transferred to the food.

Tip: We recommend selecting the SuperCool&AirClean function ❄ temporarily if you are storing strong-smelling food in the fridge zone. When the SuperCool&AirClean function ❄ is selected, the charcoal filter works even harder to further reduce odors in the fridge zone.

The charcoal filters can be reactivated in the oven or a similar domestic appliance with an oven function in a sustainable way and used again (a notification reminding you to reactivate them appears on the display approximately every 6 months).

The charcoal filters can be reactivated approximately 5 times; they must be replaced with new ones after approximately 3 years. A notification on the display will remind you to do so.

Used charcoal filters can be disposed of with household waste.

New charcoal filters are available from Miele Service, your Miele dealer, or via the Internet (see “Familiarization – Optional accessories”).

Optional accessories

A range of useful Miele accessories and care products are available for your appliance.

Products specially tailored to your refrigeration appliance – such as appliance care products and accessories – are available from the Miele online store, Miele Service, or your Miele dealer.

You can access the Miele online store via the following QR code:

Before using for the first time

- Remove all packaging material and protective film.
- Remove all advertising materials and labels from the inside of the refrigeration appliance.
- Clean the inside of the appliance and the accessories.

Connecting the refrigeration appliance

- Connect the refrigeration appliance to the plumbed water connection as described in “Installation – Plumbed water connection”.
- Connect the refrigeration appliance to the power supply as described in “Installation – Electrical connection”.


Miele will then appear on the appliance display, followed by the symbol ⏻.

Inserting charcoal filters (AirClean System) into the fridge zone


⚠ Risk of mold.
For hygiene reasons, the charcoal filters must not be left in the fridge zone for more than 6 months without being reactivated or replaced.
Put the charcoal filter in the fridge zone just before commissioning the refrigeration appliance.

To improve the quality of the charcoal filters, reactivate them before inserting them into the fridge zone for the first time.
Please follow the instructions in “Cleaning and care – Reactivating the charcoal filters (AirClean System) in the oven”.

Your refrigeration appliance is supplied with 2 charcoal filters in the fridge zone.

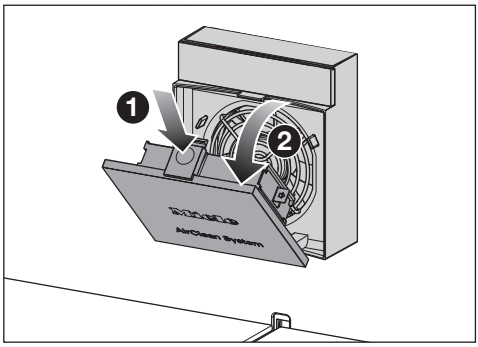

- Press into the recess on the yellow pull tab ❶ above the fan cover and open the cover ❷.

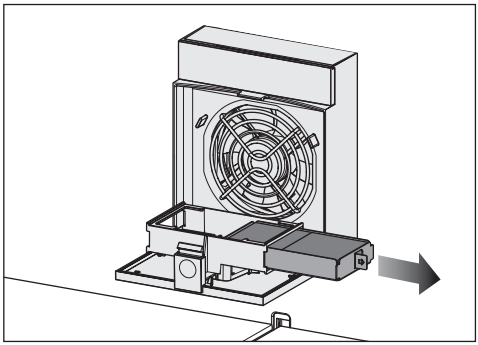


- Remove the retainer for the charcoal filters from the holder.
- To **replace** the charcoal filters, remove the used charcoal filters from the retainer and dispose of them with normal household waste.

Please note: Do not dispose of the retainer as the retainer will be reused.

- Clean the retainer under running water and then dry it with a cleaning cloth.


The charcoal filters contain active charcoal. Active charcoal can leave significant marks.

Before using the charcoal filters, check them for any visible damage. Never use a damaged charcoal filter.

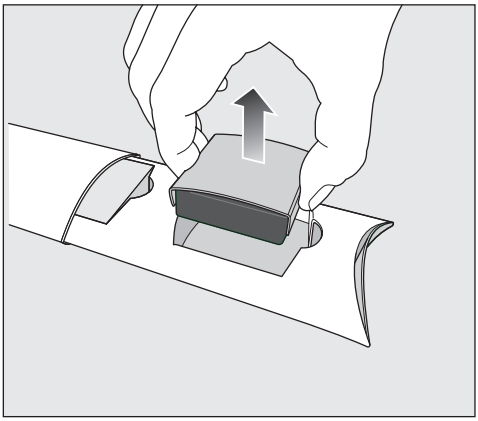

- Take the charcoal filters out of their packaging together with the filter protection.

⚠ Risk of damage as a result of incorrect handling.
The carbon filters are breakable.
When handling the carbon filters, be careful not to drop them.
Do not press down on the honeycomb structure of the carbon filters.

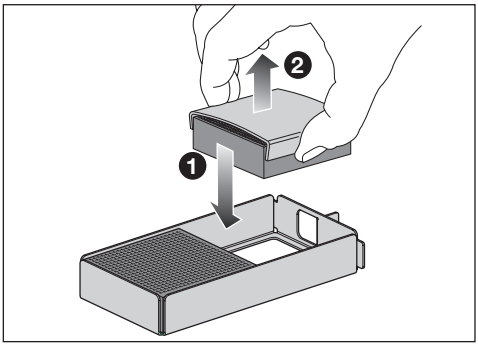

- Insert the new charcoal filters ❶ into the retainer one after the other.
- Remove the filter protection ❷.
- Place the retainer with the charcoal filters into the holder.
- Close the fan cover.
- Wash your hands with soap and water after inserting the charcoal filter.

The charcoal filters must be reactivated or replaced every 6 months (see "Cleaning and care – Reactivating the charcoal filters (AirClean System) in the oven").
A notification on the display will remind you to do so.

Tip: Activate the SuperCool&AirClean function ❄ temporarily if you are storing strong-smelling food in the fridge zone. When the SuperCool&AirClean function ❄ is selected, the charcoal filter works even harder to further reduce odors in the fridge zone.

Switching on the refrigeration appliance

- Open the appliance door.
- Tap the ⏻ symbol on the display.

The refrigeration appliance will start to cool and the interior lighting will come on.

When the set freezer temperature is reached, the symbol disappears, the temperature display of the freezer zone lights up constantly and the alarm stops.

- If the alarm bothers you, tap the symbol.

The alarm will stop.

The refrigeration appliance will gradually reach the preset temperatures.

To enable the temperature to get sufficiently cold inside the refrigeration appliance, allow the appliance to run for a few hours. Do not place food in the refrigeration appliance until it has reached the preset temperature.

Do not place food in the freezer section until it has reached the preset temperature (min. 0°F/-18°C).

Networking

Your refrigeration appliance is equipped with an integrated Wi-Fi module. The Wi-Fi module makes it possible to connect to your home network and to use the Miele app on a mobile device.

Once your refrigeration appliance has been connected via Wi-Fi, the connection is automatically re-established every time it is switched on.

Make sure that your Wi-Fi network signal is strong enough in the place where you intend to install your refrigeration appliance.

Connecting your refrigeration appliance to your Wi-Fi network will increase energy consumption, even when the appliance is switched off.

You can switch off the connection to your Wi-Fi network in the settings.

Smart Extras via the Miele app*

Networking via the Miele app gives you access to numerous Smart Extras, including:

- Access status information.
- Use additional helpful functions.
- Keep your refrigeration appliance up to date with the latest Miele developments via software updates.

You can find more detailed information about Smart Extras on the Miele website, in the Apple App Store®, or in the Google Play Store™.

*This is a separate digital offer from Miele & Cie. KG. The range of functions can vary depending on the model and the country. Acceptance of the General Terms and Conditions and Privacy Policy for Miele digital products and services in the Miele app required. Miele reserves the right to change or discontinue the digital offers at any time.

Requirements for networking

Note the following requirements for networking:

1. A home network is available at the installation site.
   Have the Wi-Fi password ready.
2. The Miele app is available on a mobile device.
3. You have a user account in the Miele app.

Miele App

The Miele App is available to download free of charge from the Apple App Store® or from the Google Play Store™.

Download on the App Store

ANDROID APP ON Google Play

Performing Scan & Connect

- Scan the QR code.

If you have installed the Miele app and have a user account, you will be taken directly to the networking steps.

If you have not yet installed the Miele app, you will be taken to the Apple App Store® or the Google Play Store™.

- Install the Miele app and set up a user account.
- Scan the QR code again.

The Miele app will guide you through the setup process.

Putting the water dispenser into operation

Make sure that the water filter and the water container are inserted.


⚠ Risk to health due to contaminated water.

Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.

Dispose of the first 2 liters of water after commissioning, as the water is used to flush the water inlet.

Flushing is required before commissioning for the first time and if the refrigeration appliance has been switched off for more than 5 days or if the water dispenser has not been used for a long period of time.

- Open the left appliance door.

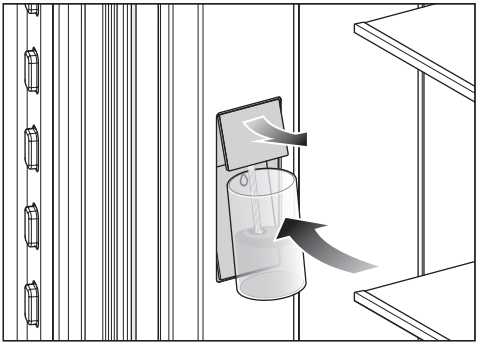

- Press the drinking glass against the lower surface ◊ (contact switch) of the water dispenser.

The upper dispensing unit moves out: air flows out or water flows into the glass.

- Hold the drinking glass against the contact switch ◊ until water flows in a steady stream.

Tip: Hold the opening of the drinking glass close to the dispensing unit. Remove the filled drinking glass slowly. This will prevent splashes.

The water system is now vented.

- Clean the water outlet of the dispensing unit with a clean sponge cloth, lukewarm water, and a little liquid dish soap.

Putting the ice maker into operation

Make sure that the water filter and the water container are inserted.

⚠ Risk to health due to contaminated water.

Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.

After commissioning, flush the water system by dispensing 2 liters of water from the water dispenser and disposing of it. **Or** dispose of the ice cubes produced 48 hours after the first ice cube production. The water is used to flush the water inlet for the first time.


This applies to the initial commissioning as well as when using the ice maker again after it has been switched off for an extended period of time (more than 5 days).

- Flush the water system by dispensing 2 liters of water from the water dispenser and disposing of it.
- **Or** dispose of the ice cubes produced 48 hours after the first ice cube production.
- **Clean the ice cube tray as described below:**
- Open the top freezer drawer and empty the ice cube container if necessary.
- Close the freezer drawer.
- Tap the ⚙ symbol.
- Swipe left or right until the ⓘ symbol is shown in the middle.
- Tap the ⓘ symbol.

It will now take some time for the ice cube tray to rotate into the cleaning position.

Once the ice cube tray has stopped moving, the ✓ symbol will appear on the display.

- To leave this Settings level, tap the ⮌ symbol.
- Open the top freezer zone drawer.

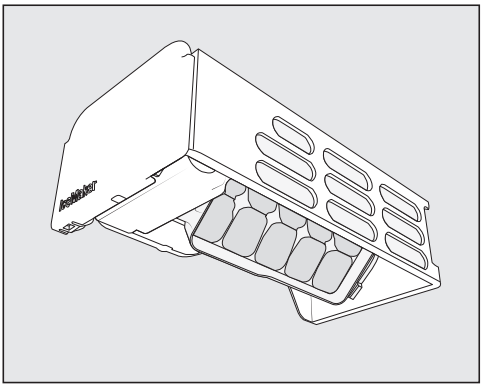

- Clean the ice cube tray and the ice cube container with lukewarm water and a little liquid dish soap. Wipe thoroughly with clean water and dry both items with an all-purpose cloth.
- Close the freezer drawer.
- After cleaning, tap ✓.

You will hear the ice cube tray return to its original position.

Ice cube production will start automatically.

Turning on the ice maker

⚠ Risk to health due to contaminated water.
Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.
Dispose of the first 2 liters of water after commissioning, as the water is used to flush the water inlet.
Flushing is required before commissioning for the first time and if the refrigeration appliance has been switched off for more than 5 days or if the water dispenser has not been used for a long period of time.

- Close the top freezer drawer.
- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

will light up orange when the ice maker is switched on.


- To leave the Settings level, tap the ⮌ symbol.

The ice maker fills with water. Once frozen, the ice cubes fall into the ice cube drawer. When the ice cube drawer is full, ice cube production pauses automatically.

When commissioning the appliance for the first time, it can take up to 24 hours for the first ice cubes to drop out of the ice maker and collect in the ice cube drawer.

Putting the humidifier into operation

Removing the water container for the humidifier

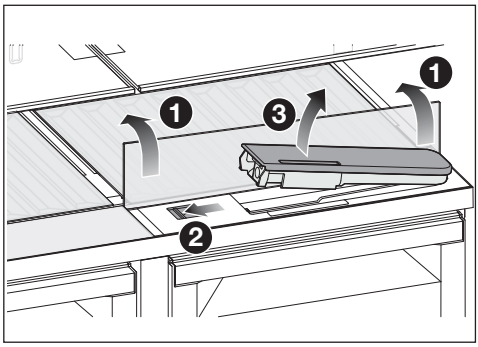

- Press on the outer rear corners on the glass shelf ❶.

The glass shelf will lift up at the front.

- Lift up the glass shelf and fold it back.

The glass shelf will stand upright.

- Push the slider ❷ to the left.


The water container ❸ will spring out of the recess.

- Remove the water container.

Cleaning the water container for the humidifier

The water container has already been removed.

- Separate the water container into its 2 pieces and clean them by hand or in the dishwasher.

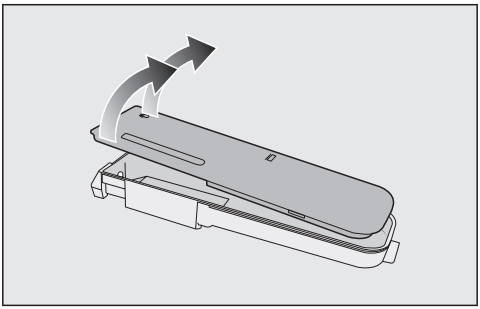

- Carefully lever the lid over the retainers.
- Move the lid back and forth slightly and remove it upward.

Filling and inserting the water container for the humidifier

⚠ Risk to health due to contaminated water.
Using contaminated water can lead to poisoning.
Use only fresh drinking water to fill the water container.

⚠ Risk to health due to contaminated water.
Bacteria can develop in water which has been sitting in the water container for too long. This poses a risk to your health.
If the refrigeration appliance, the fridge zone, or the humidifier has been out of operation for more than 2 days, clean the water container and fill it with fresh drinking water.
If Vacation mode has been activated for more than 2 weeks, clean the water container and fill it with fresh drinking water.

⚠ Risk of damage due to incorrectly filled water container.
Liquids containing sugar can damage the humidifier.
Use only fresh drinking water to fill the water container.

The water in the water container should last for approx. 4 months.

- Remove the water container and fill it up to the marker with drinking water.
- Reinsert the water container until it clicks into place.
- Fold the glass shelf back down.

Switching the humidifier on

Close the lid of the humidity-controlled compartment (ΔΔΔ setting) before switching on the humidifier.

- Tap ⚙.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Swipe left until the humidifier intensity you want (1: low humidity; 3: maximum humidity) is shown in the middle.
- Tap the setting you want to confirm.

The symbol lights up orange.

- To leave this Settings level, tap ⮌.

Switching off the refrigeration appliance

Please note: The refrigeration appliance is not disconnected from the power supply when it is switched off.

You can switch the entire refrigeration appliance off in Settings mode ⚙.

- Tap the ⚙ symbol.
- Swipe left or right until the ⏻ symbol is shown in the middle.
- Tap the ⏻ symbol.

The cooling and interior lighting are switched off.

The ⏻ symbol will appear on the display.

Switching off the fridge zone or freezer zone separately

- Touch the temperature display of the temperature zone you wish to switch off.
- Swipe right until the ⏻ symbol is shown in the middle.
- Tap the ⏻ symbol.

The temperature display for the selected temperature zone will go out. The ⏻ symbol will appear on the display.

The selected temperature zone is switched off.

The other temperature display remains lit up.

Switching the fridge zone or freezer zone back on again separately

- In the corresponding temperature display, tap the ⏻ symbol.
- Tap the ⏻ symbol.

The selected temperature zone switches back on.

To note when switching off for longer periods of time

If, during a long absence, the refrigeration appliance is switched off but not cleaned and the door is left shut, there is a danger of bacteria building up inside the appliance.

It is essential to clean the refrigeration appliance.

If the refrigeration appliance is not going to be used for a longer period of time, observe the following:

- Empty the refrigeration appliance completely.
- Empty the ice cube drawer completely.

⚠ Risk of damage to the ice maker.

If the water supply is cut off while the ice maker is still in use, the water intake pipe can freeze up.

Switch off the ice maker if the water supply is to be interrupted (e.g., while on vacation).

- Switch off the ice maker.
- Turn the refrigeration appliance off.
- Unplug the electrical plug or trip the circuit breaker.
- Empty the humidifier water container, then clean and dry it.
- Close the faucet on the water inlet.
- Replace the water filter (active charcoal filter).

- Remove the charcoal filters from the fridge zone and reactivate the charcoal filters directly before inserting them into the fridge zone.
- Clean the refrigeration appliance and leave the door open to air the appliance and avoid odors building up inside.

It is also advisable to carry out the last two instructions if you are switching the refrigerator section off for a longer period of time.

Temperature display

In normal operation, the refrigeration appliance temperature display shows the **current average fridge zone temperature** and the **maximum freezer zone temperature**.

Depending on the ambient temperature and the temperature setting, it can take the appliance a few hours to reach the temperature required and for this temperature to then be shown as a constant temperature on the display.

The temperature in the refrigeration appliance will always **rise**:

- the more often the appliance door is opened and the longer it is kept open
- the more food that is stored in it
- the warmer the food is that is being put into it
- the higher the ambient temperature surrounding the refrigeration appliance is. This refrigeration appliance is designed for use within specific ambient temperatures (climate range). Do not use in ambient temperatures for which it is not designed.

Temperature range in the fridge zone

A temperature of **39°F (4°C)** is recommended in the fridge zone.

A temperature setting of 39°F (4°C) or colder and the hygienic handling of food measures delays the propagation of bacteria, e.g. salmonella and listeria, which can lead to serious food poisoning.

The **temperature in the fridge zone** can be adjusted from **37 to 48°F (3 to 9°C)**.

The **temperature in the Perfect-Fresh Active zone** is automatically controlled between **32 to 37°F (0 and 3°C)**. If necessary, you can adjust the temperature slightly in increments (see “Adjusting settings”).

Temperature range in the freezer zone

⚠ Health risk caused by decomposing food.
To freeze fresh food, a temperature of **0°F (-18°C)** is required. Please note that, if the temperature is any warmer, the food will have a shorter shelf life.

When freezing food and storing it over the long term, set a minimum temperature of **0°F (-18°C)**.

Tip: By keeping the freezer zone at a constant temperature of 0°F (-18°C) and taking appropriate hygiene measures, you can maximize the storage life of your food and avoid food waste.

The **temperature in the freezer zone** can be adjusted from **5°F (-15°C) to -11°F (-24°C)**.

Setting the temperature in the refrigerator/freezer sections

- Touch the temperature display for the section you want to change.
- Swipe left or right until the temperature you want is shown in the middle.
- Tap on the temperature you want to confirm.

The temperature display will then change back to the current refrigerator and freezer temperature in the refrigeration appliance.

Switching on SuperCool&AirClean ❄

The SuperCool&AirClean function ❄ must be switched on **before placing** large amounts of food or drinks in the fridge zone.

When the function is switched on, the appliance may make more noise than usual.

- Tap the SuperCool&AirClean symbol ❄ on the temperature display for the fridge zone.

The ❄ symbol lights up orange.

- Tap the temperature display to leave the settings level.

Switching off SuperCool&AirClean ❄

The SuperCool function ❄ will switch itself off automatically after approx. 18 hours. The refrigeration appliance will then run at normal power again.

Tip: To save energy, you can switch the function off yourself before this time.

- Tap the SuperCool&AirClean symbol ❄ on the temperature display for the fridge zone.

The ❄ symbol no longer lights up orange.

- Tap the temperature display to leave the settings level.

Switching on SuperFreeze ❄

The SuperFreeze function ❄ should be switched on around **6 hours before placing food in the freezer**. When you are freezing the **maximum amount of food**, the SuperFreeze function ❄ should be switched on **24 hours beforehand**.

You do **not** need to switch on the SuperFreeze function:

- When you place food that is already frozen in the freezer.
- If you are only freezing up to 4.4 lb (2 kg) of fresh food daily.

■ Tap the SuperFreeze symbol ❄ on the temperature display for the freezer zone.

The ❄ symbol lights up orange.

■ Tap the temperature display to leave the Settings level.

Switching off SuperFreeze ❄

The SuperFreeze function ❄ will switch itself off automatically after a maximum of 72 hours.

Tip: To save energy, you can switch the function off yourself before this time.

■ Tap the SuperFreeze symbol ❄ on the temperature display for the freezer zone.

The ❄ symbol no longer lights up orange.

■ Tap the temperature display to leave the Settings level.

Storing food in the fridge zone

Do not load more than a maximum of 35 lb (16 kg) of food in the appliance door.

⚠ Risk of fire from electrical appliances.
Operating electrical devices in the appliance can cause sparks to form.
Do not operate any electrical devices inside the appliance.

Different storage zones

Due to natural air circulation, there are different temperature zones in the refrigerator section.

Cold, heavy air sinks to the lowest section of the refrigeration section. Make use of the different zones when placing food in the appliance.

This is a refrigeration appliance with automatic temperature distribution (DynaCool). The refrigeration appliance switches the fan on automatically when the cooling system for the fridge zone switches on. This means that the cold is distributed evenly in the fridge zone and the difference between the various temperature zones is less pronounced. All stored food is thus cooled to approximately the same temperature.

Warmest area

The warmest area in the refrigerator section is in the top section of the door. Use this for storing butter so that it remains spreadable and cheese so that it retains its flavor.

Coldest area

The coldest area in the fridge zone is directly above the PerfectFresh Active zone dividing plate and at the back of the appliance. The temperature in the PerfectFresh Active zone compartments is even colder.

A temperature setting of 39°F (4°C) or colder and the hygienic handling of food measures delays the propagation of bacteria, e.g. salmonella and listeria, which can lead to serious food poisoning.

Therefore, you should use these areas in the fridge zone and in the PerfectFresh Active zone to store all delicate and highly perishable food, including:

- fish, meat, poultry
- cold cuts, ready-made meals
- dishes or baked goods containing eggs or cream
- fresh dough, cake mixtures, pizza dough, or pie dough
- raw-milk cheese and other raw-milk products
- pre-packed vegetables
- other fresh food (with a label stating it should be kept at a temperature of approx. 39°F (4°C))

Should food be stored loose or in packaging?

Ensure that food stored in the fridge zone is in packaging or covered properly (some exceptions apply in the PerfectFresh Active zone).
This will prevent food odors from affecting other food, stop food from drying out, and also prevent any cross-contamination of bacteria. This is particularly important when storing meat products.

Make sure that food such as raw meat and fish in particular does not come into contact with other food.

By ensuring that the temperature settings are correct and by taking appropriate hygiene measures, you can prolong the storage life of your food considerably. This prevents food waste.

Protein-rich food

Please note that foods rich in protein deteriorate faster than others. Shellfish, for example, deteriorates faster than fish, and fish deteriorates faster than meat.

Storing food in the PerfectFresh Active zone

PerfectFresh Active zone

The PerfectFresh Active zone provides ideal storage conditions for fruit, vegetables, fish, meat, and dairy products. Food stays fresh considerably longer while retaining both flavor and vitamins.

Remember that the fresher the food when it is placed in the appliance, the longer it will stay fresh.

The **temperature** is controlled automatically and maintained at **32 to 37°F (0 to 3°C)**.
While lower than the temperature in a standard fridge zone, this is the optimum temperature range for storing fresh food which is not sensitive to cold. As the deterioration process is decelerated at this temperature, food can be stored considerably longer without loss of freshness.

Take food out approximately 30 to 60 minutes before using it. The aroma and taste do not fully develop until the food has reached room temperature.

The **humidity level** can also be regulated to suit the food being stored. Additional moisture is introduced into the humidity-controlled compartment by the **humidifier**. Water vapor is then supplied to the fruit and vegetables stored in the humidity-controlled compartment each time the appliance door is opened and approximately every 90 minutes. Food retains its own moisture if stored at a higher humidity and so does not dry out as quickly.

Humidity-controlled compartment

◊ | ◊◊◊ |

The humidity level is increased depending on the position of the compartment lid: ◊ not increased or ◊◊◊ increased.

Increased humidity ◊◊◊

At this setting, the humidity-controlled compartment is suitable for storing fruit and vegetables.

The moisture level greatly depends on the type and quantity of food being stored, if stored unwrapped.

Increased moisture in the humidity-controlled compartment can cause a build-up of condensate.

If you find that too much condensate has formed and this is affecting the food, proceed as follows:


Wipe off any condensate with an all-purpose cloth.

Open the compartment lid by moving it to the low humidity ◊ position.

Switch off the humidifier.

Selecting increased humidity ◊◊◊

- Fill the humidifier water container (see “Commissioning – Filling and inserting the water container”).
- Switch on the humidifier in Settings mode.

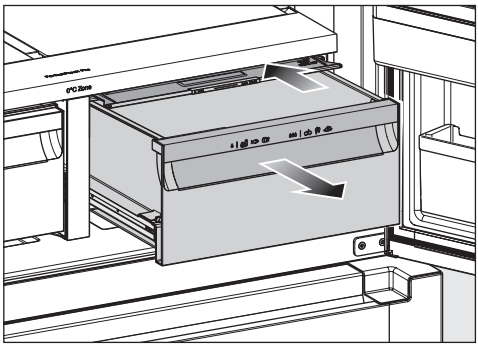

- Open the drawer of the humidity-controlled compartment.
- Slide the compartment lid as far back as it will go.


The compartment lid is closed.

Low humidity ◊

When the ◊ setting is used, the humidity-controlled compartment becomes a dry compartment (see “Dry compartment”).

Selecting low humidity ◊

The humidifier should be switched off with this setting ◊, as the humidifying mist will escape when the compartment lid is open and condensation may form.

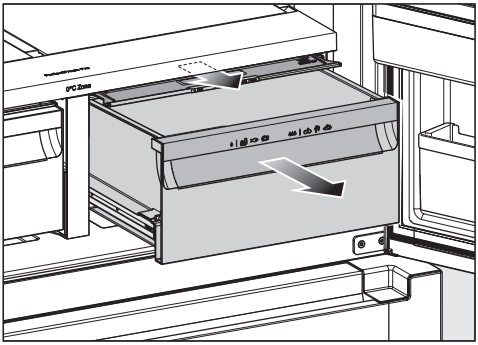

- Open the drawer of the humidity-controlled compartment.
- Pull the compartment lid as far forward as it will go.

The compartment lid is open.

If the food is higher than the edge of the drawer, pushing in the drawer may alter the position of the compartment lid, causing it to close.
When filling the drawer, take care to ensure that the food does not touch the compartment lid.

Dry compartment

◊ | 🐄 🐟 🐓

The humidity is not increased ◊.

The dry compartment is suitable for storing perishable foods such as:

- fresh fish and shellfish
- meat, poultry, and sausage
- deli salads
- dairy products, such as milk, yogurt, cheese, cream, etc.
- plant-based products such as tofu, oat drinks, hummus, vegetable spreads, meat and cheese substitutes, etc.
- Any type of food can in fact be stored in this compartment, as long as it is packaged.

Please note that foods rich in protein deteriorate faster than others. Shellfish, for example, deteriorates faster than fish, and fish deteriorates faster than meat.
Always keep these foods **covered or wrapped**.

Observe the following tips if you find that food you have stored does not keep well (e.g., food becomes limp or wilts after only being stored for a short time):

- Only place fresh food inside the drawer, as the initial condition of the food is crucial to maintaining freshness.
- Clean the compartments in the PerfectFresh Active zone before storing food in them.
- Very wet food should be dried off first.
- Do not store any food in the PerfectFresh Active zone which is sensitive to cold.
- Select the correct PerfectFresh Active compartment for the food as well as the correct position for the compartment lid (low humidity ◊ or increased humidity ◊◊◊).
- An increased humidity level ◊◊◊ in the humidity-controlled compartment is achieved with the moisture present in the food being stored if the food is stored unwrapped. The more food stored in the compartment, the higher the humidity.
- Do not overfill the compartments.
- If you find that too much condensate has formed when using the ◊◊◊ setting and this is affecting the food:

- Wipe off any condensate with an all-purpose cloth.
- Place a rack or similar item in the compartment so that excess moisture can drain away.
- Open the compartment lid by moving it to the low humidity ◊ position and switch the humidifier off.

- If the humidity level is too low despite the ◊◊◊ setting, wrap the food in airtight packaging.
- If you think that the temperature in the PerfectFresh Active zone is too high or too low, try regulating it slightly first by changing the temperature in the fridge zone by 1 or 2°. If ice crystals start to form on the base of the PerfectFresh Active compartments, increase the temperature as otherwise the cold temperature will damage the food.
- If adjusting the temperature in the fridge zone does not remedy the problem, adjust the temperature in the PerfectFresh Active zone (see “Adjusting settings”).

Freezing and storing fresh food

Before placing food in the freezer

Only freeze food that is fresh and in good condition.

- When freezing more than 4.4 lb (2 kg) of fresh food, switch on the Super-Freeze function ❄ for 6 hours before placing the food in the freezer.
- When freezing even larger amounts of food, switch on the SuperFreeze function ❄ for 24 hours before placing the food in the freezer.

This helps frozen food which is already stored in the freezer to stay frozen.

Placing food to be frozen in the freezer

⚠ Risk of damage due to heavy loads.

Excessively heavy loads can damage the pull-out units.

Do not exceed the maximum load size:
Top pull-out unit = 75 lb (34 kg)
Flat drawer in bottom pull-out unit = 62 lb (28 kg)
Bottom pull-out unit = 53 lb (24 kg)

Unfrozen food should not touch frozen food as this will cause the frozen food to begin to thaw.

- To prevent food sticking together when frozen, make sure that the packaging and containers are dry.

– Freezing small amounts of food

- Distribute the food to be frozen over the top pull-out unit so that it freezes through to the core as quickly as possible.

– Freezing the maximum amount (see data plate)

- Distribute the food to be frozen over both pull-out units so that it freezes through to the core as quickly as possible.

After freezing

- Switch the SuperFreeze ❄ function off early as soon as food and drinks are sufficiently chilled.

Cooling drinks quickly

To cool drinks quickly in the fridge zone, switch on the SuperCool&AirClean function ❄.

To cool larger quantities of drinks or additional bottles in the freezer zone, select the Party mode function in the Settings mode ⚙.

When cooling drinks quickly in the freezer zone, make sure bottles are not left in **for more than one hour**. Otherwise they could burst.

Water dispenser

The water dispenser requires a plumbed water connection in order to operate. The water filter and water container must be installed. If you are not using a water filter, it can be replaced with another water container (optional accessory).

All materials used in the water dispenser are odorless and do not affect flavor.


Dispensing water

⚠ Risk to health due to contaminated water.
Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.
Dispose of the first 2 liters of water after commissioning, as the water is used to flush the water inlet.
Flushing is required before commissioning for the first time and if the refrigeration appliance has been switched off for more than 5 days or if the water dispenser has not been used for a long period of time.

Air may be present in the water circuit after initial commissioning. Dispense water until there are no air bubbles visible.

The water may taste stale if not used for a longer period of time. Regularly dispense water in order to achieve the best water quality.

Tip: Hold the opening of the drinking glass close to the dispensing unit. Remove the filled drinking glass slowly. This will prevent splashes.

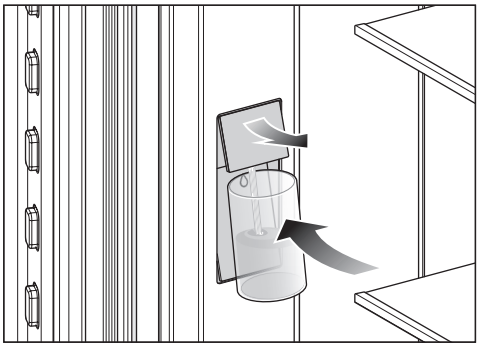

- Press the drinking glass against the lower surface of the water dispenser (contact switch).

The upper dispensing unit moves out and water flows into the glass.

- Hold the container against the contact switch for as long as you wish to dispense water.

Chilled water will be dispensed as long as the water dispenser is activated. Dispensing will stop automatically after approx. 60 seconds. Wait 5 seconds and activate the water dispenser again if you wish to dispense more water.

After you have activated the water dispenser several times in a row, water stops being dispensed. Water can be dispensed again after a few minutes.

Ice maker

⚠ Risk to health due to contaminated water.
Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.
Dispose of the first 2 liters of water dispensed from the water dispenser after commissioning, as the water is used to flush the water inlet.
Flushing is required before commissioning for the first time or if the ice maker has been switched off for more than 5 days.

Only make normal domestic quantities of ice cubes with the ice maker.

The ice maker requires a plumbed water connection in order to operate. The water filter and water container must be installed. If you are not using a water filter, it can be replaced with another water container (optional accessory).

The amount of ice cubes made by the appliance depends on the temperature in the freezer zone. **The lower the temperature, the more ice cubes are produced in a certain period of time.**

When using the appliance for the first time, it can take up to 24 hours for the first ice cubes to drop out of the ice maker and collect in the drawer.

After the ice maker has been turned off and on again, this process lasts max. 6 hours.

Ice cube production does not stop when the ice cube container has been removed. Ice cubes may drop into the freezer drawer underneath.
Switch off the ice maker.
If possible, only remove the ice cube container for a short time.

As soon as a certain fill level is reached in the ice cube drawer, ice cube production stops automatically. The drawer will not fill up to the top edge.

Tip: Empty the ice cube drawer at regular intervals, or if you have not produced any ice for more than a week. This will ensure that you always have fresh ice and the ice cubes will not form a clump.

The ice maker can be turned off independently of the freezer zone if you do not want to make any ice cubes.

If the ice maker is switched off, food up to a maximum height of 4" (10 cm) can be placed in the ice cube drawer and frozen.

Customizing settings

	Settings mode
	Switch Party mode on or off.
	Switch Vacation mode on or off.
	Switch the ice maker on/off.
	Switch QuickIce on or off (only visible when the ice maker is switched on)
/	Switch the locking function on, deactivate it temporarily, or switch it off completely.
	Switch off the refrigeration appliance.
	Switch Sabbath mode on or off.
	Call up the Sabbath mode version.
	Change the time before the door alarm is triggered.
	Change the temperature level in the PerfectFresh zones.
	Switching the humidifier on or off or adjusting the intensity of the humidifier
	Networking
APP / WPS	Set up networking for the first time.
/	Activate or deactivate the Wi-Fi connection.
	Reset the network configuration.
/	Switch the keypad tone on or off.
/	Change the volume of the alarms and audible signals or switch off the alarms and audible signals completely.
	Adjust the display brightness.
°C/°F	Change the temperature unit.
	Switch the demo mode off (only visible when switched on).

	Reset the settings to their factory default settings.
i	Access information about your refrigeration appliance.
	Activate AirClean System indicator.
	Activate water filter indicator.
	Ice cube tray cleaning position (only visible when the ice maker is switched on)
	Switch cleaning mode on or off.

The door alarm and other warnings are automatically disabled when the appliance is in Settings mode ⚙.

Switching Party mode 🍹 on

The Party mode function 🍹 should be switched on around 4 hours before placing food in the freezer.

- Tap the ⚙ symbol.
- Swipe left or right until the 🍹 symbol is shown in the middle.
- Tap the 🍹 symbol.

When Party mode is switched on, the 🍹 symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

When Party mode 🍹 is switched on, the following are turned on automatically:

- the SuperFreeze function ❄
- the SuperCool&AirClean function ❄
- the ice maker with the QuickIce function

Switching Party mode 🍹 off

The Party mode function 🍹 will switch itself off automatically after approx. 24 hours.

To save energy, you can switch off the Party mode function early yourself once food and drinks are sufficiently chilled or enough ice cubes have been made.

- Tap the ⚙ symbol.
- Swipe left or right until the 🍹 symbol is shown in the middle.
- Tap the 🍹 symbol.

When Party mode is switched off, the 🍹 symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Switching on Vacation mode

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When Vacation mode is switched on, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

⚠ Health risk caused by contaminated food.

The usability and quality of food in the refrigerator section may deteriorate if the temperature remains above 37°F (4°C) for an extended period.

Only ever switch on the Vacation-mode function for a limited period.

Do not store any temperature-sensitive food which spoils easily, such as fruit, vegetables, fish, meat, and dairy products, during this time.

Switching off Vacation mode

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When Vacation mode is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Turning on the ice maker

⚠ Risk to health due to contaminated water.

Bacteria can develop in water that has been sitting in the water supply lines for too long. This poses a risk to your health.

Dispose of the first 2 liters of water after commissioning, as the water is used to flush the water inlet.

Flushing is required before commissioning for the first time and if the refrigeration appliance has been switched off for more than 5 days or if the water dispenser has not been used for a long period of time.

When the function is switched on, energy consumption increases slightly. The appliance may also make more noise than usual.

- Close the top freezer drawer.
- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

will light up orange when the ice maker is switched on.

- To leave the Settings level, tap the ⮌ symbol.

The ice maker fills with water. Once frozen, the ice cubes fall into the ice cube drawer. When the ice cube drawer is full, ice cube production pauses automatically.

When commissioning the appliance for the first time, it can take up to 24 hours for the first ice cubes to drop out of the ice maker and collect in the ice cube drawer.

After the ice maker has been switched off and on again, this process lasts max. 6 hours.

Switching the ice maker off

If you do not wish to produce ice cubes for a longer period, you should switch off the ice maker completely.

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the ice maker is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Switching QuickIce on

When the function is switched on, energy consumption increases slightly. The appliance may also make more noise than usual.

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

will light up orange when the ice maker is switched on.

- To leave the Settings level, tap the ⮌ symbol.

Ice cube production is halted automatically when the ice cube drawer is full.

Switching QuickIce off

The QuickIce function will switch itself off automatically after approx. 48 hours. The ice maker will produce a smaller amount of ice cubes again.

Tip: To save energy, you can switch the function off yourself before this time.

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

If QuickIce is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Switching on the lock function

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the lock function is switched on, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.
- Close the appliance door. Only then will the lock function be active.

Deactivating the lock function temporarily

- Touch the temperature display for the temperature zone you want to adjust.
- Touch the symbol for approx. 6 seconds.

The display switches to the temperature controls.

- Now select the required settings.

Closing the appliance door will reactivate the lock function.

Switching off the lock function completely

- Tap the ⚙ symbol.
- Touch the symbol for approx. 6 seconds.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the lock function is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Switching Sabbath mode on

When Sabbath mode is switched on, you cannot adjust any settings.

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

The symbol lights up orange.

- To leave the Settings level, tap the ⮌ symbol.

If Sabbath mode is switched on, this is indicated on the display for approx. 3 s.

The display then switches off.

Ensure that the appliance door is properly closed, as visual and audible alarms are switched off.

⚠ Health risk caused by decomposing food.
As any power outage during Sabbath mode is not indicated, the frozen food may thaw or defrost. This will reduce the storage life of the food.
Check the quality of the food.
Check whether the frozen food has started to defrost. If it has, use the food as soon as possible or cook it before freezing it again.

Switching off Sabbath mode

The Sabbath mode function will switch off automatically after approx. 80 hours.

Tip: To save energy, you can switch the function off yourself before this time.

- Tap the blank display.

The symbol appears.

- Tap the symbol.

The symbol lights up orange.

- Tap the symbol again.

When Sabbath mode is switched off, the symbol will light up white.

- To leave this Settings level, tap ⮌.

Changing the time before the door alarm is triggered

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Swipe left or right until the time you want between 30 seconds and 3 minutes 30 seconds is shown in the middle.
- Tap the setting you want to confirm.
- To leave the Settings level, tap the ⮌ symbol.

Changing the temperature level in the PerfectFresh zones

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Swipe left or right until the setting you want (1: lowest temperature; 9: highest temperature) is shown in the middle.
- Tap the setting you want to confirm.
- To leave the Settings level, tap the ⮌ symbol.

The factory default for the temperature level is 5.
Under certain circumstances, a setting from 1 to 4 can cause the temperature to fall below 32°F (0°C). This can cause food to freeze.
Check the temperature setting.

Switching the humidifier on

The energy consumption does increase slightly when the humidifier is switched on. The appliance may also make more noise than usual.

Close the lid of the humidity-controlled compartment (ΔΔΔ setting) before switching on the humidifier.

- Tap ⚙.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

- Swipe left until the humidifier intensity you want (1: low humidity; 3: maximum humidity) is shown in the middle.
- Tap the setting you want to confirm.

The symbol lights up orange.

- To leave this Settings level, tap ⮌.

Adjusting the intensity level of the humidifier

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Swipe left until the humidifier intensity you want (1: low humidity; 3: maximum humidity) is shown in the middle.
- Tap the setting you want to confirm.
- To leave the Settings level, tap the ⮌ symbol.

Switching the humidifier off

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Swipe right and tap the ⏻ symbol.

The symbol lights up white.

- To leave the Settings level, tap the ⮌ symbol.

Setting up networking for the first time

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Tap the connection method you wish to use (app or WPS).

After you have successfully logged in, the symbol will appear on the display.

If a connection could not be established, the ⊗ symbol will appear.

- In this case, start the process again.
- To leave the Settings level, tap the ⮌ symbol.

Deactivating the Wi-Fi connection

- Tap the ⚙ symbol.
- Swipe left or right until the @ symbol is shown in the middle.
- Tap the @ symbol.
- Tap the ᯤ symbol to deactivate the Wi-Fi connection.

The ᯤ symbol appears.

- To leave the Settings level, tap the ⮌ symbol.

Activating the Wi-Fi connection

- Tap the ⚙ symbol.
- Swipe left or right until the @ symbol is shown in the middle.
- Tap the @ symbol.
- Tap the ᯤ symbol to activate the Wi-Fi connection.

The ᯤ symbol appears.

- To leave the Settings level, tap the ⮌ symbol.

When the Wi-Fi connection is active, the ᯤ symbol will light up on the display.

Resetting the network configuration

- Tap the ⚙ symbol.
- Swipe left or right until the @ symbol is shown in the middle.
- Tap the @ symbol.
- Swipe right until the ⟲ symbol is shown in the middle.
- Tap the ⟲ symbol.
- Tap the ✓ symbol.
- To leave the Settings level, tap the ⮌ symbol.

All entered settings and values are reset to the default settings.

The Wi-Fi connection has been deactivated. The ᯤ symbol will go out on the start display.

Reset the network configuration if you are disposing of or selling your refrigeration appliance, or if you are putting a used refrigeration appliance into operation. All personal data is removed from the refrigeration appliance. This will also ensure that a previous owner is no longer able to access the refrigeration appliance.

Switching off the keypad tone

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the keypad tone is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

Switching on the keypad tone

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the keypad tone is switched on, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Changing the volume of the alarms and audible signals /

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.
- Select the volume you want by swiping the segment bar to the left or right (level 1–7).
- If you want to switch the alarms and audible signals off completely, swipe to the left until the segment bar goes out completely.
- Confirm the setting you want by tapping the segment bar.

When the alarms and audible signals are switched off, the symbol will light up white.

When the alarms and audible signals are switched on, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Changing the display brightness

- Tap the ⚙ symbol.
- Swipe left or right until the ☼ symbol is shown in the middle.
- Tap the ☼ symbol.
- Select the brightness you want by swiping the segment bar to the left or right (level 1–7).
- Confirm the setting you want by tapping the segment bar.
- To leave the Settings level, tap the ⮌ symbol.

Changing the temperature unit °C/°F

- Tap the ⚙ symbol.
- Swipe left or right until °C or °F is shown in the middle.
- Tap °C or °F to change the temperature unit.

°C or °F will appear on the display.

- To leave the Settings level, tap the ⮌ symbol.

Switching off demo mode

- Tap the ⏻ symbol.
- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

After demo mode has been switched off, the refrigeration appliance shuts down and must be switched on again.

Resetting the settings to their factory default settings

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

The ⟲ symbol appears.

- Tap the ✓ symbol.

The refrigeration appliance shuts down and must be switched on again.

Activating the Active AirClean filter display

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

If the Active AirClean filter indicator is activated, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Activating the water filter indicator

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When the water filter indicator is activated, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Setting the ice cube tray cleaning position

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

It will now take some time for the ice cube tray to rotate into the cleaning position.

Once the ice cube tray has stopped moving, the ✓ symbol will appear on the display.

- To leave this Settings level, tap the ⮌ symbol.

- Clean the ice cube tray and the ice cube drawer with lukewarm water and liquid dish soap. Wipe thoroughly with clean water and dry with an all-purpose cloth.
- After cleaning, tap ✓.

You will hear the ice cube tray return to its original position.

Switching on cleaning mode

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When cleaning mode is switched on, the symbol will light up orange.

- To leave the Settings level, tap the ⮌ symbol.

Switching off cleaning mode

- Tap the ⚙ symbol.
- Swipe left or right until the symbol is shown in the middle.
- Tap the symbol.

When cleaning mode is switched off, the symbol will light up white.

- To leave the Settings level, tap the ⮌ symbol.

⚠ WARNING! DANGER of electric shock!
Unplug the appliance or trip the circuit breaker.

⚠ WARNING! Fire hazard!
Do not damage the coolant pipework.

The data plate located inside the interior cabinet of the refrigeration appliance must not be removed. The data plate contains information which is required in the event of a fault.

Do not let water get into the electronic or the lighting.

⚠ Risk of damage due to moisture penetration.
The steam from a steam cleaner can damage plastic and electrical components.
Do not use a steam cleaner to clean the refrigeration appliance.

Defrosting

The fridge zone and the PerfectFresh Active zone defrost automatically.

The refrigeration appliance is equipped with a NoFrost system that defrosts the freezer zone automatically.

Cleaning agents

Cleaning and care products used in the interior cabinet of the refrigeration appliance must be food safe.

To avoid damaging the surfaces of your appliance, **do not** use the following:

- cleaning agents containing soda, ammonia, acids, or chloride
- cleaning agents containing limescale remover
- abrasive cleaning agents, such as scouring powder, scouring liquid, or pumice stones
- cleaning agents containing solvents
- stainless steel cleaners
- dishwasher cleaning agents
- oven sprays
- cleaning agents for glass-ceramic cooktops (except to clean the glass front)
- glass cleaners (except to clean the glass front: For this, a glass cleaner containing a little alcohol, but no citric or similar additives, may be used)
- hard, abrasive sponges and brushes, such as pot scrubbers
- eraser sponges
- sharp metal scrapers

We recommend using a clean sponge and lukewarm water with a little liquid dish soap to clean the surfaces of the appliance.

Preparing the refrigeration appliance for cleaning

Cleaning the fridge zone only:

Use the cleaning mode .

- Take any food out of the fridge zone and store it in a cool place.
- If necessary, take out all removable parts for cleaning.

Cleaning the freezer zone/the entire refrigeration appliance:

- Turn the refrigeration appliance off.

The ⏻ symbol appears on the display and the cooling system is switched off.

- Take any food out of the freezer zone/ refrigeration appliance and store it in a cool place.
- If necessary, take out all removable parts for cleaning.

Cleaning the Interior

Clean the appliance regularly, or at least once a month.

If soiling is left on for any length of time, it may become impossible to remove under certain circumstances.
Surfaces may become discolored or damaged.
It is therefore best to remove any soiling immediately.

- Clean the **interior** with a clean sponge, lukewarm water, and a little liquid dish soap.
- After cleaning, rinse with clean water and dry everything with a cleaning cloth.

Keep the condensate channel and the condensate drain hole clean. The condensate must always be able to drain properly.

- Clean the condensate channel and drain hole with a small stick or similar object.
- To ensure the refrigeration appliance is adequately ventilated and to prevent odors, leave the refrigeration appliance door open for a short time.

Cleaning accessories by hand or in the dishwasher

The following components must be cleaned **by hand** only:

- the charcoal filter holder (AirClean system)
- the stainless steel trims of the door rack for bottles
- shelf with printing
- the dividing plate and bottle rack
- all drawers and compartment lids (these vary depending on model)
- the containers from the pull-out units

The following components are **dishwasher-safe**:

⚠ Risk of damage due to high dishwasher temperatures.
Parts of the refrigeration appliance may become unusable, e.g., deform, if they are washed in the dishwasher at more than 130°F (55°C).
For dishwasher-safe components, always select dishwasher programs with a maximum temperature of 130°F (55°C).

Contact with natural dyes from carrots, tomatoes, and ketchup, etc., may discolor the plastic parts in the dishwasher. This discoloration does not affect the stability of the parts.


- the bottle holder (divider)
- shelves and bottle shelves in the appliance door (without stainless steel trim)
- the adjustable shelves (without the strips or printing)
- the 2 pieces that make up the water container for the humidifier

Removing, dismantling, and cleaning accessories

Dismantling the door rack for bottles

Before cleaning the door rack for bottles in the dishwasher, remove the bottle holder (divider) and the stainless steel trim.


- Place the door rack for bottles on the countertop.
- Pull the bottle holder (divider) upward out of the door rack for bottles.

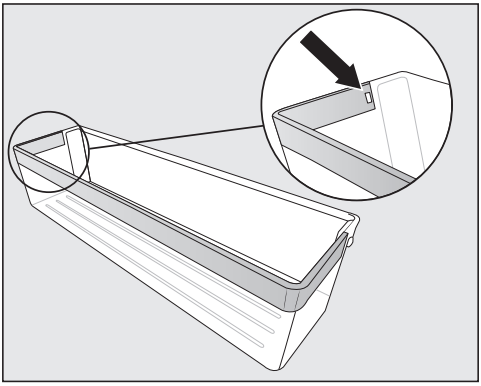

- Press the retainer out of the recess. The entire section of stainless steel trim will now come off the shelf.
- After cleaning, reattach the stainless steel trim to the shelf by following the same procedure in reverse.


Removing the dividing plate for cleaning and reinserting it

- Remove the two front and two rear glass shelves from the dividing plate.

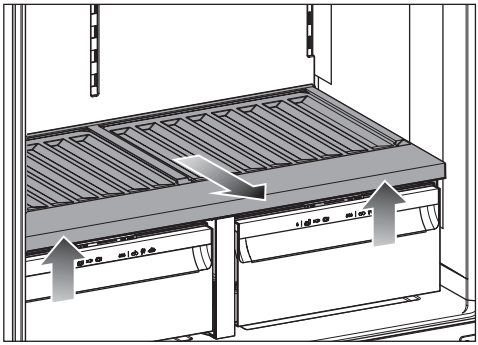

- Lift the dividing plate at the front and pull it out.


The two compartment lids of the drawers are visible. Do not place any food on them.

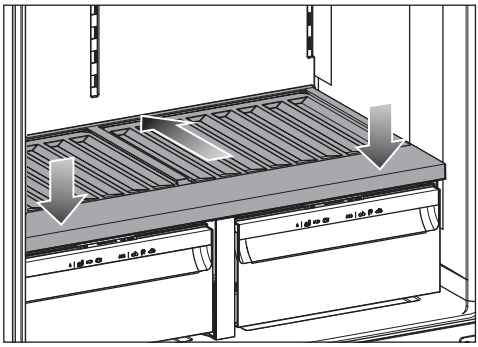


- After cleaning, slide the dividing plate all the way in and push it down.
- Place the glass shelves back on the dividing plate.

Removing the compartment lid for cleaning and reinserting it

The drawers of the fridge zone and the dividing plate have already been removed.

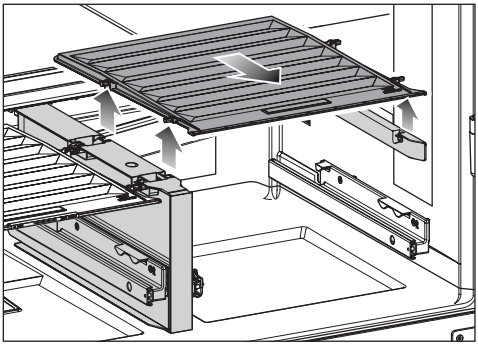

- Lift the lid at the front and pull it out.

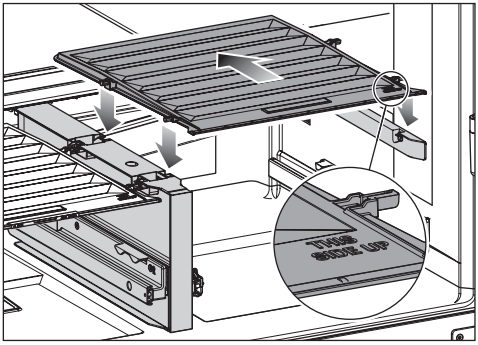

- After cleaning, slide the compartment lid back in again.

Cleaning the ice maker

How to flush the water system and clean the ice cube tray is described in "Commissioning – Putting the ice maker into operation".

Clean the ice maker when commissioning for the first time and if you have not used ice cubes for more than 5 days.

The ice cube tray **cannot be removed** and therefore has to be moved into the cleaning position.

In Settings mode ⚙, the "Cleaning position of the ice cube tray ⓘ" function can be selected when the ice maker is activated.

Changing the water filter (active charcoal filter)

Depending on the quantity of water dispensed or ice cubes produced, the water filter needs to be changed approximately every 6 months. A prompt will appear on the display if you have activated the reminder function.

Tip: If you have hardly used the water dispenser or ice maker in recent weeks or if the ice cubes smell unpleasant, replace the water filter early.

- Remove the left-hand drawer from the fridge zone.
- Remove the water filter by turning it approx. 90° to the left.
- Empty the used water filter.

Tip: The used water filter can be disposed of with household waste.

- Insert the water filter and turn it to the right as far as it will go (approx. 90°).

⚠ Risk of damage caused by water running out.
If the water filter is not inserted correctly, there is a risk of water flowing into the refrigeration appliance under the PerfectFresh drawer.
When inserting the new water filter, make sure that you screw it in as far as it will go.

- Replace the drawer.

Once the active charcoal filter has been replaced, the filter display must be reset.

Reactivating the charcoal filter (AirClean system) in the oven

⚠ Risk of mold.
For hygiene reasons, the charcoal filters must not be left in the fridge zone for more than 6 months without being reactivated or replaced.
Reactivate or replace the charcoal filters when you are prompted to do so on the display. Alternatively, remove the charcoal filters from the fridge zone if they are not in use.

⚠ Fire hazard due to incorrect cleaning by hand or in the dishwasher.
If the charcoal filters are cleaned by hand or in the dishwasher, cleaning agent residue may remain in the honeycomb sections.
When the filters are then reactivated in the oven, the high temperature may cause the cleaning agent residues to ignite.
Make sure that the charcoal filters do not come into contact with cleaning agents.

⚠ Risk of damage as a result of incorrect handling.
The carbon filters are breakable.
When handling the carbon filters, be careful not to drop them.
Do not press down on the honeycomb structure of the carbon filters.

If your oven has a removable grease filter in the rear panel of the oven compartment, remove it temporarily.
See the operating instructions supplied with the oven for information on how to do this.

- Do not pre-heat the oven compartment.
- Place the charcoal filters **in the retainer** on a baking tray in the middle of the oven compartment.
- Switch on the oven or oven function. Select the operating mode Convection Bake (recirculation), 400°F (200°C). Reactivation duration: 90 minutes.

During the reactivation process, odors may be given off. Reactivation must take place in a well-ventilated room.

⚠ Risk of damage due to hot charcoal filters.
Heat-sensitive surfaces can be damaged.
Do not take the hot charcoal filters in the retainers out of the oven prematurely and do not place them on heat-sensitive surfaces while they are hot.

- Wait until the charcoal filters have cooled down fully before removing the charcoal filters and retainer from the oven compartment.

Before using the charcoal filter again, check it for any visible damage. Never use a damaged charcoal filter.

- Wash your hands with soap and water after inserting the charcoal filter.

Once the charcoal filters have been reactivated in the oven or the charcoal filters have been replaced, the filter display needs to be reset. A notification on the display will remind you to do so.

Cleaning the machine front and the side panels

If soiling is allowed to sit for any length of time, it may become impossible to remove. Surfaces may become discolored or damaged.
It is therefore best to remove soiling from the appliance front and side panels immediately.

All surfaces are easily scratched. Contact with unsuitable cleaning agents can alter or discolor the surfaces.
See the information on “Cleaning agents” at the beginning of this section.

- Clean the surfaces with a clean sponge and a solution of warm water and liquid dish soap. A clean, damp microfiber cloth without cleaning agent can also be used for cleaning.
- After cleaning, wipe with clean water and dry with a soft cloth.

Cleaning the door seal

⚠ Risk of damage as a result of incorrect cleaning.
If you treat the door seal with oils or grease, it can become porous.
Do not use any oils or grease on the door seal.

- The door seals should be cleaned regularly with clean water, and then wiped dry with a soft cloth.

Cleaning the ventilation openings

- The ventilation openings should be cleaned on a regular basis with a feather duster or vacuum cleaner (you could use a Miele vacuum cleaner dusting brush, for example).

After cleaning

- Place all shelves and accessories back in the refrigeration appliance.
- Switch the refrigeration appliance back on, if necessary.
- Switch the fridge zone cleaning mode off again, if necessary.
- Switch the SuperFreeze function on for a while so that the freezer zone can cool down quickly.
- Switch the SuperCool&AirClean function on for a while so that the fridge zone can cool down quickly.
- Place food in the fridge zone.
- Close the appliance doors.
- Once the temperature in the freezer zone is cold enough, you can place the food to be frozen in the freezer zone and return the drawers to the freezer.
- Switch the SuperCool&AirClean function off once food and drinks are sufficiently chilled.
- Switch off the SuperFreeze function as soon as the temperature in the freezer zone is a constant 0°F (-18°C) or colder.

Frequently asked questions

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact Miele Service.

More information to help you rectify faults yourself can be found at https://www.mieleusa.com/support/customer-assistance.

To prevent cold from escaping, open the appliance doors as little as possible until the fault has been corrected.

Other problems

Problem	Possible cause and solution
The refrigeration appliance is not cooling.	The refrigeration appliance has not been turned on. ■ Turn the refrigeration appliance on.
	The electrical plug is not inserted in the socket correctly or the plug connector is not inserted into the socket at the back of the machine correctly. ■ Insert the electrical plug into the socket and the plug connector into the machine socket.
	The circuit breaker has tripped. There could be a fault with the refrigeration appliance, the household electrical wiring, or another appliance. ■ Contact a qualified electrician or Miele Service.
The compressor runs continuously.	This is not a fault. To save energy, the compressor runs at a lower speed when less cooling is required. This increases the compressor run time.
The compressor is turning on more frequently and for longer periods of time; the temperature in the refrigeration appliance is too low.	The appliance doors have been opened too frequently. Or large amounts of fresh food have been placed in the appliance. ■ Only open the appliance doors when necessary and for as short a time as possible.
	The appliance doors are not closing fully. The temperature in the refrigeration appliance is dropping. ■ Check that the appliance doors are seated correctly and use the screws in the hinges to adjust them if necessary.
	The appliance doors are not closed properly. If a thick layer of ice has already formed, this will affect cooling and increase energy consumption.

Problem	Possible cause and solution
	■ Always close the appliance doors fully. ■ Defrost the refrigeration appliance if necessary and clean it.
	The ambient temperature is too high. The higher the ambient temperature, the longer the compressor runs. ■ See the information in “Installation – Installation site”.
	The ventilation openings are obstructed or dusty. ■ Do not block the ventilation openings. ■ Clean the ventilation openings on a regular basis to remove any dust.
	Built-in appliances: The refrigeration appliance was not properly installed in the niche. ■ Install the refrigeration appliance in the niche as described in the installation instructions.
The compressor is switching on more frequently and for longer periods of time; the temperature in the refrigeration appliance is too low.	The ventilation openings are obstructed or dusty. ■ Do not block the ventilation openings. ■ Clean the ventilation openings on a regular basis to remove any dust.
	The appliance doors have been opened too frequently or a large amount of fresh food has been put in all at once for storage or freezing. ■ Only open the appliance doors when necessary and for as short a time as possible. After a while, the temperature will return to normal by itself.
	The appliance doors are not closed properly. A thick layer of ice may have already formed in the freezer zone. ■ Close the appliance doors. After a while, the temperature will return to normal by itself. If a thick layer of ice has already formed, this will affect cooling and increase energy consumption. ■ Defrost the refrigeration appliance and clean it.
	The ambient temperature is too high. The higher the ambient temperature, the longer the compressor runs.

Frequently asked questions

Problem	Possible cause and solution
	■ See the information in “Installation – Installation site”.
	The refrigeration appliance was not properly installed in the niche. ■ Install the refrigeration appliance in the niche as described in the installation instructions supplied with it.
	The temperature setting in the refrigeration appliance is too low. ■ Correct the temperature setting.
	A large amount of food was put in for freezing all at once. ■ Refer to the instructions in “Operation – Freezing and storing fresh food”.
	The SuperCool&AirClean function ❄ is still switched on. ■ Switch off the SuperCool&AirClean function ❄ earlier to save energy.
	The SuperFreeze function ❄ is still switched on. ■ Switch off the SuperFreeze function ❄ earlier to save energy.
The temperature in the refrigeration appliance is too high. The frozen food (depending on the model) defrosts.	This is not a fault. The temperature setting is too high. ■ Correct the temperature setting. ■ Check the temperature again after 24 hours.
	The ambient temperature is too low for this refrigeration appliance. If the ambient temperature is too low, the compressor will run less frequently. The temperature in the refrigeration appliance rises. ■ See the information on the ambient temperature (“Installation” ⇨ “Installation site”). ■ Increase the ambient temperature.
Ice or condensation has built up inside the refrigeration appliance. The appliance door may not close correctly.	The door seal has come out of its groove. ■ Check that the door seal is correctly positioned in the groove.
	The door seal is damaged. ■ Check whether the door seal is damaged.

Problem	Possible cause and solution
The door seal is damaged or needs to be replaced.	The door seal can be partially replaced without tools. ■ Contact Miele Service.
The soft-close mechanism is damaged or needs to be replaced.	The soft-close mechanism can be replaced without tools. ■ Replace the soft-close mechanism. A new soft-close mechanism is available from your specialist dealer or from Miele Service.
The food is affected by the ◊◊◊ setting in the humidity-controlled compartment.	There is too much condensate in the humidity-controlled compartment. ■ Wipe off any condensate with a cloth. ■ Place a rack or similar item in the compartment so that excess moisture can drain away. ■ Open the compartment lid by moving it to the low humidity ◊ position. ■ Switch off the humidifier (depending on the model).
Food has frozen together or to the wall.	The food packaging was not dry when loaded in the freezer. ■ Use a blunt instrument (such as a spoon handle) to carefully pry them apart.
The charcoal filter is coming into contact with liquid.	The charcoal filter is coming into contact with liquid when food is being placed into or moved around inside the fridge zone. ■ Remove the charcoal filter from the fridge zone and dispose of it with normal household waste. ■ Dispose of unsealed food that has been stored underneath the charcoal filter. ■ Clean the cover of the charcoal filter, the filter retainer, and its holder in the fridge zone with a clean sponge cloth and lukewarm water. ■ If necessary, clean the surface underneath the charcoal filter. ■ Replace the charcoal filter with a new one.

Frequently asked questions

Problem	Possible cause and solution
An alarm does not sound even though the appliance door has been open for a long time.	This is not a fault. The alarm has been switched off in Settings mode. If you want to switch the audible alarm back on again: ■ Tap the ⚙ symbol. ■ Swipe left or right until the 🔕 symbol is shown in the middle. ■ Tap the 🔕 symbol. ■ Select the volume you want by swiping the segment bar to the right. ■ Confirm the setting you want by tapping the segment bar. When the alarms and audible signals are switched on, the 🔊 orange symbol will light up.
The external walls of the refrigeration appliance feel warm.	This is not a fault. The warmth created by the evaporator is used to prevent condensation.
The seals inside the fridge zone door and the drawers feel warm to the touch.	This is not a fault. All door and drawer seals in the refrigeration appliance are equipped with a heater. The heater turns on automatically when humidity is high, preventing condensation from forming.

Messages in the display

Message	Possible cause and solution
The ▮ symbol lights up in the start display; the refrigeration appliance does not get cold even though the controls and the interior lighting are working.	Demo mode has been activated. ■ Tap the ⏻ symbol. ■ Tap the ⚙ symbol. ■ Swipe left or right until the ▮ symbol is shown in the middle. ■ Tap the ▮ symbol. After demo mode ▮ has been switched off, the refrigeration appliance shuts down and must be switched on again.

Message	Possible cause and solution
is lit up on the display and the appliance cannot be used.	The Cleaning mode function is still switched on. ■ Switch the Cleaning mode function off again by tapping on on the status display. ■ Tap again. When Cleaning mode is switched off, the symbol will light up white. The refrigeration appliance will start cooling again.
Nothing is visible on the display. The display is completely blank.	Sabbath mode is switched on. The interior lighting is switched off and the refrigeration appliance is cooling. ■ Tap the blank display. The symbol appears on the display. ■ Tap the symbol. The symbol lights up orange. ■ Tap the symbol again. When Sabbath mode is switched off, the symbol will light up white.
	Energy-saving mode is switched on: If you do not interact with the display for a certain period of time, it switches to energy-saving mode and goes dark.
The symbol is lit up on the display and the refrigeration appliance cannot be used.	The lock function has been activated. ■ Unlock the refrigeration appliance temporarily or switch the lock function off completely.
The symbol lights up yellow on the display.	The charcoal filter indicator reminds you to reactivate the charcoal filters approximately every 6 months. ■ Reactivate the charcoal filters and confirm that you have changed the charcoal filters by tapping the symbol on the display. The symbol will go out on the start display.
The symbol lights up yellow on the display.	The charcoal filter indicator reminds you to replace the charcoal filters. This indicator appears when the charcoal filters have already been reactivated 5 times. ■ Replace the charcoal filters. ■ Confirm that you have changed the charcoal filters by tapping the symbol on the display. The symbol will go out on the start display.

Message	Possible cause and solution
lights up yellow in the display and an audible signal sounds.	The drawer for the ice-cube maker is full. ■ Remove the drawer and empty it.
The ⚠ symbol lights up yellow on the temperature display for the fridge zone and/or the freezer zone; additionally, an alarm is sounding and the interior lighting is pulsating.	The door alarm has been activated. ■ Touch the ⚠ symbol on the display for several seconds. The alarm will stop, the ⚠ symbol will go out and the interior lighting will light up again constantly. ■ Close the relevant appliance door.
The ⚠ symbol lights up red on the freezer zone temperature display and an alarm also sounds.	The temperature alarm has been activated; the temperature in the freezer zone has risen higher than the temperature set. Possible reasons for this include: – The appliance door has been opened too frequently. – A large quantity of fresh food has been placed in the freezer without switching on the SuperFreeze function. – A prolonged power outage has occurred. – The refrigeration appliance has a fault. ■ Tap the ⚠ symbol. The alarm message is confirmed: The ⚠ symbol will go out and the alarm will stop. The warmest temperature recorded in the freezer zone will flash for about 1 minute in the display. Then the temperature display will change to the current temperature in the freezer zone. You can exit from the flashing temperature display early: ■ Touch the temperature display for the freezer zone. The warmest temperature display will disappear. The temperature display will then revert to showing the current temperature in the freezer zone. ■ Rectify the cause of the alarm. ■ Depending on the temperature displayed, you should check whether food in the freezer has started to thaw or has defrosted. If it has, cook it before freezing it again.

Message	Possible cause and solution
The ⚠ symbol lights up red on the display and an alarm sounds.	Indication of a power outage: The temperature in the freezer zone over the last few days or hours has risen too high because of a power outage or interruption to the power supply. ■ Tap the ⚠ symbol. The fault message is confirmed: The ⚠ symbol will go out and the alarm will stop. The warmest temperature recorded in the freezer zone will flash for about 1 minute on the temperature display for the freezer zone. Then the temperature display will change to the current temperature in the freezer zone. You can exit from the flashing temperature display early: ■ Touch the temperature display for the freezer zone. The warmest temperature display will disappear. The temperature display will then revert to showing the current temperature in the freezer zone. The refrigeration appliance will go back to the last temperature setting when the power is restored. ■ Rectify the cause of the alarm. ■ Depending on the temperature displayed, you should check whether food in the freezer has started to thaw or has defrosted. If it has, cook it before freezing it again.

Frequently asked questions

Message	Possible cause and solution
The ⚠ symbol lights up red in the display and a fault code F with numbers may appear. An alarm is also sounding.	A fault has occurred. ■ Tap the 🔕 symbol in the display to switch the alarm off. ■ Contact Miele Service. To report the fault, you need the fault code and also the model number and serial number of your refrigeration appliance. You can access this information on the display: ■ Tap the ℹ symbol in the display. The appliance data required will be shown on the display. Confirm with the ✓ symbol to exit the information display and the fault code will be shown again in the display. The refrigeration appliance can be switched off directly from the fault message display.
⚠ lights up red on the display and an alarm also sounds.	There is a fault with the ice maker. ■ Tap ⚠ on the display to switch the alarm off. ■ Contact Miele Service.

Problems with the humidifier

Problem	Possible cause and solution
The humidifier is not supplying moisture to the food in the PerfectFresh Active zone	The humidifier is not switched on. ■ Tap the symbol in Settings mode ⚙.
	The compartment lid has been pulled forwards to the “Low humidity 💧” setting. ■ Push the compartment lid backward so that the “Increased humidity 💧💧💧” setting is selected.
	There is not enough water in the water container. ■ Fill the water container.
	The water container is not installed correctly. ■ Insert the water container, making sure it clicks into position correctly.
	There is dirt in front of the humidifier. ■ Clean the humidifier and the water container.

Problems with the water dispenser

Problem	Possible cause and solution
The water dispenser cannot be operated.	The refrigeration appliance has not been turned on. ■ Turn the refrigeration appliance on.
	The water inlet is not open or vented. ■ Open the water inlet. ■ Check whether the water inlet is vented.
	There is a kink in the water hose. ■ Check the water hose and replace it if necessary.
	The water connection pressure is too low. ■ Check whether the water connection pressure is high enough (depending on the model).
The water from the water dispenser does not taste good.	If you dispense water from the water dispenser again after a longer period of time, it may be stale. ■ In this case, pour away the first 15 glasses of water.

Problems with the ice cube maker

Problem	Possible cause and solution
The ice maker is not producing any ice cubes.	The refrigeration appliance or ice maker is not switched on. ■ Switch the refrigeration appliance and the ice maker on.
	The ice cube drawer is not closed properly (depending on the model). ■ Insert the ice cube drawer properly.
	The appliance door has been opened too frequently, causing the compressor to turn on more often and the ice maker has iced up. ■ Only open the appliance door when necessary and for as short a time as possible.
	The temperature in the freezer zone is too high. ■ Select a lower temperature.
	Refrigeration appliances with water container: The water container is not sufficiently full. ■ Fill the water container.
	The water container is not inserted correctly.

Problem	Possible cause and solution
	■ Insert the water container, making sure it clicks into position correctly.
	Refrigeration appliances with plumbed water connection: The water inlet is not open or not vented. ■ Open the water inlet. ■ Check whether the water inlet is vented.
	The water hose has a kink. ■ Check the water hose and replace it if necessary.
	The water connection pressure is too low. ■ Check whether the water connection pressure is high enough (depending on the model). **Remember that it can take up to 24 hours for the production of ice cubes to commence.**
The ice maker is producing only a few, small, or deformed ice cubes.	The temperature in the refrigeration appliance/freezer zone is too high. ■ Select a lower temperature.
	Food or objects are blocking the fill level sensor for the ice maker (depending on the model). ■ Remove all food and objects from the area around the ice maker.
	Refrigeration appliances with plumbed water connection: The water connection pressure is too low. ■ Check whether the water connection pressure is high enough (depending on the model). ■ Check if an incorrect valve has been installed.
	Several domestic appliances connected to the plumbed water connection are in operation, which has reduced the amount of water being taken in. ■ Avoid using the dishwasher, washing machine, etc. at the same time.
	The water filter (installation depending on the model) is clogged. ■ Replace or clean the water filter.

Problem	Possible cause and solution
The ice cubes have an unpleasant odor or flavor.	The ice cube container is seldom emptied. Ice cubes that are stored for a long period can absorb the taste and smell of other items. ■ Empty the ice cube container. ■ Clean the ice cube container.
	There are unsealed food packages in the freezer zone. Ice can absorb the taste and smell of unsealed food. ■ Store only sealed food in the freezer zone.
	The water filter (depending on the model) is dirty. ■ Replace or clean the water filter.
Water is flowing out of the refrigeration appliance.	The water inlet is faulty. ■ Close the faucet immediately. ■ Check the entire plumbed water connection for leaks. ■ Check whether the water connection pressure is too high (depending on the model). ■ Check if an incorrect valve has been installed. ■ Contact Miele Service if necessary.

Interior lighting

⚠ Risk of electric shock due to exposed, live electrical components.

When removing the lighting cover, there is a risk of coming into contact with live electrical components.

Do not remove the lighting cover. The LED lighting may only be repaired or replaced by Customer Service.

⚠ Risk of injury from LED lighting.

This lighting corresponds to risk group RG 2. If the cover is defective, there is a risk of eye injury.

If the lighting cover is defective, do not look from a close range directly into the lighting with optical instruments (e.g., magnifying glass or similar).

Frequently asked questions

Problem	Possible cause and solution
The interior lighting is not working.	The refrigeration appliance has not been turned on. ■ Turn the refrigeration appliance on.
	Sabbath mode is switched on: The display is dark and the refrigeration appliance is cooling. ■ Tap the blank display. The symbol will appear in the display. ■ Tap the symbol. The symbol lights up orange. ■ Tap the symbol in Settings mode. When Sabbath mode is switched off, the symbol will light up white.
	To avoid overheating, the interior lighting switches itself off automatically after approximately 15 minutes if the appliance door is left open. If this is not the cause, there is a fault. ■ Contact Miele Service.
The interior lighting is pulsating.	This is not a fault. The door alarm has been activated.

Causes of noises

The refrigeration appliance is producing various noises during operation.
If the cooling performance is low, the refrigeration appliance will conserve energy but operate for longer. The volume will be lower.
Food will be chilled faster if the cooling performance is high.
The volume will be higher.

Normal noises	What is causing the noises?
Hissing	Refrigerant is being injected into the cooling circuit.
Bubbling, gurgling, splashing	Refrigerant is circulating through the pipes.
Humming	The refrigeration appliance is cooling.
Clicking	The thermostat is switching the compressor on or off.
Humming, whirring	The fan is running. The automatic door opener (depending on the model) is opening or closing the appliance door.

Cracking	Material in the refrigeration appliance is expanding.
Rattling	Valves or flaps are active.
Buzzing (refrigeration appliances with water container)	Water is being pumped out of the water container.
Slurping (refrigeration appliances with soft-close mechanism)	The appliance door with soft-close mechanism is being opened or closed.
Please keep in mind that a certain amount of noise is unavoidable (from the compressor and the refrigerant circulating through the cooling circuit).	

Noises	Cause and solution
Vibrating, rattling, clinking	The refrigeration appliance is uneven. Use a level to check and adjust the alignment of the refrigeration appliance. The refrigeration appliance is aligned by raising or lowering the adjustable feet (depending on the model) underneath it. **For built-in appliances (depending on the model)**: For niches of 55 1/8" (140 cm) and more: place the stabilizing rods supplied underneath the appliance base.
	The refrigeration appliance is touching another appliance or piece of furniture. Move it away.
	Drawers, baskets, or shelves are jiggling or are stuck. Check all removable items and reinsert them correctly.
	Bottles or containers are touching each other. Separate bottles or containers slightly.
	The transport cable clips (depending on the model) are hanging loose at the back of the appliance. Remove the transport cable clips.

Information to help you rectify faults yourself and about Miele spare parts can be found at www.miele.com/service.

Contact in the event of a fault

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or Miele Customer Service.

You can book a Miele Customer Service call online at www.miele.com/service.

Contact information for Miele Customer Service can be found at the end of this document.

Please quote the model identifier and serial number of your appliance (SN) when contacting Miele Customer Service. Both numbers can be found on the data plate inside the refrigeration appliance or, depending on the model, in Settings mode under Information **i**.

Appliance warranty and product registration

You can register your product and/or view the manufacturer´s warranty terms and conditions for Miele appliances and vacuum cleaners at www.mieleusa.com.

Declaration of conformity

Frequency range	2.412 GHz – 2.462 GHz
Maximum transmitting power	< 100 mW

Copyrights and licenses

For the purpose of operating and controlling the communication module, Miele uses proprietary or third-party software that is not covered by open source licensing terms. This software/these software components are protected by copyright. The copyrights held by Miele and third parties must be respected.

In addition, the integrated communication module contains software components which are distributed under open source licensing terms. You can access these open source components along with the associated copyright notices, copies of the valid licensing terms, and any additional information locally via IP using a web browser (http[s]://<ip address>/Licenses). The liability and warranty arrangements for the open source licenses displayed in this location only apply in relation to the respective rights holders.

Please have the model and serial number of your appliance available when contacting Customer Service.

U.S.A.

Miele, Inc.

National Headquarters
9 Independence Way
Princeton, NJ 08540
www.mieleusa.com

Customer Support
Phone: 888-99-MIELE (64353)
info@mieleusa.com

International Headquarters
Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh
Germany

Canada

Importer
Miele Limited

Headquarters and Miele Centre
161 Four Valley Drive
Vaughan, ON L4K 4V8
www.miele.ca

Customer Care Centre
Phone: 1-800-565-6435
905-532-2272
contact@miele-support.ca

Miele

KFFD 6867 ...

en-US

M.-Nr. 13 076 920 / 01 / 002