

 Please read the Operating Instruction manual and observe the Warning and Safety instructions before using this machine.


Short operating instructions PT 8301 SL COP

① **Press the Mains On/Off switch ①.**

② **Load the drum and close the door.**

③ **Press the Temperature selection button ②.**

One of the LEDs will light up.

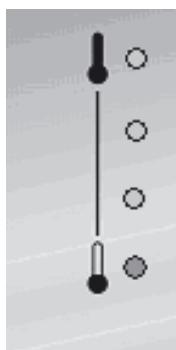

- | | |
|---------------|--|
| High | Cottons , for cotton and linen fabric |
| Medium | Minimum iron , for synthetic and mixed fibre fabric |
| Low | Delicates , for synthetic fibre fabrics and rayon |
| Cold | For airing fabric |

④ **Insert coins or tokens. The START/STOP button will start flashing.**

⑤ **Press the START/STOP button.**

Interrupt the programme by opening the drum door or the fluff filter compartment flap:
Close the drum door/fluff filter compartment flap and press the START/STOP button to continue the programme.

At the end of the drying duration

	Drying flashes
	Cooling down lights up
	Programme finished flashes

The cooling down phase will begin. **The warm laundry can be removed.**

	Drying flashes
	Cooling down flashes
	Programme finished flashes

⑥ **Remove the laundry**

 Lees beslist de gebruiksaanwijzing en neem de veiligheidsinstructies en waarschuwingen in acht.


Verkorte gebruiksaanwijzing PT 8301SL COP

① **Druk op de toets ① "Aan/Uit".**

② **Doe de was in de trommel en sluit de deur.**

③ **Druk op de toets ④ "Temperatuurkeuze".**

Het betreffende lampje licht op.

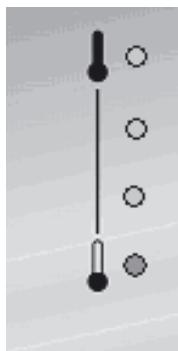

Hoog	Witte/Bonte was (katoen/linnen)
Gemiddeld	Kreukherstellend (synthetisch textiel/mengweefsels)
Laag	Fijne was (synthetische vezels, kunstzijde)
Koud	Luchten van wasgoed

④ **Werp het geld of de waardemunt in. De toets "START/STOP" knippert.**

⑤ **Druk op de toets "START/STOP".**

Programma onderbreken: Open de deur of de klep van de pluizenzeef.

Programma voortzetten: Sluit de deur/klep en druk op de toets "START/STOP".

Na afloop van de droogtijd

	"Drogen" knippert
	"Afkoelen" brandt continu
	"Programma-einde" knippert

De afkoelfase begint. Haal de was nog niet uit de trommel. De was is nog heet!

	"Drogen" knippert
	"Afkoelen" knippert
	"Programma-einde" knippert

⑥ **Haal de was uit de trommel.**