

ESW 7020

29 cm high handleless Gourmet warming drawer

for preheating crockery, keeping food warm and low temperature cooking.



- The ultimate in enjoyment – low temperature cooking
- Always at the right temperature – 4 functions
- Convenient and easy – Touch control
- Opening the drawer couldn't be easier – Push2open
- Better safe than sorry – timer function with automatic switch-off

EAN: 4002516169901 / Material number: 11093320 / Old Material Number: 30702040GB

| Construction type and design | |
|---|-----------------------------|
| Gourmet warming drawer | • |
| PureLine | • |
| Handleless | • |
| Colour | Stainless steel/Clean Steel |
| Operating modes | |
| Cup warming | • |
| Plate warming | • |
| Keeping food warm | • |
| Low temperature cooking | • |
| User convenience | |
| Miele@home | • |
| Capacity | 12 place settings |
| Push2open mechanism | • |
| Fully telescopic runners for easy loading and unloading of the warming drawer | • |
| Control panel with sensor controls | • |
| Control panel with symbols | • |
| Stop programming | • |
| Timer function | • |
| Sabbath programme | • |
| Efficiency and sustainability | |
| Power rating in off mode in W | 0,5 |
| Power rating in standby mode in W | 1,0 |
| Power rating in networked standby in W | 2,0 |
| Time until automatic switch to off mode in min | 20 |
| Time until automatic switch to standby in min | 20 |
| Time until automatic switch to networked standby in min | 20 |
| Cleaning convenience | |
| Stainless steel/CleanSteel finish | • |
| Flush control panel | • |
| Safety | |
| Cool front | • |
| Anti-slip mat | • |
| Safety switch-off | • |
| Technical data | |
| Temperatures min. in °C | 40 |
| Temperatures max. in °C | 85 |
| Appliance width in mm | 595 |
| Appliance height in mm | 289 |
| Appliance depth in mm | 570 |
| Useable interior height in mm | 230 |
| Total rated load in kW | 0,70 |
| Voltage in V | 230 |
| Frequency in Hz | 50-60 |
| Fuse rating in A | 10 |
| Number of phases | 1 |
| Mains cable with plug | • |
| Length of supply lead in m | 2,0 |

ESW 7020

29 cm high handleless Gourmet warming drawer

for preheating crockery, keeping food warm and low temperature cooking.






EAN: 4002516169901 / Material number: 11093320 / Old Material Number: 30702040GB

| Accessories supplied | |
|-----------------------------|---|
| Anti-slip mat | 1 |
| Rack for increased capacity | 1 |


ESW 7020

29 cm high handleless Gourmet warming drawer
for preheating crockery, keeping food warm and low temperature cooking.

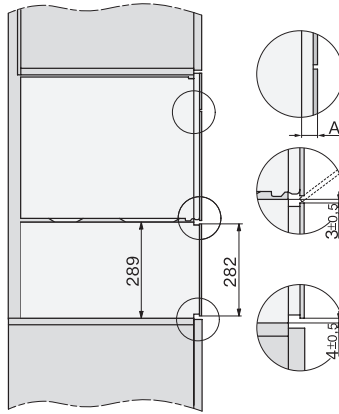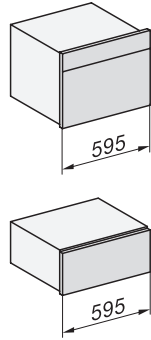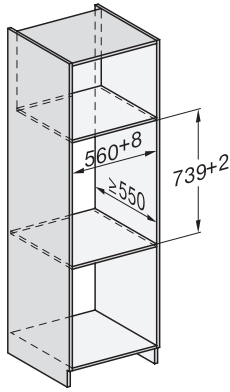




ESW7x20, DGC7x4xHCPro, DGC7x4xHCXPro installation drawings

ESW7x20, DG7xxx, DGM7xxx installation drawings

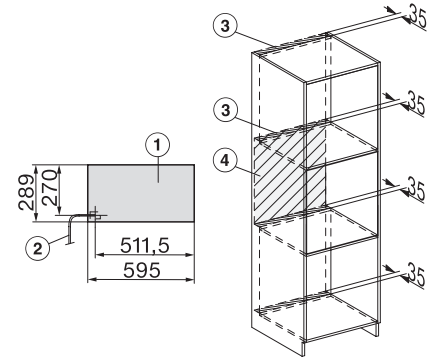


ESW7x20, DGM7x4x installation drawings

1) Front view, 2) Mains connection cable, L=2.000 mm, 3) Ventilation cut min. 180 cm², 4) No connection in this area

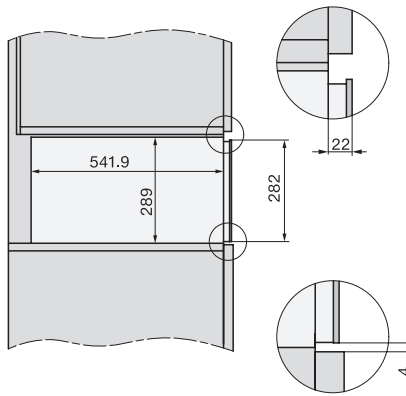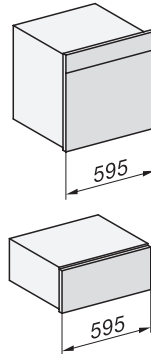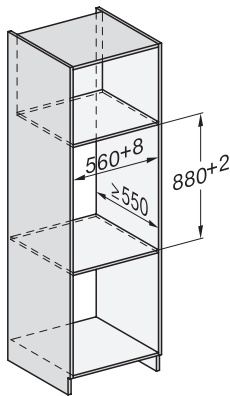

ESW7x20, DGC7x6xHCPro, DGC7x6xHCXPro installation drawings

ESW7020, ESW7120 - installation drawing - GB, AU

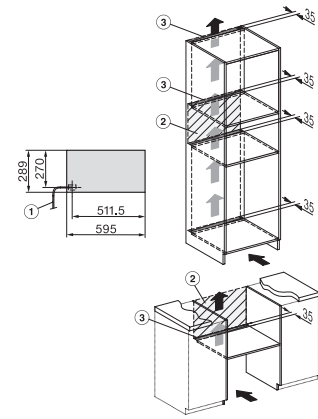

ESW7020, ESW7120 - installation drawing - Installation - GB, AU

1) Front view, 2) Mains connection cable, L=2,000 mm, 3) ventilation cut-out min. 180 cm², 4) no connection in this area