

Installation Plan

Washer-extractor





PW 5105 EL (Electrically Heated)
INDUSTRIAL USE ONLY


It is essential to read the operating and installation instructions before installing, commissioning or using the machine.


This avoids the risk of accidents or damage.

All rights reserved

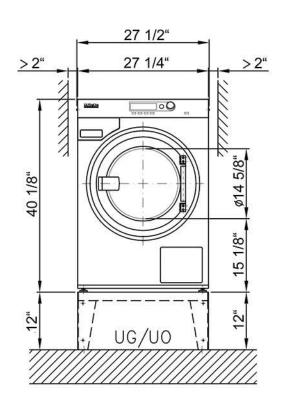

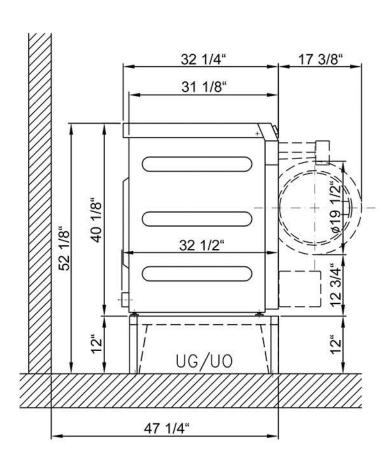

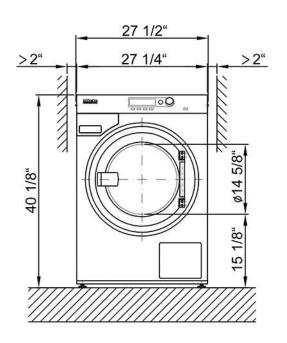


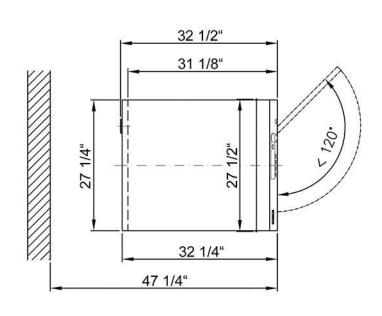



Míel PROFESSION	e
PROFESSION	IAL


Installation plan
Washer PW 5105 EL
-measurements in inches-
-mesures en pouces-


Date	19-Dec-2014
Page	3
Name	DEKAZM

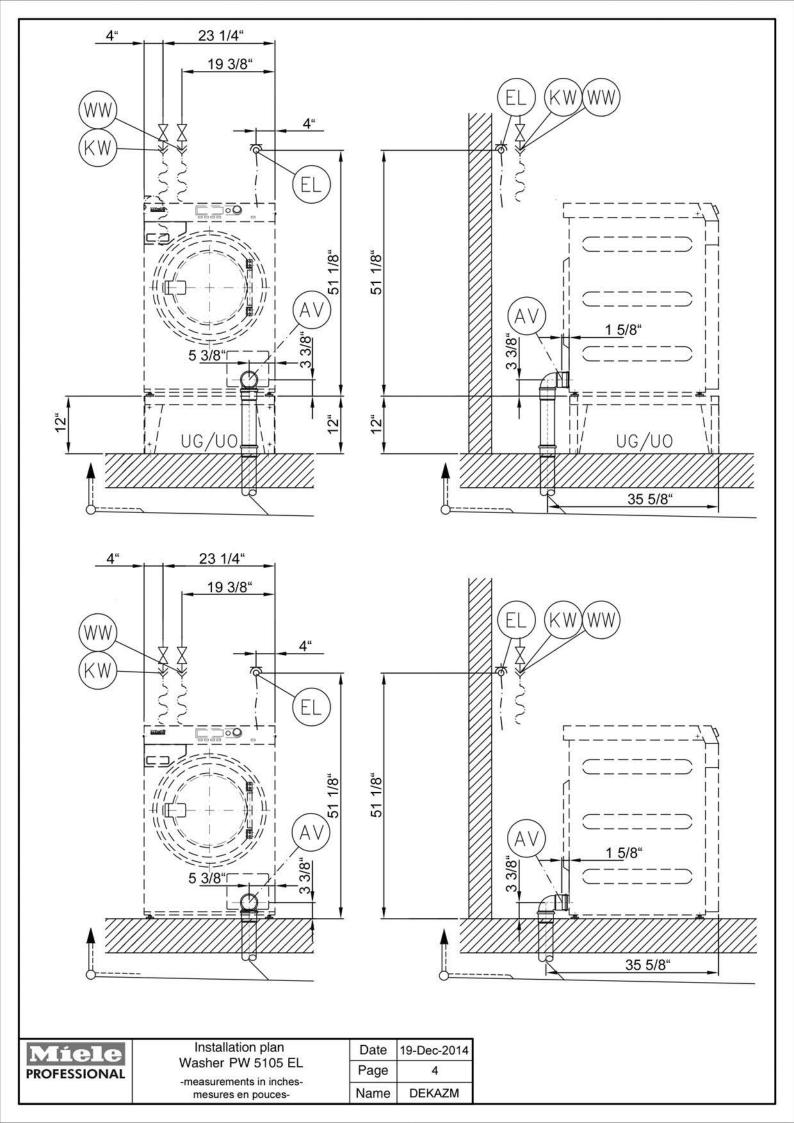

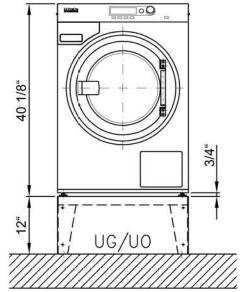

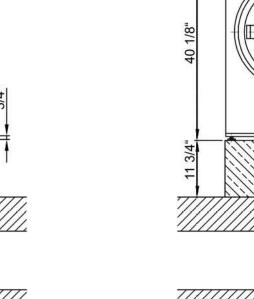


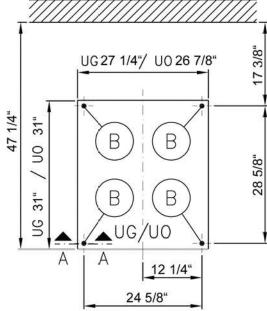


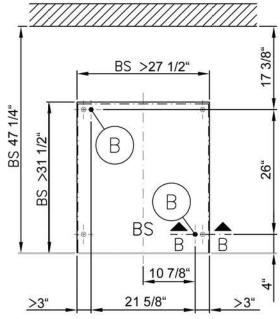

0000

3/4"

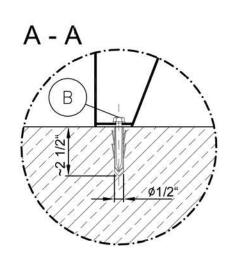

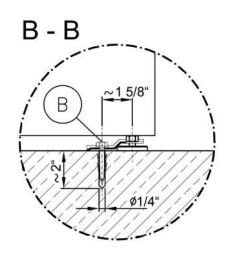



IV.	ń	e	le
PRO	FES	SIC	NAL


Installation plan			
Washer PW 5105 E	L		

-measurements in inches
mesures en pouces-

Date	19-Dec-2014
Page	5
Name	DEKAZM

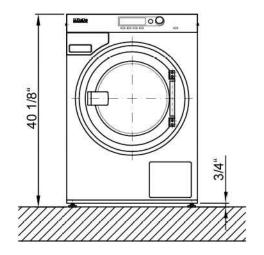

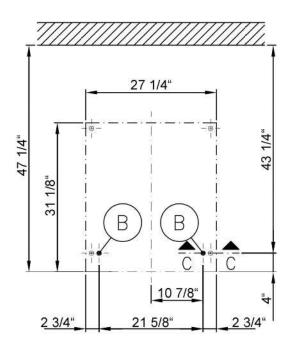


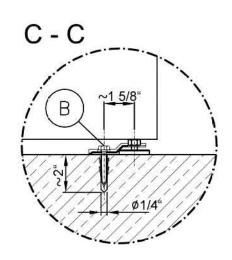



Miel	e
PROFESSION	VAL


Installation plan Washer PW 5105 EL -measurements in inchesmesures en pouces-

Date	19-Dec-2014	
Page	6	
Name	DEKAZM	

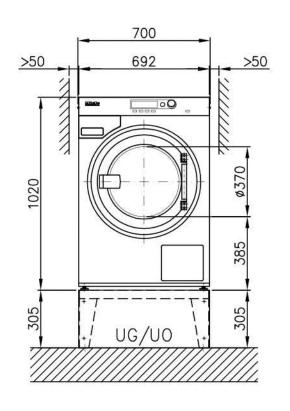

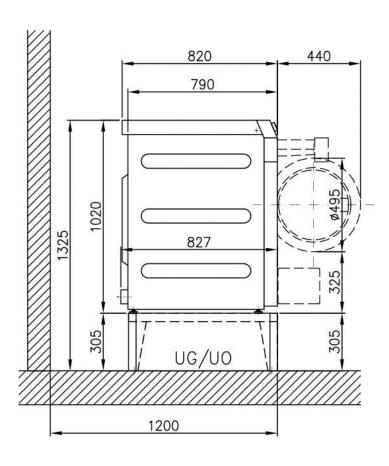

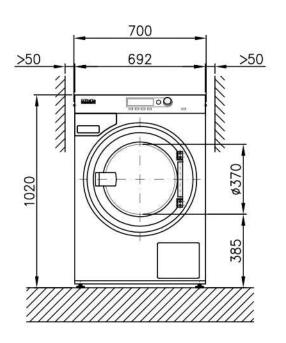

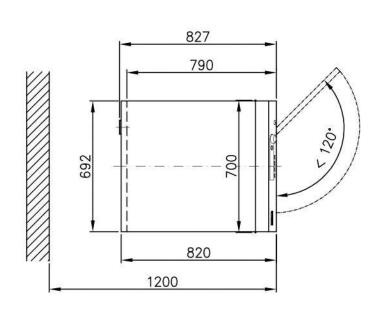



M	iel	le
PRO	FESSIO	NAL


Installation plan Washer PW 5105 EL -measurements in millimeters-


-mesures en millimètres-


	Date	01.12.2010	
	Page	7	
Name		DEBOHD	

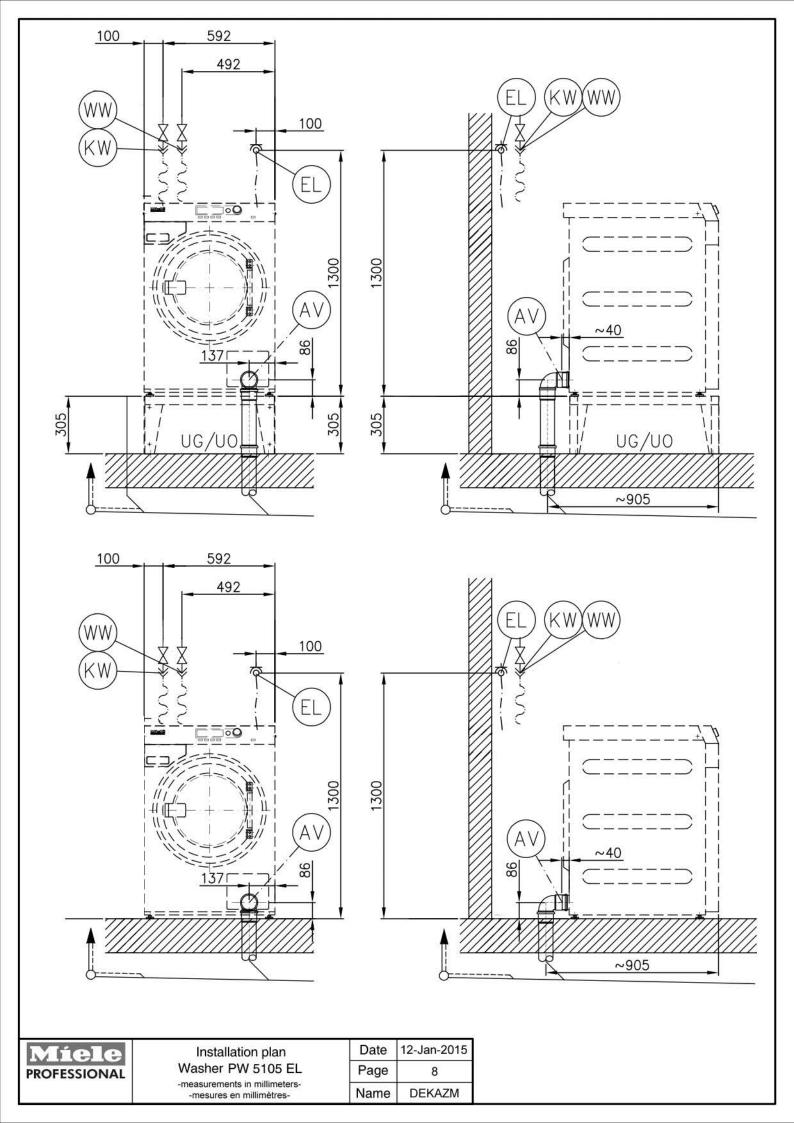


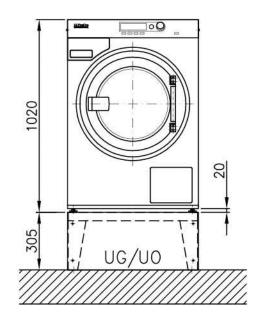


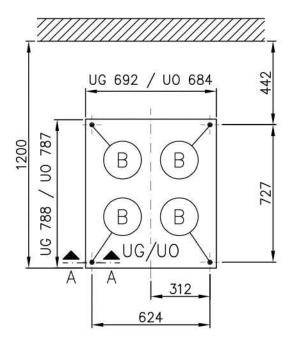

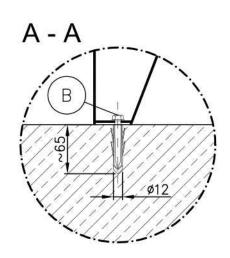

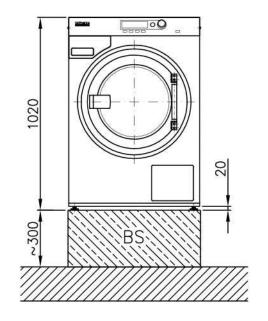

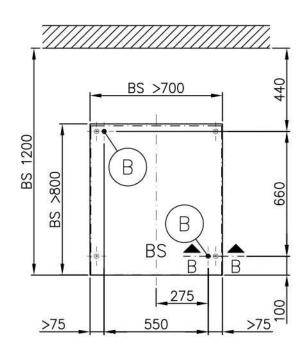

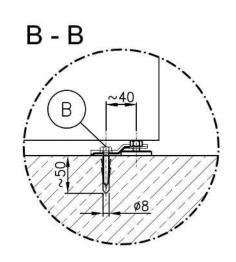



M	íe	le
PRO	FESSIO	NAL


Installation plan Washer PW 5105 EL

-measurements in millimeters--mesures en millimètres-

Date	01.12.2010
Page	9
Name	DEBOHD

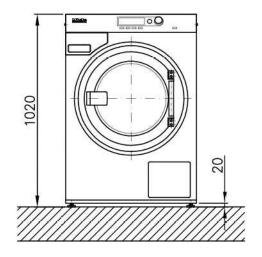

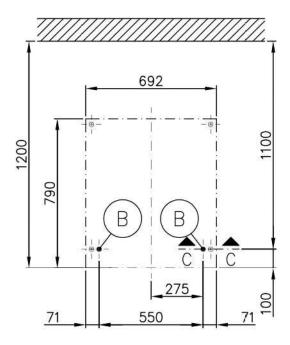

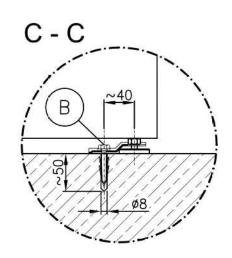

M	f	ì	Ð		е
PRO	FE	S	SIC	N	ΑL

Installation plan Washer PW 5105 EL

-measurements in millimeters--mesures en millimètres-

Date	01.12.2010	
Page	10	
Name	DEBOHD	

Technical datasheet



Washer-extractor:

Heating:

PW 5105 AV (Dump valve) Electric (EL)

Legend:	Abbreviations in bold type: Connection required	en - US
	Abbreviations in circle with dashes:	

Connection optional or required depending on model version

Optional extras:

UM	Miele base	UO 5010 (UO = open base) Height Width Depth	12" 27" 31"	305 mm 684 mm 787 mm
		UG 5010 (UG = closed base) Height Width Depth	12" 27 1/4" 31"	305 mm 692 mm 788 mm
BS	Concrete base	Quality and density of concrete must comply with load. Concrete base must be firmly secured to floor! Recommended height Minimum height Recommended width Recommended depth	11 13/16" 2 3/4" ≥ 27 9/16" ≥ 31 1/2"	300 mm 70 mm ≥700 mm ≥800 mm
	Dispensing pump	Pump installation may only be performed by Miele Service. External dispensing pumps (2 or 4 head pump): Voltage (external power supply required) Fusing Supplied with supply cable and plug		120V 15A NEMA 5-15

Machine connections:

	Electrical connection (convertible)	Standard voltage Frequency Rated load Fuse rating Length of supply lead Supplied with plug	6.5'	2 AC 220 - 240V 60 Hz 4.4 - 5.2 kW 2 x 30 A 2000 mm NEMA L6-30P
		Convertible to Frequency Rated load Fuse rating Length of supply lead Supplied with plug	6.5'	2 AC 208V 60 Hz 4.0 kW 2 x 30 A 2000 mm NEMA L6-30P

Electrical connection must comply with national regulations.

Connection using multi-pole wall lockable socket in compli-ance with IEC/EN 60309 and IEC/EN 60947 is recommended in order to simplify electrical tests. If machines are hard-wired, a multi-pole mains switch must be provided on site. Switches with a contact gap of more than 3 mm can be used. These include switches, fuses and contactors (IEC/EN 60947). A wall socket or mains isolator must be easily accessible after installation.

Reinstallation of the supply point, changes to the equipment or checks on the protective conductor, including determination of correct fuse rating, should only be performed by a properly trained electrician.

If necessary, equipotential bonding with good galvanic contact must be provided in accordance with all appropriate national and local regulations.

Date: 01.2015 Page: 11

			1	
(8)	Cold water (Soft water)	Min. flow pressure Max. pressure Max. throughput On-site connection thread Length of connection hose (supplied: 1 connection hose) Hourly water demand (average for 60°C program) for standard connection (with warm and cold water) If warm water supply is not available add warm water demand to cold water demand.	14.5 psi 145 psi 2.9 gal/min 3/4" garden hose thread, male 61" approx. 18.5 gal/h	100 kPa 1000 kPa 11 l/min 3/4" garden hose thread, male 1550 mm approx. 70 l/h
(\$)	Warm water (Soft water)	Max. temperature Min. flow pressure Max. pressure Max. throughput On-site connection thread Length of connection hose (supplied: 1 connection hose) Hourly water demand (average for 60°C program) If reprogrammed by Miele Service, the Machine can also be connected to a hot water supply line with a temperature of 70°C to max. 85°C. This requires a separate inlet hose. This additional inlet hose is available from Miele Spares. If warm water is not available, connect warm water hose to cold water valve!	158°F 14.5 psi 145 psi 2.9 gal/min 3/4" garden hose thread, male 61" approx. 18.5 gal/h	70°C 100 kPa 1000 kPa 11 l/min 3/4" garden hose thread, male 1550 mm approx. 70 l/h
AV	Drain: Dump valve	Max. temperature Machine-side drain connection (ext. diameter) On-site drain (int. diameter) Max. transient throughput Vented drainage required. If ventilation is insufficient, fit Miele kit, Mat. no. 05238090. Drain manifolds serving several machines must be of sufficient cross-section.	158°F 2 15/16" 2 15/16" 16.4 gal/min	70°C 75 [DN 70] mm 75 [DN 70] mm 62 l/min
B	Fittings for base/floor installation	Miele base UG/UO 5010 4 × metal angled brackets (to secure machine to base) 4 × screws DIN 571 (Ø × length) 4 × rawl plugs (Ø × length) Machine must be bolted to the base and floor! Fixing materials for a floating screed floor are to be provided on site.	5/16" x 2 9/16" 1/2" x 2 3/8"	8 mm x 65 mm 12 mm x 60 mm
		Installation on floor or concrete base 2 × clamps 2 × screws DIN 571 (Ø × length) 2 × rawl plugs (Ø × length) Machine must be bolted to the base or floor. Fittings are supplied with machine Fixing materials for a floating screed floor are to be provided on site.	1/2" x 2" 5/16" x 1 9/16"	6 mm x 50 mm 8 mm x 40 mm

Date: 01.2015 Page: 12

Machine data	Unit width Machine depth Unit height Casing width Casing depth	27 9/16" 32 9/16" 40 3/16" 31 3/16" 31 1/8"	700 mm 827 mm 1020 mm 792 mm 790 mm
	Minimum width of delivery access to installation site Recommended rear wall gap (measured to front of machine) Minimum rear wall gap (to front of machine) Recommended rear wall gap ensures sufficient space for maintenance and servicing.	28 3/8" 47 1/4" 39 3/8"	720 mm 1200 mm 1000 mm
	Net weight Dynamic floor load, max. Static floor load, max. Dynamic load, max. Drum frequency, max. Average heat dissipation (dependent on ambient room temperature and program selected)	327 lbs 2750 N 1960 N 790 N 18 Hz 2630 BTU/hr	148 kg 2750 N 1960 N 790 N 18 Hz 0.77kWh
	Sound pressure (re 20 mPA), workplace-related (at distance of 1 m and height of 1.6 m)	<70 dB (A)	<70 dB (A)

Installation should only be carried out by authorized installers in accordance with valid regulations! Follow installation instructions when installing machine! All rights reserved!

Date: 01.2015 Page: 13