

ProCare

Shine 12 GC



Cleaning agent

Use

ProCare Shine 12 GC is a mildly alkaline tablet cleaning agent for machine cleaning of dishes in commercial dishwashers with a fresh water system.

Product features

- Awarded the EU Eco label
- Particularly easy to use thanks to water-soluble wrapper
- Universal cleaning agent with good cleaning performance for light to medium soiling
- Prevents formation of limescale and protects loads
- Protects against corrosion
- Suitable for use with any load, including glass, aluminium and silver
- Protects decor
- Contains active oxygen, alkalis and complexing agents
- Does not contain phosphates or active chlorine

ProCare Shine 12 GC is intended for commercial use only.

Use and dispensing

ProCare Shine 12 GC is designed for use in programmes in Miele Professional commercial dishwashers with a fresh water system.

- Manual dispensing via the door dispenser compartment prior to every wash programme
- Recommended dosage: 1 tab per wash programme
- Recommended water hardness range: 0-3 °dH (0-0.5 mmol/l)
- We do not recommend using the Super short programme in fresh water dishwashers.

Cleaning agent should be dispensed and the programme selected to suit the load and the level of soiling. Where required programme modifications to the main wash stage are recommended (increased temperature and/or increased holding time). An unsuitable programme can lead to unsatisfactory cleaning results.

Please note:


- Do not mix with other products.
- Operating instructions for Miele Professional dishwashers must be observed.



Awarded the EU Eco label

By using this product that carries the EU Ecolabel, and observing correct dosage instructions, you are helping to reduce pollution to waterways and the amount of waste in landfill sites.

EU Ecolabel : AT/038/006

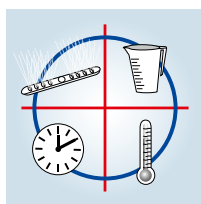

Sinner's circle

Sinner's circle describes the mechanisms required in a cleaning process. According to this, four factors determine the success of cleaning: chemical agent, mechanical action, temperature and programme duration. All four factors are dependent on each other, however the ratio of one to the other can be adjusted. If one factor is altered, the ratio of one or more of the other factors must be altered to achieve the same cleaning result. When compared to standard domestic dishwashers, commercial dishwasher programmes have considerably shorter programme durations. This is attributable to strong alkaline cleaning agents and a high-performance

cleaning system.

When using commercial dishwasher tabs such as e.g. ProCare Shine 12 GC, excellent cleaning results can be achieved by selecting a suitable programme, adjusting the temperature and/or duration if necessary.

ProCare

Shine 12 GC



Cleaning agent

Technical data

- pH value of solution: 10.2

Fulfils the requirements of Regulation (EC) 648/2004 on detergents

Storage information

- Keep box closed and store in a cool, dry place.
- Can be used for up to 2 years if stored correctly

Warning and Safety notes

For safety and environmental information, see EU safety data sheets. These are available from www.miele-professional.com.

When used correctly, this product meets the requirements of applicable guidelines for food preparation.


Dispose of containers only when empty and sealed. See safety data sheet regarding disposal of residual agent.

All information contained in this leaflet is current and correct to our knowledge and experience. This does not however release users from the obligation to conduct their own checks and tests. A legally binding assurance of specific product properties cannot be inferred from this.

Packaging units

Description	Container	Material number
ProCare Shine 12 GC	80 Tabs – 1.28 kg	11 037 820

Contact data:

 www.miele-professional.com

Germany

Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh
Tel: 0 800 22 44 644

Importer for Canada /

Importateur pour le Canada

Miele Ltd.
161 Four Valley Drive
Vaughan, ON L4K 4V8
Phone: 1-888-325-3957

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Customer Contact Centre
Tel: 0330 160 6600
professional@miele.co.uk

Importer for USA

Miele Inc.
9 Independence Way
Princeton, USA NJ 08540
Tel: 1-800-991-9380
Fax: 1-609-419-4241
www.mieleusa.com/professional
proinfo@mieleusa.com



claro products GmbH
Vogelsangstraße 1
A-5310 Mondsee
www.claro.at



System4Shine