Miele

Installation plan

PFD 100 PFD 101 PFD 101 i PFD 101 U

en-GB

M.-Nr. 11 673 200

Contents

Installation notes Installation requirements Environmental requirements Electrical connection. Water connection	3 3 3 4
Appliance dimensions and installation dimensions Freestanding appliance Built-in appliance/built-under appliance Front panel dimensions PFD 101 i	5 5 5 5
Connections Connections on the back of the appliance On-site connections External dispensing	6 6 7
Technical data. Dimensions and weights . Emission levels . Electrical connection . Water inlet . Drain . Operating conditions . Storage and transportation conditions.	8 8 9 10 10

Installation notes


	For safe installation and commissioning of the dishwasher please read the installation plan, the service documentation, the installa- tion sheet and the operating instructions.
	This installation plan includes the dimensions of the appliance, the technical data and the requirements to be met on site for the installa- tion of the dishwasher.
Installation requirements	This dishwasher must only be installed and commissioned by the Miele Customer Service Department, a Miele authorised dealer or a suitably qualified specialist.
	Installation should only be performed in accordance with valid reg- ulations, relevant standards and health and safety codes.
Environmental requirements	Condensate can build up in the area surrounding the dishwasher. Any furniture and fittings in the room must therefore be suitable for purpose.
Vapour barrier film for built-in appli- ances	The vapour barrier film supplied protects the worktop from damage caused by steam when the door is opened. Attach the vapour barrier film above the door, underneath the worktop.
Electrical connection	All work on the electrical connection must be carried out by the Miele Customer Service Department, an authorised Miele dealer or a quali- fied electrician.
Plug connection	The dishwasher should be connected to the electricity supply via a socket.
Hard-wired	If the dishwasher is hard-wired to the power supply, a power switch capable of disconnecting the dishwasher at all poles must be in- stalled on site. This power switch must have a contact gap of at least 3 mm.
	The socket and the power switch must be accessible after the appli- ance has been installed. An electrical safety test must be carried out after installation and after any servicing work. The mains connection cable must be laid protected from the risk of thermal damage.
Residual current device (RCD)	For increased safety, it is recommended to protect the dishwasher with a residual current device (RCD) with a trip current of 30 mA.
Equipotential bonding	There is a screw connection point for equipotential bonding at the back of the dishwasher. Equipotential bonding should be carried out if possible on site.

Installation notes

Water connection	The dishwasher must only be connected to fully vented pipework. A brief increase in the water pressure can damage components of the dishwasher.
Water inlet	The quality of the incoming water must correspond to the drinking water specification of the country in which the dishwasher is being operated.
	The dishwasher must be connected to the water supply in strict ac- cordance with current local and national water authority regulations. It can be connected to cold or hot water supplies. Connecting the dish- washer to a hot water supply will reduce programme running times. For short programme running times, a water pressure of at least 200 kPa is also required.
	If a stopcock is not available, only a qualified installer may connect the dishwasher to the drinking water supply.
	The stopcock should remain accessible once the dishwasher has been installed so that the water supply can be shut off whenever the appliance is not in use.
Drain	The dishwasher drain hose should be connected to a separate on-site drainage system for the dishwasher only. If a separate connection is not available, we recommend connecting the hose to a dual-chamber siphon. If the hose is to be fitted directly to the drainage system on site, use the hose clip supplied with the dishwasher. The on-site connector for the drain hose can be adapted to different hose diameters. If the connector extends more than 30 mm into the drain hose, it must be shortened. Otherwise, the drain hose can be- come blocked.
	Lay the drain hose so that it does not kink and is not being subjec- ted to pressure or tension.
	If the on-site drain connection is situated lower than the guide path for the lower basket rollers in the open door, a siphoning effect dur- ing a programme can cause the wash cabinet to empty itself of wa- ter. In this case, lay the drain hose with a bend in it so that its highest point is at least level with the guide path for the lower basket rollers. For AU, NZ the drain should be connected in accordance with AS/ NZS 3500.2.
External dispens- ing	An external dispensing module for liquid cleaning agents can be con- nected to the back of the dishwasher. The dispensing module is available as an optional accessory and is supplied with installation instructions.


PFD 101 U


Freestanding appliance PFD 100, PFD 101

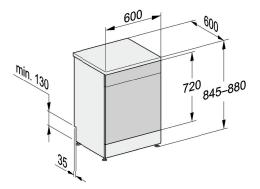

Built-in appliance/built-under appliance

PFD 101 i

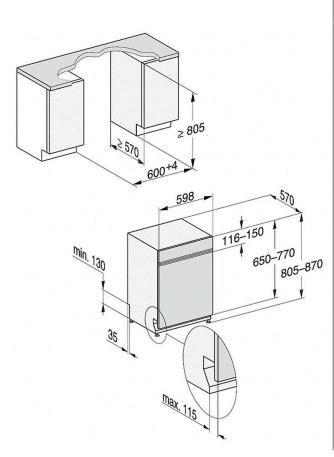


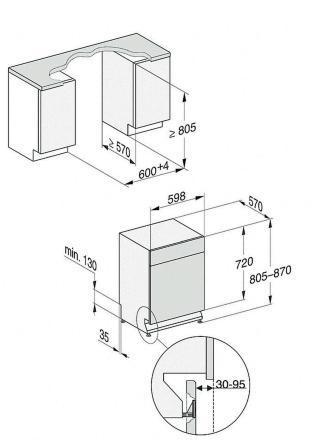


Front panel dimensions PFD 101 i

Length	[mm]	500–654
Thickness	[mm]	16–20
Weight	[kg]	4–11

Connections on the back of the appliance

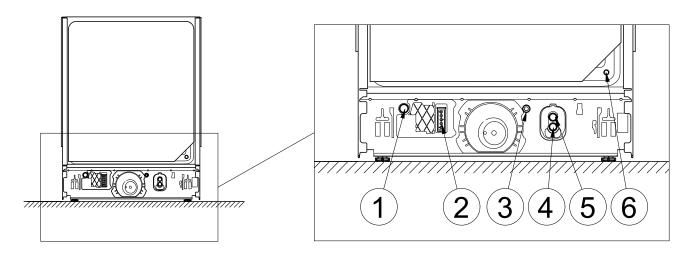


On-site connections

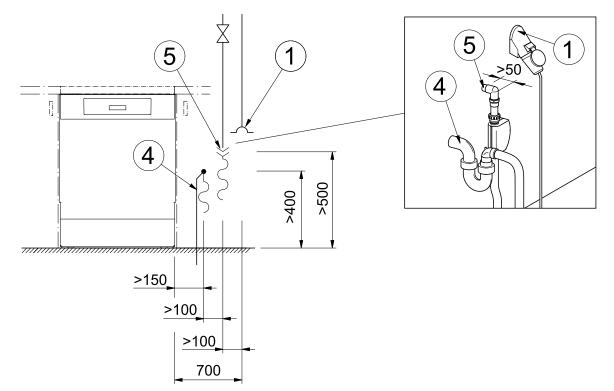

- ① Electrical connection
- 2 External dispensing, power supply connection
- 3 Equipotential bonding
- (4) Waste water
- (5) Cold or hot water
- 6 External dispensing, connection for dispensing hose sealed with a blind stopper*

* the dispenser connector is supplied with the dispensing module

External dispensing

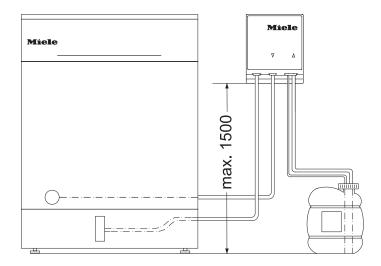

Max. delivery head	[m]	1.5
Length of dispenser hose, DOS module to suction lance	[m]	1.8
Length of dispenser hose, back of appliance to DOS module	[m]	2.8
Length of power cable, back of appliance to DOS module	[m]	2.8

Place the container on the floor next to the cleaning machine or in an adjacent cabinet. The container must not be placed on top of or above the cleaning machine.

Technical data

Model		Version	i	U
Dimensions and weights				
Height	[mm]	845	805	805
Height adjustment	[mm]	35	65	65
Width	[mm]	600	598	598
Depth	[mm]	600	570	570
Depth with door open	[mm]	1195	1165	1165
Max. plinth return	[mm]	-	115	115
Weight	[kg]	60	42	44
Max. floor load	[N]	1000	1000	1000
Emission levels				
Sound power level	[dB(A) re 1 pW]	46	46	46
Sound pressure level in the workplace	[dB(A)]	34.1	34.1	34.1

Electrical connection

Standard electrical connection PFD 101

Voltage		AC 230V
Frequency	[Hz]	50
Fuse rating	[A]	13
Plug		+
Power cable length	[m]	1.7
Power cable cross-section	[mm ²]	3x1.5
Heat output	[kW]	1.9
Total rated load	[kW]	2.1

Standard electrical connection PFD 100, Possible voltage variant PFD 101

Voltage *		AC 230 V
Frequency	[Hz]	50
Fuse rating	[A]	32
Plug		-
Power cable ** length	[m]	1.7
Power cable cross-section	[mm ²]	3x4
Heat output	[kW]	6.1
Total rated load	[kW]	6.3

* Programme running times are longer with this voltage variant

** Optional accessory

Water inlet

Max. water temperature	[°C]	60
Max. water hardness	[mmol/l]	6.5
Max. water hardness	[°dH]	36
Water connection pressure	[kPa]	100 – 1000
On-site threaded union (flat seal)	[inches]	3/4
Connection hose length	[m]	1.5
Connection hose extension *	[m]	1.5

* Optional accessory

Technical data

Drain

Max. water temperature	[°C]	82
Drain hose length	[m]	1.5
Max. drain hose length	[m]	4
Max. delivery head	[m]	1
Max. transient flow rate	[l/min]	10
Hose inner diameter	[mm]	22
On-site hose sleeve (Ø x length)	[mm]	22 x 30

Operating conditions

Ambient temperature	[°C]	+5 - +40
Relative humidity: Up to 31 °C, maximum Linear decreasing to 40 °C	[%] [%]	80 50
Max. altitude above sea level up to	[m]	4000

Storage and transportation conditions

Ambient temperature	[°C]	-20 - +60
Relative humidity	[%]	10–85
Air pressure	[hPa]	500-1060

Min. site access dimensions including transport pallet

Height	[mm]	970
Width	[mm]	670
Depth	[mm]	670

Míele

United Kingdom

Miele Co. Ltd., Fairacres, Marcham Road Abingdon, Oxon, OX14 1TW Professional Sales, Tel: 0845 365 6608 E-mail: professional@miele.co.uk Internet: www.miele.co.uk/professional

Australia

Miele Australia Pty. Ltd. ACN 005 635 398, ABN 96 005 635 398 Level 4, 141 Camberwell Road, Hawthorn East, VIC 3123 Tel: 1300 731 411 Internet: www.miele.com.au/professional E-mail: professional.sales@miele.com.au

China Mainland

Miele Electrical Appliances Co., Ltd. 1-3 Floor, No. 82 Shi Men Yi Road Jing' an District, 200040 Shanghai, PRC Tel: +86 21 6157 3500, Fax: +86 21 6157 3511 E-mail: info@miele.cn, Internet: www.miele.cn

Hong Kong, China

Miele (Hong Kong) Ltd. 41/F - 4101, Manhattan Place 23 Wang Tai Road, Kowloon Bay, Hong Kong Tel: (852) 2610 1025, Fax: (852) 3579 1404 Email: customerservices@miele.com.hk Website: www.miele.hk

India

Miele India Pvt. Ltd. 1st Floor, Copia Corporate Suites, Commercial Plot 9, Mathura Road, Jasola, New Delhi - 110025 E-mail: customercare@miele.in, Website: www.miele.in

Ireland

Miele Ireland Ltd. 2024 Bianconi Ave., Citywest Business Campus, Dublin 24 Tel: (01) 461 07 10, Fax: (01) 461 07 97 E-Mail: info@miele.ie, Internet: www.miele.ie



Manufacturer: Miele & Cie. KG Carl-Miele-Straße 29, 33332 Gütersloh, Germany

Malaysia

Miele Sdn Bhd Suite 12-2, Level 12 Menara Sapura Kencana Petroleum Solaris Dutamas No. 1, Jalan Dutamas 1 50480 Kuala Lumpur, Malaysia Phone: +603-6209-0288 Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited IRD 98 463 631 8 College Hill Freemans Bay, Auckland 1011, NZ Tel: 0800 464 353 Internet: www.miele.com.au/professional E-mail: professional.sales@miele.com.au

Singapore

Miele Pte. Ltd. 29 Media Circle, #11-04 ALICE@Mediapolis Singapore 138565 Tel: +65 6735 1191, Fax: +65 6735 1161 E-Mail: info@miele.com.sg Internet: www.miele.sg

South Africa

Miele (Pty) Ltd 63 Peter Place, Bryanston 2194 P.O. Box 69434, Bryanston 2021 Tel: (011) 875 9000, Fax: (011) 875 9035 E-mail: info@miele.co.za Internet: www.miele.co.za

United Arab Emirates

Miele Appliances Ltd. Showroom 1, Eiffel 1 Building Sheikh Zayed Road, Umm Al Sheif P.O. Box 114782 - Dubai Tel. +971 4 3044 999, Fax. +971 4 3418 852 800-MIELE (64353) E-Mail: info@miele.ae, Website: www.miele.ae