

## ProCare

### Shine 10 A



## Cleaning agent

### Use

*ProCare Shine 10 A* is a liquid alkaline cleaning agent (liquid concentrate) for the machine cleaning of dishes in commercial dishwashers with fresh water or tank systems.

*ProCare Shine 10 A* is not suitable for use in Miele ProfiLine dishwashers.

### Product features

- Easy removal of persistent soiling, e.g. starch, protein, tea/coffee
- Excellent cleaning results
- Prevents formation of limescale and protects loads
- Protects against corrosion
- Suitable for use with porcelain, glass, stainless steel, plastic
- **Not suitable** for aluminium and silver
- Contains phosphates, active chlorine and alkalis

*ProCare Shine 10 A* is intended for commercial use only.

### Use and dispensing

*ProCare Shine 10 A* is designed for use in programmes in Miele Professional commercial dishwashers.


- Precise and economic dispensing via dispenser pump
- Dispensing recommendation: 2-5 ml/l (0.2-0.5%)
- Recommended water hardness range: 0-3°dH (0-0.5 mmol/l)

Cleaning agent should be dispensed and the programme selected to suit the load and the level of soiling. An unsuitable programme or dispensing too little or too much cleaning agent can lead to unsatisfactory cleaning results. Adjustments can be made as necessary starting from the factory default setting (generally 0.3% for Miele machines).

We recommend using soft water (0 - 3°dH / 0 - 0.5 mmol/l) in dishwashers. Harder water (up to max. 8°dH / 1.4 mmol/l) can be compensated for by using a higher dispensing concentration. To protect the dishwasher and the load we recommend the use of a water treatment system (e.g. an internal or external water softening system) to achieve the water hardness range specified.

### Please note:

- Do not mix with other products.
- The dispensing system must be rinsed with water and vented prior to a change of product.
- Operating instructions for Miele Professional dishwashers must be observed.

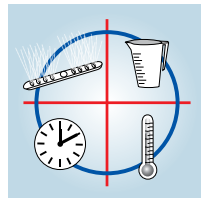

### Sinner's circle

Sinner's circle describes the mechanisms required in a cleaning process. According to this, four factors determine the success of cleaning: chemical agent, mechanical action, temperature and programme duration. All four factors are dependent on each other, however the ratio of one to the other can be adjusted. If one factor is altered, the ratio of one or more of the other factors must be altered to achieve the same cleaning result.

When compared to standard domestic dishwashers, commercial dishwasher programmes have considerably shorter programme durations. This is attributable to strong alkaline cleaning agents and a high-performance cleaning system.

Excellent cleaning results can be achieved, even with the shortest programme durations, by using alkaline cleaning agents such as *ProCare Shine 10 A*.

## ProCare

### Shine 10 A



## Cleaning agent

### Technical data

- Density (20°C): approx. 1.2 g/cm<sup>3</sup>
- pH value of solution: 11.5 – 12.0

### Ingredients according to EU Regulation 648/2004 on detergents

- 5 - 15% phosphates
- < 5% chlorine bleach
- Storage information
- Storage temperature: -10°C to 30°C
- Protect from direct sunlight
- Can be used for up to 12 months if stored correctly

### Warning and Safety notes

For safety and environmental information, see EU safety data sheets. These are available from [www.miele-professional.com](http://www.miele-professional.com).

When used correctly, this product meets the requirements of applicable guidelines for food preparation.

Dispose of containers only when empty and sealed. See safety data sheet regarding disposal of residual agent.

All information contained in this leaflet is current and correct to our knowledge and experience. This does not however release users from the obligation to conduct their own checks and tests. A legally binding assurance of specific product properties cannot be inferred from this.

### Packaging units and accessories

Description	Container	Material number
<i>ProCare Shine 10 A</i>	5 l canister	10 327 980
<i>ProCare Shine 10 A</i>	10 l canister	10 327 990
Canister key for 5 l and 10 l canisters		9 066 810
Drip tray drum DTD 2 for 5 and 10 l containers of the Miele ProCare series		10 695 460

### Contact data:

 [www.miele-professional.com](http://www.miele-professional.com)

#### Germany

Miele & Cie. KG  
Carl-Miele-Straße 29, 33332 Gütersloh  
Tel: 0 800 22 44 644

#### Importer for Canada / Importateur pour le Canada

Miele Ltd.  
161 Four Valley Drive  
Vaughan, ON L4K 4V8  
Phone: 1-888-325-3957

#### United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre  
Tel: 0845 365 6608  
[Professional.info@miele.co.uk](mailto:Professional.info@miele.co.uk)

#### Importer for USA

Miele, Inc.  
9 Independence Way  
Princeton, USA-NJ 08540  
Tel. 1-800-991-9380



etol Eberhard Tripp GmbH  
Allerheiligenstraße 12  
D-77728 Oppenau  
[www.etol.de](http://www.etol.de)