

ProCare Shine 10 MA

Miele Professional. Immer Besser.



Use and dispensing

ProCare Shine 10 MA is designed for use in programs in Miele Professional commercial dishwashers.

- Precise and economic dispensing via dispenser pump
- Dispensing recommendation: 2-5 ml/l (0.2-0.5%)
- Recommended water hardness range: 0-3 °dH (0-0.5 mmol/l)

Cleaning agent should be dispensed and the program selected to suit the load and the level of soiling. An unsuitable program or dispensing too little or too much cleaning agent can

lead to unsatisfactory cleaning results. Adjustments can be made as necessary starting from the factory default setting (generally 0.3% for Miele machines).


We recommend using soft water (0 - 3°dH / 0 - 0.5 mmol/l) in dishwashers. Harder water (up to max. 8 dH / 1.4 mmol/l) can be compensated for by using a higher dispensing concentration. To protect the dishwasher and the load we recommend the use of a water treatment system (e.g. an internal or external water softening system) to achieve the water hardness range specified.

Product features

- Universal cleaning agent with good cleaning performance for light to medium soiling
- Prevents formation of limescale and protects loads
- Protects against corrosion
- Suitable for use with any load, including glass, aluminium and silver
- Protects decor
- Contains alkalis and complexing agents
- Does not contain phosphates or active chlorine

Sinner's circle

Sinner's circle describes the mechanisms required in a cleaning process. According to this, four factors determine the success of cleaning: chemical agent, mechanical action, temperature and program duration. All four factors are dependent on each other, however the ratio of one to the other can be adjusted.

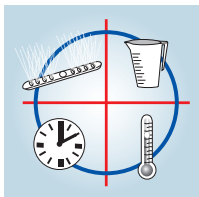

Technical data

- Density (20 °C): approx. 1.3 g/cm³
- pH value of solution: 10.0 – 11.0

Storage information

- Storage temperature: -7°C to 40°C
- No limitations on usability if correctly stored

If one factor is altered, the ratio of one or more of the other factors must be altered to achieve the same cleaning result.

When compared to standard domestic dishwashers, commercial dishwasher programs have considerably shorter program durations. This is attributable to strong alkaline cleaning agents and a high-performance cleaning system.

When using commercial dishwasher tabs such as e.g. ProCare Shine 10 MA, excellent cleaning results can be achieved by selecting a suitable program, adjusting the temperature and/or duration if necessary.

Please note:

- Do not mix with other products.
- The dispensing system must be rinsed with water and vented prior to a change of product.
- Operating instructions for Miele Professional dishwashers must be observed.

Warning and Safety notes

For safety and environmental information, see EU safety data sheets. These are available on www.mieleusa.com/professional.

When used correctly, this product meets the requirements of applicable guidelines for food preparation.

Dispose of containers only when empty and sealed. See safety data sheet regarding disposal of residual agent.

All information contained in this leaflet is current and correct to our knowledge and experience. This does not however release users from the obligation to conduct their own checks and tests. A legally binding assurance of specific product properties cannot be inferred from this.

Description	Container	Material number
ProCare Shine 10 MA	5 liter canister *Residential use approved	10 327 960
ProCare Shine 10 MA	10 liter canister	10 327 970
Canister key for 5 liter and 10 liter canisters		9 066 810