

THE BENCHMARK MACHINES



PWM 920 | 45 lbs. PERFORMANCE PLUS

FEATURES

- M Touch Pro Plus freely programmable color display
- Short program cycles
- Patented Honeycomb Drum 2.0
- 3D imbalance monitoring
- G-force of 502
- High durability: tested for 30,000 operating hours
- Safe disinfection
- Low consumption values

OPL | ON-PREMISE LAUNDRY



No Heater



Steam Indirect



Electric Heating



Years
Warranty

Exclusive to Miele



Patented Honeycomb Drum 2.0

The scoop rib perforations in the Honeycomb Drum 2.0 cause water to shower down on the load, guaranteeing thorough soaking.

Exclusive to Miele



BoostSpin

BoostSpin at 500G or more reduces the residual moisture of the laundry to a minimum, saving valuable time and energy in the subsequent drying process.



EcoSpeed Patented Wash Process

The EcoSpeed washing process features an optimized drum rhythm and enhanced washing action, allowing intensive cleaning performance with reduced water usage.



Proven Hygiene




Our washing machines in the Benchmark series remove more than 99.9% of all viruses (including coronaviruses).*

**May not apply for No Heater version.*

Model	Heat Type	Electrical Specification Voltage/Hz/Phase (Amp)	Color	Material No.	Article No.
PWM 920	No Heater	240/60/1 (2 x 20 A)	Stainless Steel	11803310	51920059NAM
PWM 920	Steam	240/60/1 (2 x 20 A)	Stainless Steel	11803340	51920031NAM
PWM 920	Steam	208, 240/60/3 (3 x 15 A)	Stainless Steel	12084520	51920032NAM
PWM 920	Electric	208, 240/60/3 (3 x 60 A)	Stainless Steel	11803300	51920017NAM

Specifications

Capacity	45 lbs. (20 kg)
Cylinder Diameter	16 ⁵ / ₁₆ in. (415 mm)
Cylinder Depth	18 ¹ / ₈ in. (461 mm)
Cylinder Volume	6.4 cu.ft. (180 l)
Machine Dimensions (WxDxH)	36 ³ / ₈ x 41 ¹ / ₂ x 57 ¹ / ₁₆ in. (924 x 1,054 x 1,450 mm)
Door Opening	15 ⁵ / ₁₆ in. (415 mm)
Floor to Door	19 ⁷ / ₈ in. (505 mm)
Reversible Door	No
Shipping Dimensions (WxDxH)	47 ⁵ / ₈ x 44 ¹ / ₂ x 62 ³ / ₈ in. (1,210 x 1,130 x 1,585 mm)
Net Weight	959 lbs. (435 kg)
Crated Weight	1,012 lbs. (459 kg)
Wash Speed	38 rpm
Extract Speed	1,120 rpm
G-force	502
Water Inlets	8 x ³ / ₄ in. (203 x 19 mm)
Hot Water (No Heater version)	1 x 1 in. (26 x 26 mm)
Steam Inlets (Steam version)	2 x ¹ / ₂ in. (51 x 13 mm)
Drain Diameter	2 ³ / ₄ in. (70 mm)
Recommended Water Pressure	14.5 -145 psi
Water Flow	52.8 gal/min. (200 l /min.)
Min. Recommended Distance Between Machines	2 in. (50 mm)
Agency Approvals	Intertek (cETLus)

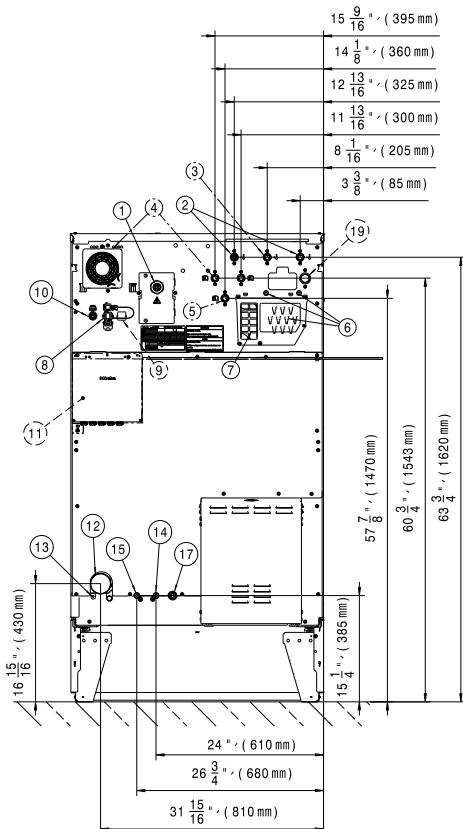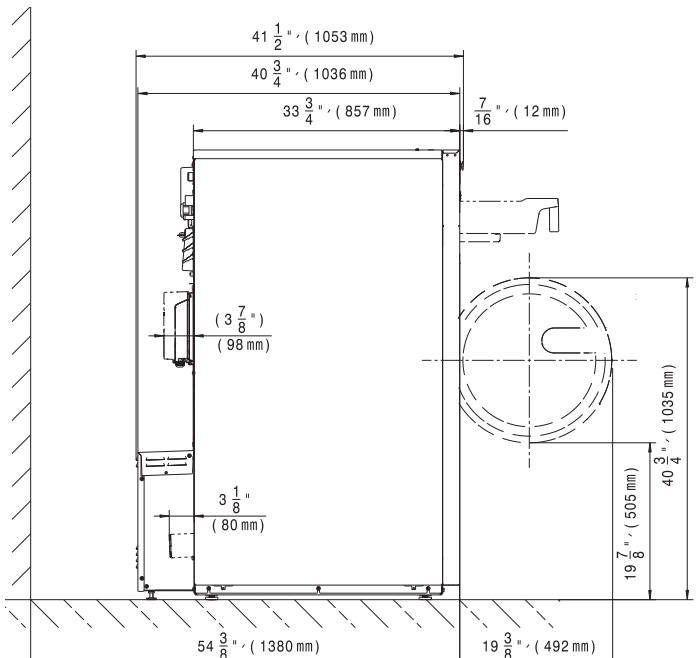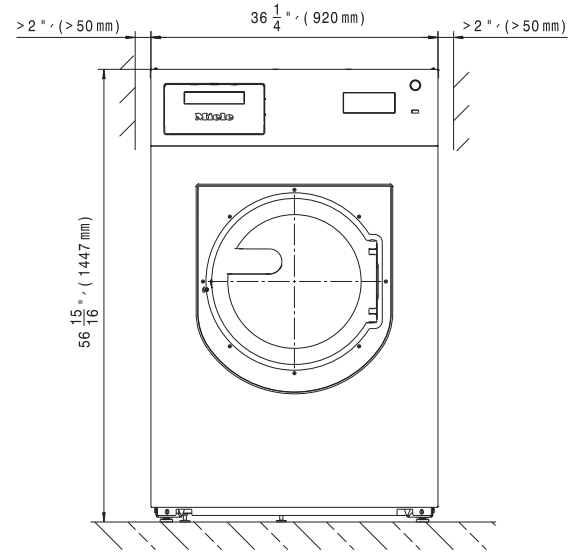

Heating	Voltage (Voltage/Hz/Phase)	Wire	Circuit Breaker Amps	Running Amps	Total Power (kW)
No Heater	240/60/1	2 Wire + Ground	20	17	3.1
Steam	240/60/1	2 Wire + Ground	20	17	3.1
Steam	208, 240/60/3	3 Wire + Ground	15	10.46	3.0
Electric	208, 240/60/3	3 Wire + Ground	60	49.2	20.6

Specifications subject to change without notice or obligation.
Contact Miele USA at (800) 991-9380 or Miele Canada at
(888) 325-3957 for dimensions not shown or for clarification.