

PWT 6089 & PT 7189

18 lbs. / 8 kg



Electric Heating



Stackable




FEATURES

- Washer-dryer stacked units with ergonomic operation
- Honeycomb drum
- Programmable controls including WetCare programs
- Imbalance monitoring
- Precise automatic load recognition: water and energy consumption are automatically adjusted for the load size
- Safe disinfection
- PerfectDry system – residual moisture sensors
- Axial airflow for perfect drying results
- SoftLift drum fins to ensure gentle fabric care
- Perfect Anti-crease



Ergonomic Operation

A central control panel is located between the two appliances for optimum accessibility of all controls and the best possible view of display information.

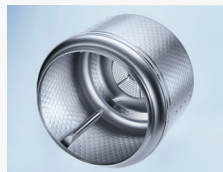

Honeycomb Drum

The Honeycomb drum's sculptured honeycomb structure creates an air cushion between the drum wall and the laundry, for perfect drying results and a perfect laundry finish.



Perfect Anti-Crease

The dryer tumbles the laundry at regular intervals after the end of a cycle, effectively preventing creasing.



PerfectDry System

The PerfectDry system consistently measures the residual moisture of the laundry, thereby achieving precise drying results - even when the water quality differs widely.

Mat. No.	Model	Heat Type	Electrical	Finish
9986070	PWT 6089	Electric Washer	2 AC 220-240 V, 60 Hz	Octoblu
9984620	PT 7189	Electric Dryer	2 AC 208 V, 60 Hz	Octoblu
9984600	PT 7189	Electric Dryer	2 AC 240 V, 60 Hz	Octoblu

PWT 6089 & PT 7189

18 lbs. / 8 kg

Model	PWT 6089 & PT 7189
Heated Option (EL)	Electric
Finish	Octoblu
Load Size	18 lbs. (8 kg)
G-Force	520
Max. spin speed	1,300 rpm
Drum Capacity Washer	2.83 cu.ft. / 80 liter
Drum Capacity Dryer	6.36 cu.ft. / 180 liter
Drying System	Vented
Cold Water Connection	1 x cold water ½ in. hose with ¾ in. threaded union
Hot Water Connection	1x hot water ½ in. hose with ¾ in. threaded union
Water flow pressure	14.5-145 psi
Length of connection hose (supplied)	61 in. (1,550 mm)
Drain Valve	7/8 in. DN 22
Width	27 ^{9/16} in. (700 mm)
Depth	29 ^{5/8} in. (752 mm)
Height	76 in. (1,930 mm)
Height to the bottom of the door Washer	12 ^{13/16} in. (325 mm)
Height to the bottom of the door Dryer	50 ^{13/16} in. (1290 mm)
Door opening diameter Washer	14 ^{9/16} in. (370 mm)
Door opening diameter Dryer	17 ^{5/16} in. (440 mm)
Door hinging	Washer right / Dryer left
Net Weight	474 lbs. (215 kg)
Plug type	NEMA L6-30
PWT 6089 Washer	2 AC 208 / 220-240 V, 60 Hz
Heating Power	4.4-5.2 kW
Fuse	2 x 30 A
PT 7189 Dryer (2 AC 208 V, 60 Hz)	2 AC 208V, 60 Hz
Heating Power	4,84 kW
Fuse	2 x 30 A
PT 7189 Dryer (2 AC 220-240V, 60 Hz)	2 AC 220-240 V, 60 Hz
Heating Power	5.7 kW
Fuse	2 x 30 A