

PDR 908

18 lbs. / 8 kg

 Electric Heating

 Heat Pump



FEATURES

- Honeycomb drum
- M Touch Flex user interface (no buttons or dials)
- Intelligent dryers – Gentle and uniform
- PerfectDry system – residual moisture sensors
- Programmable controls – 35 programs; 5 customizable
- Axial airflow for perfect drying results
- Practical large-surface filter
- FragranceDos capable
- Stacked or Side-by-Side
- Heat Pump Dryer recognized as the Most Efficient of ENERGY STAR in 2022




PerfectDry System

The PerfectDry system consistently measures the residual moisture of the laundry, thereby achieving precise drying results - even when the water quality differs widely.



Practical Large-Surface Filter

Ergonomic convenience: the filter is easy to remove and captures the fluff from several drying cycles easily.

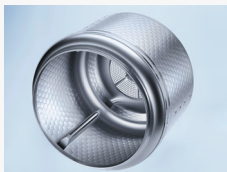

Honeycomb Drum

The Honeycomb drum's sculptured honeycomb structure creates an air cushion between the drum wall and the laundry, for perfect drying results and a perfect laundry finish.



Perfect Anti-Crease

The dryer tumbles the laundry at regular intervals after the end of a cycle, effectively preventing creasing.

| Mat. No. | Model | Heat Type | Electrical | Finish |
|----------|-------------|-----------|-----------------------|-----------------|
| 11204480 | PDR 908 HP | Heat Pump | 2 AC 208-240 V, 60 Hz | Lotus White |
| 11204490 | PDR 908 HP | Heat Pump | 2 AC 208-240 V, 60 Hz | Stainless Steel |
| 11204500 | PDR 908 EL* | Electric | 2 AC 208-240 V, 60 Hz | Lotus White |
| 11204510 | PDR 908 EL* | Electric | 2 AC 208-240 V, 60 Hz | Stainless Steel |

PDR 908

18 lbs. / 8 kg

| Model | PDR 908 |
|----------------------------------|---|
| Heated Option (EL, HP) | Heat Pump or Vented |
| Finish | Front in Stainless Steel or Lotus White |
| Load Size | 18 lbs. (8 kg) |
| Drum Capacity | 4.59 cu.ft. / 130 liter |
| Width | 23 ^{13/16} in. (605 mm) |
| Depth | 28 ^{1/4} in. (717 mm) |
| Height | 33 ^{7/16} in. (850 mm) |
| Height to the bottom of the door | 9 ^{1/2} -9 ^{7/8} in. (241-251 mm) |
| Door opening diameter | 14 ^{9/16} in. (370 mm) |
| Net Weight | 114 lbs. (52 kg) |
| Shipping Width | 26 in. (660 mm) |
| Shipping Depth | 32 ^{1/4} in. (820 mm) |
| Shipping Height | 37 in. (940 mm) |
| Shipping Gross Weight | 126 lbs. (57 kg) |
| Plug type | NEMA L6-30 |
| PDR 908 HP | 2 AC 208-240 V, 60 Hz |
| Heating Power | 1.2 kW |
| Fuse | 2 x 30 A |
| PDR 908 EL | 2 AC 208-240 V, 60 Hz |
| Heating Power | 3,40-4,30 kW |
| Fuse | 2 x 30 A |