

PT 7186

18 lbs. / 8 kg




Electric Heating



FEATURES

- Profitronic L Vario select controls with shortcut buttons
- Pre-configured program packages for a very broad range of applications
- Patented Honeycomb drum
- Intelligent dryers – gentle and uniform drying
- PerfectDry system – residual moisture sensors
- Short program cycles
- Low consumption values

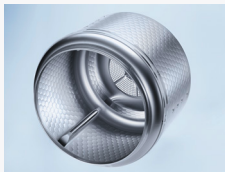

Honeycomb Drum

The Honeycomb drum's sculptured honeycomb structure creates an air cushion between the drum wall and the laundry, for perfect drying results and a perfect laundry finish.



Perfect Anti-Crease

The laundry is tumbled regularly after the end of the program to protect it from creasing.



PerfectDry System

The PerfectDry system consistently measures the residual moisture of the laundry, thereby achieving precise drying results - even when the water quality differs widely.



Customized User Guidance

Flexible solutions to suit a wide range of customer needs with regard to professional laundry care.

Mat. No.	Model	Heat Type	Electrical	Finish
9294650	PT 7186	Electric dryer	2 AC 208 V, 60 Hz, 30 A	Octoblue
9294670	PT 7186	Electric dryer	2 AC 240 V, 60 Hz, 30 A	Octoblue

PT 7186

18 lbs. / 8 kg

Model	PT 7186
Heated Option (EL)	Electric
Finish	Octoblu
Load Size	18 lbs. (8 kg)
Drum Capacity	6.36 cu.ft. / 180 liter
Width	27 ^{9/16} in. (700 mm)
Depth	30 ^{1/16} in. (763 mm)
Height	40 ^{3/16} in. (1,020 mm)
Height to the bottom of the door	12 ^{13/16} in. (325 mm)
Door opening diameter	17 ^{5/16} in. (440 mm)
Door hinging	Left
Net Weight	170 lbs. (77 kg)
Shipping Width	29 ^{15/16} in. (760 mm)
Shipping Depth	32 ^{1/4} in. (820 mm)
Shipping Height	47 ^{13/16} in. (1,215 mm)
Shipping Weight	195 lbs. (88 kg)
Plug type	NEMA L6-30
PT 7186 (208 V)	
Electrical connection	2 AC 208 V, 60 Hz
Heating Power	4.84 kW
Fuse	2 x 30 A
PT 7186 (240 V)	
Electrical connection	2 AC 240 V, 60 Hz
Heating Power	5.70 kW
Fuse	2 x 30 A