

ProCare

Shine 11 OB



Cleaning agent

Use

ProCare Shine 11 OB is a mildly alkaline powder cleaning agent including bleaching agent for the machine cleaning of dishes in commercial dishwashers with a fresh water system.

Due to its formulation *ProCare Shine 11 OB* is only classified with 'Warning'. This simplifies handling and represents an advantage over other cleaning agents for commercial dishwashers with a higher hazard classification ('Danger').

Product features

- For universal usage. Very good cleaning performance with coffee and tea stains
- Prevents formation of limescale and protects loads
- Protects against corrosion
- Suitable for use with any load, including glass, aluminium and silver
- Protects decor
- Contains active oxygen, phosphates and alkalis
- Does not contain active chlorine

ProCare Shine 11 OB is intended for commercial use only.

Use and dispensing


ProCare Shine 11 OB is designed for use in programmes in Miele Professional commercial dishwashers.

- Manual dispensing via the door dispenser compartment prior to every wash programme
- Recommended dosage 20 – 25 g per programme (one level scoop of the dispensing spoon supplied in the 6 kg tub = approx. 20 g) or 2-5 g/l.
- Recommended water hardness level: 0-3°dH (0-0.5 mmol/l)

Cleaning agent should be dispensed and the programme selected to suit the load and the level of soiling. An unsuitable programme or dispensing too little or too much cleaning agent can lead to unsatisfactory cleaning results.

Please note:

- Do not mix with other products.
- Operating instructions for Miele Professional dishwashers must be observed.

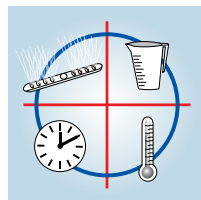

Sinner's circle

Sinner's circle describes the mechanisms required in a cleaning process. According to this, four factors determine the success of cleaning: chemical agent, mechanical action, temperature and programme duration. All four factors are dependent on each other, however the ratio of one to the other can be adjusted. If one factor is altered, the ratio of one or more of the other factors must be altered to achieve the same cleaning result. When compared to standard domestic dishwashers, commercial dishwasher programmes have considerably shorter programme durations. This is attributable to strong alkaline cleaning agents and a high-performance cleaning system.

When using a mildly alkaline cleaning agent such as e.g. *ProCare Shine 11 OB* excellent cleaning results can be achieved by selecting a suitable programme, adjusting the temperature and/or duration if necessary.

ProCare

Shine 11 OB



Cleaning agent

Technical data

- Density (20°C): approx. 1.2 g/cm³
- pH value of solution: 11.0 – 11.5

Ingredients according to EU Regulation 648/2004 on detergents

- 5 - 15% phosphates
- 5 - 15% oxygen based bleaching agent

Storage information

- Close lid firmly after use
- Store in a dry place
- No limitations on usability if correctly stored

Warning and Safety notes

For safety and environmental information, see EU safety data sheets. These are available from www.miele-professional.com.

When used correctly, this product meets the requirements of applicable guidelines for food preparation.

Dispose of containers only when empty and sealed. See safety data sheet regarding disposal of residual agent.

All information contained in this leaflet is current and correct to our knowledge and experience. This does not however release users from the obligation to conduct their own checks and tests. A legally binding assurance of specific product properties cannot be inferred from this.

Packaging units

Description	Container	Material number
<i>ProCare Shine 11 OB</i>	2 kg bottle	10 582 690
<i>ProCare Shine 11 OB</i>	6 kg tub	10 582 700

Contact data:

 www.miele-professional.com

Germany

Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh
Tel: 0 800 22 44 644

Importer for Canada / Importateur pour le Canada

Miele Ltd.
161 Four Valley Drive
Vaughan, ON L4K 4V8
Phone: 1-888-325-3957

United Kingdom

Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Professional Customer Contact Centre
Tel: 0845 365 6608
Professional.info@miele.co.uk

Importer for USA

Miele, Inc.
9 Independence Way
Princeton, USA-NJ 08540
Tel. 1-800-991-9380



etol Eberhard Tripp GmbH
Allerheiligenstraße 12
D-77728 Oppenau
www.etol.de