

Operating instructions Heat-pump dryer



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

Contents

Warnings and safety instructions	4	Commissioning	31
Sustainability and environmental protection	13	Requirements for networking	31
Disposal of fluff or accessories	13	Commissioning procedure	31
Perfect use of energy and time	13	Operation	32
Reusing condensed water	14	Operating sequence	32
Energy-saving heat-pump technology	14	On the tumble dryer	32
		Via the app	32
Familiarisation	15	Preparing the laundry	32
Your tumble dryer	15	Switching on the tumble dryer	32
Control panel	16	Loading the laundry	32
Main menu in display	16	Selecting a programme	33
Symbols	17	Setting programme parameters	33
Operation	17	Starting a programme	34
Networking	18	End of programme	34
SmartStart	19	Special features for operation via app	34
Movement sensor/MotionReact	19	Loading the laundry	34
ComfortOpen	19	Activating operation via app	34
Drum lighting	19	Selecting and starting a programme via the app	35
AmbientLight	19	Time selection/SmartStart ³⁾	35
QuickPowerDry	20	Adjust parameters to personal preferences. Then proceed.	35
WoolDry	20	Programme modifications after starting the programme	35
PerfectDry	20	Add laundry (AddLoad)	35
SteamCare	20	Moving a programme	36
Wash2Dry	20	Favourites	36
FragranceDos	20	Using the condensate container	37
Condensate container	21	Using the FragranceDos fragrance system	38
Optional accessories	21	Programmes	42
Installation	22	Programme chart	42
Rear view	22	AddProgrammes	49
Transporting the tumble dryer	22	Extras	50
Additional installation requirements	23	Consumption data	51
External condensed water connection	24	Good to know	52
Electrical connection	27	Tips	52
Levelling the tumble dryer	28	Protecting tumble dryers	53
Technical data	29	Protecting your laundry	53
EU Conformity declaration	29	Care symbols on the care label	53
UK Conformity declaration	30		

Adjusting settings	55	Signs of wear on the plinth filter	75
General 	56	Reactivating the plinth filter.....	76
Software update	56	Cleaning the drain for condensa-	
Security	56	tion	77
Movement sensor.....	56	Checking the heat exchanger	77
Factory default settings	56	Cleaning the fluff filters with water .	77
Networking	56	Cleaning the fluff filter in the con-	
WiFi.....	56	densate container	79
Connection	57	Replacing the nozzle for Steam-	
Remote control	57	Care.....	80
Appliance functions	57	Service	82
Memory	57	Contact in the event of a fault.....	82
ComfortOpen	57	EPREL database.....	82
Anti-crease	57	Warranty	82
Drying levels	57		
Airways indicator	57		
Cooling down temp.	57		
Information	58		
Software	58		
Legal Information.....	58		
Consumption.....	58		
Operating hours	58		
Service.....	58		
Cleaning and care	59		
Cleaning the casing, drum and con-			
trol panel	59		
Cleaning the fluff filters	59		
Cleaning the residual moisture			
sensor.....	61		
Cleaning the plinth filter	61		
Cleaning the rubber seal on the			
condensate container	66		
Troubleshooting	67		
Fault messages shown in the dis-			
play when a programme is can-			
celled	67		
Display information	69		
The drying programme takes a long			
time.....	69		
Insufficient drying results.....	70		
Noises and odours	71		
Other problems.....	72		

Warnings and safety instructions



It is essential to read these instructions.



This tumble dryer contains a refrigerant that is flammable and explosive.

This tumble dryer complies with all current local and national safety requirements. However, inappropriate use can lead to personal injury and damage to property.

Read the operating instructions carefully before using the tumble dryer. They contain important information on safety, installation, use and maintenance. This prevents both personal injury and damage to the tumble dryer.

In accordance with standard IEC 60335-1, Miele expressly and strongly advises that you read and follow the instructions in the chapter on installing the tumble dryer as well as the safety instructions and warnings.

Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these operating instructions in a safe place and pass them on to any future owner.

Correct application

- ▶ This tumble dryer is intended for use in domestic households and similar working and residential environments.
- ▶ This tumble dryer is not intended for outdoor use.
- ▶ This tumble dryer is intended for use at altitudes of up to 4000 m above sea level.

Warnings and safety instructions

► It must be used only as a domestic appliance to dry items which have been washed in a water solution and which are marked on the manufacturer's care label as being suitable for tumble drying. If using dry cleaning kits, do so at your own risk, and follow the instructions provided on the packaging.

Any other applications may be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation.

► This tumble dryer can only be used by people with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, if they are supervised whilst using it or have been shown how to use it in a safe way and understand and recognise the consequences of incorrect operation.

Safety with children

► Children under 8 years of age must be kept away from the tumble dryer unless they are constantly supervised.

► Children 8 years and older may only use the tumble dryer unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

► Children must not be allowed to clean or maintain the tumble dryer unsupervised.

► Please supervise children in the vicinity of the tumble dryer and do not let them play with it.

Technical safety

► Please follow the instructions in "Installation".

► Before setting up the tumble dryer, check it for any externally visible damage.

Do not install or use a damaged tumble dryer.

► Before connecting the tumble dryer, ensure that the connection data on the data plate (fuse rating, voltage and frequency) match the mains electricity supply. If in any doubt, consult a qualified electrician.

Warnings and safety instructions

► Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronised with the mains power supply (e.g. island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard.

The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronised with the mains power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of BS OHSAS 18001–2 ISO 45001.

► The electrical safety of this tumble dryer can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt, please have the household wiring system tested by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► The tumble dryer must be isolated from the electricity supply in the event of a fault and during cleaning and maintenance.

► Do not connect the appliance to the mains electricity supply by an extension lead, multi-socket adapter or similar. These can overheat and are a fire hazard.

► If defective safety-relevant components are replaced, Miele can only guarantee full compliance with safety requirements if genuine Miele replacement parts are used.

► The accessibility of the plug must always be ensured, in order to disconnect the tumble dryer from the mains.

► Unauthorised repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability. Maintenance or repairs must only be carried out by a qualified specialist or Miele Customer Service.

► The manufacturer's warranty will be invalidated if the tumble dryer is not repaired by a qualified specialist or Miele Customer Service.

► If the mains connection cable is damaged it must always be replaced by a qualified specialist to protect the user from danger.

► This tumble dryer must not be used in a non-stationary location (e.g. on a ship).

Warnings and safety instructions

- ▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.
- ▶ This tumble dryer is fitted with a special lamp to cope with particular conditions (e.g. temperature, moisture, chemical resistance, abrasion resistance and vibration). This special lamp must only be used for the purpose for which it is intended. It is not suitable for room lighting. Replacement lamps may only be fitted by a qualified specialist or by Miele Customer Service.
- ▶ The heat pump can be damaged. Once the tumble dryer has been installed, you can switch it on. Wait one hour before starting a drying programme.



⚠ Risk of fire and explosion due to damage to the tumble dryer. Refrigerant R290 (propane) is a flammable and explosive gas if it leaks in the event of damage. Take measures to protect the tumble dryer against damage. Do not make any alterations to the tumble dryer.

- ▶ If the tumble dryer is damaged, proceed as follows:
 - Avoid naked flames or anything which creates a spark.
 - Disconnect the tumble dryer from the electrical supply.
 - Air the room where the tumble dryer is located.
 - Contact the Miele Customer Service Department.
- ▶ Risk of functional faults due to excessive temperatures. Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet or other similar products. This would hinder a sufficient flow of air to the tumble dryer.
- ▶ Make sure the dryer door can be opened without hindrance after installation.

Correct use

- ▶ The maximum dry laundry load size is 9 kg. The maximum recommended load sizes for individual programmes are given in "Programmes".

Warnings and safety instructions

► Risk of fire due to an unauthorised electrical installation.

This tumble dryer must not be connected to a controllable socket.

This includes clocks/timers or electrical systems with peak-load negotiation.

There is a risk of the laundry igniting itself if a drying programme is cancelled before the cooling phase has finished.

► **Warning:** Do not switch the dryer off before the drying programme has finished. If this is done, the laundry must be hung up or spread out to cool it down.

► Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

► Remove all items from pockets (e.g. lighters, matches).

► The fluff filters must be cleaned after every drying cycle.

► Blockages can cause material damage to the tumble dryer. The fluff filters and the plinth filter must be checked during cleaning. In the event of a defect or wear, the fluff filters or the plinth filter must be replaced.

This tumble dryer must only be operated with fitted and intact fluff and plinth filters.

► Wet fluff and plinth filters could cause operational faults while drying. The fluff filters or the plinth filter must not be used dripping wet after cleaning.

► Risk of fire with garments that have not been washed or cleaned properly or which have any adhering residues. For this reason, textiles and products with the following properties must not be dried in a tumble dryer:

- Unwashed, uncleaned
- Have not been thoroughly or insufficiently cleaned and are still soiled with grease, oil or other residues. Special care should be taken with kitchen or cosmetic laundry containing residues of cooking oil, oil, grease or lotions. If items have not been thoroughly cleaned, there is a danger that they might ignite when heated, even after they have been removed from the tumble dryer at the end of the programme

Warnings and safety instructions

- Accumulations of inflammable cleaning agents or residues of acetone, alcohol, petrol, kerosene, stain remover, turpentine, wax, wax remover or chemicals in general. Special care should be taken with mops and floor cloths
- Build-up and residues of hair lacquer, hair spray or nail varnish remover

⚠ Fire hazard when drying items with residues.

These could catch fire when being dried.

Items with adhering residues must be washed particularly thoroughly.

Wash the items at a high temperature and add more detergent. If in doubt, wash the items several times.

► Fire hazard caused by certain item materials and items cleaned using professional dry cleaning agents. For this reason, the following textiles and products must not be dried in a tumble dryer:

- Textiles which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.
- Textiles containing padding or fillings which are damaged (e.g. pillows, jackets). The filling could fall out and cause a risk of fire.
- Items that have been cleaned using industrial chemical agents (e.g. professional dry-cleaning agents).

► Damage due to excessive temperatures or extension of the drying time. The heat pump that is essential to the operation of this tumble dryer generates a great deal of heat inside its casing. There must be a reliable means of dissipating this heat.

- Ensure permanent room ventilation from the beginning to the end of every drying programme.
- Ensure that there is a gap between the floor and the bottom of the tumble dryer (this must not be blocked or obstructed in any way).

► There is a risk of injury from electric shock and the tumble dryer may become defective. To prevent water from penetrating, do not spray-wash or hose down the tumble dryer.

Warnings and safety instructions

► Risk of injury if the tumble dryer tips over. For this reason, do not lean on the tumble-dryer door.

► In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase has been completed.

As soon as the programme has finished, remove all laundry from the drum.

► Always close the door after use. This way you will avoid the danger of:

- Children climbing onto or into the dryer or hiding things in it.
- Pets or other small animals climbing into it.

► Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly. There is a risk of damage if the condensed water is allowed to freeze in the pump or hoses. The ambient room temperature should be between 2°C and 35°C.

► Condensed water can cause damage to the tumble dryer. If the water is drained externally, make sure the drain hose is secured against slipping, e.g. if you hang it in a sink or basin.

► It can cause health problems in both people and animals if condensed water from the tumble dryer is consumed. Condensed water is not drinking water. Similarly, condensed water must not be used to water plants and must not be poured out into nature.

► Damage due to blockages. Dirt particles from the room where the tumble dryer is located can be drawn in with cooling air, cause blockages in the heat exchanger and cause the tumble dryer to malfunction. Keep the room where the tumble dryer is located free of dust, fluff or dirt particles.

Using a fragrance flacon (optional accessory)

► Risk of injury on contact with the fragrance. If leaked fragrance comes in contact with the body:

- Wash **skin** thoroughly with soap and water.
- If swallowed, rinse **mouth** thoroughly with clean water.
- Flush **eyes** with clean water for at least 15 minutes.

Warnings and safety instructions

 Risk of injury on contact with the fragrance.

Eyes may become irritated, injured or show signs of poisoning.

Seek medical attention immediately if the fragrance comes in contact with the eyes or is swallowed.

- ▶ Only use genuine Miele original fragrance flacons.
- ▶ The fragrance flacon must be stored in its packaging so please make sure you retain this.
- ▶ Damage caused by leaking fragrance. Do not lay the fragrance flacon down. Keep the fluff filter with the fragrance flacon inserted in it in a horizontal position and do not tip.
- ▶ Damage caused by leaked fragrance. Use an absorbent cloth to wipe up any fragrance which has leaked out of the flacon:
 - Onto the floor
 - Onto the tumble dryer
 - Onto dryer parts (e.g. the fluff filter)
- ▶ If fragrance which has leaked out of a flacon comes in contact with clothing, change the clothing immediately. Wash the clothing or any cloths used for mopping up fragrance thoroughly with plenty of water and detergent.
- ▶ There is the risk of fire or damage if the following instructions are not observed:
 - Never refill a flacon with fragrance.
 - Never use a faulty fragrance flacon.
- ▶ Dispose of an empty fragrance flacon with the household waste and never use it for any other purpose.
- ▶ Please also observe the information supplied with the fragrance flacon.

Accessories and spare parts

- ▶ Miele assumes no liability for the use of accessories that are not genuine Miele accessories. Miele is not liable for warranty, guarantee and/or product liability claims if damage or defects are due to the use or installation of accessories that do not originate from Miele or have not been approved by Miele.

Warnings and safety instructions

► The tumble dryer can be combined with a Miele washing machine in a washer-dryer stack. The appropriate “WTV” stacking kit (available to order) to match your tumble dryer and washing machine is required.

► If you order a plinth for this tumble dryer (available from Miele as an optional accessory - depending on country), make sure it is the correct one.

► Miele original spare parts are kept in stock for at least 10 years and up to 15 years after discontinuation of your tumble dryer.

 Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Disposing of the packaging material

The packaging material is used for handling and protects the appliance from transport damage.

Recycling the packaging material reduces the use of raw materials. Use material-specific collection points for valuable materials and take advantage of return options. Your Miele dealer will take the packaging material away.

Disposing of your old appliance

Electrical and electronic appliances contain many valuable materials. They also contain certain materials, compounds and components which were essential for their correct functioning and safety. These could be hazardous to human health and to the environment if disposed of with household waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with household waste.



Take care not to damage your tumble dryer's pipework and heat exchanger before or during disposal in an authorised, environmentally friendly manner. This is to ensure that coolant in the tumble dryer and oil in the compressor is contained, and will not leak into the environment.

Instead, please make use of officially designated collection and disposal points to dispose of and recycle electrical and electronic appliances in your local community, with your dealer or with Miele, free of charge. By law, you are solely responsible for deleting any personal data from the old appliance

prior to disposal. You are legally obliged to remove any old batteries which are not securely enclosed by the appliance and to remove any lamps without destroying them, where this is possible. These must be taken to a suitable collection point where they can be handed in free of charge. Please ensure that your old appliance poses no risk to children while being stored for disposal.

Disposal of fluff or accessories

Abrasion causes environmentally harmful microplastic particles to be released from garments containing synthetic fibres, which remain on the laundry after washing. For this reason, dispose of the fluff collected by the fluff filters with your household waste. To prevent microplastics from spreading into the waste water system, fluff must not be drained away with the water. Dispose of unusable accessories, e.g. empty fragrance flacons or a defective plinth filter, with your household waste.

Perfect use of energy and time

Spin the laundry thoroughly in the washing machine. The electricity consumption and the programme running time is reduced during drying because it takes less time to dry the laundry. To spin the laundry at a harder level, select a maximum spin speed when washing.

Always dry the maximum load size recommended for the programme. A full drum is more energy efficient in terms of the amount of laundry because you don't have to start another drying programme.

Dry items of the same textile type or textiles with a similar material thickness together. Untangle tangled items of

Sustainability and environmental protection

laundry before drying so that everything dries evenly and it is not necessary to use further drying programmes.

Clean the fluff filters after each drying programme. Clean the plinth filter when the tumble dryer prompts you to do so. Clean fluff filters shorten the programme running time and reduce energy consumption.

If possible, make use of time-variable, low-cost electricity tariffs. Ask your energy supplier for further information. If you have a suitable energy management system in your home, you can make flexible use of time-variable, cost-efficient and environmentally friendly electricity tariffs. Thanks to this combination, the tumble dryer can be started automatically at a cost-efficient time.

If you use self-generated solar power, it is best to start the tumble dryer when there is sufficient solar power available.

Tip: Before starting the programme, you can display a consumption estimate using the ⓘ button.

Reusing condensed water

Condensed water from the drying process is collected in the condensate container and reused for the SteamCare.

Condensed water can be used for ironing. To remove any fluff, filter the condensed water through a coffee filter. If you want to reuse condensed water in a steam iron or humidifier, follow the manufacturer's instructions.

Energy-saving heat-pump technology

The heat-pump dryer works efficiently with a closed cooling circuit. In the cooling circuit, a compressor compresses the refrigerant, causing its temperature to rise.


The heat gained is transferred to the drying air in the capacitor, causing the drying air to absorb moisture from the laundry. The humid drying air flows over the evaporator and is cooled. The condensed water vapour is drained off as condensed condensate. The dehumidified drying air is reheated and returned to the circuit. The heat energy is largely retained in the circuit. Only the operating heat from the tumble dryer is released into the environment.

Refrigerant

The flammable refrigerant R290 (propane) serves as the working medium in the tumble dryer's cooling circuit and enables heat transfer for the drying process.

Propane has a low global warming potential (GWP), is environmentally friendly and does not damage the ozone layer.

Your tumble dryer

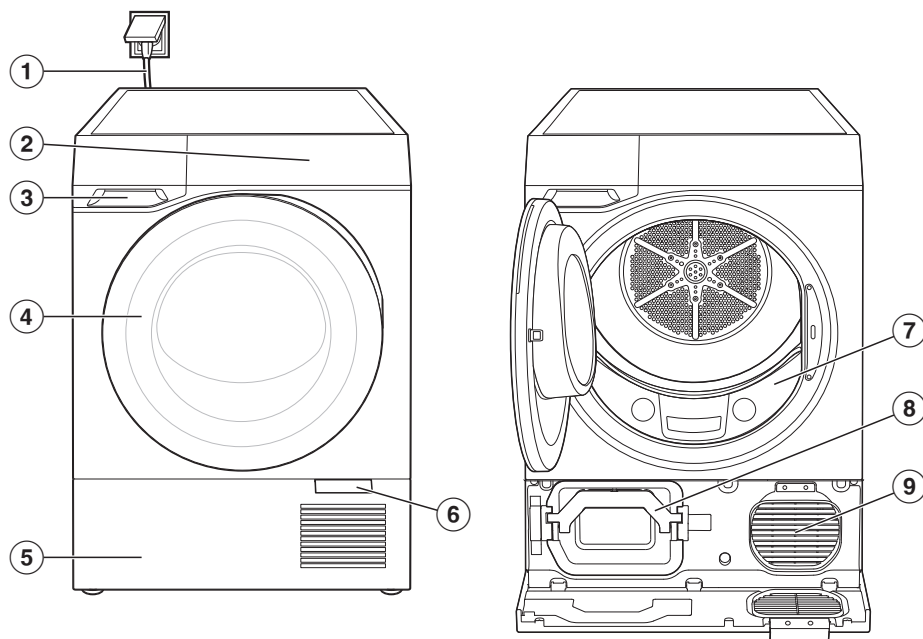


- ① Mains connection cable
- ② Control panel
- ③ Condensate container
- ④ Tumble dryer door
- ⑤ Plinth flap

- ⑥ Opening tag
- ⑦ Fluff filter
- ⑧ Holder with plinth filter
- ⑨ Cooling fan


Familiarisation

Control panel

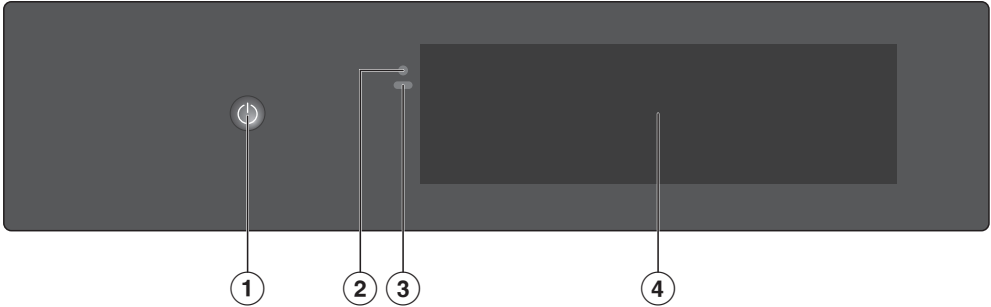

- ① On/Off switch
- ② Optical interface (for Customer Service)
- ③ Movement sensor (MotionReact)
- ④ Display

Main menu in display

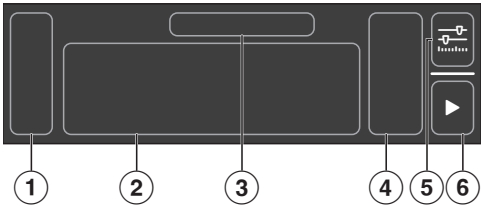

- ① Side trim
- ② Programmes
- ③ Name of the highlighted programme
- ④ Parameters for the programme
- ⑤ Other parameters
- ⑥ Start

Symbols

	Menu
	Programmes
	Favourites
	Saved favourite
	Remote control/MobileStart Networking
	More parameters
	Start
	Stop
	Pause
	Settings
	OK
	Sounds
	System lock
	Maintenance
	Wipe protection

- Swipe your finger in the required direction on the display.
- To select a menu option, press the required menu option or symbol.

The menu option is highlighted.

Exiting a menu level

You are in a menu.

- Depending on the menu, select *X Close window* or *↶ Back*.

The higher-level menu is displayed.

Operation

Switching the tumble dryer on or off

The  *On/Off* switch is recessed.

- Press the  *On/Off* switch until the tumble dryer switches on or off.

Tip: With MotionReact, the tumble dryer is automatically switched on when you approach it.

Navigating the display

The display can be scratched by pointed or sharp objects, e.g. pens. Only touch the display with your fingertips.

Familiarisation

Selecting a programme

You are in the main menu.

- Swipe your finger on the display until the required programme is highlighted.
- If you want to start the programme with the parameters displayed, select **▶ Start**.

Tip: If you want to change the parameters, select the icon of the programme or **⚙ More parameters**.

Adjusting parameters

You can switch parameters on or off (e.g. Extras) or adjust them on a scale (e.g. the Duration).

Switching parameters on or off

Activated parameters are highlighted in colour.

- Select the parameter you want to switch on or off.
- Touch **✓ OK** to confirm.

The parameter is saved.


Changing parameters on a scale

- Select the parameter you want to change.
- Move the scale to the left or right until the required value is highlighted.
- Confirm with **✓ OK**.

The value is saved.

Displaying the pull-down menu

The pull-down menu provides quick access to certain functions. You can also open notifications via the pull-down menu.

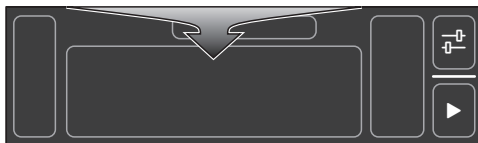

- Open the pull-down menu by pulling it down from the top centre of the display.
- Touch **× Close window** to close the pull-down menu.

Displaying the context menu

When you are in certain menus, a context menu can be displayed. This allows you to move Favourites, for example.

- To open the context menu, press and hold a Favourite or select **☹ Context menu**.
- Make the change you want.
- To close the context menu, select **× Close window**.

Networking

Your tumble dryer is equipped with an integrated WiFi module. The WiFi module makes it possible to connect to your home network and to use the Miele app on a mobile device.

Once your tumble dryer has been connected via WiFi, the connection is automatically re-established every time it is switched on.

Make sure that your WiFi network signal is strong enough in the place where you intend to install your tumble dryer. Connecting your tumble dryer to your WiFi network will increase energy consumption, even when the tumble dryer is switched off.

Smart Extras via the Miele app*

Networking via the Miele app gives you access to numerous Smart Extras, including:

- Access status information.
- Use additional helpful functions.
- Keep your tumble dryer up to date with the latest Miele developments via software updates.

You can find more detailed information about Smart Extras on the Miele website, in the Apple App Store® or in the Google Play Store™.

*This is a separate digital offer from Miele & Cie. KG. The range of functions can vary depending on the model and the country. Acceptance of the Terms and Conditions and Privacy Policy for Miele digital products & services in the Miele app required. Miele reserves the right to change or discontinue the digital offer at any time.

SmartStart

You can set your tumble dryer to start automatically based on an external signal with a suitable energy management system.

The tumble dryer must be networked with the Miele app.

Movement sensor/MotionReact

The tumble dryer has a movement sensor. The movement sensor reacts to movement and detects when you approach the tumble dryer.

Depending on the operating status of the tumble dryer, you can trigger various actions using the movement sensor such as switching on the tumble dryer or switching off the buzzers.

Under   *Settings*  *General*  *Movement sensor*, you can adjust the settings for the movement sensor to suit your personal requirements.

ComfortOpen

A motorised door opener opens the door when a hand approaches the door handle sensor.

The door opens a little automatically at the end of the programme.

Drum lighting

The drum lighting illuminates the drum and the area in front of the tumble dryer. The drum lighting comes on automatically when the door is opened. The drum lighting will go out again automatically after a few minutes.

Defective drum lighting can only be replaced by the Miele Customer Service Department.

AmbientLight

The tumble dryer has lighting for the door handle and for FragranceDos.

Door lighting

The door lighting indicates whether the door can be opened.

FragranceDos lighting

The FragranceDos lighting clearly indicates the fill level of the fragrance flacons.

Adjusting the fragrance intensity changes the intensity of the lighting. Bright light = stronger fragrance intensity

Darker light = weaker fragrance intensity

Familiarisation

QuickPowerDry

With the help of an additional heater, which is automatically switched on if necessary, the ideal drying temperature is reached even faster during the heating-up phase. The energy consumption is slightly higher. Once the drying temperature has been reached, the additional heater switches off again.

WoolDry

In the Woollens programme, you can dry woollen items that have been washed in the Hand wash woollens programme.

PerfectDry

PerfectDry dries the laundry precisely, although the result is also influenced by the calcium content of the water used to wash the laundry. The active PerfectDry adjusts the drying process to the residual moisture of the laundry and water quality, making the programme running time more accurate. PerfectDry is not active in programmes with a selectable duration.

SteamCare

Clean, damp or dry laundry is smoothed and freshened up using *SteamCare*. Condensed water from the condensate container is sprayed into the drum. This can be heard by humming noises emanating from the pump. The drying heat evaporates the condensed water, which creates the *SteamCare effect*.

Tip: The condensate container must be filled.

Wash2Dry

To use the *Wash2Dry* function, you must own a Miele W2 washing machine and network your washing machine and tumble dryer with the Miele app and Miele Services.

The washing machine transfers the programme data to the Miele Cloud at the end of the programme.

Based on the programme data transferred from the washing machine, the tumble dryer automatically sets a specially adapted drying programme, which can still be changed.

All you have to do is load the laundry and start the programme.

The tumble dryer does not offer a corresponding drying programme for wash programmes for very delicate items (e.g. curtains).

Tip: The tumble dryer must not be disconnected from the mains. Otherwise the programme data transferred by the washing machine will not be received by the tumble dryer when the *Wash2Dry* function is selected.

Disconnecting the dryer from the mains delays the reception of programme data.

FragranceDos

The FragranceDos fragrance system offers you the opportunity to add a special fragrance and to freshen up your laundry with fragrance flacons.

Tip: Both positions can be used for a more intense scent of the same fragrance. Or conveniently switch between fragrances of your choice or DryFresh to freshen up your laundry. You can close the fragrance flacon that you are not using.

Condensate container

The condensed water from the condensation effect is pumped through the drain hose into the condensate container.

The condensate container must be emptied regularly, otherwise the drying programme will stop.

Tip: You no longer need to empty the condensate container if you drain the condensed water using an external drain hose. To avoid the programme being interrupted, we recommend this especially when drying a load of more than 8 kg.

Optional accessories


Products specially tailored to your tumble dryer – such as fragrance flacons, dryer baskets and accessories – are available from the Miele online shop, from Miele Customer Service or from your Miele dealer.

You can access the Miele online shop via the following QR code:



Installation


Rear view

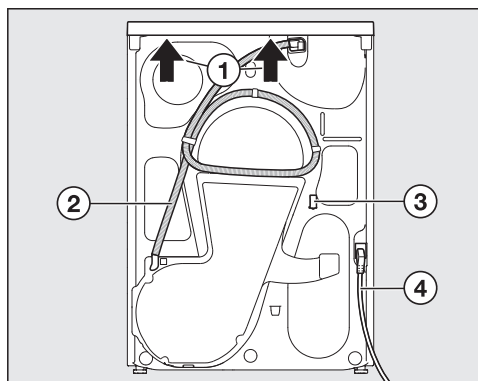

- ① Protruding lid for holding when moving the appliance
- ② Drain hose for condensed water
- ③ Hook for winding up the mains connection cable during transport
- ④ Mains connection cable

Transporting the tumble dryer

 Danger of injury to people and damage to property caused by moving the appliance incorrectly. If the tumble dryer tips up there is a danger of injury to people and damage to property. Ensure that the tumble dryer is stable during transportation.

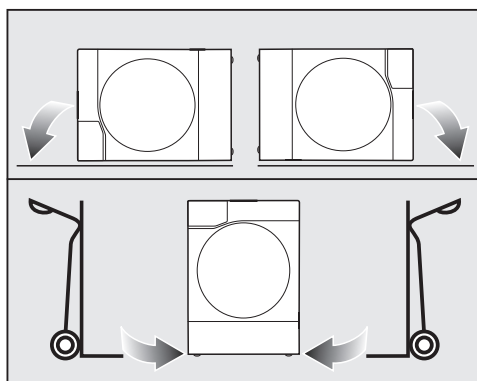

- If transporting the tumble dryer, make sure its left or right side panel is:
 - Horizontally (e.g. in a car) or
 - Upright on a sack truck

Transporting the tumble dryer to the installation surface

- Carry the tumble dryer by the front feet and by the lid where it protrudes at the back of the appliance.

Draining of condensed water before moving

A residual amount of condensed water may run out of the tumble dryer during transport (e.g. when moving house).

- To remove condensed water, start any programme before transporting the machine.

Additional installation requirements

Room doors and furniture doors

 Danger if the dryer door cannot be fully opened.

Reliable operation of the tumble dryer is otherwise not guaranteed.

The tumble dryer must not be installed in places where doors prevent the dryer door from being fully opened.

The appliance must not be installed behind a lockable door, a sliding door or a hinged door of a piece of furniture on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

Accessing the socket

 Risk of electric shock.

Personal injury and damage may occur.

The socket must be easily accessible so that the tumble dryer can be quickly disconnected from the mains if necessary.

Safety precautions against fire



 Risk of fire and explosion due to damage to the tumble dryer.

The refrigerant is flammable and explosive.

Do not make any alterations to the tumble dryer. Take measures to protect the tumble dryer against damage.

If the tumble dryer is damaged, proceed as follows:

- Avoid naked flames or anything which creates a spark.
- Disconnect the tumble dryer from the electrical supply.
- Air the room where the tumble dryer is located.
- Contact the Miele Customer Service Department.

Ventilation for the tumble dryer

The tumble dryer generates heat during operation, which must be dissipated. Ensure sufficient ventilation of the room (e.g. open the window).

 Fault due to insufficient cooling of the tumble dryer.

The drying time and energy requirements of the tumble dryer increase and the programme may be cancelled.

The cool air vent in the plinth flap must not be covered, e.g. by a laundry basket.

Do not block the gap between the bottom of the tumble dryer and the floor with plinth facings, deep pile carpet or other similar products.

Installation

Slot-in or wall unit installation

The tumble dryer is suitable for pushing under a worktop. (min. 850 mm high niche). Installation is also possible in a wall unit. The drying time may increase during installation. The appliance lid cannot be removed.



Fault due to obstructed vent.

The drying time and energy requirements of the tumble dryer increase and the programme may be cancelled.

Prevent the heat from building up excessively by dissipating it in a targeted manner.

Preventing excessive heat build-up

You can reduce excessive heat build-up by taking certain measures.

- Unscrew the screw feet on the tumble dryer slightly so that the gap between the floor and the bottom of the tumble dryer is at least 20 mm.
- Create a gap for the dryer in the continuous kitchen furniture plinth panel.
- When installing in a wall unit, make openings in the unit (install ventilation grille).

Washer-dryer stack

The tumble dryer can be installed as a washer-dryer stack together with a Miele washing machine. A stacking kit (optional accessories) is available from your Miele dealer or Miele Customer Service Department.

Only the required Miele washer-dryer stacking kit may be used.

For stacked installation, the movement sensor (MotionReact) in the tumble dryer does not work, or only to a limited extent.

This is not a fault.

Plinth

A plinth with drawer (optional accessories) is available for this tumble dryer from your Miele dealer or Miele Customer Service Department.

External condensed water connection

Preparing the drain hose




Damage to the drain hose through incorrect handling.

The drain hose can suffer damage and condensed water can leak.

Do not pull on the drain hose and do not stretch it or allow it to become kinked.

Have a container ready. There will be a small amount of water in the drain hose from the final test at Miele.

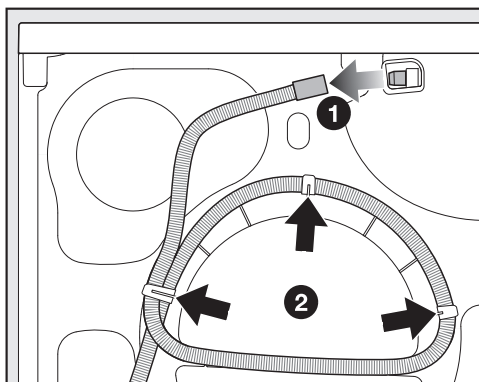

- 1 Pull off the drain hose.
- 2 Pull the drain hose out of the clips.


- Unwind the drain hose.
- Allow any residual water to run into a container.

Hose length: 1.49 m
 Maximum delivery head: 1.00 m
 Maximum drainage length: 4.00 m

Optional accessories for drainage

It is available to order in the Miele online shop, from Miele Customer Service or from your Miele dealer.

Drainage accessories

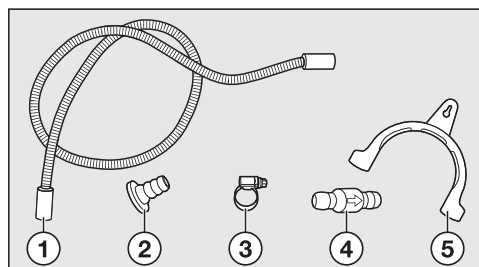

- ① Hose extension**
- ② Adapter*
- ③ Hose clip*
- ④ Non-return valve**
- ⑤ Hose holder*

* Supplied with the tumble dryer

** Must be purchased:


Non-return valve kit for external water connection, including non-return valve, hose extension (approx. 0.6 m long), 2 hose clips

Adapter for drainage


- Connection option for washing machine and tumble dryer
- With integrated non-return valve for the tumble dryer

Use:

- For a sink drain outlet

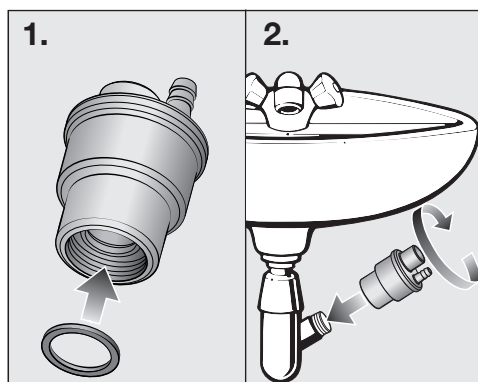

- For plastic pipe DN 40/DN 50

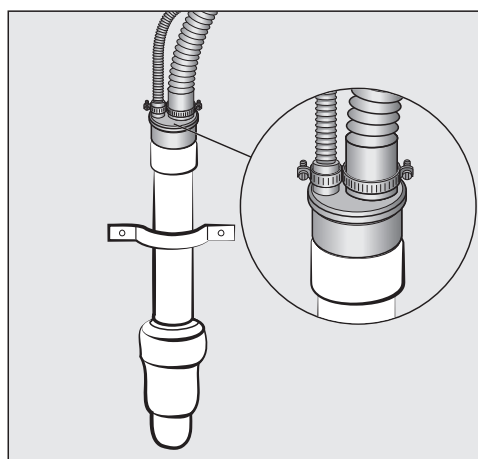

Installation conditions with non-return valve

⚠ Damage if the end of the hose is immersed in water.

Back-flow water could damage the tumble dryer and also the room in which it is located.

Always use the non-return valve when installing on all water-bearing connections.

Installation

Installations conditions for which the non-return valve must be used:

- Draining into a sink
- Draining into a floor drain (gully)
- Connection to a sink drain outlet
- Connection to a drainage system already in use by another appliance, e.g. a dishwasher or washing machine


Fault caused by incorrect installation of the non-return valve.

If installed incorrectly, drainage is not possible and the programme is cancelled.

The arrow on the non-return valve must point in the direction of flow after installation.

Installing a simple drain

Drainage into a sink or floor drain (gully) possible.

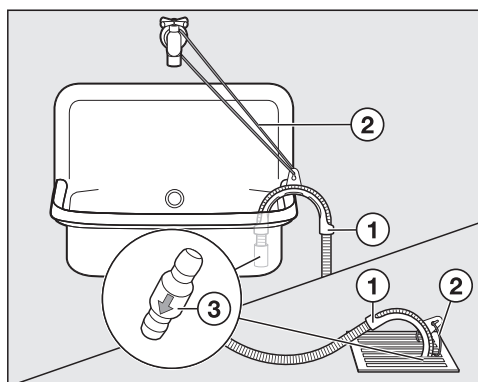

- Use the hose holder (1).
- Attach the hose holder with a cord (2).


Recommendation: fit the non-return valve (3) into the end of the hose.

! Risk of damage from leaking water.

If the drain hose comes loose, overflowing water can cause damage.

Secure the drain hose (e.g. by tying it) to make sure it cannot slip.

Installing the drain to a sink drain outlet

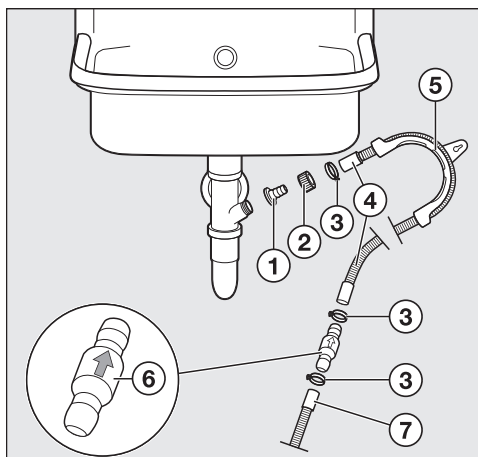

- ① Adapter
- ② Union nut
- ③ Hose clips
- ④ Hose extension
- ⑤ Hose holder
- ⑥ Non-return valve
- ⑦ Drain hose, tumble dryer

- Fit the adapter (1) to the sink drain outlet using the union nut (2).

If this union nut has a flat disc in it, the disc must be taken out first.

- Attach the end of the hose extension ④ to the adapter ①.
- Use a screwdriver to tighten the hose clip ③ up close to the union nut.
- Use the hose holder ⑤.
- Connect the hose extension ④ with the non-return valve ⑥ to the drain hose ⑦ of the tumble dryer.
- Secure the non-return valve ⑥ using hose clips ③.

same type (available from the Miele Customer Service Department). For safety reasons, such replacement may only be carried out by a qualified specialist or the Miele Customer Service Department.

Electrical connection

The tumble dryer is supplied with a mains cable with moulded plug ready for connection to a suitable earthed socket.

The socket must be easily accessible after the tumble dryer has been installed. If the socket is not easily accessible, ensure that a suitable means of disconnection is provided on the installation side for each pole.



Risk of fire from overheating.

Connecting the tumble dryer to a multi-socket adapter or to an extension lead can overload the mains connection cable.

For safety reasons, do not use an extension cable or multi-socket adapter.

The electrical system must comply with local and national safety regulations (BS 7671 in the UK).

For safety reasons, we recommend using a type A  residual current device (RCD) in the relevant electrical installation for connecting the tumble dryer.

If the mains connection cable is damaged, it must only be replaced with a specific mains connection cable of the

Installation

These operating instructions and the data plate indicate the nominal power consumption and the appropriate fuse rating. Compare this information with the data of the on-site electrical connection.

If in any doubt, consult a qualified electrician.


Temporary or permanent operation on an autonomous power supply system or a power supply system that is not synchronised with the mains power supply (e.g. island networks, back-up systems) is possible. A prerequisite for operation is that the power supply system complies with the specifications of EN 50160 or an equivalent standard. The function and operation of the protective measures provided in the domestic electrical installation and in this Miele product must also be maintained in isolated operation or in operation that is not synchronised with the mains power supply, or these measures must be replaced by equivalent measures in the installation. As described, for example, in the current version of BS OH-SAS 18001–2 ISO 45001.

 **Damage caused by operating the tumble dryer too soon after installation or re-installation, e.g. after moving house.**

The heat pump can be damaged.


You can switch on and network the tumble dryer. However, to avoid possible damage, only start a drying programme after one hour has elapsed.

Levelling the tumble dryer

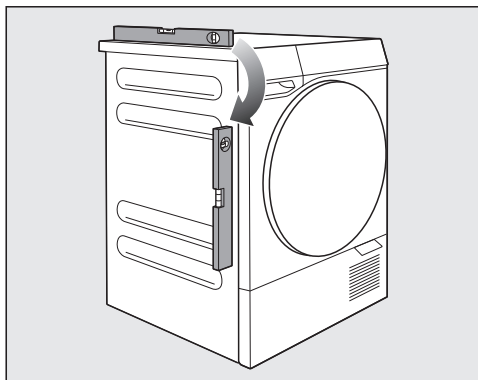

The tumble dryer must stand perfectly level to ensure safe and proper operation.

The feet on the tumble dryer can be adjusted to compensate for unevenness in the floor.

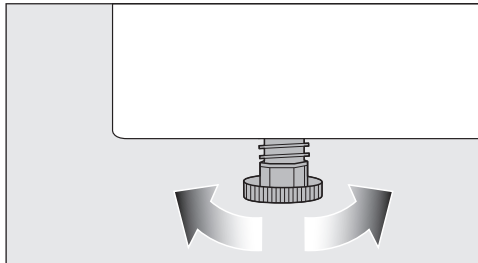

- Adjust the tumble dryer feet until the appliance is level.

Tip: Use a flat 17 mm open spanner to make it easier to turn the adjustable feet. Many Miele washing machines are supplied with a suitable open spanner.

Removing accessories from the drum

- Open the tumble dryer door and remove the accessories from the drum.

Technical data

Height	850 mm
Height-adjustable	845–855 mm
Width	596 mm
Depth	644 mm
Depth with dryer door open	1115 mm
Slot-in	Yes
Stackable	Yes
Height/width/depth for building under	850/600/600 mm
Weight	55 kg
Drum volume	120 l
Load size	9 kg (weight of dry laundry)
Condensate container, volume	4.2 l
Drain hose, length	1.49 m
Maximum delivery head	1.00 m
Maximum drainage length	4.00 m
Mains connection cable, length	2.00 m
Voltage	See data plate
Electrical power rating	See data plate
Electrical fuse rating	See data plate
Refrigerant and global warming potential	See data plate
Test certifications awarded	See data plate
Energy consumption	See “Consumption data”
LEDs	Class 1
Frequency range	2.4000–2.4835 GHz
Maximum transmission power	< 100 mW

EU Conformity declaration

Miele hereby declares that this heat-pump tumble dryer complies with Directive 2014/53/EU.

The complete text of the EU declaration of conformity is available from one of the following internet addresses:

- Products, Download from www.miele.ie
- For service, information, operating instructions etc: go to <https://miele.ie/manuals> and enter the name of the product or the serial number

Installation

UK Conformity declaration

Miele hereby declares that this heat-pump tumble dryer complies with UK Radio Equipment Regulations 2017, as amended.

The complete text of the UK declaration of conformity is available from one of the following internet addresses:

- Products, Download from www.miele.co.uk
- For service, information, operating instructions etc: go to <https://miele.co.uk/> manuals and enter the name of the product or the serial number

This **Statement of Compliance** confirms this Miele product fully complies with the **Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023**.

- 1) Household Appliance – *Tumble Dryer HT28-W, HT30-W*
- 2) Manufactured by: Miele & Cie KG,
Carl Miele Street 29, 33332 Gutersloh Germany
Imported by and contact point: Miele Company Ltd, Fairacres, Marcham Road,
Abingdon, Oxon, OX14 1TW Great Britain
- 3) The defined support period at the time of first supply is 10 years
- 4) To report vulnerabilities and cybersecurity issues please contact: psirt@miele.com
- 5) Signature 

Name: **Paul Wright**

Company Position: **Head of Technical Management**

Date of signature: **19th March 2024**

Place of signature: **Abingdon, Oxfordshire**

 Risk of injury or damage to property due to improper set-up and installation.

Improper procedures can lead to personal injury or damage to property.

Before commissioning the tumble dryer for the first time, make sure it has been installed correctly. Perform the installation correctly. Please follow the instructions in "Installation".

 Damage caused by operating the tumble dryer too soon after installation or re-installation, e.g. after moving house.

The heat pump can be damaged.

You can switch on and network the tumble dryer. However, to avoid possible damage, only start a drying programme after one hour has elapsed.

Requirements for networking

Note the following requirements for networking:

1. A home network is available at the installation site.
Have the WiFi password ready.
2. The Miele app is available on a mobile device.
3. You have a user account in the Miele app.

You can also carry out the networking at a later date. Skip the "Networking menu option during commissioning.

Commissioning procedure

- Approach the tumble dryer or touch the  *On/Off* switch.

The display shows the first step for commissioning.

- Follow the steps on the display.

Commissioning is not complete until the commissioning programme has been completed. If the process is cancelled beforehand, the entire commissioning process must be repeated.

Operation

Operating sequence

We recommend the operating sequence listed below which is customised to your tumble dryer. This allows you to perfectly use all the special features.

You will find useful information and tips on the individual operational steps in "Operation".

On the tumble dryer

Basic operating concepts

1. Preparing the laundry
2. Switching on the tumble dryer
3. Loading the laundry
4. Selecting a programme
5. Setting programme parameters
6. Start with ► *Start*
7. End of the programme

Wash2Dry operating option

1. Preparing the laundry
2. Switching on the tumble dryer
3. Loading the laundry
4. Selecting Wash2Dry
5. Start with ► *Start*
6. End of the programme

Further operating options:

- Delay start
- AddLoad (Add laundry)

Via the app

1. Preparing the laundry
2. Switching on the tumble dryer
3. Loading the laundry
4. Closing the door
5. Select  *Remote control*
6. Start with ► *Start*

7. Select a programme via the app
8. Start a programme via the app
9. End of programme

Preparing the laundry

Prepare the laundry as described in "Good to know".

 Damage due to objects which were not removed from the laundry. Otherwise textiles or the tumble dryer may be damaged.
Remove foreign objects and all objects such as detergent dispensing aids or loose underwires from bras.

Switching on the tumble dryer


When the movement sensor is activated, the tumble dryer switches on automatically.

- Touch  *On/Off*.

Loading the laundry

Opening the door


The door handle sensor registers when a hand touches the door and opens the door a little.

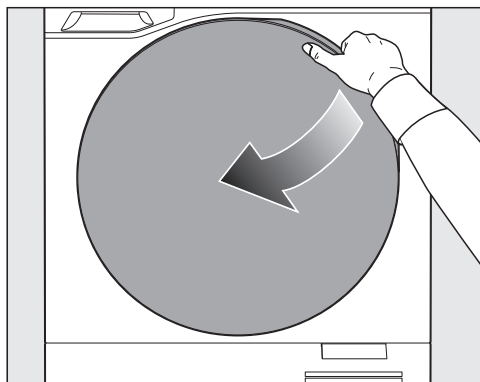

- Open the door fully.

Loading laundry in the drum


- To prevent damage, remove any remaining items or objects from the drum.

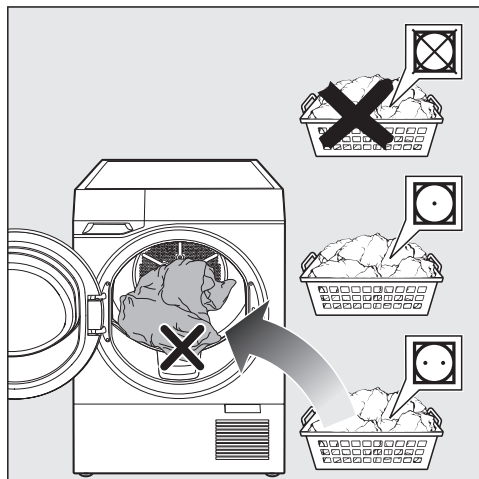

- Unfold the laundry and load loosely into the drum.

Tip: Note the maximum load size of the programmes shown on the display.

Closing the door

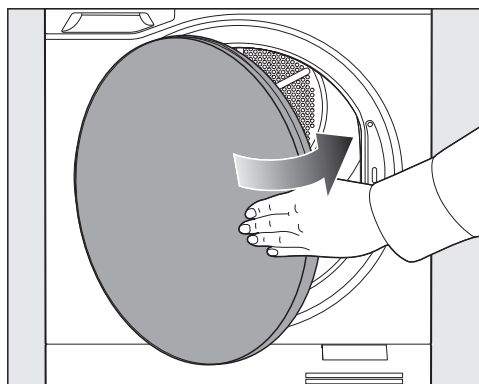

- Shut the tumble dryer door gently.

Make sure that no items are caught in the opening.

Selecting a programme

Tip: To view programme information, select ⓘ *Information*.

- Swipe your finger on the display until the required programme is highlighted.

Setting programme parameters

- Depending on the programme, select either Drying level or Duration.

Tip: You can also select further parameters using ⏸. The parameters are then expanded.

- Select the desired Extras.

Tip: You can accept the selection and return to the programme selection using ✓.

Selecting the drying level

For most programmes such as *Cottons* or *Minimum iron*, you can select Drying level.

The selectable *Drying levels* are indicated by symbols, such as ☐ (Cupboard Dry) or ☐ (Hand iron).

Selecting the duration

For some programmes such as *Warm air* or *Basket programme*, you can select *Duration*.

- Select *Duration*.
- Move the scale until the required duration is highlighted.

Selecting Extras

- Touch *Extras*.

Operation

The selectable *Extras* are indicated by symbols, such as  (*Gentle tumble*) or  (*DryCare 40*).

- Activate the Extra you want.

The list only shows the Extras that can be activated for the selected programme.

Extras cannot be combined. To select a different Extra, deactivate the Extra that was selected first.

Tip: Note that some Extras require a smaller load size.

Starting a programme

- Select  *Start*.

The programme will start running.

The programme running time is influenced by the type, quantity and residual moisture of the laundry. Therefore, the time left displayed may be different for each new programme.

PerfectDry detects if only a few items or items that are already dry have been loaded in the drum (drum empty detection feature). The programme running time is automatically shortened for gentle drying.

Selecting remote view/close-up view

In remote view, the display shows the most important information about the current programme in large font.

Shortly after the programme starts, the display automatically switches to remote view.

- To switch back to the close-up view with additional information, touch the display.

End of programme

Opening the door

If ComfortOpen is switched on, the door opens a little at the end of the programme (but not during the Anti-crease phase).

- Pull open the door.

Removing the laundry

- Remove all items from the drum.

Damage to textiles.

Items that have not been removed can be overdried and damaged in the dryer.

Empty the drum completely after drying.

What to do after removing laundry

- Clean the fluff filters in the door opening.
- Close the door.
- Empty the condensate container.

Special features for operation via app

Loading the laundry

- Open the door.
- Load the laundry.
- Close the door.

Activating operation via app

- Select  Remote control.

Selecting and starting a programme via the app

- Select the programme you want to use.
- Select the programme parameters you want.
- Start the programme.

Time selection/SmartStart³

Setting Delay start/SmartStart

The delay start function gives you several options for starting a programme at a later time. You can set the start time or the finish time of a programme. If a suitable energy management system is available, you can use the *SmartStart* function to start your tumble dryer automatically based on an external signal. The delay start function is possible in a 24-hour period.

The *SmartStart* setting is only visible if the tumble dryer is networked with the Miele app and the SmartStart function has been activated in the settings.

- Select the  *More parameters* symbol.
- Select *Start*.
- Set the time you want (*Start* or *Finish*).
- To start the drying programme with delay start, select ► *Start*.
- To return to the programme selection, select ✓ *Confirm*.

Adjust parameters to personal preferences. Then proceed.

You need a suitable energy management system. The energy management system connects to the Miele Cloud. The Miele Cloud controls the tumble dryer via the Miele app.

If you have activated SmartStart, a time period is now set. The tumble dryer will then be started by a suitable energy management system within the time period specified by you. If the energy management system does not send a signal by the latest possible start time, the tumble dryer will start automatically.

Programme modifications after starting the programme

Changing programmes

To protect against unintentional changes, it is not possible to change the programme after the programme has started.

Add laundry (AddLoad)

Laundry can be added or removed if the display shows "Add laundry".

- Touch the display.
- Select the *Add laundry* sensor.

The door will open a little.

- Open the tumble dryer door.
- Add or remove laundry.
- Close the drum door.
- Select ► *Start*.

The programme continues.

Operation

Cancelling a programme

- Touch the display.
- Touch  *Stop*.
- Confirm your selection.

The programme is cancelled and the door opens a little when ComfortOpen is switched on.

Moving a programme

You are in the main menu.

You can change the order of the programmes in the main menu from the programme *Minimum iron* onwards. You cannot change the order of the first programmes.

- Touch and hold the highlighted programme until  *Move* is displayed.
- Select  *Move*.
- Drag the programme to the required place.
- Confirm with .

The change will be saved.

Favourites

You can save up to 12 programmes as favourites. You can change the programme name and certain parameters for your favourite programmes. The saved favourites are called up using the programme selector Favourites.

Saving Favourites

You are in the main menu.

- Select a programme.
- Select the parameters you want.
- Select  *Favourites*.

A keyboard is displayed.

- Enter the name for the Favourite.
- Select  *Confirm*.

The programme has been saved as a  Favourite. The programme can be started immediately via  *Start*.

Tip: To save a programme directly as a Favourite, you can also select  *Favourites* at the end of the programme.

Moving Favourites

You are now in the  *Favourites* menu. You have saved a programme as a Favourite and want to sort the list.

- Touch and hold the Favourite you want to move.

A context menu is displayed.

- Select  *Move*.
- Move the *Favourite* to the required position.
- Touch  *OK* to confirm.

The change will be saved.

Editing Favourites

You are now in the  *Favourites* menu. You have saved a programme as a Favourite and want to edit the parameters.

- Move your finger on the display until the required Favourite lights up.
- Touch the  *More parameters* symbol.

The parameters are displayed.

- Change the parameters you want.

The changes are saved.

Removing Favourites

You are now in the  *Favourites* menu. You have saved a programme as a Favourite and want to remove it from the list.


- Select the Favourite you want to remove.
- Select  *Favourites*.

The Favourite has been removed from the list.

Using the condensate container

Pulling out the condensate container


 Damage to the dryer door and the condensate container. Damage and scratches may occur. First close the dryer door and then pull out the condensate container.

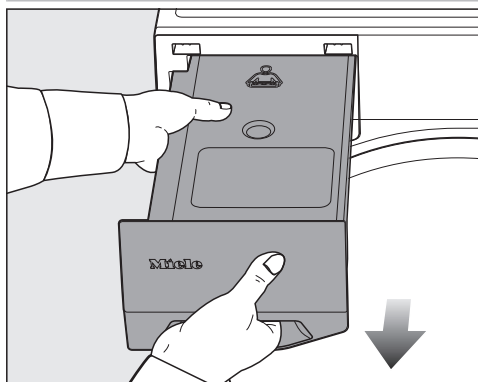

- To pull out the condensate container, keep a firm hold on the fascia panel or in the centre.
- To prevent condensed water from leaking, carry the condensate container horizontally.

Emptying the condensate container


Interval: empty the condensate container after drying.

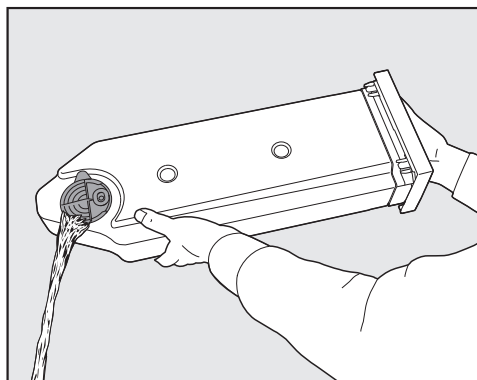

- Empty the condensate container.

Tip: You can collect the condensed water to use for the SteamCare function if the condensate container is empty during the next drying programme.

Sliding in the condensate container

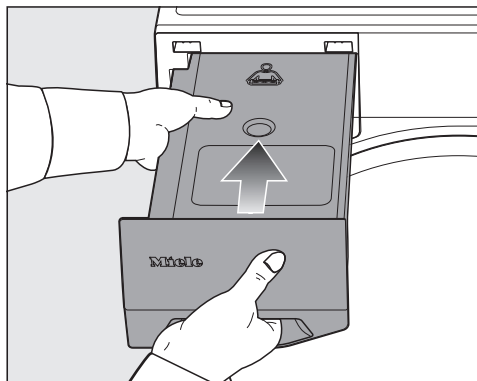


- Slide in the condensate container.

Preparing the condensate container for SteamCare

The condensate container must be filled up to the mark —min—.

Operation

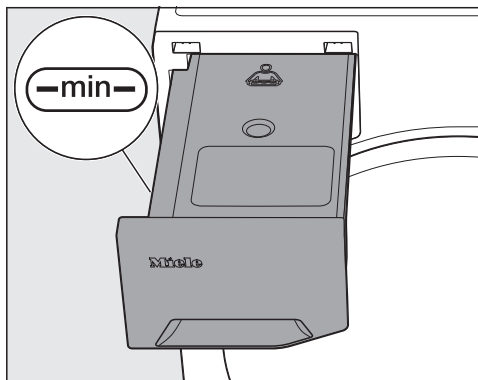


- Check the fill level.
- Top up if necessary.

Damage caused by mains water.

Limescale in mains water can clog the SteamCare nozzle.

Only fill with mains water once in an exceptional case. Otherwise, use condensate water from tumble dryers for example.

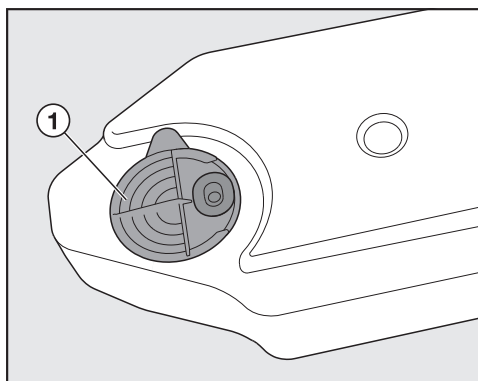

- Pour the condensed water through the rings on the spout ①.

The nozzle can clog up.

It should only be filled with clean condensed water. The water must not contain any fragrance, detergent or other substances.

A fluff filter in the condensate container prevents any fluff from being sucked out of the condensed water.

Using the FragranceDos fragrance system

Removing the protective seal from the fragrance flacon

⚠ Risk of fire if fragrance flacons are used incorrectly.


Leaked fragrance can cause fire.

Before using a fragrance flacon, please read "Warnings and safety notes", "Using the fragrance flacon (optional accessory)".

⚠ Leaking fragrance can cause health problems.

Fragrance can damage your health (e.g. skin irritation) if it comes into contact with your body.

Immediately wash off any leaked fragrance.

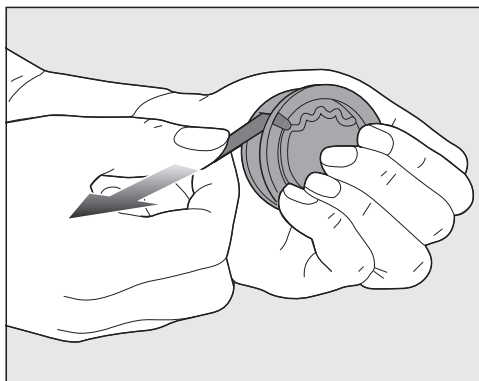


- Hold the fragrance flacon.

Tip: Do not open the fragrance flacon. Hold the fragrance flacon straight and do not tip.

- Pull off the protective seal.

FragranceDos sockets


There are 2 sockets in the fluff filter.

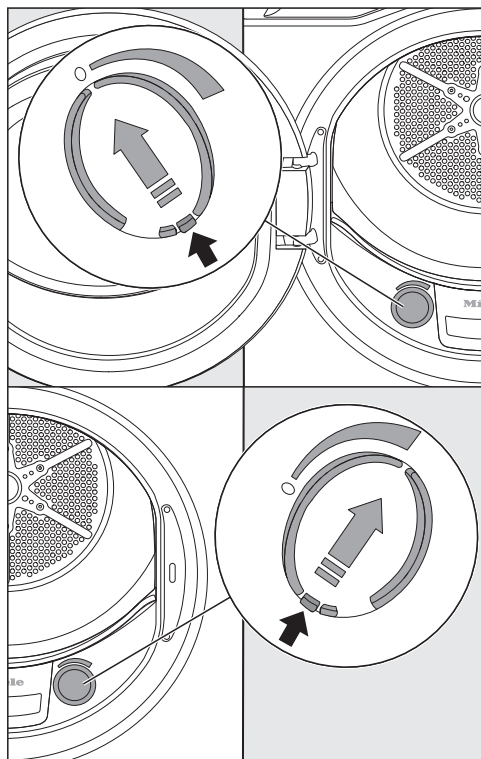


■ Open the cover using the opening tag.

To prevent the accumulation of fluff, the cover of the unused socket must remain closed.

Inserting the fragrance flacon

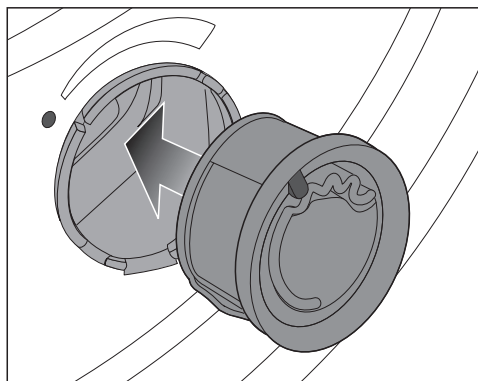

① Insert the fragrance flacon as far it will go into the FragranceDos socket.

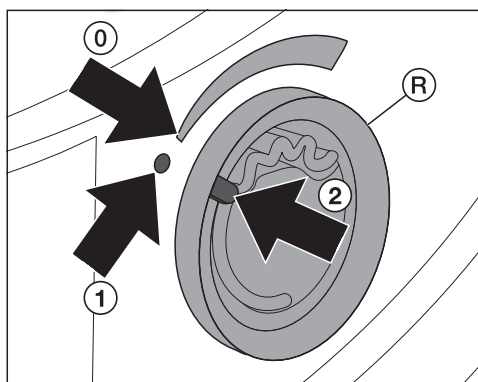

The marking ② is located at the ① position.


② Turn the outer ring (R) clockwise a little.

Tip: To prevent the fragrance flacon from slipping out, the mark ② must be in position ①.

Setting the fragrance intensity

Set the fragrance intensity before drying.

Operation

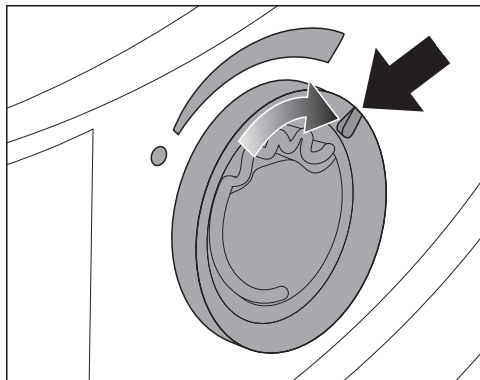


- Turn the outer ring clockwise.
- The further you open the fragrance flacon, the more intense the fragrance.
- Damp laundry and longer drying times with sufficient heat transfer are needed for the fragrance to be released into the laundry effectively. In the *Cool air* programme and if the fluff filters have not been cleaned properly, the fragrance will not be released efficiently into the laundry.

The fragrance will also be noticeable in the ambient air during the process.

- When the fragrance intensity is no longer sufficient, replace the fragrance flacon with a new one.

Closing the fragrance flacon


After drying, the fragrance flacon should be closed to prevent the fragrance from escaping needlessly.

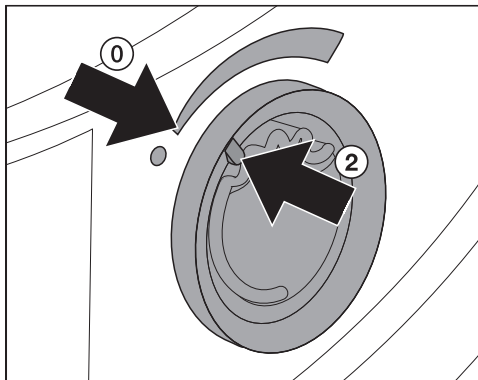

- Turn the outer ring anti-clockwise a little.


The marking ② is located at the ① position.

Removing the fragrance flacon

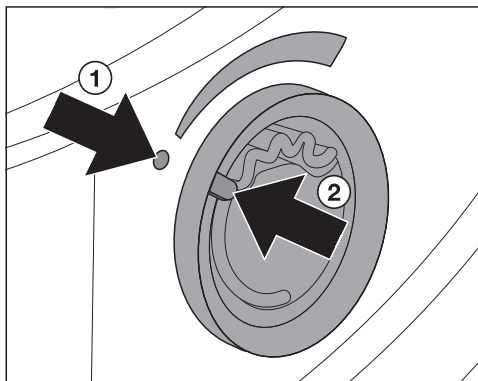

- Turn the outer ring anti-clockwise a little.


The marking ② is located at the ① position.

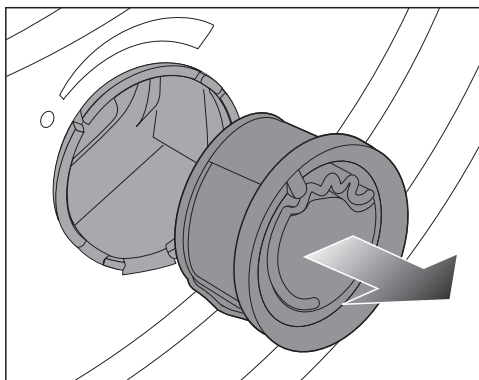


■ Remove the fragrance flacon.

Replacement interval: replace the fragrance flacon when it is empty or the fragrance is no longer sufficient.

Storing the fragrance flacon

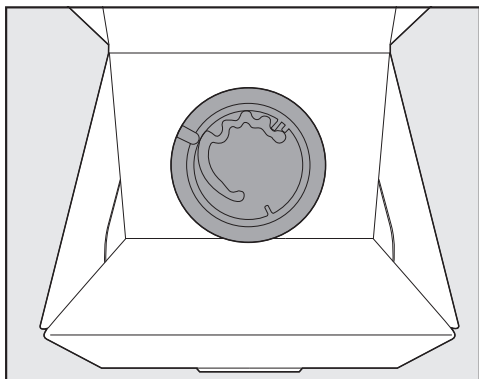

- Store the fragrance flacon in the original packaging in a cool, dry place.
- Do not expose the fragrance flacon to direct sunlight.
- When purchasing new fragrance flacons, only remove the protective seal just before use.

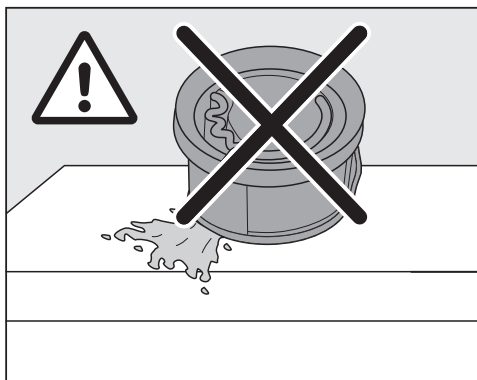

The fragrance can leak out of the flacon.

Do not store the fragrance flacon upright, upside down or on its edge.

Programmes

Programme chart

Load: specifications refer to the weight of the dry laundry.

Wash2Dry	
The programme is selected automatically in conjunction with the programme selection on the connected washing machine.	
ECO	
Load	9 kg
Use for	Cotton items such as those described under <i>Cottons Cupboard Dry</i> with normal residual moisture
Tip	- This programme is the most energy-efficient for drying cotton items with normal residual moisture levels. - In this programme, the <i>Cupboard Dry</i> degree of dryness is achieved.
Note for test institutes (in accordance with regulations, EU only) - The <i>ECO</i> programme is the test programme in accordance with Regulations (EU) 2023/2533 and (EU) 2023/2534 for the energy label measured in accordance with EN 61121. This programme is used to evaluate compliance with the EU Ecodesign legislation. - With the <i>Cottons</i> and <i>ECO</i> programme settings, drain the condensed water externally through the drain hose.	

Cottons	
Drying levels	HygieneDry, Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	9 kg and only 4.5 kg for <i>HygieneDry</i>
Use for	HygieneDry - Cottons and linen fabric which will be in direct contact with the skin, e.g. underwear, baby clothes, bed linen, towelling - Hard-wearing fabrics with the  care symbol on the care label Extra dry, Cupboard Dry plus, Cupboard Dry - T-shirts, workwear, jackets, blankets, aprons, smocks - Single and multi-layered cotton items Hand iron plus, Hand iron - Table linen, bed linen or starched laundry made of cotton or linen fabric
Tip	- Do not cancel <i>HygieneDry</i>. Otherwise the hygienic drying result will not be achieved. - <i>Extra dry</i> for multi-layered and very thick fabrics. - Do not use <i>Extra dry</i> for T-shirts, underwear, baby clothes (jersey fabrics). These fabrics can shrink. - To prevent laundry from drying out, it should be rolled up until you are ready for ironing.

Minimum iron	
Drying levels	HygieneDry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	4 kg
Use for	Synthetic and mixed fibre textiles as well as easy care cotton e.g. jumpers, dresses, trousers and socks/tights
Tip	- Close any zips or do up buttons. - Do not cancel <i>HygieneDry</i>. Otherwise the hygienic drying result will not be achieved.

Programmes

QuickPowerDry	
Drying levels	Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	4 kg
Use for	Garments made of cotton, synthetic fibres or mixed fibres
Tip	Shortening the programme running time

Woollens	
Load	1 kg
Use for	Woollen garments and fabric containing wool blends with a care label stating that they are suitable for washing, e.g. jumpers, cardigans, socks/tights
Tip	- To dry jumpers made from delicate woollen materials gently and carefully, we recommend drying them individually in the tumble dryer and not for too long in each case. Please reduce the drying time for small loads. - After taking the jumper out of the tumble dryer, lay it out flat until it feels dry to the touch. - Particularly delicate woollen garments, such as those made of angora, camel hair or cashmere, are usually not suitable for this programme. Even if delicate woollen garments are labelled as hand-washable, it is important not to tumble dry these garments in the <i>Woollens</i> programme. Instead, dry them in the <i>Basket programme</i> programme with the Miele dryer basket. Alternatively, you can leave woollen garments to air dry flat.

Shirts/Blouses	
Drying levels	Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	2 kg
Use for	Shirts and blouses made of cotton and mixed fibre

PowerFresh	
Drying levels	Cupboard Dry, Hand iron plus
Load	1 kg
Use for	Washed, durable fabrics with the  care symbol, which may be damp or dry
Tip	- For freshening up and smoothing with steam - Use the DryFresh fragrance flacon (optional accessories). - Insert the DryFresh fragrance flacon and adjust the fragrance intensity: see "Operation – Fragrance flacon" - The condensate container must be filled.

Warm air	
Load	9 kg
Use for	- Drying Dry different types of garments such as bath towels, bathing costumes and tea towels - separately Multi-layered fabrics whose layers have different drying characteristics, e.g. jackets, pillows, sleeping bags and other bulky items

Delicates	
Drying levels	Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	2.5 kg
Use for	Delicate garments made from synthetic fibre, mixed fibre and viscose with the care symbol  , e.g. lingerie and appliquéd garments
Tip	- The load can be reduced further for a particularly crease-free drying process. - <i>DryCare 40</i> is always active.

Programmes

Denim	
Drying levels	HygieneDry, Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	3 kg
Use for	Denim garments, e.g. jeans, jackets, shirts, skirts
Tip	- Close any zips or do up buttons. - Do not cancel <i>HygieneDry</i>. Otherwise the hygienic drying result will not be achieved.

Outerwear	
Drying levels	Cupboard Dry, Hand iron plus
Load	2.5 kg
Use for	Functional textiles, e.g. jackets and trousers made from membrane fabrics such as Gore-Tex®, SYMPATEX® and WINDSTOPPER®

Proofing	
Load	2.5 kg
Use for	Items made of microfibre and mainly synthetic fibres e.g. outerwear, skiwear and rainwear, table linen
Tip	- This programme includes an additional proofing thermal fixing phase. - Only use proofing agents which are stated by the manufacturer as being “suitable for use on membrane fabrics”. These agents contain fluorochemical compounds. - This poses a fire hazard. Do not dry fabrics which have been treated with proofing agents containing paraffin.

DryFresh	
Load	4 kg
Use for	Washed, damp textiles
Tip	- For freshening up without additional steam - Use the DryFresh fragrance flaçon (optional accessories). - Insert the DryFresh fragrance flaçon and adjust the fragrance intensity: see “Operation – Fragrance flaçon”

Sportswear	
Drying levels	Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	3 kg
Use for	Sportswear such as singlets and leggings as well as microfibre and fleece garments

Express	
Drying levels	Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	4 kg
Use for	Items suitable for the <i>Cottons</i> programme
Tip	Shortening the programme running time with an increased energy requirement

Down filled items/Duvets	
Drying levels	HygieneDry, Cupboard Dry
Load	1–2 pillows 40 x 80 cm or 1 pillow 80 x 80 cm or 1 duvet
Use for	Pillows and duvets with down, feather or synthetic filling
Tip	- The natural properties of feathers cause odours to develop when they are exposed to heat and moisture. Allow bedding to air outside the tumble dryer after tumble drying. - Do not cancel this programme. Otherwise the hygienic drying result will not be achieved.

Woollens handcare	
Load	1 kg
Use for	Woollen garments and fabric containing wool blends, e.g. pullovers, cardigans, socks/tights
Tip	- Wool and wool blend items contain a finish and are only fluffed up; they are not dried completely. - Remove the laundry at the end of the programme and spread the individual items out to dry.

Programmes

Silks handcare	
Load	1 kg
Use for	Silk garments such as shirts and blouses
Tip	- This programme reduces creasing. Items are not dried completely by this programme. - Remove the laundry after the end of the programme.

Smoothing	
Drying levels	Cupboard Dry, Hand iron
Load	1 kg
Use for	Washed, damp textiles
Tip	- To smooth out creasing caused during the spin cycle in the washing machine without additional steam. - You can select a drying level to care for damp items. - Remove the garments as soon as the programme has finished.

QuickHygiene	
Load	4 kg
Use for	- Hard-wearing fabrics with the  care symbol on the care label - Cottons and linen fabric which will be in direct contact with the skin, e.g. underwear, baby clothes, bed linen, towelling
Tip	- Also suitable for clean, dry laundry - Longer temperature holding time with a constant temperature. This temperature holding time kills off micro-organisms such as germs or dust mites and reduces allergens in the laundry. - Do not cancel this programme. Otherwise the hygienic drying result will not be achieved. - Shortening the programme running time

Bed linen	
Drying levels	HygieneDry, Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	4 kg
Use for	Bed linen, pillowcases
Tip	- Close any zips or do up buttons. - Do not cancel <i>HygieneDry</i>. Otherwise the hygienic drying result will not be achieved.

Automatic	
Drying levels	HygieneDry, Extra dry, Cupboard Dry plus, Cupboard Dry, Hand iron plus, Hand iron
Load	5 kg and only 4 kg for <i>HygieneDry</i>
Use for	Mixed load of garments suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes
Tip	- Close any zips or do up buttons. - Do not cancel <i>HygieneDry</i>. Otherwise the hygienic drying result will not be achieved.

Basket programme	
Load	3.5 kg basket load
Use for	Items suitable for tumble drying for which mechanical stress should be avoided.
Tip	- This programme may only be used with the dryer basket (optional accessory). - Follow the operating instructions supplied with the dryer basket.

Cool air	
Load	9 kg
Use for	Airing fabrics without heating

AddProgrammes

- Explanation of the reloadable programmes (AddProgramme)
If the tumble dryer is networked, additional programmes can be downloaded. The programmes can be found in the “More programmes” list and are marked with the  symbol.

Programmes

Extras

Pre-ironing

Clean, damp laundry is smoothed by steam.

Maximum load: 1 kg

The condensate container must be filled.

DryCare 40

For all fabrics that are free of wool and are washable at temperatures of 40 °C. The items are dried gently.

The maximum load specified must not be exceeded for each programme. The weight must be reduced to 4 kg in the *Cottons* and *Automatic* programmes.

Quick

The laundry is dried with a shorter programme running time.

Extra quiet

Noise reduction during drying.

SingleDry

A small number of individual items can be dried in a short time.

Maximum load: 1 kg

Save energy

Energy savings during longer drying programmes.

Gentle tumble

The items are dried at a gentle temperature.

Suitable for all items with the  care symbol, e.g. those made from acrylic.

The programme running time is increased.

Consumption data

Programmes	Load size ² kg	Running time h:min	Energy kWh	Final moisture content after dry- ing %
ECO¹	9,0	3:51	1,44	0
	4,5	2:12	0,75	0
Cottons	9,0	3:30	1,72	- 4
Extra dry	4,5	2:10	1,00	- 4
Cottons	9,0	2:23	1,11	12
Hand iron	4,5	1:45	0,70	12
Minimum iron Cupboard Dry plus	4,0	1:07	0,47	0
Minimum iron Cupboard Dry	4,0	1:05	0,45	2
Minimum iron Hand iron	4,0	0:48	0,32	12
Delicates Cupboard Dry	2,5	1:05	0,45	0

¹ ECO is the test programme in accordance with Regulations (EU) 2023/2533 and (EU) 2023/2534 for the energy label measured in accordance with EN 61121. The sound power level at full load for the ECO test programme is 60 dB(A) re 1 pW.

² The load refers to the weight of the dry laundry.

The values quoted for other programmes without the ECO programme are guide values calculated using EN 61121.

Consumption data can vary from the nominal values given above depending on load size, types of textiles, residual moisture levels after spinning, additional programme parameters selected and fluctuations in the electricity supply, or when water hardness levels differ from specified values.

Good to know



Risk of fire due to incorrect use and operation.

The laundry can burn and destroy the tumble dryer and the surroundings.

See the section on “Warnings and safety notes” for further information.



Damage due to foreign objects in the laundry.

Foreign objects can melt, burn, or explode.

Ensure that any foreign objects (e.g. detergent dispensing aids, lighters, etc.) have been removed from the laundry.

Tips

Washing tips

To prevent the risk of fire in the tumble dryer, wash heavily soiled textiles particularly thoroughly.

- Use sufficient detergent.
- Select a high wash temperature.
- If in doubt, wash the items several times.

To prevent new garments with intense colours from transferring colour to other garments and plastic parts in the tumble dryer, excess colour must be washed out.

- Wash new, coloured items thoroughly and separately before drying for the first time.

To treat starched laundry in the tumble dryer, an increased amount of starch must be dispensed during washing.

- To achieve the usual finish, double the amount of starch should be used.

Inadequately spun laundry increases the tumble dryer's energy consumption and programme running time. A fault may occur.

- Select a maximum spin speed for washing.

Tips on drying

- Sort the laundry according to fibre and fabric.
- Sort the laundry according to the same care symbols on the care label.
- Sort textiles according to colour so that fluff from different colours does not settle on the textiles.
- Loosen the items of laundry before putting them in the tumble dryer.
- Fasten duvet covers and pillow cases to prevent other items from becoming rolled up inside them.
- Tie together textile belts and ties.
- Close long zips.

Protecting tumble dryers

To prevent the tumble dryer from being damaged, check that the textiles are in perfect condition.

- Sew up damaged hems and seams on textiles so that fillings (pillow fillings) do not fall out and cause a fire.
- Sew or remove loose underwires from bras so that they do not come loose and get caught.
- Fasten hooks and eyes on textiles so that they do not get caught.

Protecting your laundry

Overdrying strains the laundry.

- Do not dry your laundry for too long. Select a drying level with more residual moisture or a shorter duration.

Overfilling strains the laundry, affects the drying result and is more likely to develop creases.

- Observe the recommended load sizes for this tumble dryer.

Shirts and blouses tend to crease more if the load size is large.

- If in doubt, reduce the load size to minimise creases and the ironing effort.

Jersey fabrics (e.g. T-shirts, underwear) tend to shrink when they are washed for the first time.

- To prevent further shrinkage, avoid overdrying jersey fabrics.
- If possible, choose a slightly bigger size when buying garments made from jersey fabrics.

Pure linen fabric must be labelled as suitable for tumble drying.

- If in doubt, use the *Smoothing* programme.

Garments with intense colours and a high fluff content can deposit fluff on light-coloured textiles, making it necessary to wash them again.

- Separate garments with intense colours.

Care symbols on the care label

Drying	
	Temperature
	Normal or higher
	Reduced
	Do not tumble dry

Ironing	
	Temperature
	... hot, .. medium, • lower
	Do not iron

Good to know

The right programme

Follow the instructions in “Programmes”. You will also find tips on selecting the right programme.

Selecting the correct drying level

To ensure that your laundry is perfectly dried, you can select a drying level for many programmes.

- *HygieneDry* for fabrics with special hygiene requirements
- *Extra dry* for multi-layered or very thick fabrics and for fabrics that do not dry evenly using *Cupboard Dry +*
- *Cupboard Dry plus* for items that are to be put away immediately
- *Cupboard Dry* for fabrics that may shrink such as light cotton or jersey fabrics
- *Hand iron +/Hand iron* for items that are to be ironed after drying

Drying level HygieneDry

Tip: If you have special hygiene requirements for your textiles, select *HygieneDry*.

The *HygieneDry* drying level is used to dry with a high temperature that is constant over an extended period of time. This kills off micro-organisms (such as germs or dust mites) and reduces allergens in the laundry.

The tumble dryer's energy requirement is higher and the programme running time is longer.

The hygienic drying result is not achieved.

A programme for which the *HygieneDry* drying level has been selected must not be interrupted.

Adjustable programme running time

For some programmes, such as the *Warm air* programme, you can select a duration.

Tip: Do not select the longest duration to start with. Try out different durations to find the right one.

Settings: overview

- * Follow the instructions on the display.

General ▶

Software update ▶

Update

Language ▶

Date & Time ▶

Clock format ▶

24 hours

12 hours

Time ▶

Date ▶

Brightness ▶

Sounds ▶

Keypad tones ▶

Buzzer tones ▶

End of prog. tone ▶

Security ▶

System lock ▶

Set up

Edit

Delete

PIN code ▶

Movement sensor ▶

Off

Near

Far

Factory default settings ▶

Reset

Networking ▶

WiFi

Connection ▶

Signal strength ▶

Home network ▶

IP address ▶

Reset

Remote control

Appliance functions ▶

Memory

ComfortOpen

Anti-crease ▶

Anti-crease

Duration ▶

0:30 → 2:00 h

Drying levels ▶

Automatic

Cottons

Minimum iron

Airways indicator ▶

Light

Normal

Heavy

Off

Lighting ▶

Door handle

Cooling down temp. ▶

Adjusting settings

Information ▶

Software ▶

Legal Information ▶

Open source licenses ▶

Consumption ▶

Previous programme ▶

Total consumption ▶

Operating hours

Service ▶

Service Access Point

General

Software update

To receive updates, you must successfully connect to your home network.

You can switch on this function to keep the software up to date with the latest Miele developments. A message will appear on the display as soon as a new update is available.

Security

System lock

The system lock prevents the washing machine from being used unintentionally.

- *Set up*
You are prompted to select an input method for the system lock. You must unlock the display every time you switch it on.
- *Edit*
This menu option is only displayed if you have already set up the system lock. You can change the selected PIN code.
- *Delete*
This menu option is only displayed if you have already set up the system lock. You can delete the system lock. There is no longer any protection against the machine being used inadvertently.

Tip: Make a note of the *PIN code*. If you have forgotten the PIN code, Miele Customer Service will have to reset the PIN code.

Movement sensor

The movement sensor detects movements within a certain range. You can deactivate the movement sensor or adjust its range (*Near or Far*).

Factory default settings

You can reset the appliance to the default settings.

Networking

Select  *Menu* ▶  *Settings* ▶ *Networking*.

Networking allows you to operate your appliance using the Miele app or external voice assistant, as well as to update the software.

WiFi

You can only connect to your home network if the *WiFi* setting is activated.

Connection

You can view information about your home network.

- *Signal strength*
The signal strength of the WiFi signal received is displayed.
- *Home network*
You can view the quality of the connection to your home network.
- *Signal strength*
The IP address is displayed.
- *Reset*
If you reset the network data, you will no longer be able to operate your appliance via the Miele app or external voice assistant or update the software. You will need to reconnect to your home network.

Remote control

You are only able to operate your appliance via the Miele app or external voice assistants if the *Remote control* setting is switched on.

Appliance functions

Here you can make various settings for the drying process.

Memory

The tumble dryer will save the last parameters selected for a programme (drying level and some of the extra options) after the programme has started.

The next time that programme is used the tumble dryer will show those parameters in the display.

ComfortOpen

The dryer door opens when the Anti-crease phase has ended or the programme is cancelled.

Anti-crease

The Anti-crease function reduces creasing after the end of the programme. The drum moves temporarily within the selected time period. The tumble dryer door can be opened at any time.

Drying levels

The drying levels of the selected programme can be adjusted individually: from damper (left) to drier (right). The drier the laundry, the longer the programme running time and the higher the energy consumption.

Airways indicator

After a long period of use, a message lights up at the end of the programme to remind you to remove fluff from the fluff filters and the plinth filter. Depending on how heavy or light the build-up of fluff is, the sensitivity of this reminder can be set or switched off.

Tip: If you find that the message for removing fluff lights up too often, even though not a lot of fluff has built up, select *Heavy*. However, if there is a very severe blockage in the ducting, the programme will be cancelled and the fault message is displayed, even if you have selected *Off*.

Cooling down temp.

For all drying level programmes, the cooling down temperature can be changed in the cooling phase before the end of the programme. If a cooler temperature is selected, the cooling phase will last longer.

Adjusting settings

Information

Software

Here you can find information about the software installed.

Legal Information

You can query which integrated open source components are used in the software.

Consumption

You are now under   *Settings* ▶ *Information* ▶ *Consumption*.

The consumption in kWh over the last programme or the total dryer running time is displayed.

Operating hours

You can query the number of operating hours.

Service

You can set whether Miele Customer Service should gain access to the software for servicing purposes.

Remote Access

Miele Customer Service can access the software remotely.

Cleaning the casing, drum and control panel

⚠ Risk of electric shock from mains voltage.

The mains voltage is applied to the tumble dryer even if it is switched off. Disconnect the mains plug before cleaning or maintenance.

⚠ Risk of damage due to ingress of water.

The pressure of a water jet can cause water to get into the tumble dryer, resulting in damage to components. Do not spray the tumble dryer with a water jet.

⚠ Damage caused by cleaning agents.

Solvent-based cleaning agents, abrasive cleaners, glass cleaners or all-purpose cleaners can cause damage to plastic surfaces and other parts.

Do not use these cleaning agents.

Cleaning recommendation:

Clean with a soft cloth once or twice a year and as required.

- Clean the casing and control panel with a mild cleaning agent or soapy water and dry both with a soft cloth.
- The drum can be cleaned using a suitable stainless steel cleaner if desired.

Cleaning the fluff filters


Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. Fluff filters trap the fluff produced.

Environmental impact due to fluff which has been disposed of incorrectly.

To prevent microplastics from spreading into the waste water system, fluff must not be drained away with the water.

Dispose of the fluff collected by the fluff filters with your household waste.

When to clean

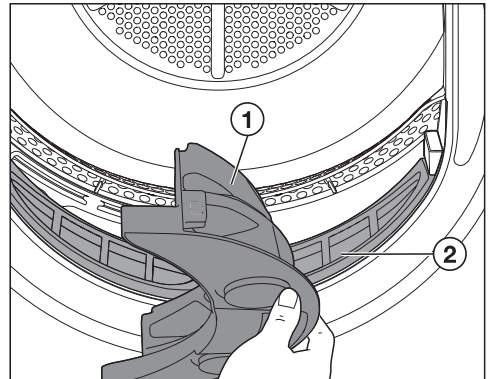

Clean both fluff filters ① and ② after each drying programme.

The programme running time is extended due to a heavy build-up of fluff.


A fault may occur.

Clean the fluff filters after every drying cycle.

Cleaning and care

Removing the upper fluff filter


- Open the tumble dryer door.

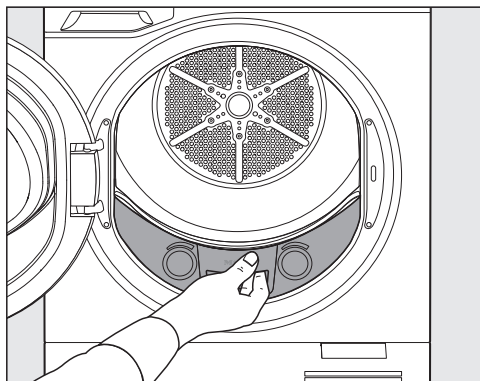


- Pull the fluff filter out.

Removing the fluff

Tip: A ball of fluff forms under your fingers when you start wiping. Strip off the remaining fluff using the fluff ball.

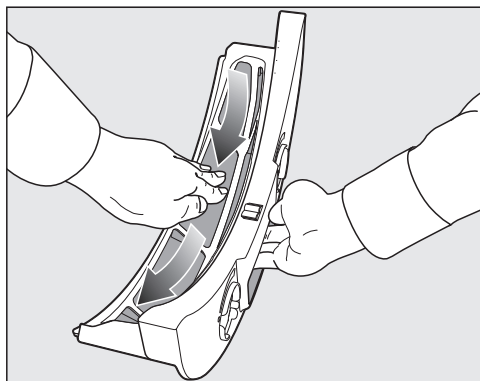

- Remove the fluff.

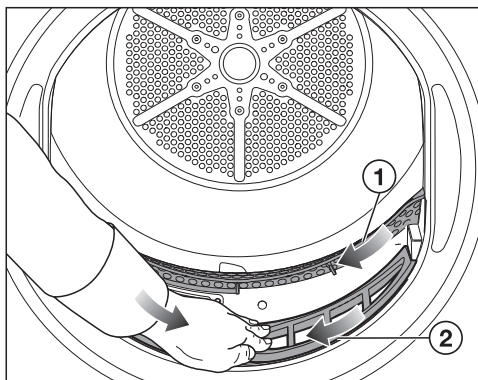

- Use a damp cloth to remove any fluff ①.


- Remove the fluff ②.

Tip: Alternatively, use a vacuum cleaner with a dusting brush.

If you use a crevice nozzle, it must be undamaged. Cracks or burrs on the crevice nozzle can cause damage.


Cleaning the fragrance flacon lighting

An LED illuminates the FragranceDos sockets in the fluff filter via a light guide.

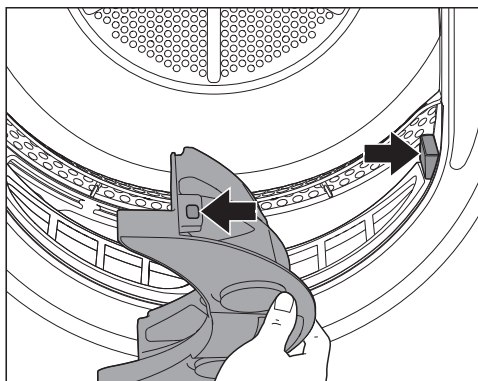

- Use a damp cloth (arrows) to remove any residues.

Inserting the upper fluff filter

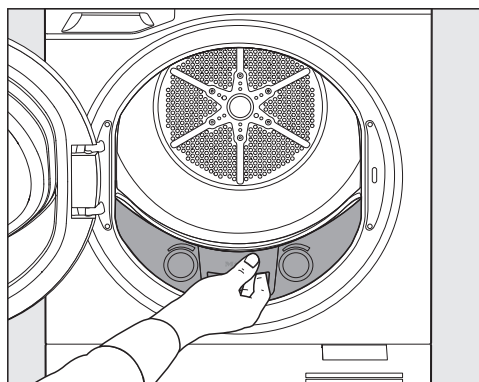

- Push the fluff filter all the way in.
- Close the drum door.

Cleaning the residual moisture sensor

The residual moisture sensor in the tumble dryer measures the residual laundry moisture to improve the drying results.


When to clean

Clean the residual moisture sensor once or twice a year with a soft cloth.

Fault when measuring the residual moisture.

The residual moisture is determined incorrectly because detergent residues form a coating on the residual moisture sensor.

Clean the residual moisture sensor.

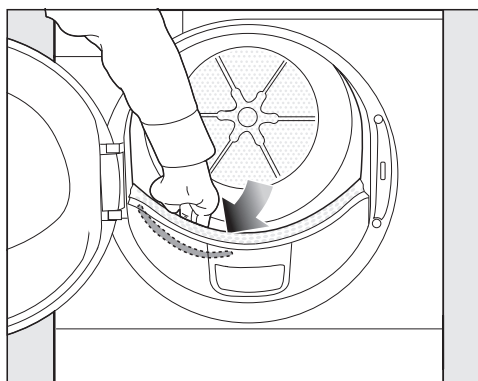

- Reach into the tumble dryer drum with your hand.

In the front, on the left, you will feel the elongated metal residual moisture sensor.

- Clean the residual moisture sensor with a damp cloth and a small amount of soapy water.
- Dry with a soft cloth.

Cleaning the plinth filter

Environmental impact due to fluff which has been disposed of incorrectly.

To prevent microplastics from spreading into the waste water system, fluff must not be drained away with the water.

To collect the cleaning water, clean the plinth filter in a bowl or bucket.

When to clean


Clean the plinth filter only when prompted to do so by the display or if the programme running time has been extremely long.

Do not clean the plinth filter after every drying programme. Frequent cleaning will cause the filter to wear prematurely.

Cleaning and care

Fault due to clogged plinth filter.
The programme running time is extended, the programme is aborted or a fault occurs.
Clean the plinth filter.


Opening the plinth flap

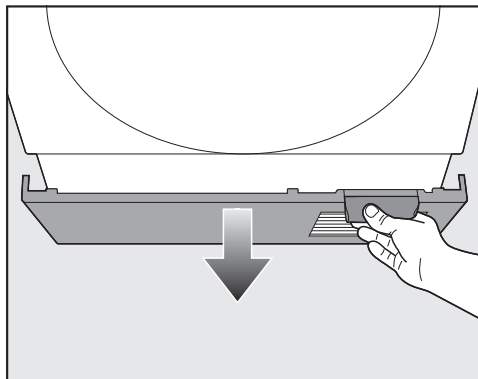


- Open the plinth flap.

The plinth flap can break off.
Do not place anything on the plinth flap when it is open.


Removing the holder with plinth filter

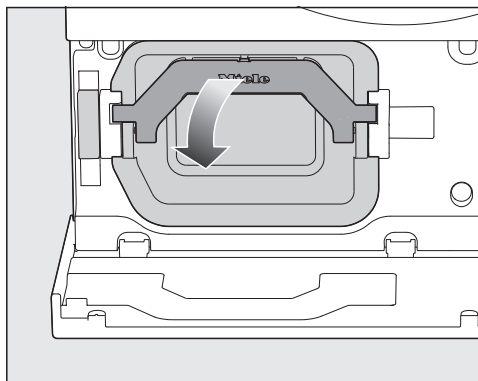

- Fold the handle downwards.

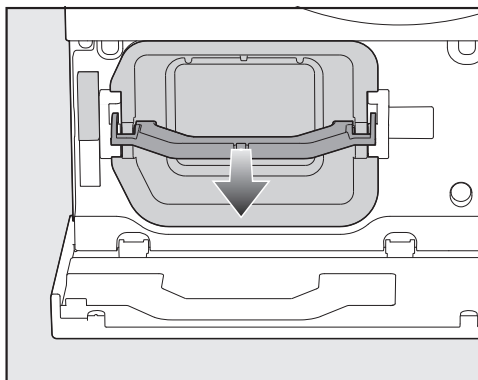


- Grasp the handle and pull the holder forwards to remove it.

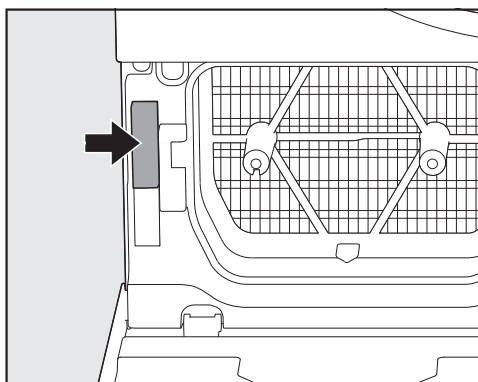

When the holder is pulled out, the safety element (arrow) is activated and prevents the plinth flap from closing. It is deactivated when the holder is inserted.


Cleaning the plinth filter

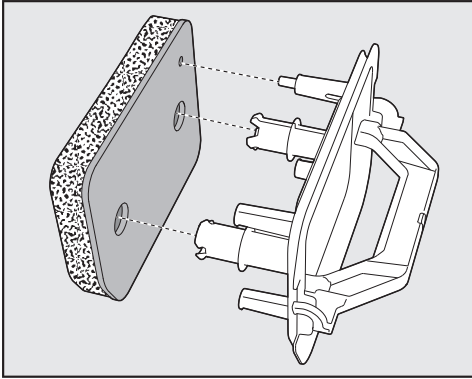

- Pull the plinth filter off the holder.

To collect the cleaning water, place a bowl or bucket under the stopcock.


- Clean the plinth filter carefully and thoroughly under running water.

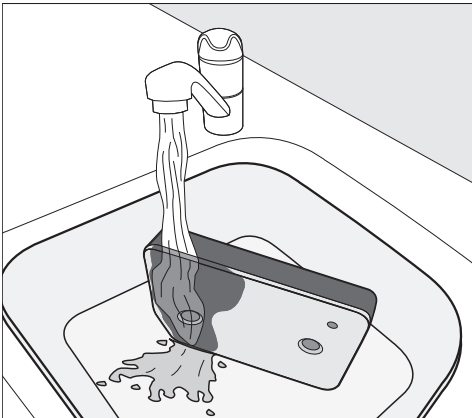

Tip: To speed up the removal of residue from the surface, run a water jet vertically over the front of the plinth filter.

- Squeeze the plinth filter very carefully several times as you rinse it.

Tip: Place the plinth filter so that it lies flat in the bowl or bucket.

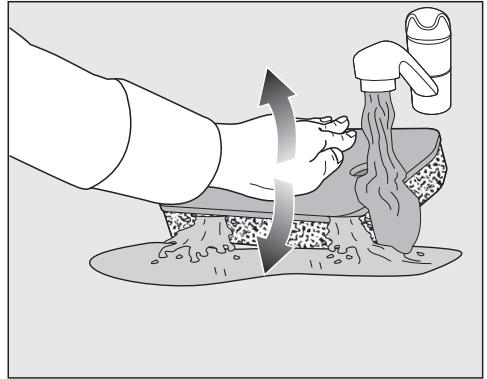

- To efficiently loosen underlying residue, gently press down on the plinth filter with the back of your hand several times.
- Rinse the entire plinth filter thoroughly until all visible residue has been removed.
- Carefully squeeze the plinth filter with the back of your hand until all of the water has been removed.


Tip: To soak up water, place the damp plinth filter between 2 hand towels. On an even surface, gently press down on the plinth filter with the back of your hand. This will dry the plinth filter more quickly.

Pouring out the cleaning water

- To catch any particles or fluff, pour the contents of the bowl or bucket through a filter (e.g. coffee filter).
- Dispose of the filter with your household waste.


Cleaning and care

Cleaning the holder

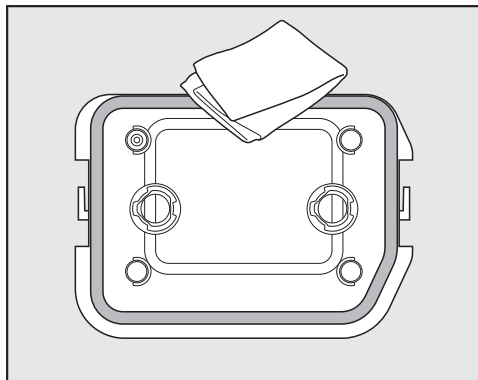

- Clean the holder with a damp cloth and a small amount of soapy water.
- Clean the rubber seal on the holder without damaging it.
- Dry with a soft cloth.

Cleaning the edges in front of the heat exchanger

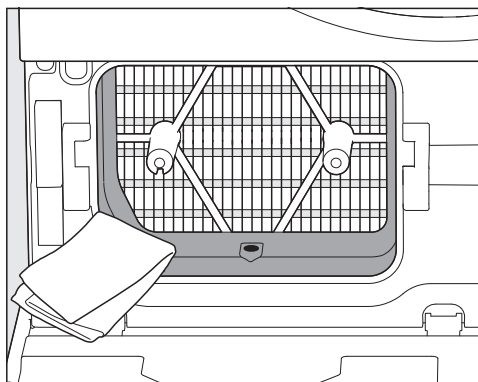


- Only clean the plastic edges and the opening on the right-hand side.

Tip: Use a damp cloth and a small amount of soapy water.

- Dry with a soft cloth.


The heat exchanger (cooling fins) does not usually need to be cleaned. If there is a build-up of fluff, follow the instructions in “Troubleshooting – Heat exchanger”.

Inserting the holder and plinth filter

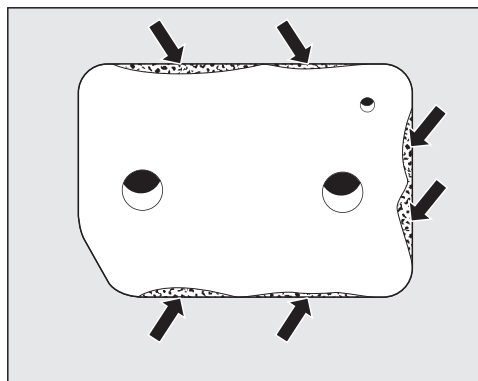

⚠ Damage caused by a damaged or worn plinth filter.

The heat exchanger becomes blocked and damage may occur. Check the plinth filter following the instructions provided in “Troubleshooting – Replacing the plinth filter”. Replace the plinth filter if necessary.

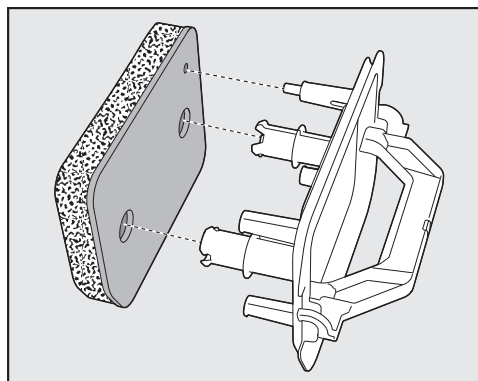


- Fit the plinth filter back on the handle. Make sure it is the correct way round.

⚠ Faults caused by a dripping plinth filter.

A dripping plinth filter can cause operational faults while drying. Carefully squeeze the water out of the plinth filter several times.

- Slide the holder into place by the handle.

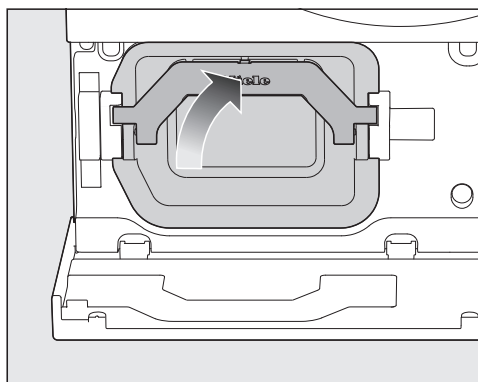


- Fold the handle upwards.

⚠ Damage caused by a missing plinth filter.

The heat exchanger becomes blocked and damage may occur. Only operate the tumble dryer with a plinth filter.

Cleaning and care

Closing the plinth flap

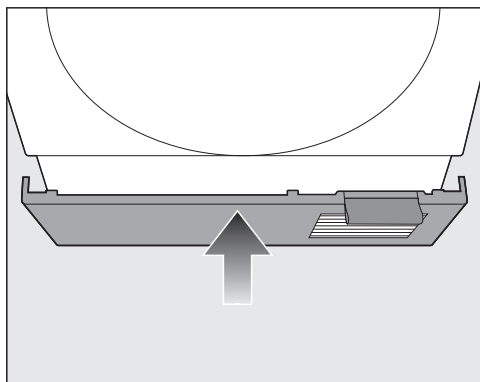


- Close the plinth flap.

Cleaning the rubber seal on the condensate container

Cleaning recommendation:

Clean once or twice a year and as required.

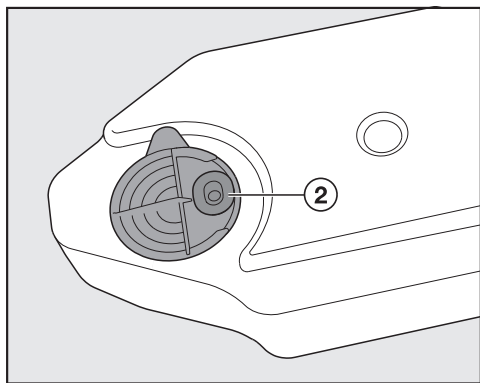

- Use a damp cleaning cloth and a small amount of soapy water to carefully remove any residues from the rubber seal ② on the condensate container.
- Check that the rubber seal is properly pressed into the groove.

Many malfunctions and faults can be easily remedied. You can save time and money in many cases, as you do not need to contact Customer Service.

More information to help you remedy faults yourself can be found at www.miele.co.uk/support/customer-assistance.



Fault messages shown in the display when a programme is cancelled

Message	Cause and remedy
Switch the appliance off and on again. If the fault persists, call Customer Service.	There is no obvious cause. ■ Follow the instructions on the display.
Empty the container or check the drainage	The condensate container is full or there is a kink in the drain hose. ■ To switch off the message, you must switch off the tumble dryer and switch it on again after a short while. ■ Empty the condensate container. ■ Check the drain hose. The drain hose must not be kinked.

Troubleshooting

Message	Cause and remedy
Fault F66 • Airways Clean the fluff and plinth filters. Check the heat exchanger and airways. Switch the appliance off and on. If the fault persists, contact Customer Service	Fluff or detergent residues have clogged the fluff filters and the plinth filter. ■ Clean the fluff filters and the plinth filter. – See “Cleaning and care – Cleaning the fluff filters” and “Cleaning the plinth filter”. – If the fluff filters are heavily clogged or blocked, the fluff filters must be cleaned with water and the airways cleaned. See “Troubleshooting – Cleaning the fluff filters with water”. ■ If the fluff filters and the plinth filter are damaged or out of shape, or if they cannot be cleaned, they must be replaced. ■ Follow the instructions on the display. Tip: If the fault message is displayed again, this could be due to one of the causes listed below.
	The plinth filter was wet when it was fitted. ■ Carefully squeeze the water out of the plinth filter. ■ Leave the plinth filter to air-dry.
	There are still residues in the plinth filter that could not be removed. ■ Check the plinth filter. See “Troubleshooting – Signs of wear on the plinth filter”. ■ You can reactivate the plinth filter in the washing machine. See “Troubleshooting – Reactivating the plinth filter”.
	The heat exchanger is clogged. ■ Check the heat exchanger. Follow the instructions in “Troubleshooting – Checking the heat exchanger”.

Fault F66 • Airways is displayed in many cases because the fluff filters or the plinth filter have not been cleaned or have been cleaned insufficiently.

- Clean the fluff filters after every drying programme.
- Clean the plinth filter immediately when a prompt appears in the display.

This allows you to reduce the frequency of fault *Fault F66 • Airways* or even prevent this fault.

Display information

Message	Cause and remedy
Clean the fluff and plinth filters	The tumble dryer is not working correctly or economically. This may be caused by fluff or detergent residues. ■ Clean the fluff filters and the plinth filter. – See “Cleaning and care”, sections “Cleaning the fluff filters” and “Cleaning the plinth filter”. You can influence when the indicator lights up. ■ To do this, follow the instructions in “Adjusting settings – Airways indicator”.
Comfort cooling	The laundry will be cooled down to reach the temperature required at the end of the programme.
Comfort cooling • Finish	The laundry has finished drying but is still cooling down. ■ You can remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down.
Drying level changed	The drying level you selected previously cannot be combined with the Extra. The closest possible drying level is selected automatically.
Fill condensate container	The condensate container is empty. There is not enough condensed water available for SteamCare. ■ Fill the condensate container to at least the —min— mark.
Open and close door. Check whether laundry is in the drum	After selecting a programme with SteamCare, you will be prompted to load the laundry. ■ Follow the instructions on the display.

The drying programme takes a long time

Problem	Cause and remedy
The drying programme takes a very long time.	This can be caused by many factors. ■ Switch the tumble dryer off. ■ Check for the possible causes described below. ■ Switch the tumble dryer back on after the test. The room where the tumble dryer is located is too warm.

Troubleshooting

Problem	Cause and remedy
	■ Ventilate the room thoroughly.
	The drum is too full. ■ Take out some of the laundry.
	The cool air vent in the plinth flap and the air gap between the bottom of the dryer and the floor have been blocked. ■ Move any objects, such as a laundry basket, away from the dryer.
	The laundry is too wet after washing. ■ Select a higher spin speed when washing.
	Detergent residues, hair and fine fluff can clog the filters. ■ Rinse the fluff filters under running water. ■ Check the top air guide. ■ Clean the plinth filter under running water. ■ Remove any visible fluff from the heat exchanger using a vacuum cleaner and dusting brush.
	The cleaning instructions listed above can be found in “Troubleshooting”.

Insufficient drying results

Problem	Cause and remedy
Items made of synthetic fibres are charged with static electricity.	Synthetic fibres tend to attract static charge in the dryer. ■ To minimise static charge, use a fabric conditioner in the final rinse cycle of the washing machine.

Problem	Cause and remedy
The laundry is still damp.	There is too much laundry in the drum or it has become tangled. ■ Disentangle the laundry and remove a few items.
	The load consisted of different types of fabric. ■ Finish drying using the <i>Warm air</i> programme. ■ Dry items of the same textile type together in future.
	The drying level selected does not meet the requirements. ■ Select a different drying level. ■ You can set the residual moisture of some drying levels to drier or damper. For further information, see “Adjusting settings – Drying levels”.
	Metallic components, e.g. zips, have prevented the tumble dryer from registering the correct laundry moisture content. ■ Open any zips next time. ■ If the problem recurs, dry these items using the <i>Warm air</i> programme.
The <i>DryCare 40 Extra</i> is not drying the laundry sufficiently.	The room where the tumble dryer is located is too warm. This has caused the DryCare process to finish prematurely. ■ Ventilate the room thoroughly. ■ To fully dry the laundry, select <i>Warm air</i> and <i>DryCare 40</i> .
Fluff is released from textiles during tumble drying.	Abrasion during wear and, in some cases, during washing causes fluff to be released from garments, which remains on the laundry after washing. Tumble drying hardly causes any fluff to form. ■ See “Cleaning and care – Cleaning the fluff filters”.

Noises and odours

Problem	Cause and remedy
You can hear buzzing or humming operating noises.	This noise is emitted by the compressor (heat pump) or the pump for SteamCare. ■ No action required.
	Whirring and humming noises during drying are not a fault.

Troubleshooting

Problem	Cause and remedy
Laundry or feather-filled pillows smell unpleasant.	Due to the natural properties of feathers and natural fat residues, odours may occur as a result of the heat in the tumble dryer. The laundry was washed with insufficient detergent. ■ Use <i>FragranceDos</i>. ■ Take pillows out of the tumble dryer and air them. ■ Wash laundry in the washing machine with sufficient detergent.

Other problems

Problem	Cause and remedy
The tumble dryer does not switch on.	There is no power to the tumble dryer. ■ Check whether the mains plug is plugged in. ■ Check whether the fuse has tripped.
	The MotionReact function is switched off. The MotionReact sensor does not respond. ■ Select the  sensor control and switch on the tumble dryer. ■ Check the MotionReact settings in the settings. ■ Check the MotionReact sensor by approaching the tumble dryer from the front.
The tumble dryer is switched off at the end of the programme.	The tumble dryer switches off automatically. This is not a fault, but a normal function.
A programme cannot be started.	There is no obvious cause. ■ Check whether the mains plug is plugged in. ■ Check whether the tumble dryer is switched on. ■ Check that the dryer door is closed. ■ Check the mains fuses. Has there been a power cut? When the supply voltage is restored, any previously running programme will re-start automatically.
The drying programme is running and the display is dark.	The display has switched off automatically to save energy (Standby mode). The drum will turn at intervals when the tumble dryer is in the Anti-crease phase. ■ To end Standby mode, touch the display.

Problem	Cause and remedy
The fluff filters are visibly clogged or blocked.	Detergent residues can cause incrustations and clog the fluff filters. ■ Rinse the fluff filters under running water. See “Troubleshooting – Cleaning the fluff filters with water”.
	Using too much detergent or poor cleaning results during washing can cause incrustations in the fluff filter. ■ Check the amount of detergent dosage the next time you wash your laundry. If possible, reduce the quantity of detergent.
The drying programme is cancelled after the plinth filter has been cleaned.	The plinth filter was wet when it was fitted. ■ Remove the plinth filter and gently dry the plinth filter between 2 towels.
	The plinth filter is heavily clogged. If the programme is cancelled again even though the plinth filter is dry, we recommend reactivating it in the washing machine. ■ First check all measures described in “Troubleshooting – Reactivating the plinth filter”.
After removing the plinth filter, you can see that condensed water has accumulated.	The drain for condensation is blocked. ■ Clean the drain. See “Troubleshooting – “Cleaning the drain for condensation”
The spray jet for SteamCare is insufficient or does not work.	The fluff filter in the condensate container is clogged. ■ Clean the fluff filter in the condensate container. See “Troubleshooting – Cleaning the fluff filter in the condensate container”.
	There are heavy limescale deposits on the nozzle in the door opening. ■ Replace the nozzle. See “Troubleshooting – Replacing the nozzle for SteamCare”. ■ Only fill with commercially available condensed water. Do not fill with tap water. The frequent use of tap water leads to limescale deposits.

Troubleshooting

Problem	Cause and remedy
The drum lighting does not come on.	To save energy, the drum lighting goes out automatically after a set time and after the programme starts. ■ Switch the tumble dryer off and then on again. ■ To switch the drum lighting on, open the door of the tumble dryer.
	The drum lighting is faulty. The drum lighting is designed to last a long time and should not normally need to be replaced. ■ If you have tried everything but the drum lighting still does not come on, contact the Miele Customer Service Department. Defective drum lighting can only be replaced by the Miele Customer Service Department.
The fragrance flacon lighting does not light up sufficiently.	The light intensity is changed by regulating the fragrance intensity. If the light intensity hardly changes, then the fragrance flacon lighting is dirty. ■ Clean the fragrance flacon lighting. See “Cleaning and care – Cleaning the fluff filters”.

Signs of wear on the plinth filter

If the plinth filter shows signs of wear, it must be replaced.

⚠ Damage caused by a worn plinth filter.

The heat exchanger becomes blocked and damage may occur.


Replace the plinth filter if you see the following signs of wear before or after cleaning (optional accessory).

There may be signs of wear on the plinth filter:


1. Poor fit and deformations
 - The plinth filter needs to be replaced.
2. Cracks, tears, indentations
 - The plinth filter needs to be replaced.
3. Discolouration on the side edges and on the plinth filter
 - Reactivate the plinth filter in the washing machine.

Poor fit and deformations

Poor fit and deformations are clear signs of wear. As a result, the edges of the plinth filter are no longer positioned correctly in the tumble dryer.

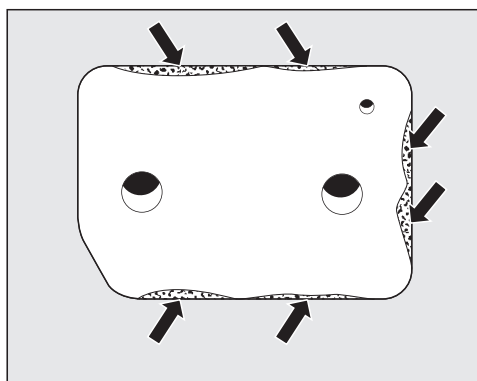

Poor fit can be seen on the side edges.

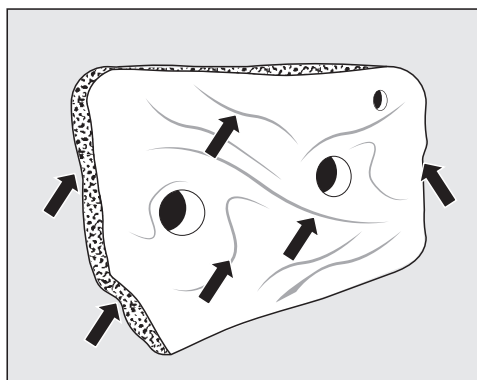


Deformations can be seen on the side edges and on the entire plinth filter.

Tip: You need to replace the plinth filter.

Cracks, tears, indentations

Cracks and tears are clear signs of wear.

Troubleshooting

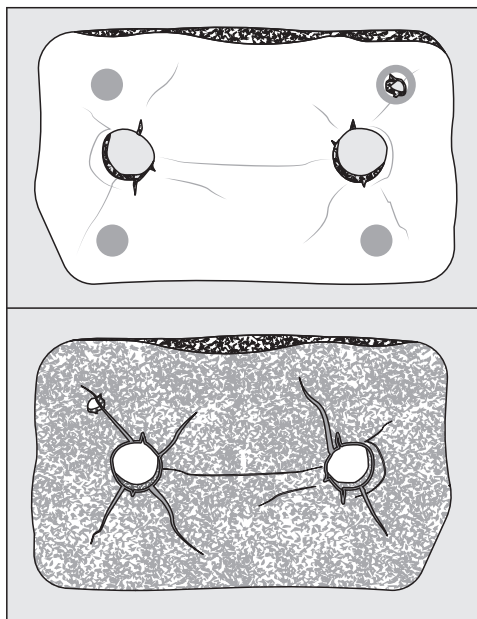


Cracks, tears and indentations can be seen on the front and back.

Tip: You need to replace the plinth filter.

Discolouration on the side edges and on the plinth filter

Discolouration is caused by residues of fibres and washing substances. In extreme cases, the residues form stubborn incrustations and the plinth filter can become clogged.

Even if the plinth filter looks flawless, poor fit can occur on the plinth filter due to residues. Other residues can be blown past the side edges into the heat exchanger.

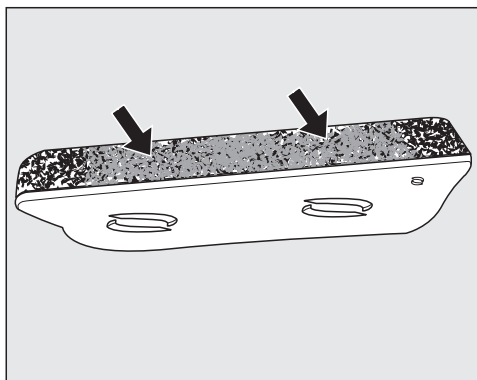

Discolouration and incrustations are particularly visible on the side edges.

Tip: Reactivate the plinth filter in the washing machine. If reactivating does not improve the situation, you will need to replace the plinth filter.

Tip: They can reduce blockages and incrustations on the plinth filter.

Too much residue indicates that too much detergent was dispensed in the washing machine or poor cleaning results. Check the amount of detergent dosage the next time you wash your laundry. If possible, reduce the quantity of detergent. In extreme cases, you should select an extra rinse cycle.

Reactivating the plinth filter

Tip: To reprocess the clogged plinth filter, you can reactivate the plinth filter in the washing machine.


First check the plinth filter for signs of wear. See “Troubleshooting – Signs of wear on the plinth filter”. Replace the plinth filter in case of doubt.

Tip: You can reactivate one or more soiled plinth filters in a washing machine.

- Reactivate the plinth filter separately without laundry and without detergent.
- Select a short wash programme with a maximum temperature of 40 °C and a maximum spin speed of 600 rpm.

You can re-insert the plinth filter into the tumble dryer once the spin cycles are complete.

Cleaning the drain for condensation

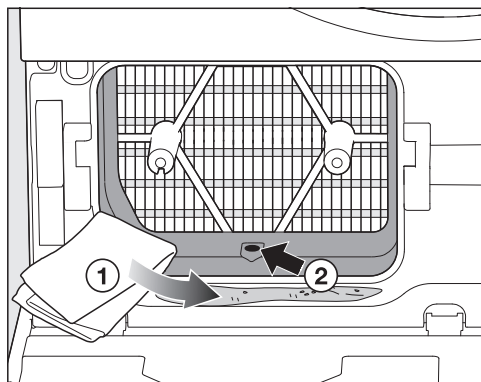

- Dry with a soft cloth ①.
- Remove any fluff from the drain ② with a toothpick or cotton wool bud.

Checking the heat exchanger


The heat exchanger can become clogged if the plinth filter shows signs of wear.

⚠ Risk of injury from sharp cooling fins.

You could cut yourself.
Do not touch the cooling fins with your hands.

- Check for any accumulation of fluff. Existing, visible fluff must be removed.

⚠ Damage due to bent cooling fins.
If the cooling fins are damaged or bent, a fault can occur.
Carefully clean the cooling fins with a vacuum cleaner and dusting brush.

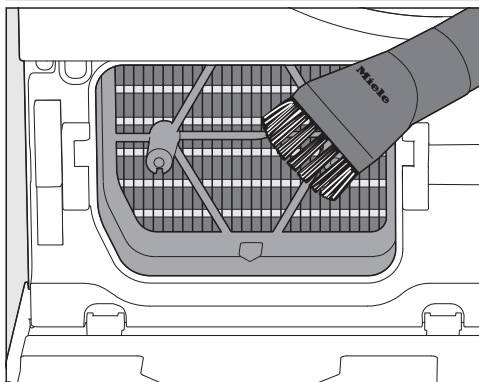

- Only pass the dusting brush over them lightly, without applying any pressure.

Cleaning the fluff filters with water

Rinse the fluff filters under running water:

- If the programme running time is increased excessively.
- If the fluff filters are visibly clogged/blocked.


- To avoid spreading microplastics in the suction device, To prevent microplastics from spreading into the waste water system, first wipe off or vacuum the fluff.
- Rinse the fluff filters under warm running water.
- Wipe the smooth plastic surfaces of the fluff filters using a damp cloth with a little soapy water.
- Shake the fluff filters thoroughly.

Troubleshooting

Tip: Dry carefully with a soft cloth.

Removing the upper fluff filter

- Open the tumble dryer door.

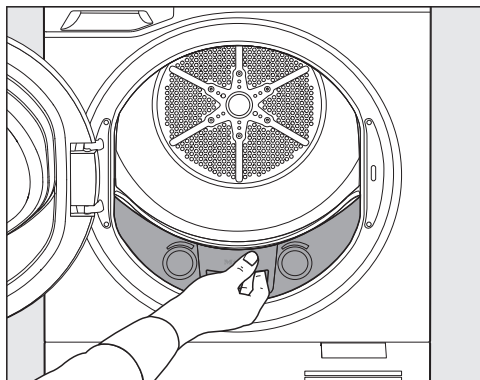


- Pull the fluff filter out.


Removing the lower fluff filter

To clean the lower fluff filter with water, remove the fluff filter if necessary.

Try out which of the following removal options works best.

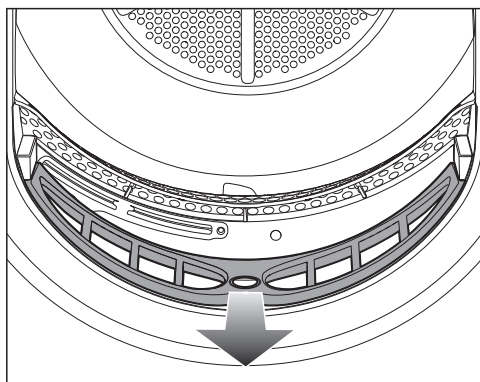

- Place your thumb in the recess in the centre.

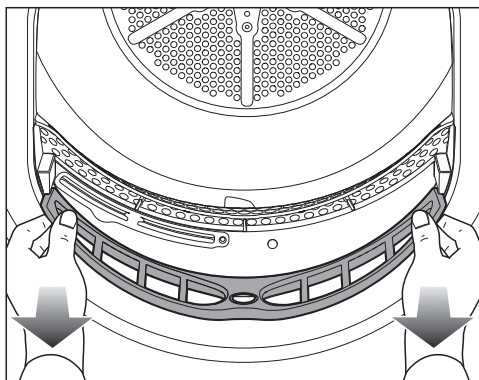


- Or place your thumbs on the left and right.
- Pull the fluff filter out.

Checking the airways

Check the airways on a regular basis.

A large build-up of fluff is a sign that the fluff filters are damaged.


The drying time may be extended and the tumble dryer may be damaged. Replace the fluff filters if they are damaged.

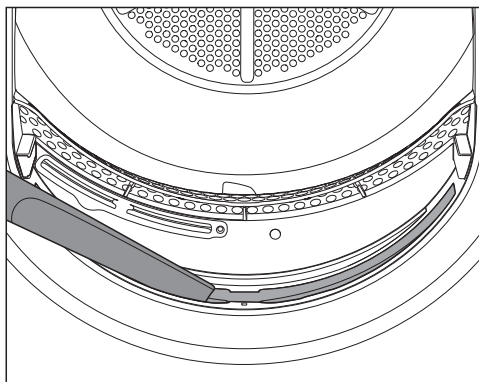

- Vacuum visible fluff with a long vacuum cleaner nozzle.


Tip: A stubborn build-up of fluff can be removed with a damp cloth and a small amount of soapy water. Dry with a soft cloth.

Inserting the lower fluff filter

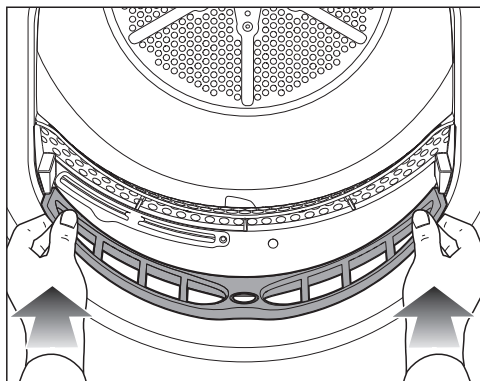

- Push the fluff filter all the way in.

Inserting the upper fluff filter

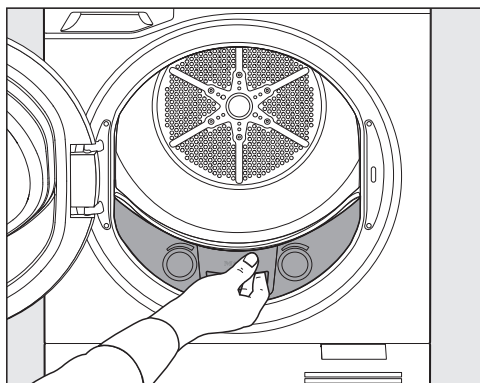

- Push the fluff filter all the way in.
- Close the drum door.

 Damage due to damaged fluff filters.

The heat exchanger becomes blocked and damage may occur.

Check the fluff filters on a regular basis. Replace the fluff filters if they are defective.

Faults caused by wet fluff filters.

Wet fluff filters could cause operational faults while drying.

Carefully dry the fluff filters.

Cleaning the fluff filter in the condensate container


If the spray jet does not work, the fluff filter in the condensate container may be blocked.

Pulling out the condensate container

 Damage to the dryer door and the condensate container.


Damage and scratches may occur. First close the dryer door and then pull out the condensate container.

Troubleshooting

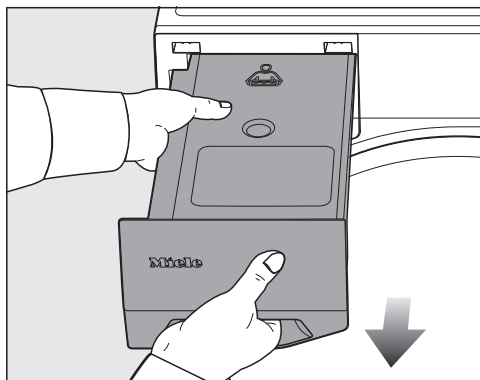


- To pull out the condensate container, keep a firm hold on the fascia panel or in the centre.
- To prevent condensed water from leaking, carry the condensate container horizontally.

Cleaning the filter plug

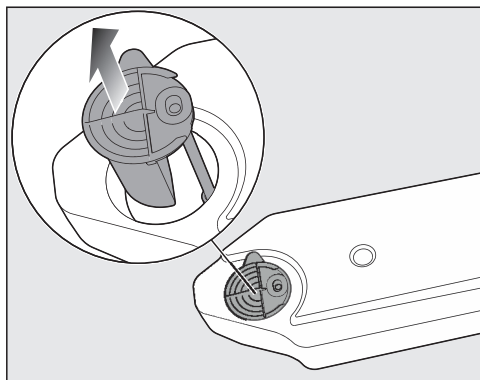

- Place your finger under the side lug of the pouring aid.
- Pull out the pouring aid.

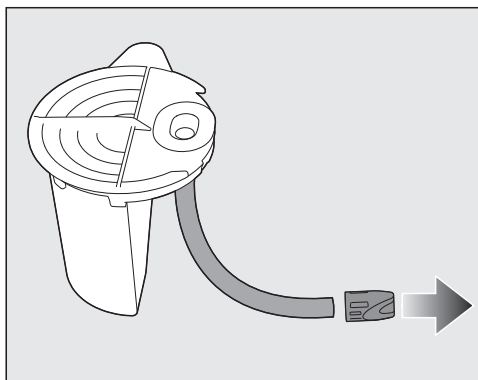

- Hold the hose firmly.

The hose may come loose.
Do not pull on the hose.


- Use your other hand to pull the filter plug off the end of the hose.
- Rinse the filter plug with a water jet until all the fluff has been removed.
- Attach the clean filter plug on the end of the hose.
- Insert the pouring aid the right way round into the opening in the condensate container and allow the hose to slide back into the condensate container.

Replacing the nozzle for SteamCare

If the spray jet does not work, the nozzle for SteamCare may be blocked.

Tip: You must replace the nozzle for SteamCare (optional accessories) when it no longer works properly. A special tool is required for replacing, which is included with the new nozzle.

The nozzle for SteamCare is located at the top left of the door opening.

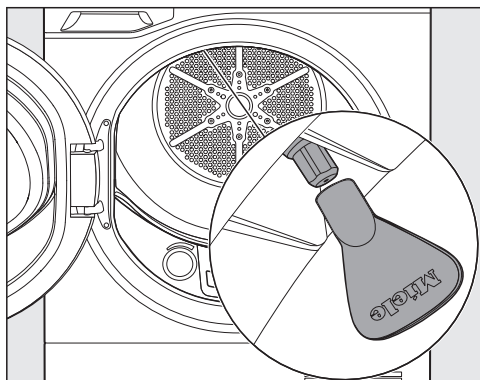

- Attach the tool to the nozzle.

⚠ Using the wrong tool can cause damage.

Doing so can damage the nozzle or the tumble dryer.

Only use the tool supplied. Do not use any other tool.

- To unscrew the nozzle, turn the tool anti-clockwise.
- Insert the new nozzle into the tool.
- To screw in the nozzle, turn the tool clockwise by hand.

The tumble dryer must not be operated without a nozzle for SteamCare fitted.

Proper functioning is no longer guaranteed.

Service

Information to help you rectify faults yourself and about Miele spare parts can be found at www.miele.com/service.

Contact in the event of a fault

In the event of any faults which you cannot remedy yourself, please contact your Miele dealer or the Miele Customer Service Department.


You can book a Miele Customer Service Department call-out online at www.miele.com/service.

Contact information for the Miele Customer Service Department can be found at the end of this document.

Please quote the model identifier and serial number of your appliance (Fabr./SN/Nr.) when contacting the Miele Customer Service Department. This information can be found on the data plate.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Open the door of your tumble dryer to find the data plate:

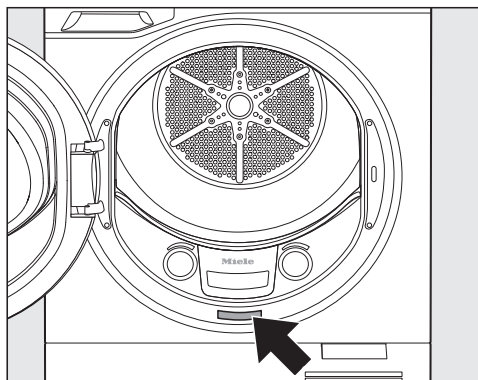

EPREL database

Information on energy labelling and eco-design requirements is available in the European Product Database (EPREL). You can find the product database at the following link <https://eprel.ec.europa.eu/>. You will be asked to enter the model identifier.

The model identifier can be found on the data plate.



Warranty

For information on the appliance warranty specific to your country please contact Miele. See back cover for address.

In the UK, your appliance warranty is valid for 2 years from the date of purchase. However, you must activate your cover by calling 0330 160 6640 or registering online at www.miele.co.uk.

United Kingdom

Miele Co. Ltd., Fairacres, Marcham Road, Abingdon, Oxon, OX14 1TW
Tel: 0330 160 6600, Internet: www.miele.co.uk, E-mail: info@miele.co.uk

Australia

Miele Australia Pty. Ltd.
ACN 005 635 398
ABN 96 005 635 398
Level 4, 141 Camberwell Road
Hawthorn East, VIC 3123
Tel: 1300 464 353
E-mail: info@miele.com.au
Internet: www.miele.com.au

China Mainland

Miele Electrical Appliances Co. Ltd.
No. 82, Shimenyi Road, JingAn District
Shanghai, China, P.R.C
Post Code: 200040
Phone: +86 21 6157 3500
Fax: +86 21 6157 3511
E-mail: info@miele.cn
Internet: www.miele.cn

Hong Kong, China

Miele (Hong Kong) Ltd.
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay, Hong Kong
Tel: (852) 2610 1025
Fax: (852) 3579 1404
E-mail:
customerservices@miele.com.hk
Website: www.miele.hk

India

Miele India Pvt. Ltd.
1st Floor, Copia Corporate Suites,
Commercial Plot 9, Mathura Road,
Jasola, New Delhi - 110025
E-mail: customercare@miele.in
Website: www.miele.in

Ireland

Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus
Dublin 24
Tel: (01) 461 07 10
Fax: (01) 461 07 97
E-mail: info@miele.ie
Internet: www.miele.ie

Malaysia

Miele Sdn Bhd
Suite 12-2, Level 12
Menara Sapura Kencana
Petroleum
Solaris Dutamas No. 1
Jalan Dutamas 1
50480 Kuala Lumpur, Malaysia
Phone: +603-6209-0288
Fax: +603-6205-3768

New Zealand

Miele New Zealand Limited
IRD 98 463 631
8 College Hill
Freemans Bay, Auckland 1011
Tel: 0800 464 353
E-mail: customercare@miele.co.nz
Internet: www.miele.co.nz

Singapore

Miele Pte. Ltd.
29 Media Circle
#11-04 ALICE@Mediapolis
Singapore 138565
Tel: +65 6735 1191
Fax: +65 6735 1161
E-mail: info@miele.com.sg
Internet: www.miele.sg

South Africa

Miele (Pty) Ltd.
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: (011) 875 9000
Fax: (011) 875 9035
E-mail: info@miele.co.za
Internet: www.miele.co.za

Thailand

Miele Appliances Ltd.
BHIRAJ TOWER at EmQuartier
43rd Floor Unit 4301-4303
689 Sukhumvit Road
North Klongton Sub-District
Vadhana District
Bangkok 10110, Thailand

United Arab Emirates

Miele Appliances Ltd.
Showroom 1, Eiffel 1 Building
Sheikh Zayed Road, Umm Al Sheif
P.O. Box 114782 - Dubai
Tel. +971 4 3044 999
Fax. +971 4 3418 852
800-MIELE (64353)
E-mail: info@miele.ae
Website: www.miele.ae

Manufacturer: Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany

TQ 1000 WP

en-GB

M.-Nr. 13 148 420 / 00 / 002