

THE BENCHMARK MACHINES



PDR 516 ROP | 35 lbs. PERFORMANCE

Features

- M Select ROP residual moisture control
- SlimLine Design - fits in the smallest spaces
- Patented Honeycomb Drum
- PerfectDry system – residual moisture sensors
- Intelligent dryers – gentle and uniform
- Perfect anti-crease
- Economical and efficient
- LAN/WiFi capable (accessory required)

OPL | ON-PREMISE LAUNDRY



Electric Heating




**7⁺ Years
Warranty**



SlimLine Design

With a width of just 28 inches (711 mm), this dryer is designed to fit where space is limited.

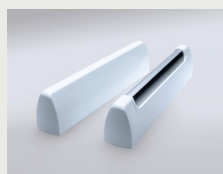


SoftLift drum ribs ensure gentle fabric care

The SoftLift drum ribs allow laundry to be dried gently and evenly.



Honeycomb Drum

The Honeycomb Drum provides gentle, even drying for fewer wrinkles and easier finishing.

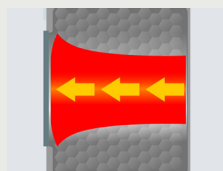




Axial airflow

Air flows through the drum using a longitudinal airflow system to deliver consistent, efficient drying.

Model	Heat Type	Electrical Specification Voltage/Hz/Phase (Amp)	Color	Material No.	Article No.
PDR 516 ROP	Electric	208-240/60/1 or 3 (1 or 3 x 30 A)	Iron Grey	12929320	52516006NAM

Specifications

Capacity	27-36 lbs (12-16 kg)
Cylinder Diameter	26 15/16" (685 mm)
Cylinder Depth	31 9/16" (802 mm)
Cylinder Volume	10.6 cu.ft (300 l)
Machine Dimensions (WxDxH)	28 x 42 7/8 x 70 7/8 in. (711 x 1,089 x 1,800 mm)
Door Opening	20 1/2 in. (520 mm)
Floor to Door	29 1/2 in (750 mm)
Reversible Door	No
Shipping Dimensions (WxDxH)	31 1/2 x 46 1/2 x 71 5/16 in. (800 x 1,180 x 1,810 mm)
Net Weight Gas Steam	322 lbs (146 kg)
Crated Weight Gas Steam	351 lbs. (159 kg)
Min. Recommended Distance Between Machines	13/16 in. (20 mm)
Agency Approvals	CSA

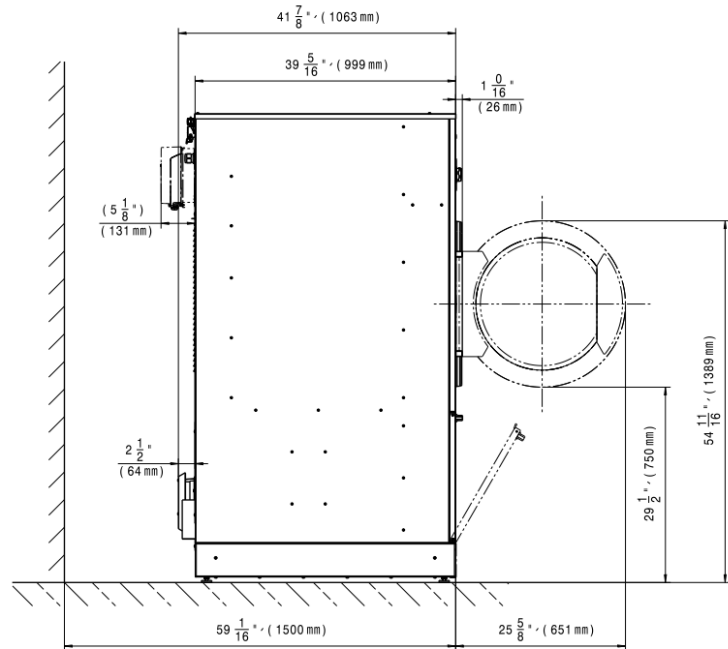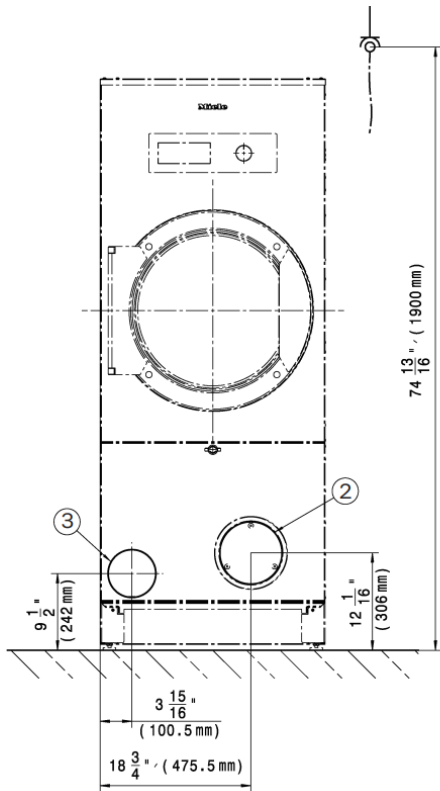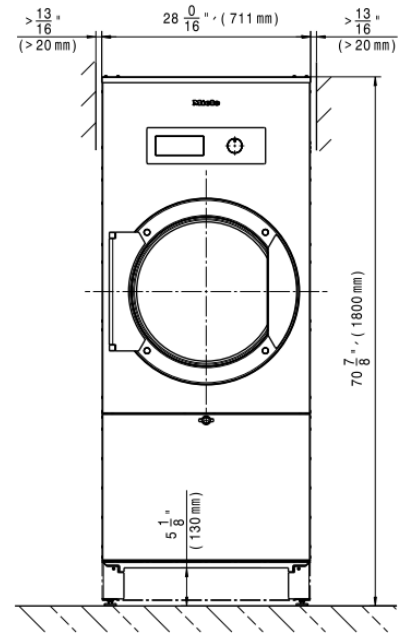

Heating	Voltage (Voltage/Hz/Phase)	Wire	Circuit Breaker Amps	Running Amps	Total Power (kW)
Electric	208-240/60/1	2 Wire + Ground	30	21.7-22.5	4.28-5.50
Electric	208-240/60/3	3 Wire + Ground	30	22.5-25.0	7.96-10.40

Specifications subject to change without notice or obligation.
Contact Miele USA at (800) 991-9380 or Miele Canada at
(888) 325-3957 for dimensions not shown or for clarification.