

PWM 908

20 lbs. / 9 kg




Electric Heating




FEATURES

- Patented Honeycomb Drum
- M Touch Flex user interface (no buttons or dials)
- 50+ programs; 5 customizable
- High temperature disinfection programs
- 25-minute Express wash cycle
- Economical and efficient
- Connected for the future using LAN/WiFi
- Bearing designed for 30,000 operating hours

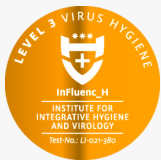

Proven Hygiene

Safe and effective laundry care, scientifically proven against viruses with special programs for thermal and chemo-thermal disinfection.

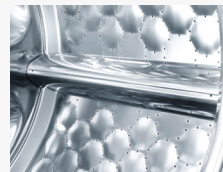

Efficient Rib Technology

The special scoop ribs in the Honeycomb drum scoop up water and transport it to the top of the drum during washing, providing the ideal conditions for achieving excellent wash results.



EcoSpeed – Patented Wash Process

The EcoSpeed washing process features an optimized drum rhythm and enhanced washing action, allowing intensive cleaning performance with reduced water usage.



Honeycomb drum with perforated rear wall

Carefully positioned openings in the back of the Honeycomb drum ensure wetting and dewatering within an even shorter amount of time.

Mat. No.	Model	Heat Type	Electrical	Finish
11204460	PWM 908	Electric	2 AC 208-240 V, 60 Hz	Lotus White
11204470	PWM 908	Electric	2 AC 208-240 V, 60 Hz	SST

PWM 908

20 lbs. / 9 kg

Model	PWM 908
Heated Option (EL)	Electric
Finish	Front in Stainless Steel or Lotus White
Load Size	20 lbs. (9 kg)
Drum Capacity	2.58 cu.ft. (73 l)
Tested for	30,000 Operating Hours
G-Force	704
Max. spin speed	1,600 rpm
Width	23 ^{13/16} in. (605 mm)
Depth	28 ^{1/8} in. (714 mm)
Height	33 ^{7/16} in. (850 mm)
Height to the bottom of the door	9 ^{1/2} - 9 ^{13/16} in. (242-250 mm)
Door opening diameter	11 ^{13/16} in. (300 mm)
Weight	230 lbs. (104 kg)
Shipping Width	26 in. (660 mm)
Shipping Depth	30 ^{1/4} in. (768 mm)
Shipping Height	37 in. (940 mm)
Shipping Weight	238 lbs. (108 kg)
Cold Water Connection	1 x cold water 1/2 in. hose with 3/4 in. threaded union
Hot Water Connection	1x hot water 1/2 in. hose with 3/4 in. threaded union
Water flow pressure	14.5-145 psi
Length of connection hose (supplied)	61 in. (1,550 mm)
Drain Valve	7/8 in. DN 22
Plug type	NEMA L6-30
PWM 908 EL	2 AC 208-240 V, 60 Hz
Heating Power	3.80-5.00 Kw
Fuse	2 x 30 A