

**Miele**

# *Glasses Plates And Cutlery Spotlessly Clean In Only 28 minutes*

Super fast, super clean crockery:  
The new ProfiLine generation with a cycle time of only 28 minutes.

**Miele Professional. Immer Besser.**



*All ProfiLine dishwashers are  
Global GreenTag GreenRate™ certified*

# Perfect results in the shortest of times


## Performance for professionals.

Today's world is moving fast – making one resource increasingly valuable: time. Our daily schedules are tightly packed and the demands on our time are enormous.

The new ProfiLine dishwashers were developed to meet the challenges of commercial use – and combine technology from the latest Miele Professional appliances with the convenience and design of our flagship domestic models. An intuitive user interface, smart features and 8 programmes with short cycle times ensure that impeccably clean crockery is ready for use again in next to no time.

Miele ProfiLine gives you a head start with your dishwashing – and, above all, frees up:

***Time.***

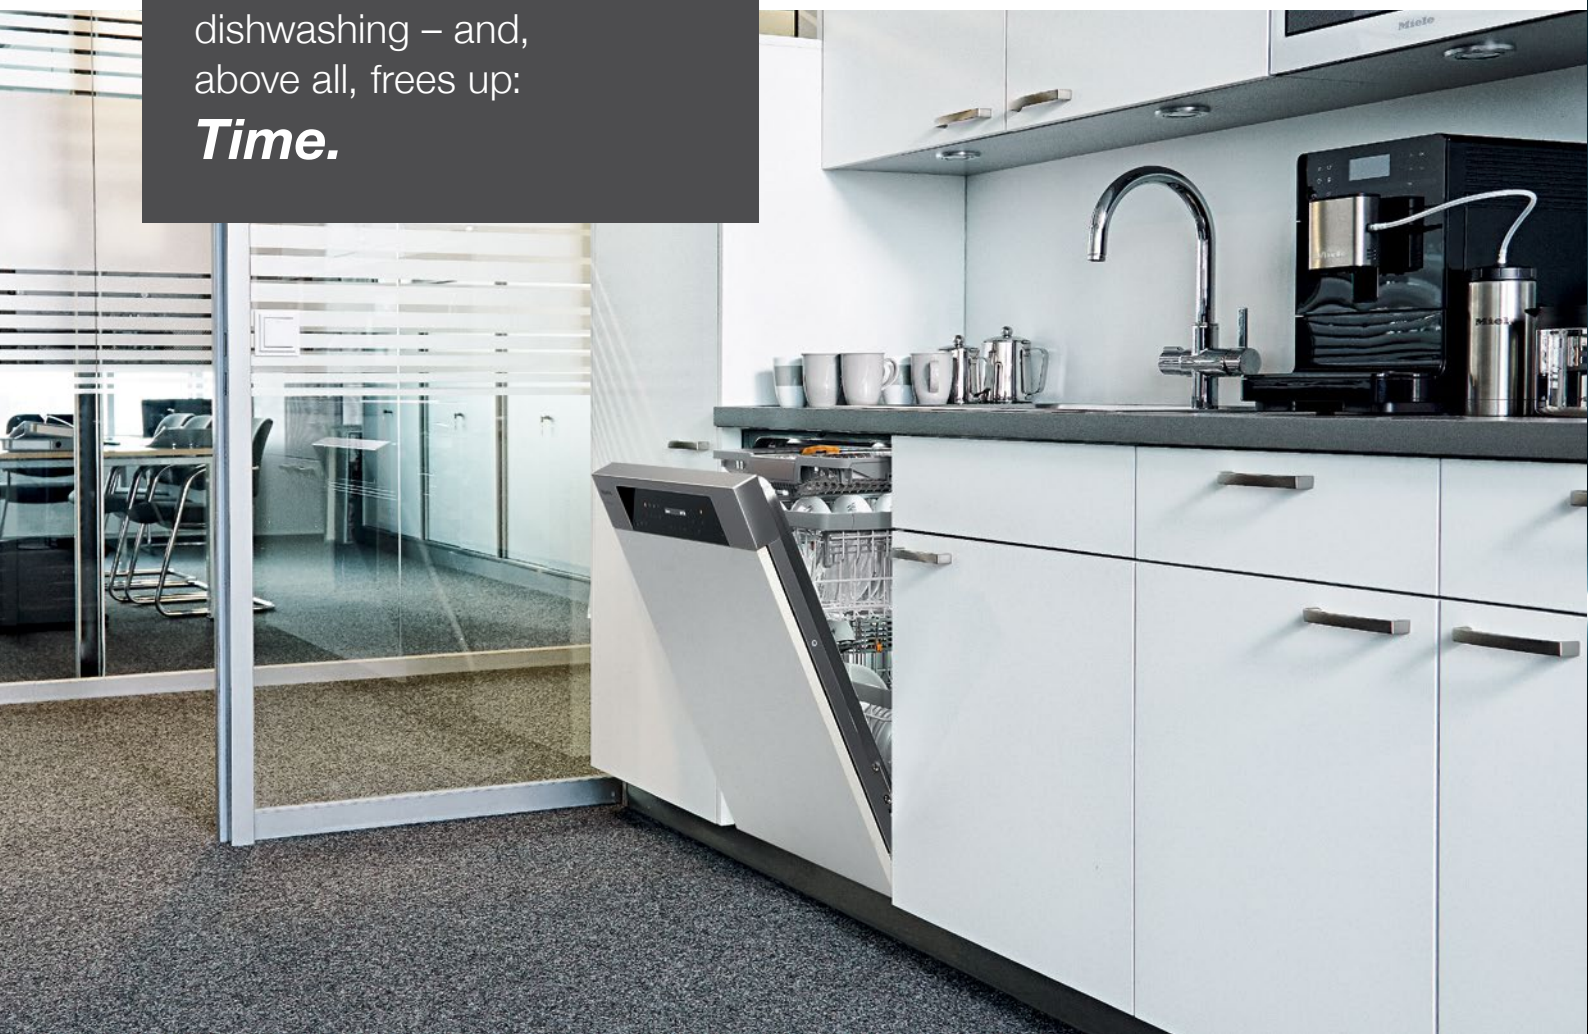

# The new ProfiLine Fast, versatile, durable



## 28-minute cycle time

for rapid turnaround and a cleaner kitchen.



## Durable components

for up to 5 cycles per day and 12,500 total cycles, compared to a domestic dishwasher which is tested for 5,600 programme cycles.



## Selectable final rinse temperatures

for anti-viral cleaning and the highest of hygiene standards.



## Versatile baskets

for simple loading and large amounts of crockery.



## Intuitive interface

for fast, simple and convenient operation.

# Fast crockery turnaround for any type of business

**Offices, Aged Care,  
Healthcare, Childcare,  
Schools**

**In a hectic working day, there is no time to stand around for hours, waiting for the dishwasher to finish.**

With ProfiLine, crockery is ready for use again in a matter of minutes. The new dishwashers are designed to withstand the rigours of continuous commercial use, whilst still offering users the convenience of high-end domestic appliances. ProfiLine represents the perfect stepping stone into the world of commercial crockery care – for all working environments with large volumes of crockery to process and little time to spare.



# Convenient functions

## *in an instant*

### 28-minute cycle time

With their impressively short cycle times lasting only 28 minutes, ProfiLine models are 3 times faster than domestic dishwashers. This means that clean crockery is ready for use again in next to no time – leaving your kitchen tidy and clean.

### Exemplary hygiene

Special 'Intensive' and 'Hygiene' programmes with final rinse temperatures of up to 82°C, meeting Australian and International food safety standards for even greater hygiene.



### 12,500 programme cycles

ProfiLine dishwashers are tested under laboratory conditions to ensure that they last 12,500 typical cycles and are designed for up to 5 cycles per day.

### Rugged materials

Components subject to heavy use are made from robust, durable materials which are put through stringent tests and are designed for continuous use in a commercial environment.

### Smooth surfaces

The smooth surfaces of the operating elements prevent harmful soil from gathering. All surfaces are easily wiped clean, contributing to enhanced hygiene standards.

### EcoFeedback

When a programme is selected, estimated water consumption values are displayed.

### Simple connection

ProfiLine machines are Plug & Play and instantly ready for connection. Simply connect to a water supply, plug in and switch on.

### Intuitive operation

All programmes are intuitively operated using sensor controls. Self-explanatory symbols and key content in plain text speed up programme selection and avoid operating errors.

### Integrated water softener


The built-in softener ensures the optimum hardness level of the water for perfect dishwashing results. The degree of water hardness is adjusted manually to suit the on-site water quality.

### Knock2open

Clever: ProfiLine dishwashers blend in seamlessly in handleless kitchens – and select models open automatically by double-tapping on the front panel.

### Flexible basket design

Adjustable elements and non-slip materials allow for the flexible positioning of items and offer a secure hold for crockery and cutlery for exceptional cleaning results.

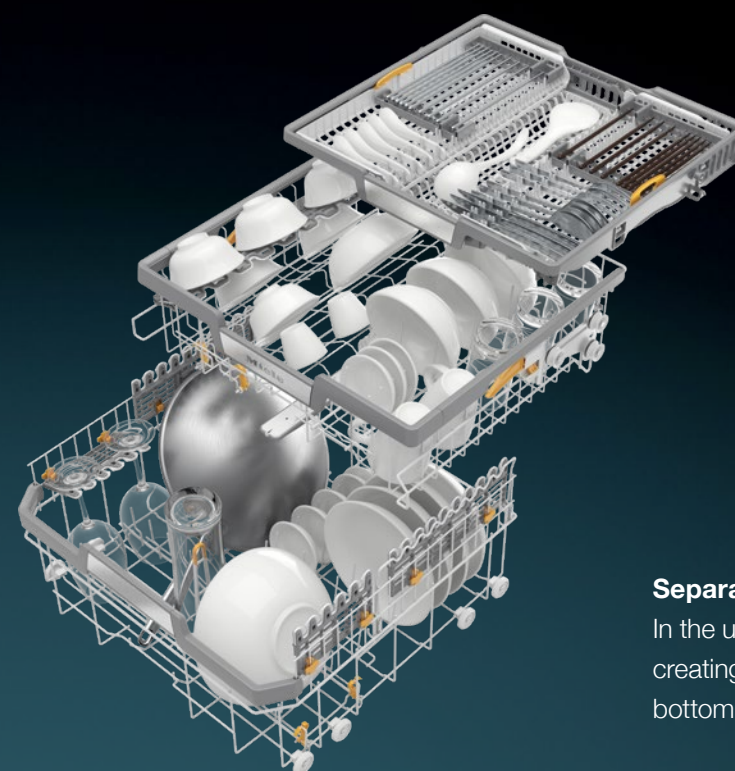

### 3D MultiFlex tray

Thanks to height-adjustable central and side sections, the cutlery drawer now accommodates small items of crockery such as espresso cups.

### FlexCare glass holder

The hinged glass holders with their soft silicone liners offer the best possible protection to stemware.

### Separable row of spikes for bowls

In the upper basket, every second spike is hinged, creating more space to perfectly accommodate more bottom plates and bowls.



# Which ProfiLine is right for you?

## PFD 101

Freestanding dishwasher with AutoOpen, FlexLine baskets, 4 Star WELS rating and 4 Star Energy Rating

## PFD 101i

Integrated dishwasher with AutoOpen, FlexLine baskets, 4 Star WELS rating and 4 Star Energy Rating.

## PFD 103 SCi XXL

Integrated dishwasher with large XXL chamber, 3D MultiFlex cutlery drawer, BrilliantLight, 4.5 Star WELS rating and 4 Star Energy Rating

## PFD 104 SCVi XXL

Fully integrated dishwasher with large XXL chamber, Knock2Open, 3D MultiFlex cutlery drawer, BrilliantLight, 4.5 Star WELS rating and 4 Star Energy Rating

## Global GreenTag GreenRate™ Certification

Miele is proud to announce that their latest ProfiLine commercial dishwashers PFD 101, PFD 101i, PFD 103 SCi XXL and PFD 104 SCVi XXL have been certified as Global GreenTag GreenRate™ Level C along with a PlatinumHEALTH™ HealthRATE™ certification from GreenTag's Product Health Declaration™ (GreenTag PHD™) program. Certification was granted after a thorough assessment with respect to their environmental, health, and ethical and social responsibility attributes.

Miele have become the first appliance manufacturer to meet GreenTag's GreenRate™ certification with some of its products, and the assessment required full disclosure and evaluation of every product component and stages of the manufacturing process.

Choosing Miele ProfiLine commercial dishwashers with Global GreenTag GreenRate™ Certification may assist environmentally progressive builders and specifiers to lead by example and further enhance their own environmental credentials.



## About Global GreenTag

Established in 2010, Global GreenTag International Pty Ltd is a third party verified Conformity Assessment Body that conducts the award winning Global GreenTagCert™ certification program, a third party, multi-criteria, consensus based and externally verified Type 1 Ecolabelling Program that complies and operates under strict International Standards. Voted one of the Top 100 Most Trusted Brands in Australia for 3 years running, Global GreenTag currently has more than 16,000 products in certification by over 230 manufacturers with factories in more than 20 countries. Global GreenTagCert™ is also registered as a Certification Mark in the USA, Canada and South Africa, and all GreenTag certified products are determined as healthy for use using the best science available, with the results being peer reviewed by highly qualified external consultant Toxicologists.



Miele ProfiLine dishwashers  
**remove more than  
99.9% of viruses.\***



## PFD Model Overview



	PFD 101	PFD 101i (15A)	PFD 101i (10A)	PFD 103 SCi XXL	PFD 104 SCVi XXL
<b>Construction type</b>	Freestanding	Integrated	Integrated	Integrated	Fully integrated
<b>Shortest cycle time*</b>	28 minutes	28 minutes	36 minutes	36 minutes	36 minutes
<b>WELS star rating</b>	4.0 stars	4.0 stars	4.0 stars	4.5 stars	4.5 stars
<b>Water consumption in l/wash</b>	13.1 litres	13.1 litres	13.1 litres	13.2 litres	13.2 litres
<b>Test programme used</b>	ECO programme	ECO programme	ECO programme	ECO programme	ECO programme
<b>Place setting</b>	14	14	14	15	15
<b>Registration number</b>	DO2540	D02541	D02541	D02542	D02543
<b>Energy star rating</b>	4	4	4	4	4
<b>Electrical connection</b>	230V 50Hz 15-16A 3.2kW (15A plug included)	230V 50Hz 15-16A 3.2kW 16A (15A plug included)	230V 50Hz 10-16A 2.1kW (10A plug included)	230V 50Hz 10-16A 2.1kW (10A plug included)	230V 50Hz 10-16A 2.1kW (10A plug included)
<b>Convertible to (charges apply)</b>	1N AC 230V 50Hz, 5.1kW, 25A	1N AC 230V 50Hz, 5.1kW, 25A	3N AC 400V 50Hz, 7.3kW, 16A	3N AC 400V 50Hz, 7.3kW, 16A	3N AC 400V 50Hz, 7.3kW, 16A
<b>Water connections</b>	Cold or hot water	Cold or hot water	Cold or hot water	Cold or hot water	Cold or hot water
<b>Machine dimensions</b>	W: 598mm x H: 845mm x D: 570mm	W: 598mm x H: 805mm x D: 570mm	W: 598mm x H: 805mm x D: 570mm	W: 598mm x H: 845mm x D: 570mm	W: 598mm x H: 845mm x D: 570mm
<b>Fascia design</b>	CleanSteel panel	CleanSteel panel	CleanSteel panel	CleanSteel panel	CleanSteel panel
<b>Capacity [place settings/ cycle]</b>	14	14	14	15	15
<b>Programmes</b>	8	8	8	8	8
<b>AutoOpen Drying</b>	YES	YES	YES	YES	YES
<b>EcoFeedback</b>	YES	YES	YES	YES	YES
<b>Water Softener</b>	YES	YES	YES	YES	YES
<b>Brilliant LED Light</b>	-	-	-	YES	YES
<b>Basket Design</b>	Cutlery Basket ExtraComfort Basket	Cutlery Basket ExtraComfort Basket	Cutlery Basket ExtraComfort Basket	3D MultiFlex Drawer MaxiComfort Basket	3D MultiFlex Drawer MaxiComfort Basket
<b>Knock2Open</b>	-	-	-	-	YES
<b>Door panel (sold separately)</b>		CleanSteel GFV 60/57-7	CleanSteel GFV 60/57-7	CleanSteel GFV 60/57-7	CleanSteel GFVi 702/72 with handle or GFVi 701/72 without handle
<b>Material number</b>	11605790	11605800	11807700	11807780	11807790

**Miele Professional**  
**Australia and New Zealand**  
**AUS 1300 731 411**  
**NZ 0800 002 593**

**[www.miele.com.au/professional](http://www.miele.com.au/professional)**  
**[sales@miele-professional.com.au](mailto:sales@miele-professional.com.au)**

\*hot water connection

An active contribution towards protecting the environment:  
This brochure is printed on paper bleached without the use of chlorine.

© Miele & Cie. KG, Gütersloh / FM 21-1105 / All rights reserved 08/21