

Miele

Glasses, Plates And Cutlery
Spotless In Only 24 Minutes

Fast, clean dishware:
The new ProfiLine generation.

Miele Professional. Immer Besser.



Perfect results in the shortest of times.

Performance for professionals. Convenience familiar from your own home.

Today's world is moving fast – making one resource increasingly valuable: time. Our daily schedules are tightly packed and the demands on our time are enormous.

The new ProfiLine dishwashers were developed to meet the challenges of commercial use – and combine technology from the latest Miele Professional machines with the convenience and design of our flagship domestic models. With an intuitive user interface, smart features and 8 programs with short cycle times, our new ProfiLine dishwashers ensure that impeccably clean dishware is ready for use again quickly.

Miele ProfiLine gives you
a head start with your
dishwashing –
and, above all:
Time.



The new ProfiLine.

Fast, versatile, durable.



24-minute cycle time*

for rapid turnaround and a cleaner kitchen.

* when connected to hot water and 120/208-240V



Durable components

for up to 5 cycles per day and 12,500 total cycles.



Versatile baskets

for simple loading and a large volume of dishware.



Intuitive interface

for fast, simple and convenient operation.



Selectable final rinse temperatures

for anti-viral cleaning and the highest of hygiene standards.

Fast dishware turnaround
for offices, businesses, schools
and private homes.

***Offices and agencies –
nurseries and schools –
Large private households.***

For environments with large volumes of dishware to process and little time to spare.

With ProfiLine, dishware is ready for use again in a matter of minutes: The new dishwashers are designed to withstand the rigours of continuous commercial use, while still offering users the convenience of high-end domestic appliances. ProfiLine represents the perfect stepping stone into the world of commercial dish care – for all working environments with large volumes of dishware to process and little time to spare.

Convenient functions

In the blink of an eye.

24-minute cycle time*

With their impressively short cycle times lasting 24 minutes*, ProfiLine models are 3 times faster than domestic dishwashers. This means that clean dishware is ready for use again in next to no time – leaving your kitchen tidy and uncluttered.

* when connected to hot water and 120/208-240V

Exemplary hygiene

Special 'SaniWash' program achieve temperatures of 180°F | 82°C. Final rinse temperatures for selected programs can also be increased for even greater hygiene.



12,500 program cycles

ProfiLine dishwashers are tested under laboratory conditions to ensure that they last 12,500 typical cycles and are designed for up to 5 cycles per day.

Rugged materials

Components subject to heavy use are made from robust, durable materials which are put through stringent tests and are designed for continuous use in a commercial environment.

Smooth surfaces

The smooth surfaces of the operating elements prevent harmful soil from gathering. All surfaces are easily wiped clean, contributing to enhanced hygiene standards.


Simple connection

ProfiLine machines are Plug & Play, and instantly ready for connection. Simply connect to water supply, plug in and switch on.

Intuitive operation

All programs use intuitive sensor controls. Self-explanatory symbols and key content in plain text speed up program selection and avoid operating errors.



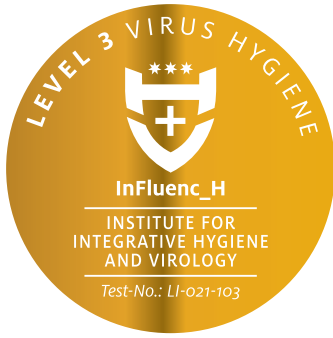

Effective against viruses – scientifically proven*

*According to certificates issued by the Institute for Integrative Hygiene and Virology with respect to the removal of enveloped and non-enveloped viruses (e.g. Coronavirus or influenza) in the 'SaniWash' and 'Pots&Pans' programs and the removal of enveloped viruses, including Noro- and Adeno viruses in the 'QuickIntenseWash' and 'Universal' programs. In both cases using Miele ProCare Shine 11 OB and 12 GC.



Miele ProfiLine dishwashers
***remove more than
99.9% of viruses.****

NEW: ProfiLine dishwasher from the PFD 10x series

Fresh water system



Dishwasher	PFD 101 U
Construction type	Undercounter unit
Capacity [place settings/cycle]	13
BrilliantLight	–
Shortest cycle with hot water connection	52 mins. (24 min when converted to 120/208-240V)
Programs	8
External dimensions H/W/D	805–870/598/570 mm
External dimensions H/W/D	31.7-34.2"/23.5"/22.4"
Water connections	Cold or hot water
Water softener	•
Electrical connection	AC 120V 60 Hz 15A
Convertible to	2N AC 120/208-240V 60Hz 30A
Total rated load	1.5 kW
ADA compliant	•
Mat.No. / Art.No.	11605420 / 61010102USA

PFD 101 U

- Dishwashers for households, offices, live kitchens
- Ideal for up to 5 wash cycles per day
- Tested for 12,500 program cycles

Plus

- With baskets as standard
- Holds 10 white wine glasses
- High-level user convenience through wide range of product features
- Integrated water softener
- AutoOpen
- WiFiConn@ct as standard (WiFi connection)



ExtraComfort baskets

Program Overview and cycle times

Program	Cycle time (min)	Cycle time (min)
	AC 208-240V 60 Hz	AC 120V 60 Hz
QuickIntenseWash	24	52
Universal	35	63
Pots & Pans	48	76
China & Crystal	22	35
SaniWash	54	85
ECO	245	245
Plastics	33 (+30)	47 (+30)
Rinse & Hold	13	13



ProCare Shine from Miele Professional

Perfectly formulated detergents and rinse aid

The detergents and rinse aid from the ProCare Shine series were developed exclusively for use in Miele Professional dishwashers. With their unique formulation, they ensure professional dishware care, guarantee machine compatibility, are extremely economical and provide spotless results.

Unflinching against soil but gentle on loads.

- Perfect match for Miele Professional dishwashers
- Machine compatibility endorsed
- Exceptional results with economical use of resources
- Liquid detergent for automatic dispensing
- Powder detergent and tablets for manual dispensing

Product	Properties
ProCare Shine 12 GC	<ul style="list-style-type: none">• Detergent tablets wrapped in water-soluble foil• Universal cleaning agent with good cleaning performance for light to medium soiling
ProCare Shine 11 OB (Canada only)	<ul style="list-style-type: none">• Powder detergent• Particularly powerful for dealing with persistent soiling involving starch, protein, tea/coffee stains
ProCare Shine 40	<ul style="list-style-type: none">• Liquid rinse aid• Universal applications
ProCare Universal 61	<ul style="list-style-type: none">• Reactivation salt for integrated water softeners

Product	Size	Mat.No.
ProCare Shine 12 GC	Box of 80 tablets	11037820
ProCare Shine 11 OB	6 kg bucket	10582700
ProCare Shine 40	1 L bottle	10923710
ProCare Universal 61	6 kg box	09195780

**Miele Limited**

161 Four Valley Drive
Vaughan, ON, L4K 4V8
Toll Free: 888-325-3957
professional@miele.ca
www.mieleprofessional.ca