


Miele

PG80 SERIES — 8056 DISHWASHER

The Professional Dishwashers Ideal for Breweries

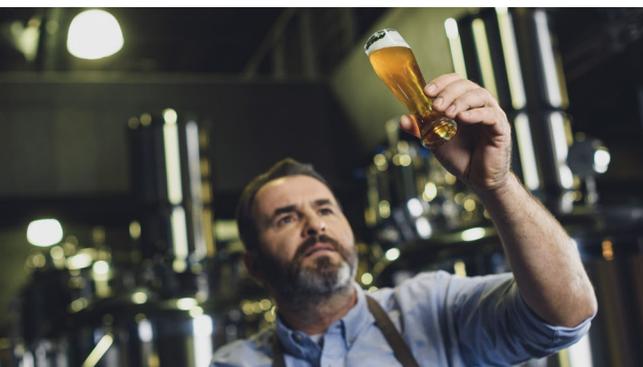

mieleusa.com/e/professional-dishwashers

Miele's freshwater dishwashers, featuring high throughput and short cycle times, meet the highest demands for cleaning quality and hygiene requirements. Whether you need glassware specific wash programs, the ability to wash up to 380 plates per hour, require final rinse temperatures of 158°F for maximum hygiene, our freshwater dishwasher PG 8056 is ideal. With 6-minute wash cycles, 13 programs, simple to use controls and a range of configurable baskets, including the option to accommodate 19 ¾" x 19 ¾" plastic racks on 2 levels, this dishwasher can handle the unique demands of any tap room!



Fresh water system

Miele Professional freshwater circulation dishwashers ensure consistently high levels of cleaning performance by taking in fresh water between individual phases of a program cycle. A thorough final rinse is carried out at a temperature adjusted to the washed items, significantly exceeding commercial dishwasher hygiene requirements.

Special beer glasses program

Cold rinsing for glassware using the Beer Glasses program, which enhances beer froth and promotes colder serving temperatures.

Short cycles

Connections for hot water, intelligent dishwashing technology and a powerful heater pump ensure optimum program durations and cleaning results.

Perfect GlassCare

Soft water helps ensure thorough cleaning, but it is aggressive towards glass. That is why Miele Professional dishwashers use Perfect GlassCare in the glasses program. This technology adjusts the water hardness precisely so that all the glasses are thoroughly but gently cleaned.



Low consumption values

Miele Professional dishwashers are acclaimed for consumption efficiency. From the product design stage, they are engineered to achieve perfect dishwashing results by using no more water, energy and detergent than necessary.

User convenience

The 3-line display control panel provides information on the selected program and the current program status. Important program parameters can be conveniently changed using the intuitive touch controls.

Integrated filter system

Miele Professional dishwashers feature permanent filtering of the wash water, to help protect the machine from damage and provide optimum cleaning results.

Plastic baskets on two levels

19 3/4 x 19 3/4" plastic baskets can be used on 2 levels, offering maximum flexibility to clean more dishes, faster. Three spray arms allow perfect cleaning results to be achieved on both washing levels.

Connection for dispenser module

To simplify the use of liquid detergents and rinse aid, up to 2 liquid dispensing modules can be optionally connected, depending on the model. Precise and automatic dispensing ensures perfect cleaning results and easier handling.

FEATURE HIGHLIGHTS

- 6 minute wash cycles
- 13 programs
- Powerful cleaning for taproom demands
- Simple to use controls
- Highly configurable basket placement



PG80 SERIES – 8056 DISHWASHER



Dishwasher	PG 8056 (208V)	PG 8056 (240V)
Theoretical capacity [plates/baskets/h]	380 plates/h, 20 baskets/h	380 plates/h, 20 baskets/h
Shortest cycle (without drying)	6 minutes	6 minutes
Programs	13	13
External dimensions, excl. lid H, W, D	32 5/16", 23 5/8", 22 7/8"	32 5/16", 23 5/8", 22 7/8"
External dimensions, excl. lid H, W, D	820, 600, 580 mm	820, 600, 580 mm
Height adjustable machine feet	+ 2 1/4 + 60 mm	+ 2 1/4 + 60 mm
Water connections	CW and HW, max. 149°F 65°C	CW and HW, max. 149°F 65°C
Integrated water softener, max. 60 gr/gal	-	-
Electrical connection	2AC 208V 60Hz	2AC 240V 60Hz
Total rated load	5.8 kW	5.8 kW
Material number	09862620	09862610
Article number	61805650USA	61805655USA

ProCare Shine – Perfectly formulated detergents and rinse aid



The detergents and rinse aid from the ProCare Shine series were developed specifically for use in Miele dishwashers. Their special formulation guarantees ideal machine compatibility and economic efficiency, while achieving spotless results.

- Perfect match for Miele Professional dishwashers
- Machine compatibility endorsed
- Top-class results with economical use of resources
- Liquid detergent for automatic dispensing
- Powder detergent and tablets for manual dispensing

Product	Properties
ProCare Shine 12 GC	<ul style="list-style-type: none"> • Detergent tablets wrapped in water-soluble foil • Universal cleaning agent with good cleaning performance for light to medium soiling • Awarded EU Eco label (AT/038/006)
ProCare Shine 10 MA <i>Requires DOS G80 Flex dispenser</i>	<ul style="list-style-type: none"> • Mildly alkaline liquid detergent • Universal cleaning agent with good cleaning performance for light to medium soiling • Very simple handling
ProCare Shine 40	<ul style="list-style-type: none"> • Liquid rinse aid • Universal applications
ProCare Universal 61	<ul style="list-style-type: none"> • Reactivation salt for integrated water softeners
DOS G 80/1 Dispensing Pump	<ul style="list-style-type: none"> • For 5 liter Canister

P | 800.991.9380

E | prosales@mieleusa.com

mieleusa.com/e/professional-dishwashers