

ProCare Shine 12 GC

Miele Professional. Immer Besser.



Use and dispensing

ProCare Shine 12 GC is a mildly alkaline tablet cleaning agent designed for use in programs in Miele Professional commercial dishwashers with a fresh water system.

- Manual dispensing via the door dispenser compartment prior to every wash program
- Recommended dosage: 1 tab per wash load
- Recommended water hardness range: 0-3 °dH (0-0.5 mmol/l)
- We do not recommend using the Rapid program in fresh water dishwashers

Cleaning agent should be dispensed and the program selected to suit the load and the level of soiling. Where required program modifications to the main wash stage are recommended (increased temperature and/or increased holding time). An unsuitable program can lead to unsatisfactory cleaning results.

Please note:

- Do not mix with other products
- Operating instructions for Miele Professional dishwashers must be observed

Product features

- Awarded the EU Eco label
- Particularly easy to use thanks to watersoluble wrapper
- Universal cleaning agent with good cleaning performance for light to medium soiling
- Prevents formation of limescale and protects loads
- Protects against corrosion
- Suitable for use with any load, including glass, aluminium and silver

- Protects decor
- Contains active oxygen, alkalis and complexing agents
- Does not contain phosphates or active chlorine

ProCare Shine 12 GC is intended for commercial use only.

Technical data

- pH value of solution: 10.2


Fulfills the requirements of Regulation (EC) 648/2004 on detergents

Storage information

- Keep box closed and store in a cool, dry place.
- Can be used for up to 2 years if stored correctly

Sinner's circle

Sinner's circle describes the mechanisms required in a cleaning process. According to this, four factors determine the success of cleaning: chemical agent, mechanical action, temperature and program duration. All four factors are dependent on each other, however the ratio of one to the other can be adjusted.

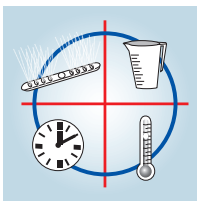

If one factor is altered, the ratio of one or more of the other factors must be altered to achieve the same cleaning result.

When compared to standard domestic dishwashers, commercial dishwasher programs have considerably shorter program durations. This is attributable to strong alkaline cleaning agents and a high-performance cleaning system.

When using commercial dishwasher tabs such as e.g. ProCare Shine 12 GC, excellent cleaning results can be achieved by selecting a suitable program, adjusting the temperature and/or duration if necessary.

Warning and Safety notes

For safety and environmental information, see the safety data sheets. These are available on www.mieleusa.com/professional.

When used correctly, this product meets the requirements of applicable guidelines for food preparation.

Dispose of containers only when empty and sealed. See safety data sheet regarding disposal of residual agent.

All information contained in this leaflet is current and correct to our knowledge and experience. This does not however release users from the obligation to conduct their own checks and tests. A legally binding assurance of specific product properties cannot be inferred from this.

Description	Container	Item number
ProCare Shine 12 GC	80 Tabs - 1.28 kg	11 037 820