

Miele

ProfiLine dishwashers from Miele
Efficient dishwashing in only a few minutes – several times a day

Miele Professional. Immer Besser.

ProfiLine



24
mins

Built to meet the highest demands on performance and design

Dishwashers for up to 5 cycles per day




Frequent dishwashing, huge mountains of dishes

Breakfast, lunch, meetings, appointments with customers, events – in many companies, there is no end of events where large quantities of crockery needs to be washed and ready for use in next to no time. Whether in office kitchens in company headquarters, legal practices or agencies, or in showrooms, clubhouses and kitchen studios – with their short cycle times of as little as 24* minutes, ProfiLine dishwashers represent the professional solution for routinely spotless results – without having to do without the convenience familiar from a domestic dishwasher.

Perfect performance and design

Even in private homes with high expectations in terms of performance and design, ProfiLine dishwashers are the perfect fit. With connections for hot water and the optional 220-240V supply, these machines come with the promise of maximum efficiency. SCVi models have an XXL cabinet and an integrated cutlery tray being able to gently but thoroughly wash and clean up to 16 place settings.



Miele ProfiLine dishwashers are fully compliant with safety regulations governing commercially used dishwashers (machines used outside a private home) as embodied in the EU Machinery Directive.

Even higher requirements?

ProfiLine dishwashers are the ideal solution for application with up to 5 loads per day. For higher throughputs Miele recommends to use the professional dishwasher PG 8056.

For an increased level of hygiene in child-care centres, schools and nursing homes and to cope with the extremely high throughput required in catering businesses, Miele Professional recommends the use of the professional dishwasher PG 8061 (for industrial use only).

* Hot water connection and 220-240V supply



Miele Professional is a decision in favour of top performance, quality and efficiency. High-quality machines which reliably meet the expectations of the discerning, day in and day out, underline the trust placed by commercial users in Miele.

The flexible basket design and special programs guarantee the perfect gentle care of dishes and glassware. Riedel 'THE WINE GLASS COMPANY' recommends Miele dishwashers.

Dependability

As a family-run company, now in its fourth generation, our actions, as always, still stem from a sense of responsibility for our products and processes and towards our employees, business associates and the environment.

- Product development with a clear focus on quality, durability and sustainability
- Innovations 'Made in Germany' which have set their stamp on the industry
- Award-winning ergonomics, functionality and product design
- Entire system from one single source
- Lower operating costs over entire product life cycle (Total Cost of Ownership)
- Highly commended after-sales service





ProfiLine dishwasher highlights



Very short cycles

Are very short cycle times and sparkling results important to you? In this case, the ProfiLine dishwashers are the perfect choice: Connections for hot water and optional 220-240V supply, intelligent dishwashing technology and a powerful heater pump ensure the shortest possible cycle times, starting at only 24 minutes (when connected to hot water and 240V), combined with optimum cleaning results. Take advantage of innovative features that make your dishes sparkle day after day in the shortest amount of time.

With delay start you can determine up to 24 hours in advance when the selected program should start. After the program has started, the display will indicate the current time remaining for the cycle.



Integrated water softener

The built-in softener always delivers water with the optimum degree of hardness. The use of soft water allows detergent to be used sparingly and prolongs the life of the appliance. The degree of water hardness is adjusted manually to suit the on-site water quality.



Recirculation turbothermic drying

The recirculation turbothermic drying allows more effective drying through separate air circuits - a condensate cycle and a cooling circuit using ambient room air.

At the end of the cycle, the hot, moisture-laden air from the wash cabinet is drawn into a condenser. The condensed moisture drains into the sump, and dehumidified air re-enters the wash cabinet.



Low consumption

The environmentally friendly way of cutting costs: ProfiLine dishwashers with their low consumption are convincing and known for their maximum efficiency. The aim at the product design stage is to achieve perfect dishwashing results by using recyclable materials and no more water, energy and detergent than is absolutely necessary.

Further benefits of the new ProfiLine dishwashers*

* model-dependent



Best sound emissions

The ProfiLine dishwashers generate low sound pressure of 38 dB(A) and are therefore particularly quiet and produce consistently excellent results. This is even significantly quieter than a normal conversation.



Exclusive to Miele

Patented¹⁾ 3D+ cutlery tray

The versatility of the intelligent 3D+ cutlery tray is a key feature. Width, height and depth are adjustable to suit any type of load. Thanks to hinged rows of spikes in the centre section, there is more space for large items such as salad spoons or kitchen knives. The adjustable side sections even allow you to position stemware in the upper basket. Additional flexibility for perfect cleaning results.

¹⁾ DE102008062761B3, EP2201887B1



Exclusive to Miele

Patented²⁾ AutoOpen function

With enhanced drying selected, the dishwasher door opens automatically to the ajar position at the end of a program. This allows fresh air to reach the dishes, ensuring that even plastic items dry completely. Special air ducting protects the worktop from moisture.

²⁾ European patent EP 1 080 681



Exclusive to Miele

Perfect GlassCare³⁾

Soft water will clean crockery thoroughly but has an aggressive effect on glass. Consequently, ProfiLine dishwashers are equipped with Perfect GlassCare¹⁾ technology. This feature ensures that the water used has the correct mineral content.

This helps protect glassware and keeps it looking as good as new.

³⁾ European patent EP 1 457 153 B



**Exclusive
to Miele**

BrilliantLight⁴⁾

Automatically controlled: four LEDs brighten the entire dishwasher interior in brilliant light.

⁴⁾ Patent DE 10 2007 008 950.5



Maximum flexibility

Thanks to an extremely flexible basket design, glasses, dishes and cutlery are perfectly cleaned. FlexAssist color coding indicates at a glance which elements allow baskets to adapt to individual needs. FlexCare glass holders accommodate wine glasses securely in the basket. This guarantees perfect and gentle cleaning.



Excellent hygiene

In office kitchens available to staff and visitors, hygiene must be high on the agenda. The ProfiLine dishwashers operating on the fresh water principle achieve extremely hygienic results thanks to their high main wash and rinse temperatures, particularly in the 'Hygiene' program.



**Exclusive
to Miele**

ComfortClose

Practical: the door is extremely easy to open and close, and stays open in any position.



What do the icons mean?

All symbols for ProfiLine dishwashers at a glance

Charts on the following pages contain detailed information on Miele's ProfiLine dishwashers. In general, Miele products have many different functions and characteristics.

Icons representing the most important features directly above the product ensure differentiation at a glance. For a quick overview, this page provides a brief explanation of all symbols used.



Energy Star
marks high-efficiency products.



Products are tested and certified to meet technical specifications for energy performance.



Shortest program duration
Expresses the cycle time of the shortest program in minutes.



The shortest program cycle is 24 minutes and is achieved by connecting the machine to 240V and hot water.



Sound emissions
States sound emissions in decibels (dB).



The dishwashers have sound emissions of 38 dB.



Cutlery cleaning
Shows where the cutlery can be placed for cleaning.



The height, width and depth of the patented 3D+ cutlery tray¹⁾ can be adjusted.



Perfect GlassCare²⁾
Shows if the appliance features Perfect GlassCare



This patented²⁾ technology ensures that your glasses are cleaned gently



AutoOpen drying³⁾
Shows if the appliance has AutoOpen drying



The dishwasher door opens automatically at the end of a program cycle



ADA compliance
Refers to the Americans with Disabilities Act.



The unit is accessible to people with disabilities.



BrilliantLight⁴⁾
Shows if the appliance is illuminated from the inside



4 Power LEDs for perfect illumination of the inner cabinet



Place settings
Indicates the number of place settings that fit in the dishwasher.



The machine can hold up to 16 formal place settings.

1) Patent: EP 2201887B1, DE 102008062761B3

2) Patent: EP1080681B1

3) Patent: EP 2120671B1, DE 102007008950B4

4) Patent: EP 2233061B1

ProfiLine dishwashers


Product overview

ProfiLine

** When connected to hot water and 208/240V

Note:

In view of demands for higher throughput and hygiene, Miele recommends the use of PG 8056 or PG 8061 commercial dishwashers from Miele Professional in child care, schools, nursing homes and restaurants.

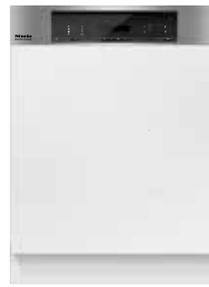

Model/Sales designation standard version (23 5/8 x 31 3/4 in)	PG 8130 i ProfiLine 120V	PG 8130 i ProfiLine 120/240V
Power output		
Max. cycles per day	5	5
'Short' cycle duration in mins.*	58	24
Design		
Fascia panel version/Control type	Slanted fascia/program selector	Slanted fascia/program selector
Display	1-line text display	1-line text display
Front	Without front	Without front
Convenience		
BrilliantLight	-	-
ComfortClose	•	•
Sound emissions dB(A) re 1 pW	38	38
Countdown indicator, 24 h delay start	••	••
Functional indicators	Display	Display
Efficiency and sustainability		
ADA compliant	•	•
Max. final rinse temperature	180°F	180°F
Tested operating hours	7,500 h	7,500 h
Quality of results		
Fresh water dishwasher	•	•
AutoOpen drying	•	•
Recirculation turbothermic drying	•	•
Perfect GlassCare	•	•
Integrated water softener	•	•
Dishwashing programs and durations with hot water supply (Temp main wash/final rinse, adjustable)		
ProSpeed (160°F / 150°F)	58 min	24 min
Universal (150°F / 150°F)	1 h 12 min	39 min
Pots & Pans (165°F / 150°F)	1 h 24 min	60 min
Plastics (120°F / 140°F)	52 min	1 h 24 min
China & Crystal (120°F / 120°F)	37 min	22 min
Sanitize (140°F / 180°F)	1 h 29 min	58 min
Rinse & Hold (Cold)	13 min	13 min
ECO (126°F / 140°F)	3 h 26 min	3 h 26 min
Basket design		
Cutlery position	Cutlery basket	Cutlery basket
Basket design with FlexCare glass holders	MaxiComfort/4	MaxiComfort/4
No. of place settings	13	13
Safety		
WaterProof System	•	•
Door locking option	•	•
Fully compliant with UL	•	•
Connections / Dimensions		
Electrical connection	AC 120V 60 Hz	AC 120/240V 60 Hz
Heater rating / Fuse rating	1.3 kW / 15 A	4.0 kW / 30 A
Total rated load when connected to hot water	1.5 kW	4.2 kW
Convertible by Miele Service, chargeable	AC 120/208V 60 Hz	AC 120/208V 60 Hz
Cold or hot water (60°F - 140°F)	•	•
External dimensions H, W, D	31 3/4, 23 5/8, 22 1/2 in.	31 3/4, 23 5/8, 22 1/2 in.
Weight, net	122 lbs.	122 lbs.
Material number	10638650	10638640

ProfiLine dishwashers

Product overview

ProfiLine



* When connected to hot water and 220-240V supply

Note:

In view of demands for higher throughput and hygiene Miele recommends the use of the PG 8056 or PG 8061 commercial dishwashers for child-care centres, schools, nursing homes or restaurants.



Model/sales designation	PG 8133 SCVi	PG 8133 SCVi
Power output	120V	120/240V
Max. cycles per day	5	5
'Short' cycle duration in mins.*	58	24
Design		
Fascia panel version/Control type	Fully integrated fascia/program selector	Fully integrated fascia/program selector
Display	1-line text display	1-line text display
Front	Without front	Without front
Convenience		
ComfortClose	•	•
Sound emissions dB(A) re 1 pW	38	38
Countdown indicator, 24 h delay start	•/•	•/•
Functional indicators	Optical and acoustic	Optical and acoustic
Efficiency and sustainability		
ADA compliant	•	•
Max. final rinse temperature	180°F	180°F
Tested operating hours	7,500 h	7,500 h
Quality of results		
Fresh water dishwasher/AutoOpen drying	•	•
AutoOpen drying	•	•
Recirculation Turbothermic drying/Perfect GlassCare	•	•
Perfect GlassCare	•	•
Integrated water softener	•	•
Dishwashing programs and duration with hot water supply (Temperatures main wash/final rinse, adjustable)		
ProSpeed (160°F/150°F)	58 min	24 min
Universal (150°F/150°F)	1 h 12 min	39 min
Pots & Pans (165°F/150°F)	1 h 24 min	60 min
Plastics (120°F/140°F)	52 min	1 h 24 min
China & Crystal (120°F/120°F)	37 min	22 min
Sanitize (140°F/180°F)	1 h 29 min	58 min
Rinse & Hold (Cold)	13 min	13 min
ECO (126°F/140°F)	3 h 26 min	3 h 26 min
Basket design		
Cutlery position	Cutlery tray	Cutlery tray
Basket design with FlexCare glass holders	MaxiComfort/4	MaxiComfort/4
No. of place settings	16	16
Safety		
WaterProof System	•	•
Door locking option	-	-
Fully compliant with UL	•	•
Connections /Dimensions		
Electrical connection	AC 120V 60 Hz	AC 120/240V 60 Hz
Heater rating / Fuse rating	1.3 / 15 A	4.0 kW / 30 A
Total rated load when connected to hot water	1.5	4.2 kW
Convertible by Miele Service, chargeable	AC 120V 60 Hz	1N AC 230V 50 Hz
Cold or hot water (60°F - 140°F)	•	•
External dimensions H,W,D	33 3/8, 23 5/8, 22 1/2 in.	33 3/8, 23 5/8, 22 1/2 in.
Weight, net	124 lbs.	124 lbs.
Material number	10638660	10638630



ProCare Shine 12 GC

- 1. **Reinigungsmitel:** Tapa mit Aktivsauerstoff und einer Aktivsubstanz für Anwendung in gewerblichen Spülmaschinen und Klappenwaschern.
- 2. **Cleaning agent:** Tapa, with active oxygen and active substance. For use in commercial dishwasher detergent in the door and close the flap. Controls the programme and running a full machine. This helps to clean the door and close the flap.
- 3. **Ölreineriger:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 4. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 5. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 6. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 7. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 8. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 9. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.
- 10. **Reinigungsmitel:** Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen. Tapa mit aktivem Sauerstoff und einer Aktivsubstanz für den Einsatz in gewerblichen Spülmaschinen.



M.No. 11 027 020
Art.No. 11 9142 0101

EU Ecolabel : AT/038/006



80

ProCare Shine from Miele Professional

Perfectly formulated detergents and rinse aid

The detergents and rinse aid from the ProCare Shine series were developed from the outset for use in Miele dishwashers. With their special formulation, they form the basis of professional dish care, guarantee ideal machine compatibility, are extremely economical in use and are an inspiration with the spotless results they achieve.

Unflinching in their battle against soil but gentle on loads.

- Perfect match for Miele Professional dishwashers
- Machine compatibility endorsed
- Top-class results with economical use of resources
- Detergent tabs for simple dispensing



Product	Properties
ProCare Shine 12 GC	<ul style="list-style-type: none"> • Detergent tablets wrapped in water-soluble foil • Universal cleaning agent with good cleaning performance for light to medium soiling
ProCare Shine 40	<ul style="list-style-type: none"> • Liquid rinse aid • Universal applications
ProCare Universal 61	<ul style="list-style-type: none"> • Reactivation salt for integrated water softeners

Article	Size	Mat. no.
ProCare Shine 12 GC	Box of 80 tabs	11037820
ProCare Shine 40	1 L bottle	10923710
ProCare Universal 61	6 kg box (3 x 2 kg)	09195720





Miele Professional Service

Excellent award – winning performance

Miele Professional is synonymous with exceptional quality – not least when it comes to service.

Comprehensive service from the very start

- Extensive consultations prior to purchase
- Need analysis, feasibility studies, financing offers
- Help with selecting and configuring the ideal machine
- Professional support during delivery, installation and commissioning

Customized service contracts and inspections

- Regular checks and maintenance
- Optimum efficiency and machine reliability
- Contract models with tailored scope of services

Service to meet professional expectations

- Quality service and an extensive network of service technicians
- Guaranteed availability of key original spare parts for up to 15 years after the machine model is discontinued

Miele Professional
9 Independence Way
Princeton, NJ 08540

Toll Free: 800-991-9380
Fax: 609-419-4241
www.mieleusa.com/professional

Immer Besser (Forever Better)

Since 1899, Miele - a family-run company - has subscribed to a clear corporate philosophy condensed into the two words 'Forever better'. This overarching claim is the foundation of Miele's proverbial quality and sustainability and the power of innovation of a brand 'Made in Germany'. A brand promise which gives commercial users the certainty of having chosen the right product.

Award-winning

Uncompromising product reliability and service dependability is the reason why customers have repeatedly voted Miele the best and most trustworthy brand. Coveted awards such as the MX Award, the iF and reddot Design Awards and the German Sustainability Prize confirm the distinguished position Miele enjoys with respect to design, quality management and the sparing use of resources.

Proficient

Miele Professional has been developing and manufacturing a broad range of high-quality laundry machines, dishwashers, washer-disinfectors and sterilisers for decades. Carefully selected accessories, comprehensive advisory services and a Miele factory service operation which guarantees a fast response and ensures that machines perform to perfection and offer the ultimate in performance and efficiency.

Miele Professional on the web

- For detailed information on technical specifications, features and accessories
- Brochures on all product groups and applications available as downloads
- Detailed information, instructions and product presentations on Miele Professional's YouTube channel

www.mieleusa.com/professional

