

427001348

Keep this manual so that it will always
be on hand for future reference.

EN **Drying cabinet**

User manual

Dear NIMO customer,

Congratulations on making an excellent choice of product, and welcome to the NIMO family, a global family with its roots in Sweden.

We at NIMO thank you for your trust and hope that you will enjoy using your new drying cabinet.

A good drying cabinet should be well designed, dry clothes well, have a low environmental impact, be user-friendly, save time and energy, have a long service life and be reliable. NIMO offers you all these features.

When you buy a NIMO product you can be sure that the inside is just as good as the outside and that the ethics and morals that go into building this product are just as high as the quality and function you are getting. That's what Swedish quality is all about.

Before using the product for the first time, please read the user instructions and the advice on caring for the product. This will help you get the best possible results from your product and all its functions.

If you have any questions, do not hesitate to call us or to contact us through our website.

Best wishes from Sweden and the NIMO team.

Article and serial number

See page 20

Manufacturer: NIMO-VERKEN AB
Box 288
542 23 Mariestad
Sweden
info@nimoverken.com
www.nimoverken.com



Doc. No: 427001348 / 02

THIS USER MANUAL	4	BREAKDOWNS	17
SAFE OPERATION	5	OVERHEAT CUT-OUT	17
DESCRIPTION OF THE DRYING CABINET	6	OPERATION EASY DRYER 1900	19
AIR FLOW IN THE DRYING CABINET	7	CONTROL PANEL	19
UNPACKING	8	CHOICE OF SETTINGS	19
PACKAGING MATERIALS	8	CARE	20
ASSEMBLY KIT	9	CLEANING	20
REHANGING OF DOOR	10	SERVICING	20
POSITIONING/ATTACHMENT	11	MANAGEMENT OF END-OF-LIFE DRYING CABINET	21
EVACUATION / SUPPLY AIR	12	HANDLING THE PACKAGING GERMANY	23
CONNECTION TO EVACUATION	12	TECHNICAL DATA	
ELECTRICAL CONNECTION	14	EASY DRYER 1900	25
START-UP	15	TROUBLESHOOTING	26
ARRANGING LAUNDRY FOR DRYING	16	EASY DRYER	26
USER TIPS	16	DIMENSIONAL DRAWING	27
AIR FLOW	16		

THIS USER MANUAL

The contents of this user manual describe the drying cabinet's **function** and **operation** and instructions for **installation** and **maintenance**.



Note: *Keep this user manual so that it is always to hand for future use*

This advice on safe operation has been compiled to enable you to avoid incorrect use and unnecessary risks for accidents, and should be read before the drying cabinet is installed and used.

CAUTION This equipment is intended only to be used to dry fabrics washed in water.

□ **Applicable to installation in the EU**

This drying cabinet can be used by children over the age of 8 and persons (including children) with various disabilities or inadequate experience and knowledge, provided they are kept under supervision or are given instructions on how to use the appliance in a safe way and understand the risks that use entails.

Children must not play with the appliance.

□ **Applicable to installation in countries outside the EU**

The appliance is not intended for use by persons (including children) with various disabilities or inadequate experience and knowledge.

They may use the appliance only under supervision or if they have received instructions on how to use the appliance from a person who is responsible for their safety.

Children must be supervised to ensure that they do not play with the appliance.

□ **Applicable to all installation**


CAUTION To avoid danger due to accidental resetting of the over-heat cut-out, this product must not be connected to an external switching device such as a timer or to a circuit that regularly turns the product on and off.

- If the power cord is damaged, it must be immediately replaced, and this must be done by the manufacturer only, the manufacturer's service agent or similarly qualified persons in order to avoid danger.


DESCRIPTION OF THE DRYING CABINET

The drying cabinet operates with hot air that removes moisture from the laundry. Heating and fan components are combined in the upper part of the drying cabinet behind the control panel.

Easy Dryer, the cabinet is controlled by two knobs, one for setting power modes and the other for regulating drying time.

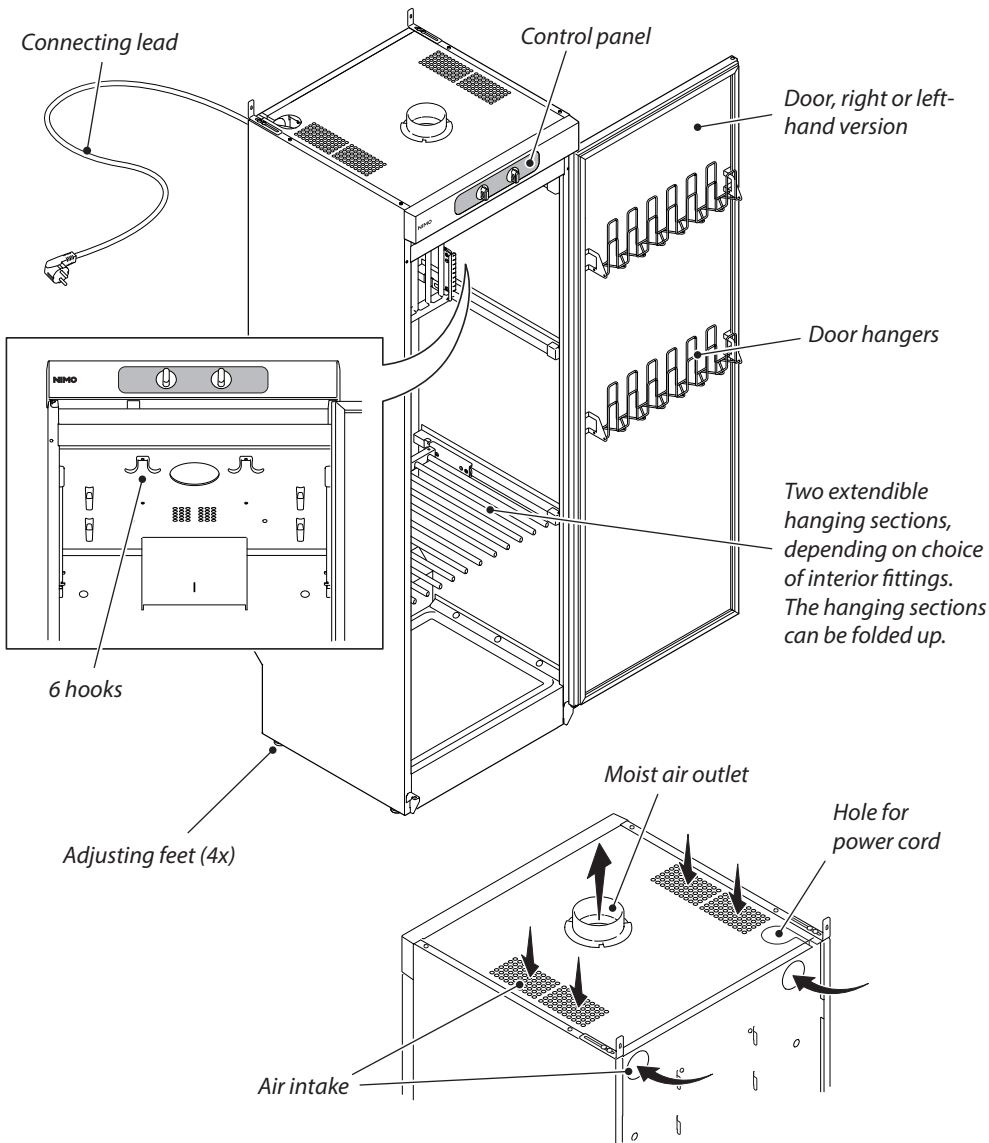

AIR FLOW IN THE DRYING CABINET

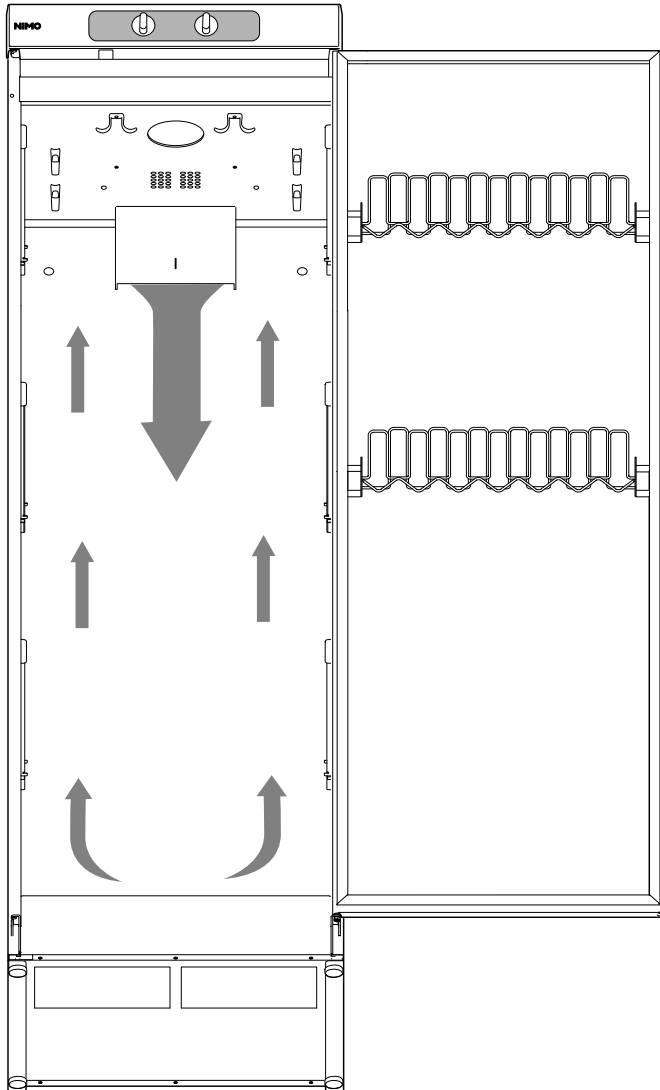

Note the direction of air flow inside the cabinet when positioning laundry. See also this section.

UNPACKING

PACKAGING MATERIALS

The packaging that protects the drying cabinet against damage in transit, has been chosen with concern for the environment and is therefore recyclable.

Packaging that is recycled means reduced consumption of raw materials and a smaller volume of waste.



*The drying cabinet must be handled carefully if it is standing unsupported on its pallet. **RISK OF TIPPING OVER***

Check that the product has not been damaged in transit. Any damage incurred in transit must be reported to the dealer within 7 days.

After unpacking, check that the product is intact. Damage, defects and any missing parts must be reported to the dealer immediately.

The drying cabinet must be installed and kept indoors.








Check that all transport securing devices have been removed before connecting the drying cabinet.

Packaging materials such as plastic and Styrofoam must be kept out of the reach of children.

A complete delivery must include:

- ☐ Cabinet with installed fan unit
- ☐ Assembly kit
- ☐ User manual

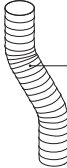ASSEMBLY KIT

	Draught stabiliser	Qty 1		Plastic plug 8 Ø	Qty 2
	Hose, Ø 100 x 1000 mm	1		Spacer 8.2x12x15	2
	Spigot	1			
	Screw TRX 5x70 fzk	2			
	Washer NB 5x25	2			

REHANGING OF DOOR

The door may be right-hung or left-hung.

- 1 Lay the drying cabinet down on its side.
- 2 Loosen the hinge pin at the lower hinge (1) and lift off the door. Retain the washer (3).
- 3 Detach the hinge pin at the upper hinge (2) and install it on the opposite side. The pin has a slot for a screwdriver.
- 4 Rotate the door, fit and screw in the door with the lower hinge pin (1) and the washer (3).

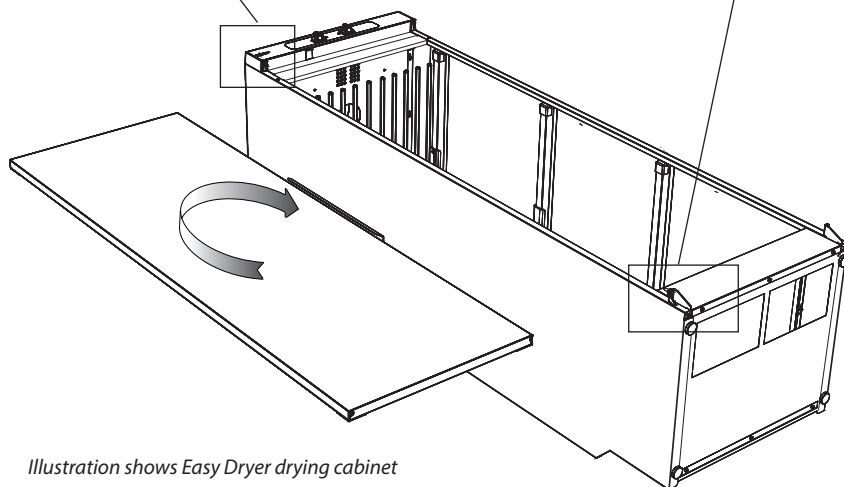
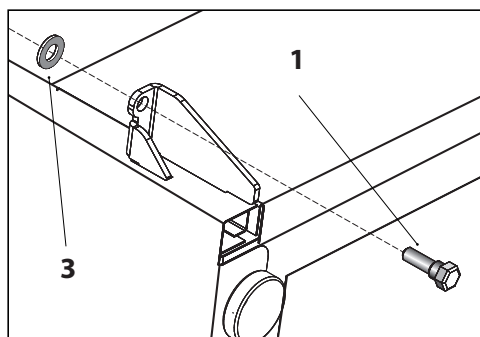
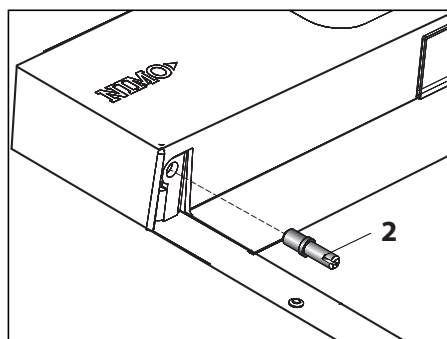


Illustration shows Easy Dryer drying cabinet

POSITIONING/ATTACHMENT

The drying cabinet is intended only for location indoors in a dry place and secured to a wall.

The drying cabinet must not be placed in an environment in which high-pressure water is used for cleaning.


The drying cabinet must be **level on a flat surface**, resting on all four feet.

If there is a need for adjustment, lean the cabinet and adjust the adjusting feet. Check with a spirit level that the cabinet is level.

Bear in mind that the cabinet is top-heavy and there is a risk of it tipping over. This adjustment should be carried out by two people.


The cabinet must be **attached to a wall** to prevent tipping over.

- 1 Open the door and drill 8 mm holes in the wall through the two pre-drilled holes in the rear of the drying cabinet.
- 2 Fit the plastic plugs in the wall. Thread the spacer onto the screw and fit with washer as illustrated. Screws are contained in the assembly kit.

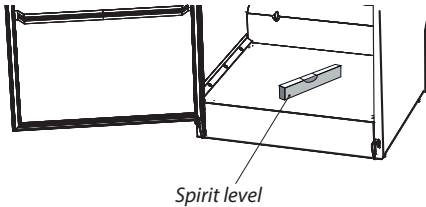


Attaching to a wall also means a better door seal.

CAUTION *The drying cabinet must not be used without being secured to a wall, due to the risk of tipping over.*

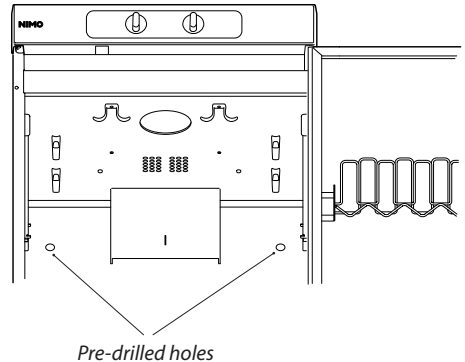

1. Plastic plug
2. Wall behind drying cabinet
3. Spacer
4. Rear wall of drying cabinet
5. Fixing screw with washer

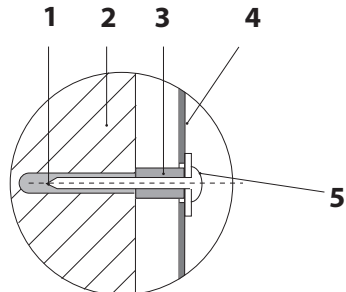

EVACUATION / SUPPLY AIR

When the cabinet is on, approx. 95 m³ moist air per hour is evacuated. It must therefore be ensured that air can enter the room to replace the moist air that is vented out.

CONNECTION TO EVACUATION

The drying cabinet is connected to exhaust air ventilation in accordance with standard.

The drying cabinet can be connected to the evacuation duct in two ways, either with a draft stabiliser or permanently fitted to a mechanical exhaust vent.


If the drying cabinet is to be connected to an existing vent system, a draught stabiliser must always be used, so the general ventilation in the room is not affected.

Permanent fitting must only be carried out when a separate exhaust-air duct is routed to the drying cabinet. The air flow in the exhaust-air duct being adjusted to 95 m³ per hour.

The drying cabinet has been tested and factory-set for connection with a draught stabiliser.

Air connection on the cabinet

Position and fit the supplied spigot **(1)** over the hole on the top of the drying cabinet. Rotate clockwise until the spigot clicks into place in the slots in the roof.

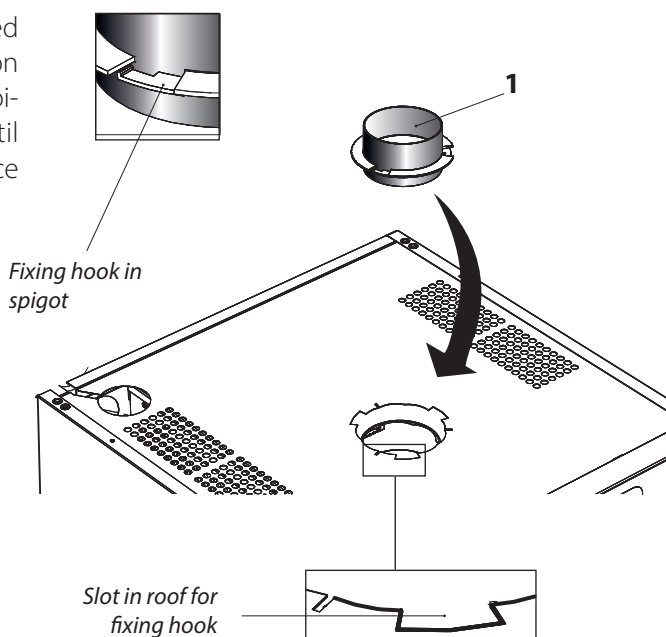


With draught stabiliser

Connect the flexible hose (2) to the spigot. Connect the other end of the hose to the **draught stabiliser** (3) which is then mounted on the exhaust vent in the room.

The drying cabinet must not be connected to a flue.

The air intake must not be blocked.

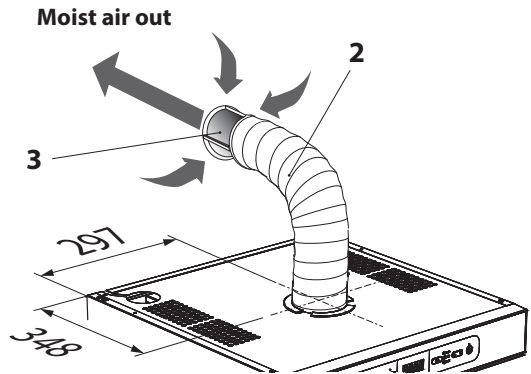


1. Spigot (page 12)
2. Hose, Ø 100 x 1000 mm
3. Draught stabiliser
4. Adapter

Permanently fitted to mechanical exhaust vent

Connect the flexible hose (2) to the spigot. Connect the other end of the hose to the **adapter** (4) and then mount it on the exhaust vent in the room.

Adapter is not supplied.

The air intake must not be blocked.

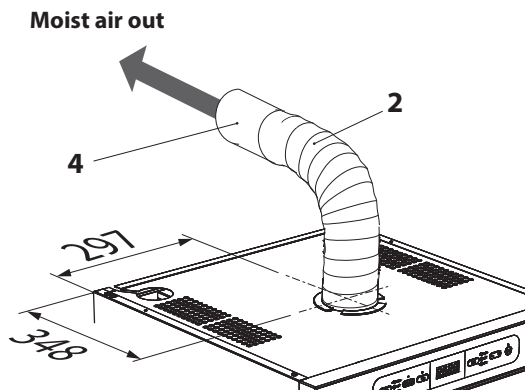

ELECTRICAL CONNECTION

The drying cabinet must be connected to a 230V single-phase 50-60 Hz and protectively earthed wall socket.

Fuse 10A.

The drying cabinet is supplied with a cable and an earthed plug, ready for connection.

If the mains lead for any reason is damaged, it must be replaced. A genuine spare part can be obtained from the dealer who supplied the cabinet.

The drying cabinet should be connected to an earthed wall socket using the connecting cable supplied and must not be permanently wired.

The socket should be located so that the plug can be easily pulled out if necessary.

*Check that the connection current agrees with the data on the identification plate and that the power cord is earthed correctly in accordance with applicable standard. We recommend that the power cord be fitted with a **residual current device (RCD)**.*

The drying cabinet must be connected to a dedicated circuit.

The manufacturer disclaims all liability if the electrical connection has not been carried out in the way described in this user manual.

Note: *A replacement cord must only be fitted by a qualified electrician.*



Read these operating instructions before using the drying cabinet for the first time.

CAUTION *Read the safety instructions on page 5 before using the cabinet.*

- 1** Make sure that the cabinet is firmly attached to the wall. See page 11.
- 2** Make sure that no packaging material has been left behind.
- 3** Use a mild detergent with hot water and wash the inside and outside of the drying cabinet. Dry carefully. See also the 'Care' section later in the manual.

ARRANGING LAUNDRY FOR DRYING

There are three sections with hangers in the cabinet, depending on choice of interior fittings. Each section has a number of rails for hanging laundry.

- ❑ Hang the items in the drying cabinet according to how much space they require - not according to their weight.
- ❑ For most efficient drying, do not place items flat on the upper hanger section.
- ❑ Position long items closest to the walls of the cabinet and shorter items towards the centre of the cabinet. The most efficient drying results are achieved by hanging the items in this way.
- ❑ Fold up the two bottom hanger sections if long items are to be dried.
- ❑ Hang gloves, caps, scarves and similar items on the hanger strips on the inside of the door.
- ❑ All the hanger sections are extendible to make it easier to hang laundry. The hanger sections must be in their inner position when the door is closed.
- ❑ Do not overload the drying cabinet. If you do, the laundry will become creased and dry unevenly. Instead, leave a space between the items if possible.
- ❑ If there is a risk of particular items shedding colour, free space should be left around them.
- ❑ Avoid drying heavy items of clothing together with lighter items as they have very different drying times.
- ❑ Dry knitted products flat. These are heavy when wet and stretch unnecessarily if they are hung on a peg.

USER TIPS

- ❑ Always following the laundry instructions on the item of clothing if present.
- ❑ If a fabric conditioner or anti-static agent is used, follow the manufacturer's instructions for use of this product.
- ❑ Adapt the drying temperature in the cabinet for products that contain foam rubber or similar material. Follow the manufacturer's instructions closely for the washing and drying of such products.


AIR FLOW

The illustration shows the air flow in the drying cabinet.

Keep the area around the evacuation duct clear of dust and dirt.

Make sure that the air intake and exhaust duct are not blocked.

See page 6.

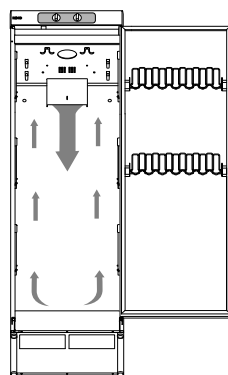

Note: When the cabinet is cold it may happen that the door's sealing strip does not close completely. However, this is fully compensated when the cabinet is operating with heat as the sealing strip expands.

OVERHEAT CUT-OUT

The cabinet is equipped with an overheat cut-out. This trips when the temperature in the fan unit exceeds 120 °C.


Easy Dryer

When the overheat cut-out has tripped, the cabinet is closed and the timer stops for example at 2 hours with the laundry wet. The user can now reset the overheat cut-out by **turning off the power supply with the switch inside the roof of the cabinet.** See illustration.

Alternatively, resetting can be done by turning the timer to zero.

The user has to wait for 10 to 15 minutes so that the overheat cut-out has time to reclose. The power supply to the cabinet is then turned back on using the same switch or by turning the timer back on.

Hole in inner panel for operation of the toggle switch with a screwdriver or similar tool

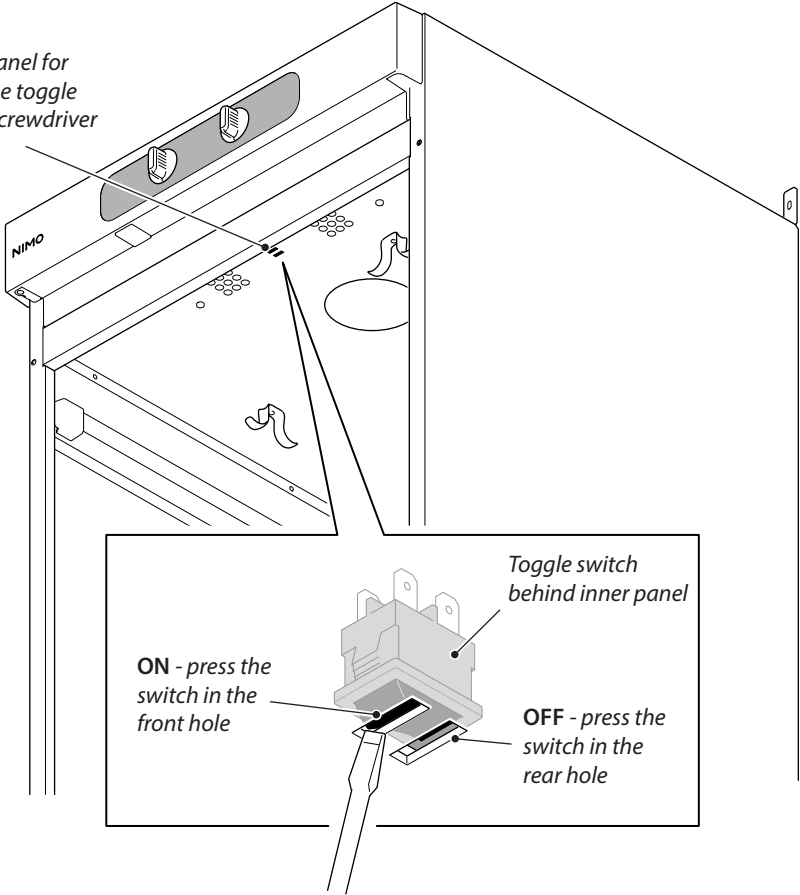

CONTROL PANEL




The cabinet is equipped with two knobs for setting different power modes.

The left-hand knob regulates heat with power modes on a stepless scale.

The right-hand knob regulates drying time steplessly up to six hours.

CHOICE OF SETTINGS

High heat



Low heat



Fan only



If you want a fast drying result, and the item of clothing copes with HIGH heat, turn the heat knob to max and set the drying time at 1.5 to 2 hours.

To dry at LOW heat, turn the heat knob to just after the start of the semi-circle and the drying time to between three and four hours.

For drying without heat, turn the heat knob to zero and set drying time to 6h.

CARE

CLEANING

Note: Do not use high-pressure cleaning.


- ❑ Clean the walls of the cabinet with a mild soap solution on a damp cloth.
- ❑ Dust tends to collect around the air intake on the top of the cabinet. This can cause disturbance, in turn leading to breakdowns in operation.

To avoid these problems, the air intake and the roof of the cabinet should be vacuumed at least once a year, or more often depending on the environment the cabinet is located in.


SERVICING

Before contacting Service, you should find out the name, article number and serial number of the drying cabinet.

This information can be found on the identification plate located inside the cabinet.

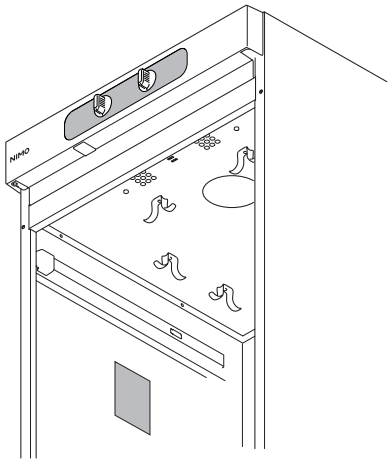

Identification plate (inside)

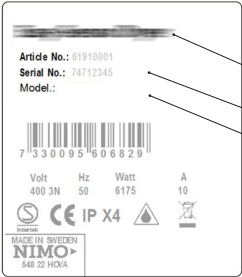

- Name of the drying cabinet
- Article number
- Serial number (12 digits)

Follow NIMO instructions in repair and replacement of parts.


When the drying cabinet has reached the end of its useful life, it must be taken to a recycling centre for disposal. Many parts of the drying cabinet can be re-used, but it also contains other material that must be disposed of correctly. You should therefore never leave the drying cabinet or parts of the cabinet for collection with household waste, as this may pose risks to health and cause damage to the environment.



The end-of-life drying cabinet should instead be taken to a recycling centre. Check with your dealer if necessary.

All the plastic parts of the drying cabinet are marked with internationally standardised symbols. The parts of the drying cabinet can therefore be recycled in an environmentally sound manner by waste separation.

MANAGEMENT OF END-OF-LIFE DRYING CABINET

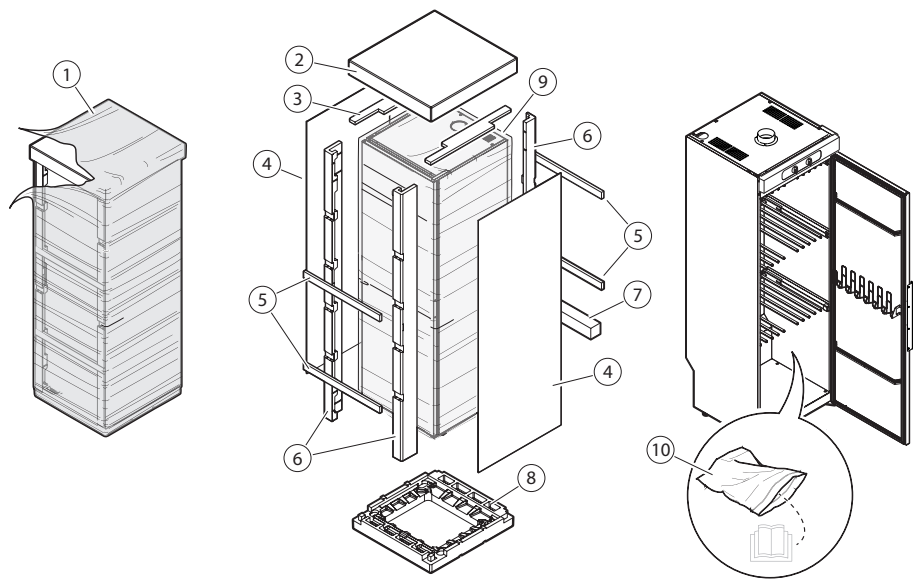

Pos.	Description	Code	Type
1	Wrapping film	LDPE 4	Plastics
2	Cardboard packaging top	PAP 20	Paper
3	Support bars	PS 6	Plastics
4	Masonite	FOR 50	Wood
5	Wooden bars	FOR 50	Wood
6	Corner protection	PS 6	Plastics
7	Support bar	PS 6	Plastics
8	Undercarriage protection	PS 6	Plastics
9	Plastic cover	PET 1	Plastics
10	Plastic bag	LDPE 4	Plastics

Updated information on disposal of old devices

The Electrical and Electronic Equipment Act (Elektra) contains many requirements for handling electrical and electronic equipment. The most important are compiled here.

Separate collection of old devices

Electrical and electronic equipment that has become waste is referred to as waste equipment. Owners of old devices must collect them separately from unsorted municipal waste. Old devices do not belong in household waste, but in special collection and return systems.

Batteries and accumulators as well as lightbulbs

Owners of old devices must usually separate old batteries and accumulators that are not enclosed by the old device, as well as lightbulbs that can be removed from the old device without destroying them, before handing them in at a collection point. This does not apply if old devices are prepared for reuse with the participation of a public waste disposal authority.

Options for returning old devices

Owners of old devices from private households can hand them in free of charge to the collection points of the public waste disposal authorities or to the take-back points set up by manufacturers or distributors within the meaning of the elector.

Shops with a sales area of at least 400 m² for electrical and electronic equipment and grocery stores with a total sales area of at least 800 m² that offer electrical and electronic equipment several times a year or permanently and make it available on the market are subject to the obligation to take back electrical and electronic equipment. This also applies to sales using long-distance means of communication if the storage and shipping areas for electrical and electronic equipment are at least 400 m² or the total storage and shipping areas are at least 800 m².

In principle, distributors must ensure that they are providing suitable return options at a reasonable distance from the respective end user.

The possibility of returning an old device free of charge exists in the case of distributors who are obliged to take it back, among other things, if a new device of the same type that fulfills the same functions is handed over to an end user. If a new device is delivered to a private household, the old device of the same type can also be handed over there for collection free of charge; This applies to sales using means of distance communication for devices in categories 1, 2 or 4 in

HANDLING THE PACKAGING GERMANY

accordance with Section 2 (1) ElektroG, namely "heat exchangers", "display screen devices" or "large devices" (the latter with at least one external dimension of more than 50 centimeters). End users are asked about a corresponding return intention when concluding a purchase contract. There is also the option of returning old devices that are no larger than 25 centimeters in any external dimension to the distributors' collection points free of charge, regardless of the purchase of a new device, limited to three old devices per type of device.

Privacy Notice

Old devices often contain sensitive personal data. This applies to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the old devices.


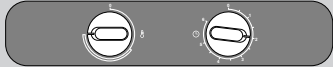
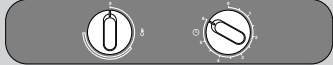
Meaning of the crossed-out dustbin symbol

The symbol of a crossed-out garbage can, which is regularly shown on electrical and electronic devices, indicates that the device in question must be collected separately from unsorted municipal waste at the end of its service life.

TECHNICAL DATA EASY DRYER 1900

Capacity:	Up to 6.0 kg laundry (cotton)
Dewatering capacity:	Up to 25 g/min
Electrical connection:	Single-phase 230 V, 50-60 Hz Fuse 10 A
Motor:	38 W
Heating element output:	2,000 W
Overheat cut-out:	Yes
Fan capacity:	184 m ³ /hour
Hanging length:	16 metres, depending on choice of interior fittings
Dimensions:	Height: 1900 mm Width 595 mm Depth 610 mm
Weight:	60 kg
Sound level:	max 55 dB(A)
Evacuated quantity of air:	95 m ³ moist air per hour

ENERGY CONSUMPTION AND DRYING TIMES IN DRYING OF 4 KG OF SPUN LAUNDRY *)

Programme	Energy consumption per kg dry laundry [kWh/kg]	Drying time *) [min]	Temp. max [C°]
Low temp. 	0,67	220	35
High temp. 	0,69	90	65
Fan only 	0,06	360	Room temp.

*) Values may vary depending on:

- spin speed
- temperature, air humidity in the room
- air circulation in the room (supply air, exhaust air)

MANUFACTURING STANDARDS

See cabinet identification plate


WIRING DIAGRAM

Wiring diagram can be ordered from the manufacturer.

TROUBLESHOOTING

EASY DRYER

Questions	What you can do
The drying cabinet is not working.	<ol style="list-style-type: none">1. Check that the mains lead is connected to a power socket and that power is supplied.2. Check that no fuse has tripped.3. Is the door closed?4. Check the toggle switch in the ceiling. See page 25.
Drying takes a long time.	<ol style="list-style-type: none">1. Make sure that the laundry is not soaking wet (poorly spun).2. Check that too much laundry has not been hung.
The laundry does not become dry.	Check that too much laundry has not been hung.
The sealing strip does not close tightly/the door is ajar	Check that the cabinet is level and attached to a wall. Check with a spirit level, adjust if necessary with the adjusting feet.

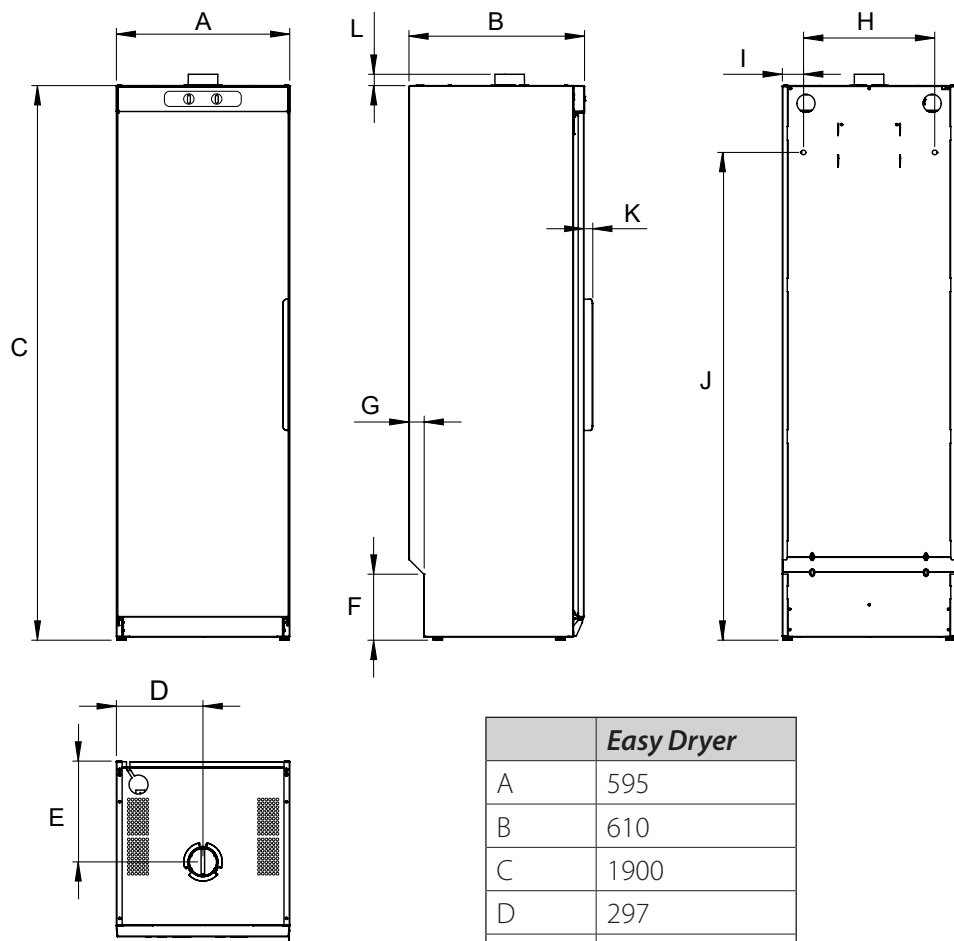

	<i>Easy Dryer</i>
A	595
B	610
C	1900
D	297
E	348
F	227
G	52
H	450
I	73
J	1674
K	31
L	39

